Bambina Chest and Changer

 
Assembly Instructions - Please keep for future reference



Dimensions

Width - 82,9cm Depth - 48,9cm Height - 91,3cm

Important – Please read these instructions fully before starting assembly



Important -Please read these instructions fully before starting assembly

is not the result of any

manufacturing fault.

This product has been produced

notice some variation in the grain

and colour of different component

parts which is normal for furniture

produced using natural wood and

from natural timber; you may

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

Care and maintenance

• Use an appropriate furniture polish for natural wood furniture and a dry cloth to clean the product.

• Avoid placing the furniture in direct sunlight as this will cause the timber to prematurely age.

From time to time check

that there are no loose

screws on this unit.

• We do not recommend the use of power drill/drivers*for inserting screws,*

as this could damage the unit. Only use hand screwdrivers.

• Parts of the assembly will be easier with 2 people.

• Dispose of all packaging carefully and responsibly.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels

Please check you have all the panels listed below




Some components are labeled with component numbers for ease of assembly.


Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

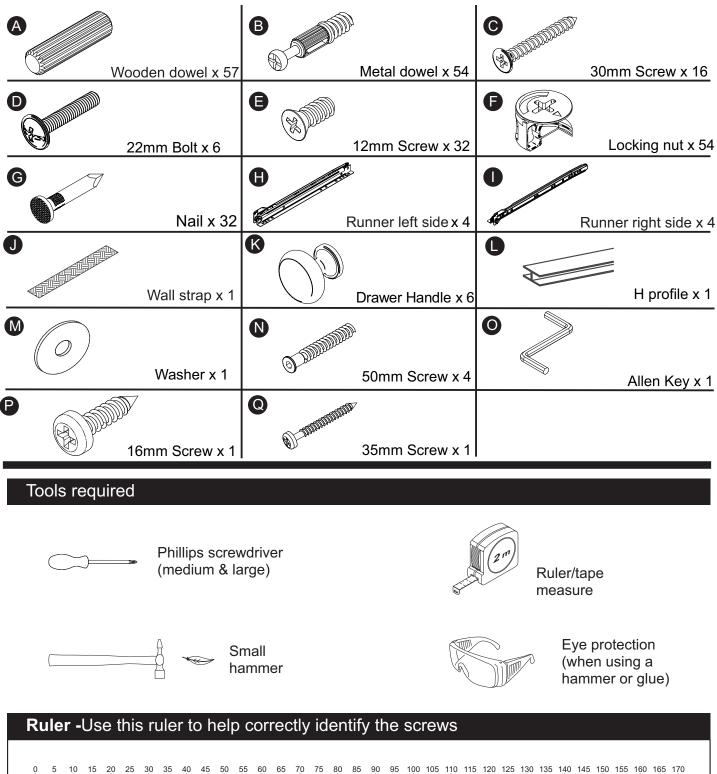

0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170

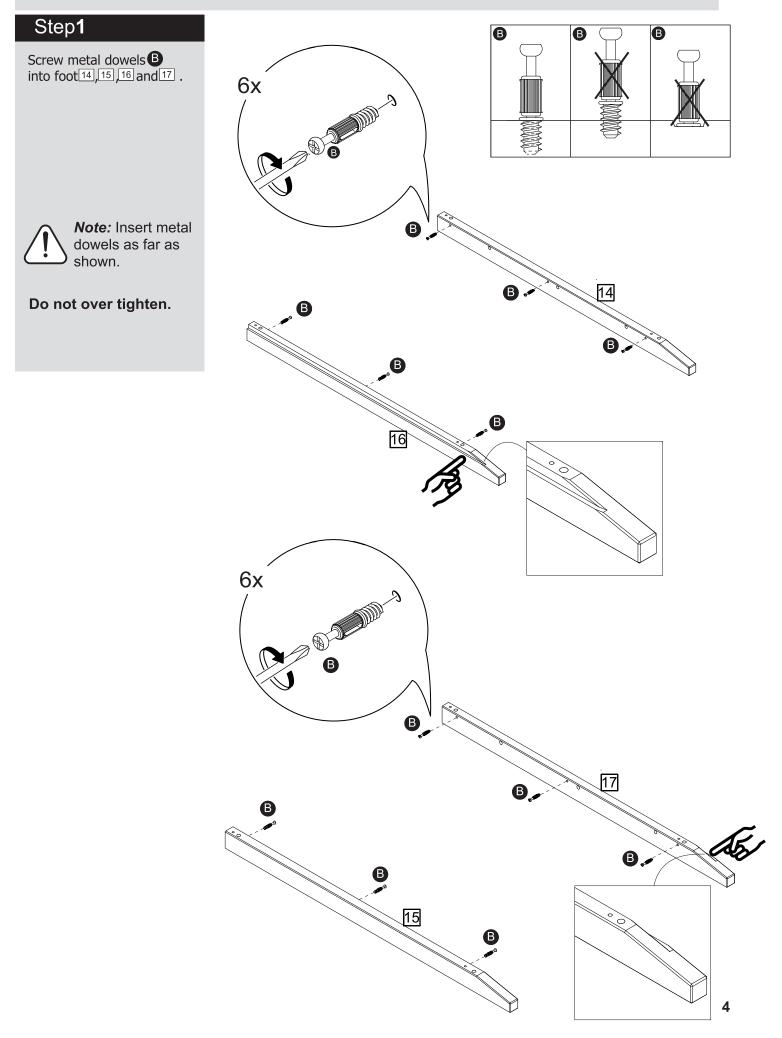


Step2

Insert wooden dowels A to foot 16,14,15 and 17 as shown.

Fit front left foot 15 and back left foot 17 to left side panel 2.

Fit back right foot 16 and front right foot 14 to right side panel 1.

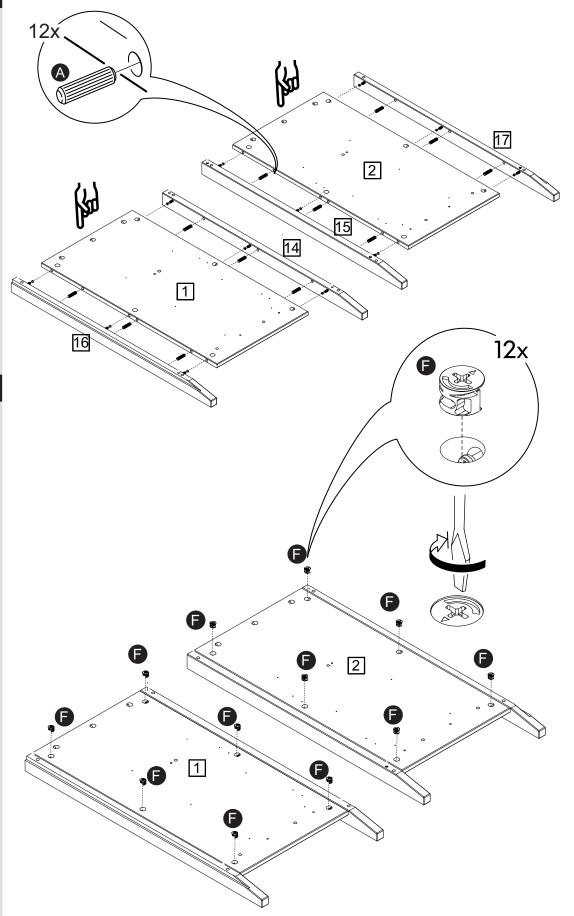


Step3

Insert locking nuts **(**) into side panels 1 and 2.

Use a screwdriver to turn locking nuts **(**) clockwise to lock.

Do not overtighten.

Step4

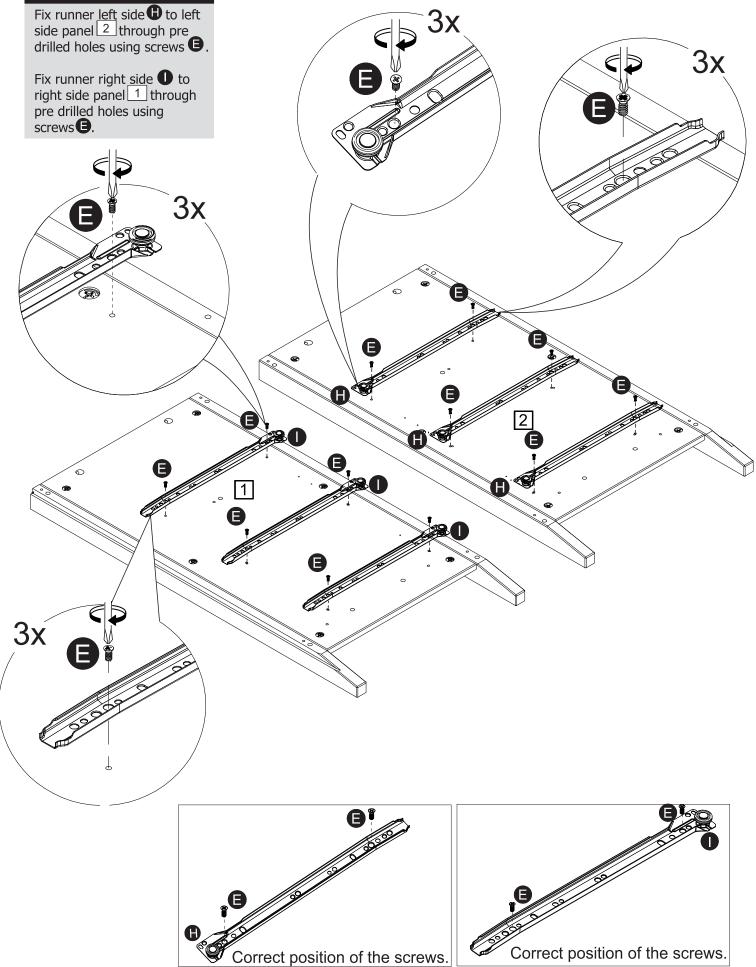






Screw metal dowels B into foot $\textcircled{14}, \textcircled{15}, \textcircled{16}, \Huge{17}, and side panels 1 and 2$



Note: Insert metal dowels as far as shown.

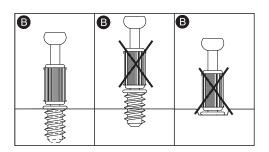

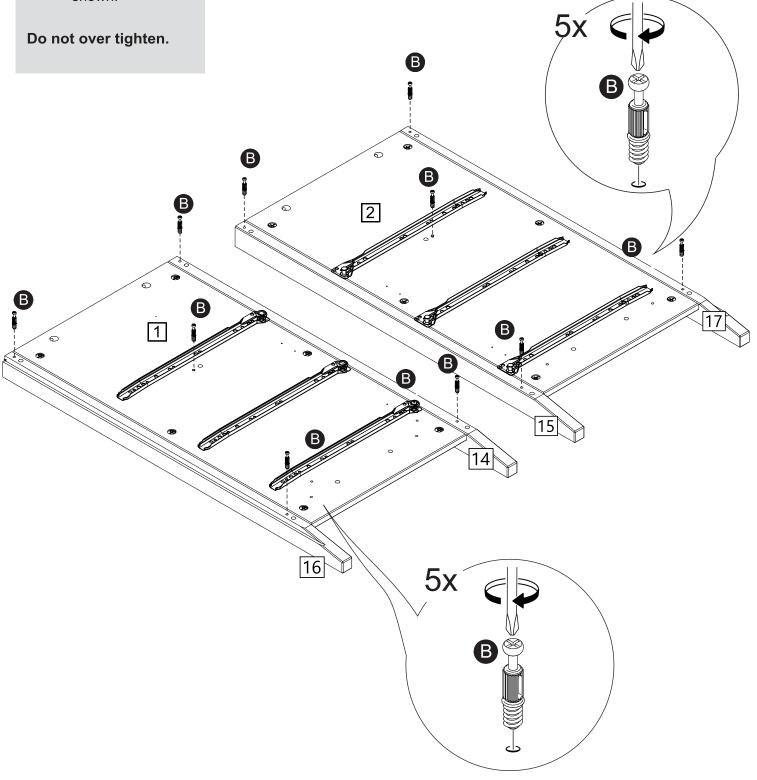


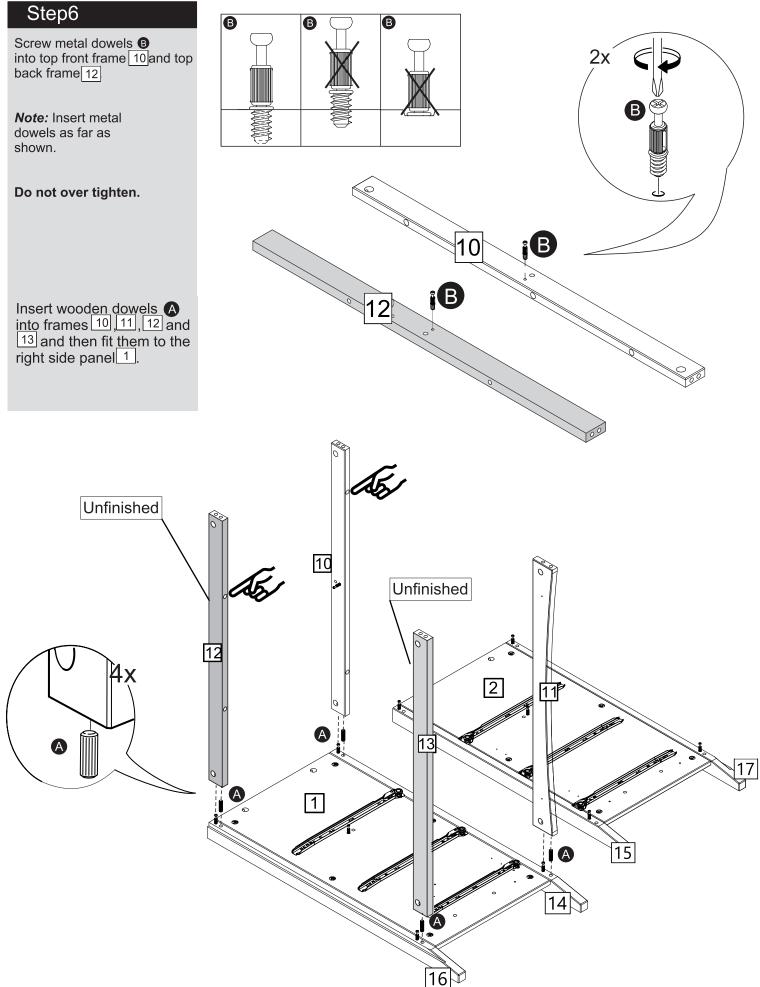

Step7


Insert locking nuts into frames 10, 11, 12 and 13. Use a screwdriver to turn locking nuts clockwise to lock.

Do not overtighten.

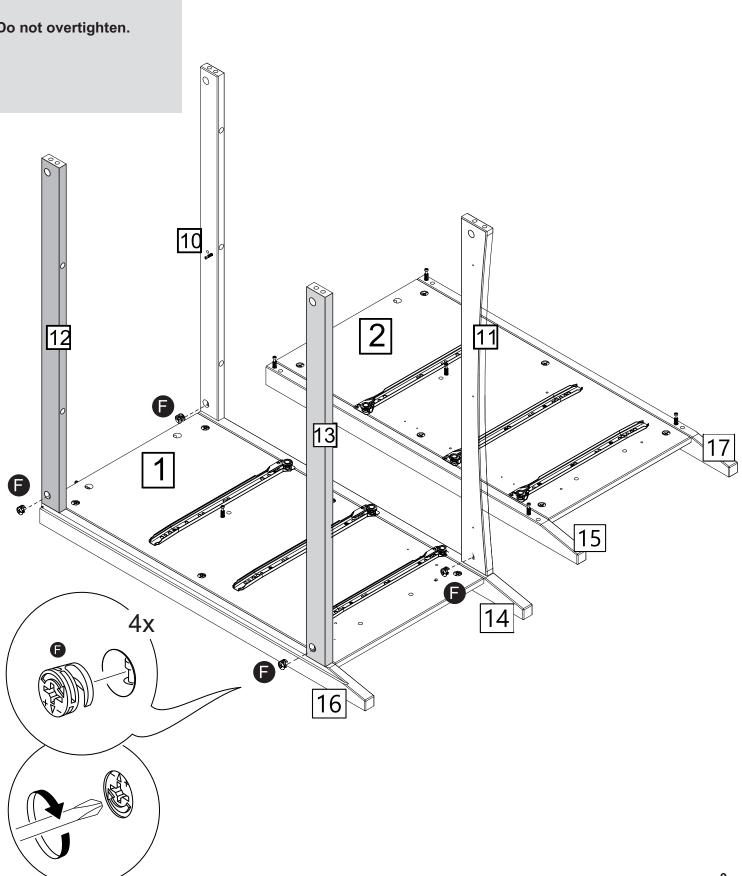


Step8


Fix runner left side **1** to the middle panel 23 using screws

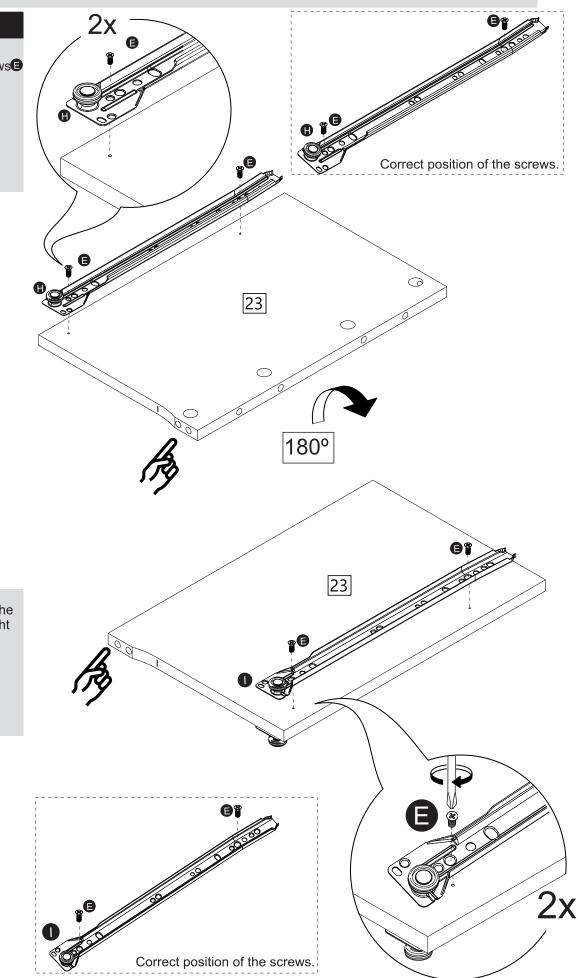

Then, turn middle panel to the other side and fix runner right side using screws 🖨 .

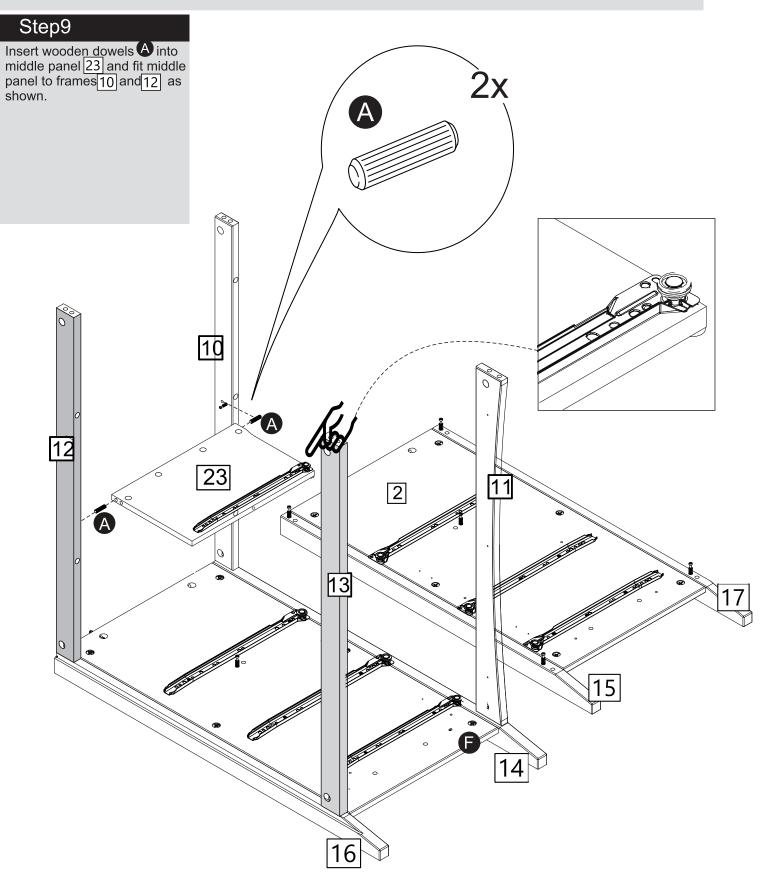



2x

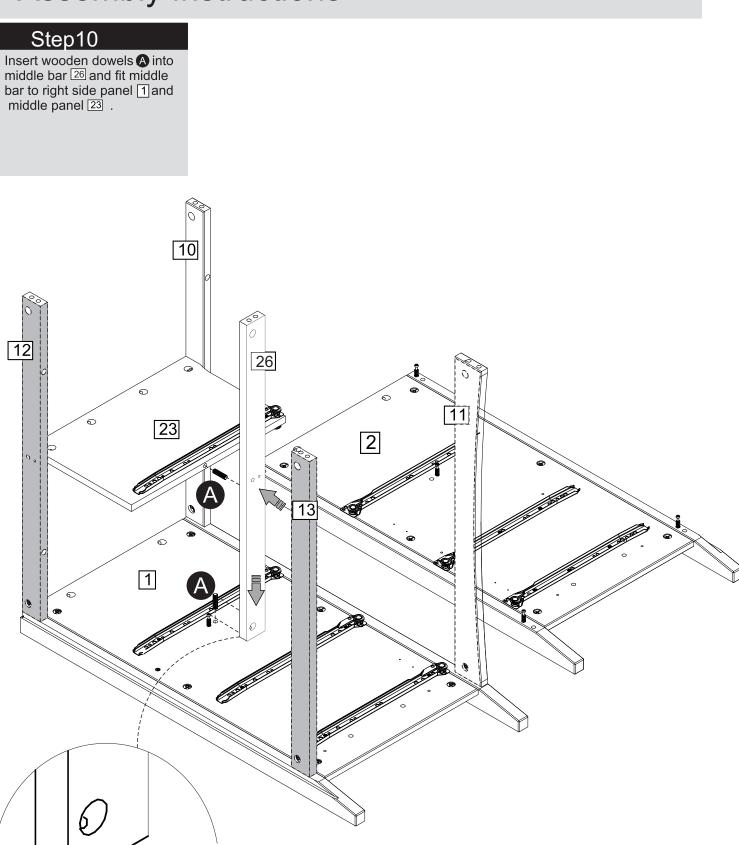


Step11

Fix middle bar 26 to middle panel 23 using screws **Q**.

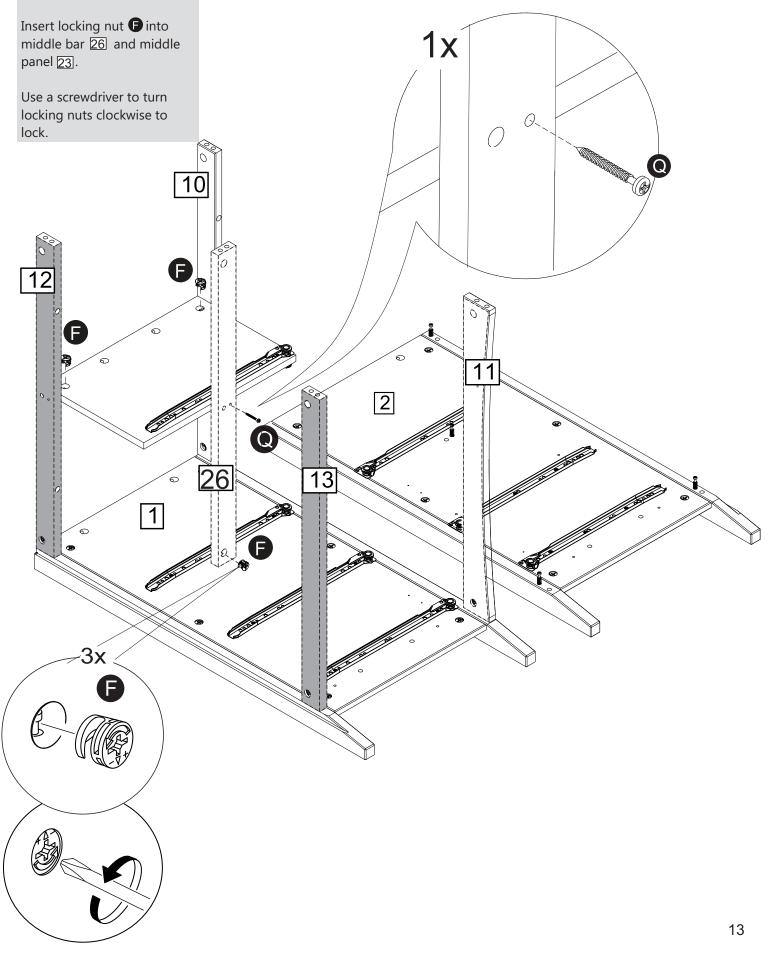


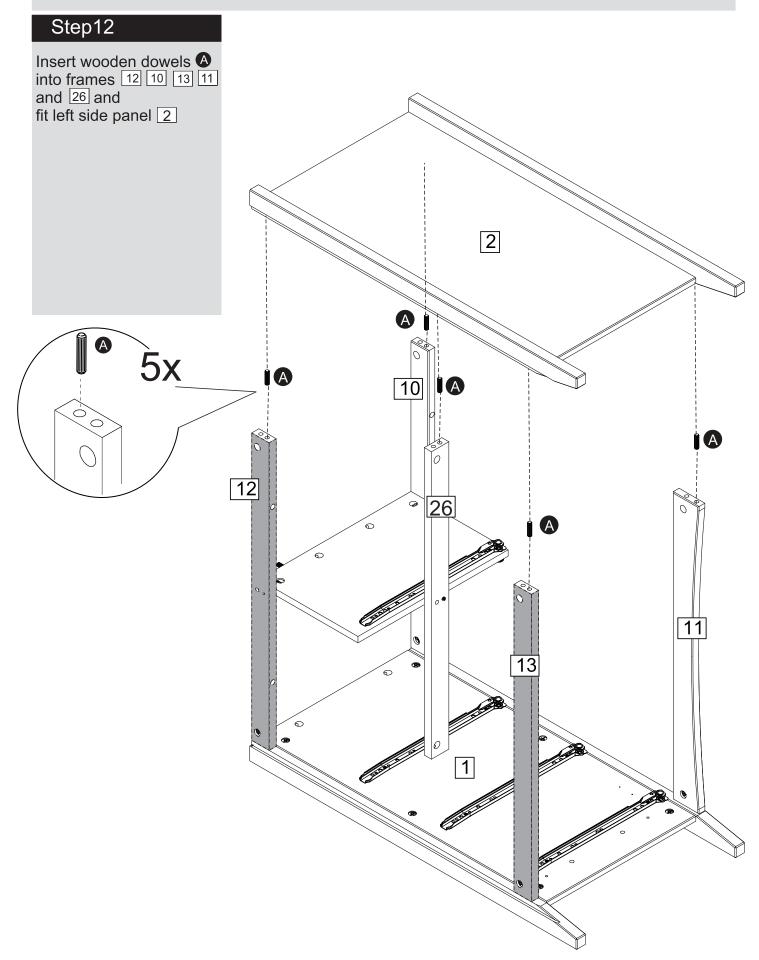

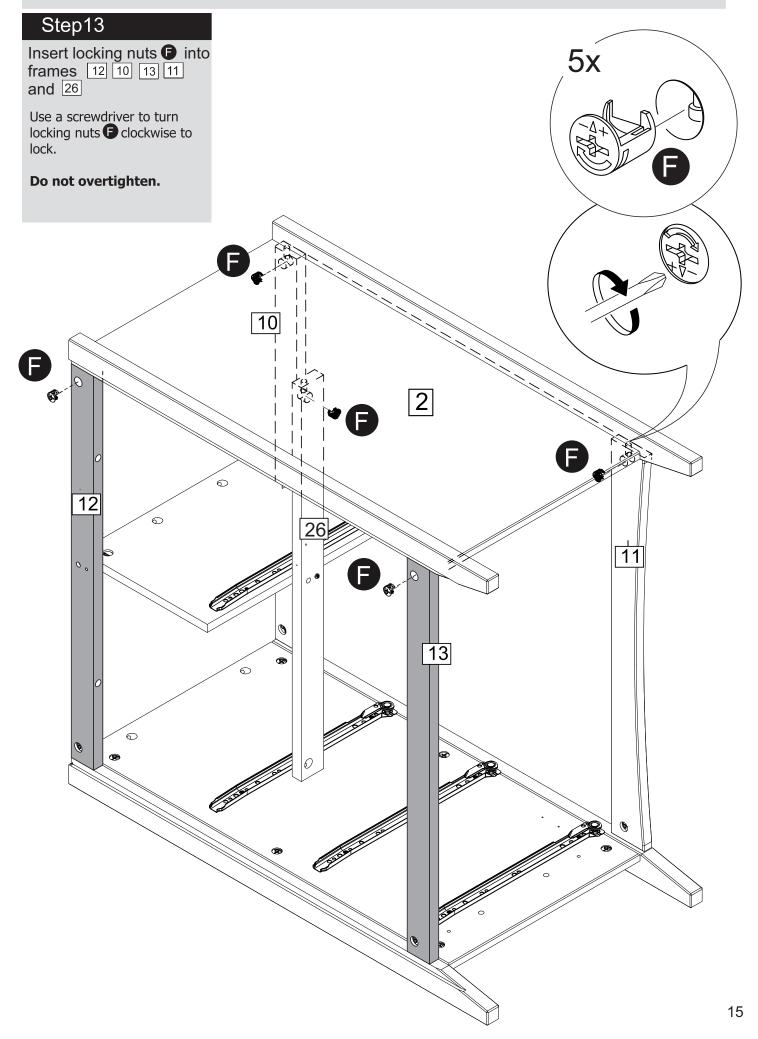

Step14

With help, carefully stand the chest upright. Insert wooden dowels A into side panels, middle panel and front frame as shown.

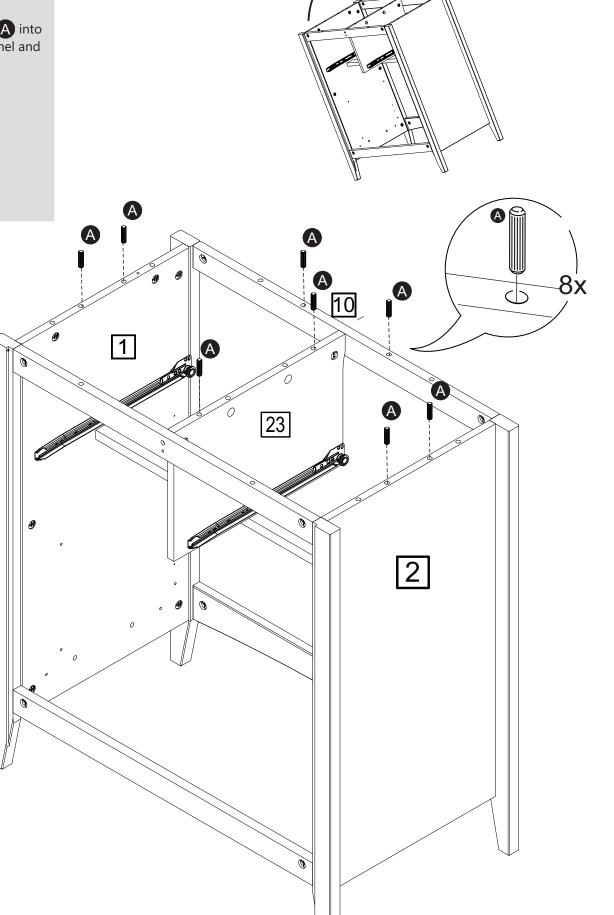


Step15

Screw metal dowels B into top panel $\fbox{3}$.



Note: Insert metal dowels as far as shown.


Do not overtighten.

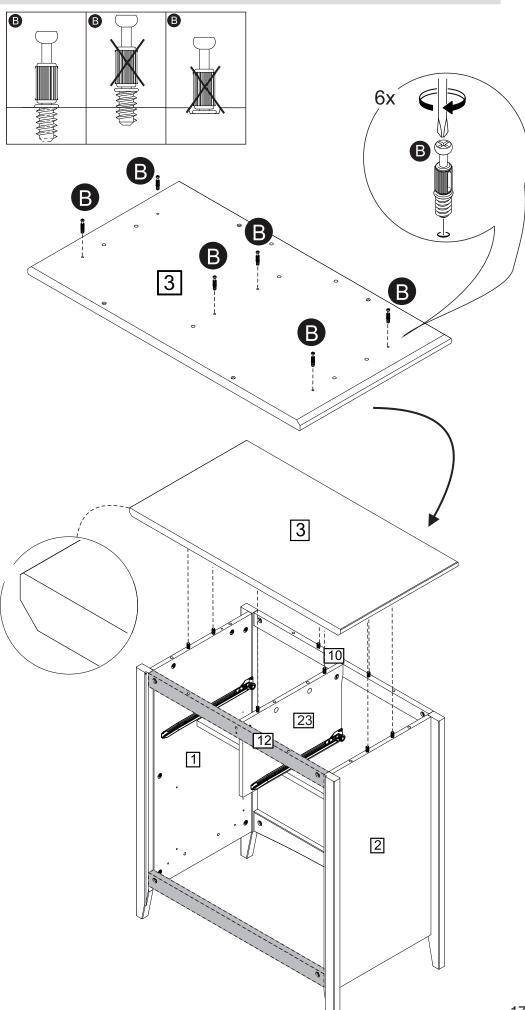


Step16


Insert top panel to the assembled cabinet.


Make sure all dowels and locking nuts are properly fitted in their holes.

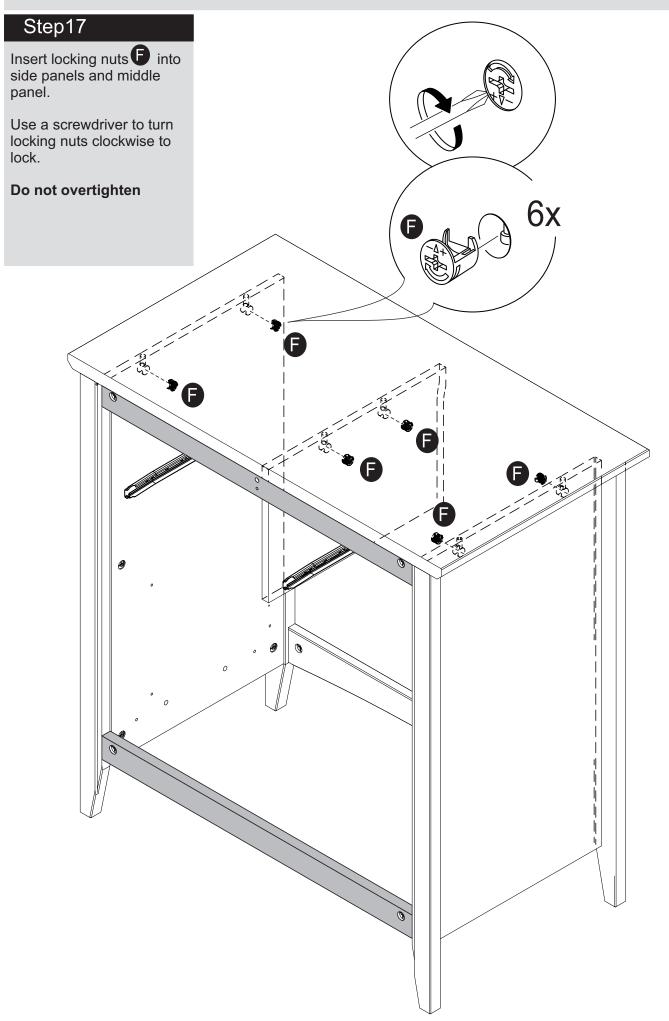



Step 18

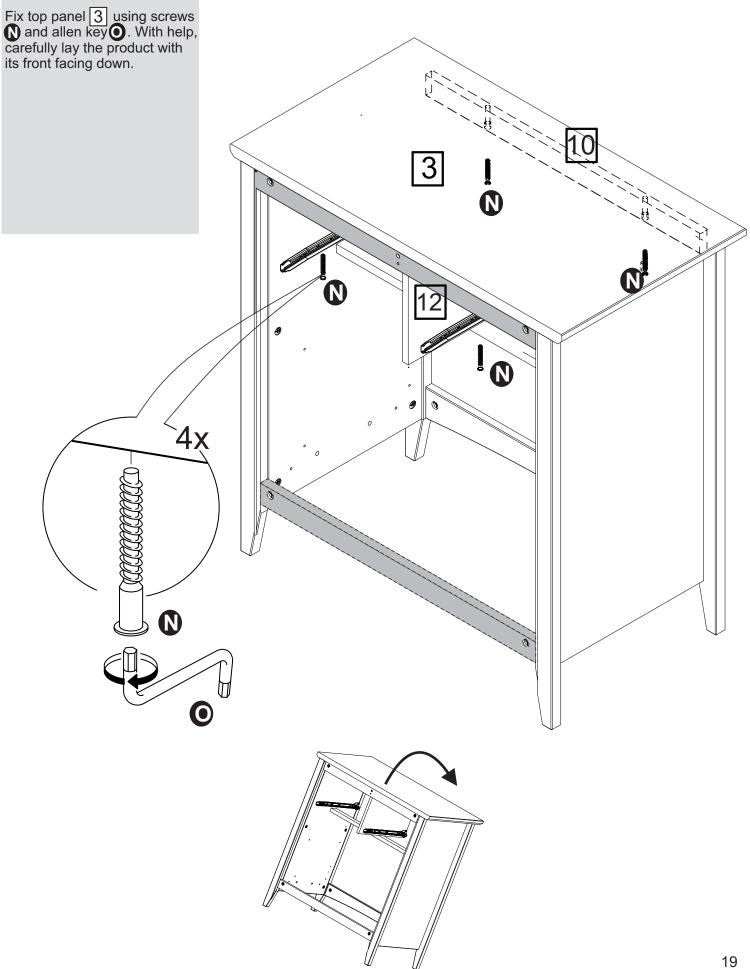

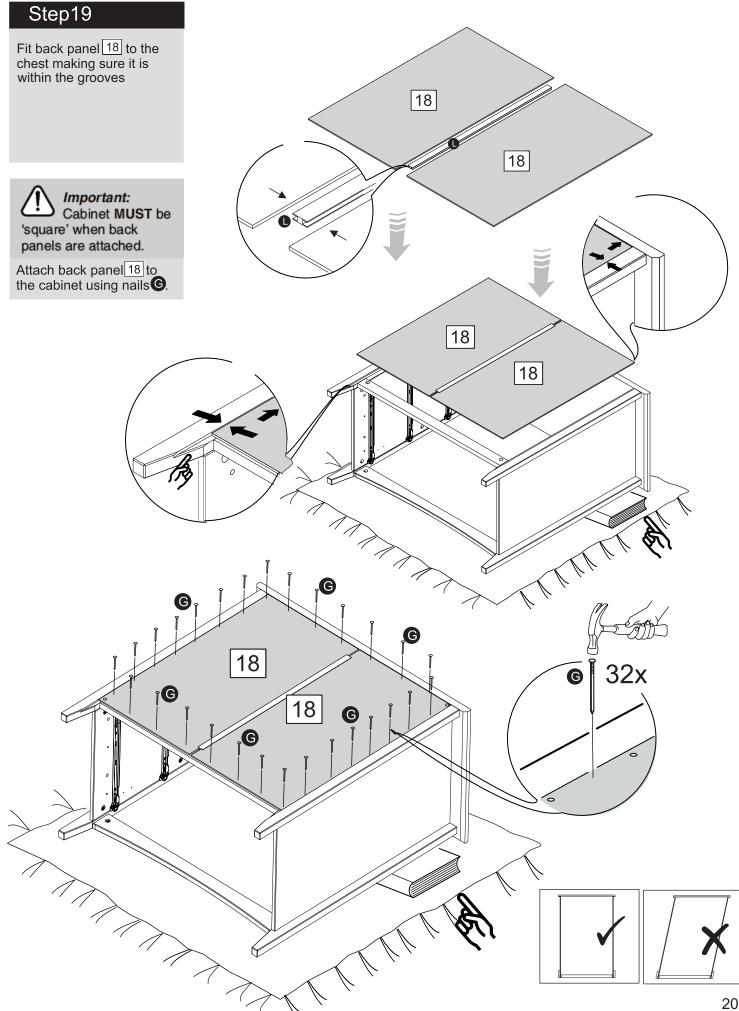

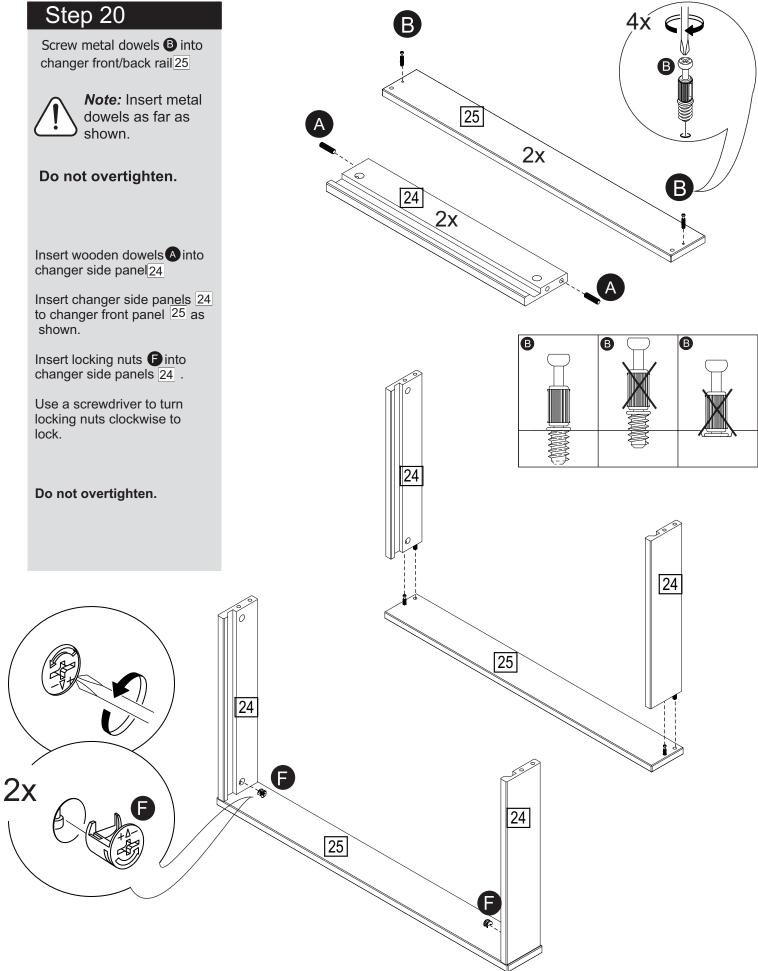


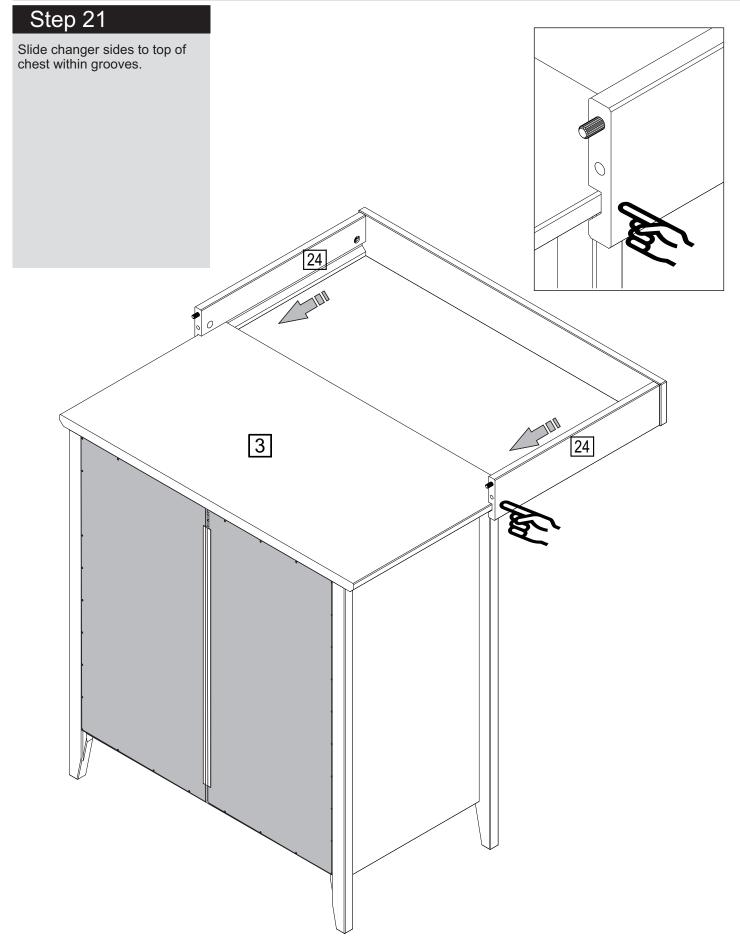


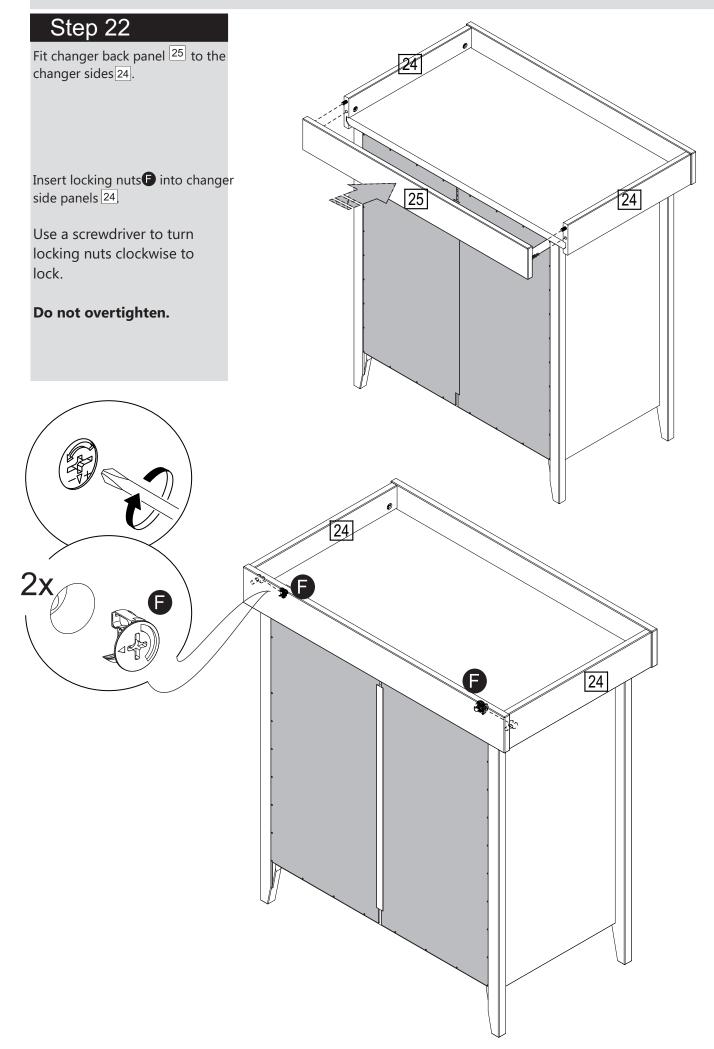



Step 23


Furniture must be fixed to a wall. Fix wall strap to top of furniture using washer and screw P. With help, move furniture into position.

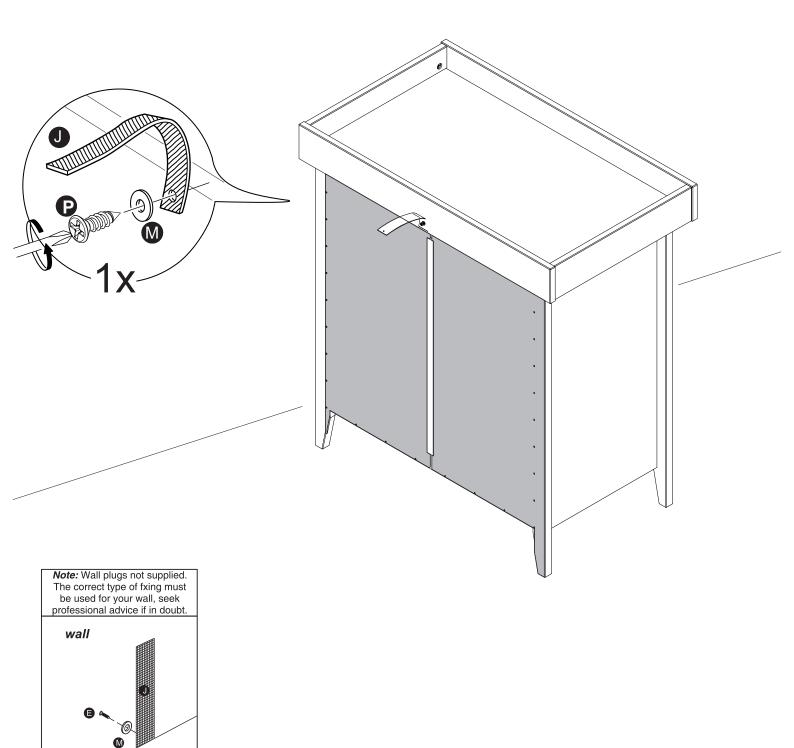

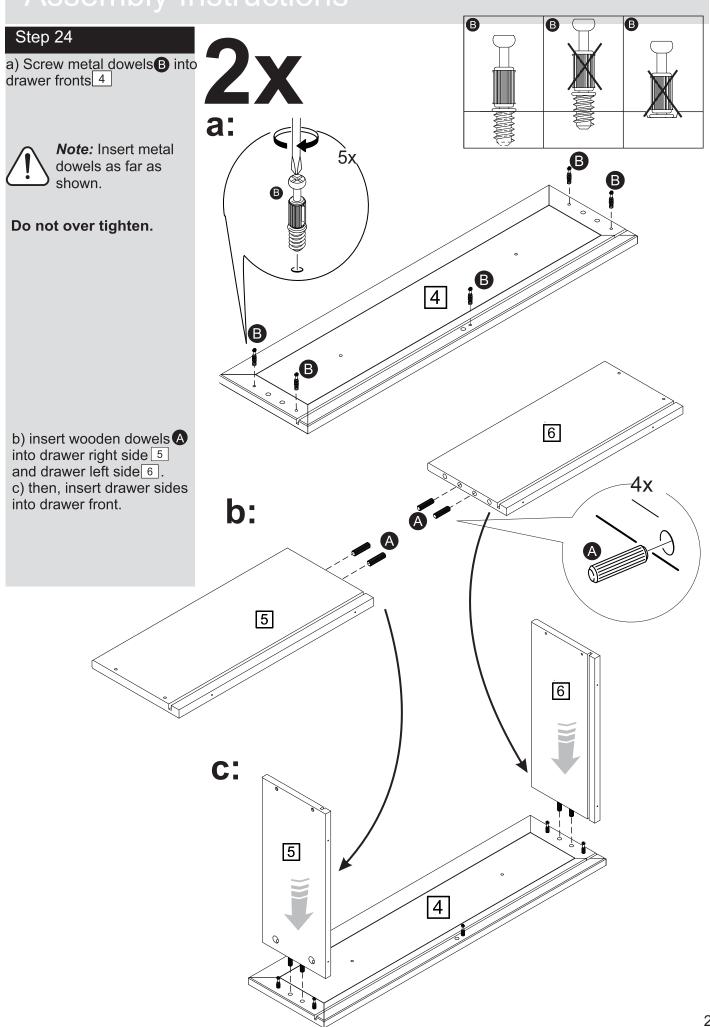

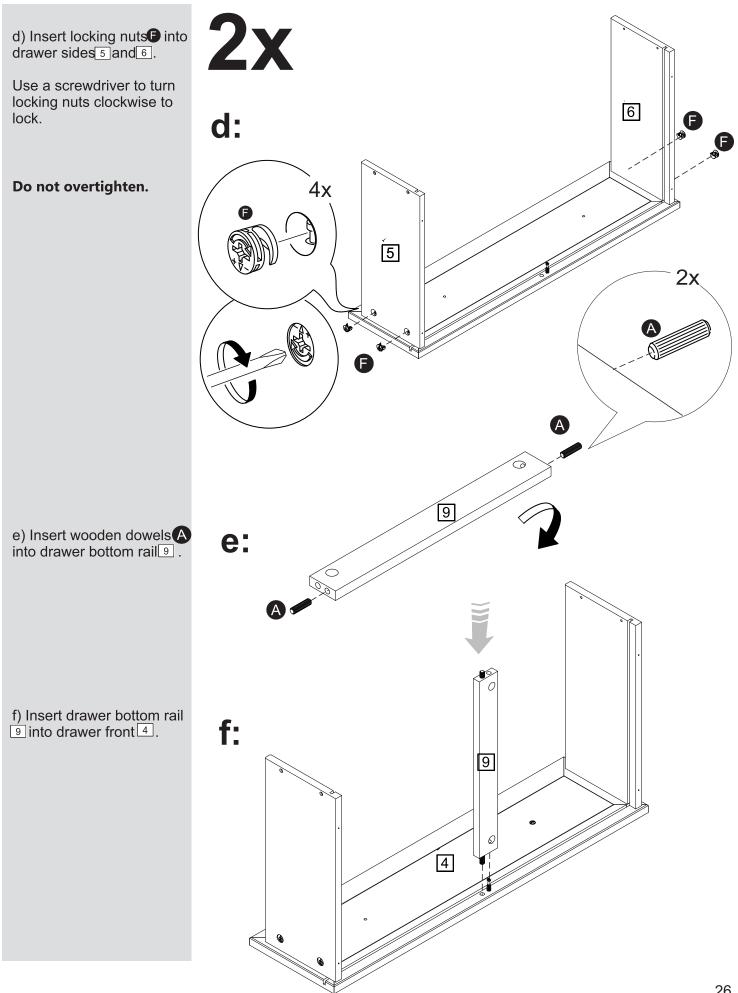


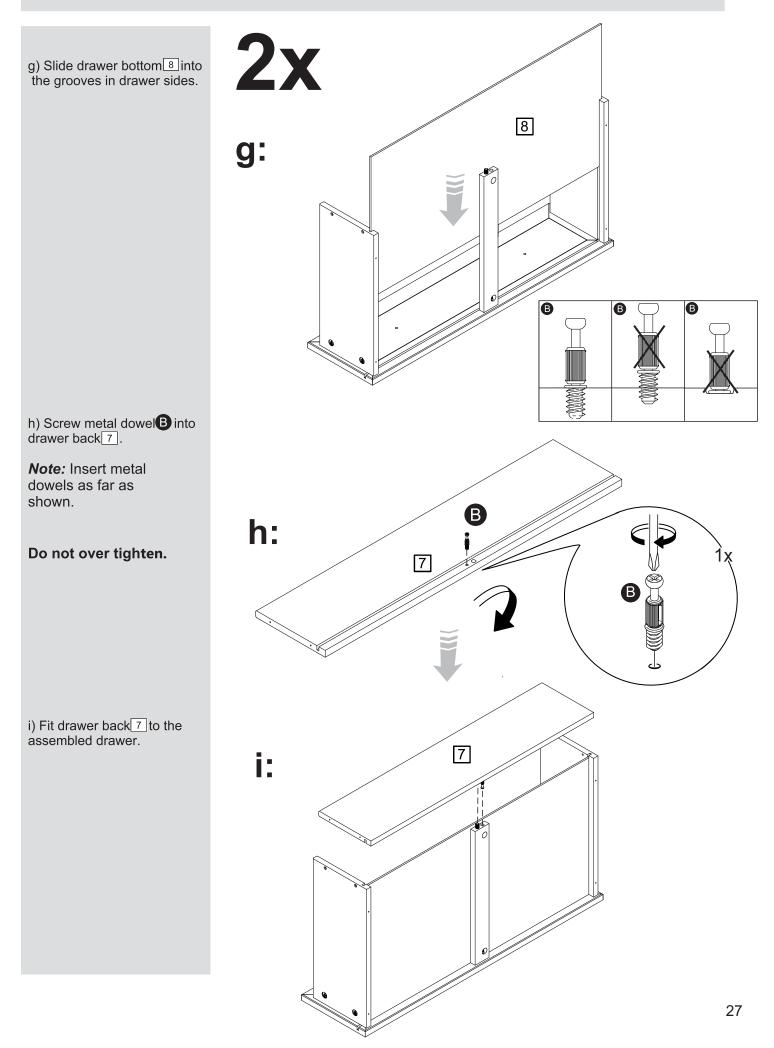


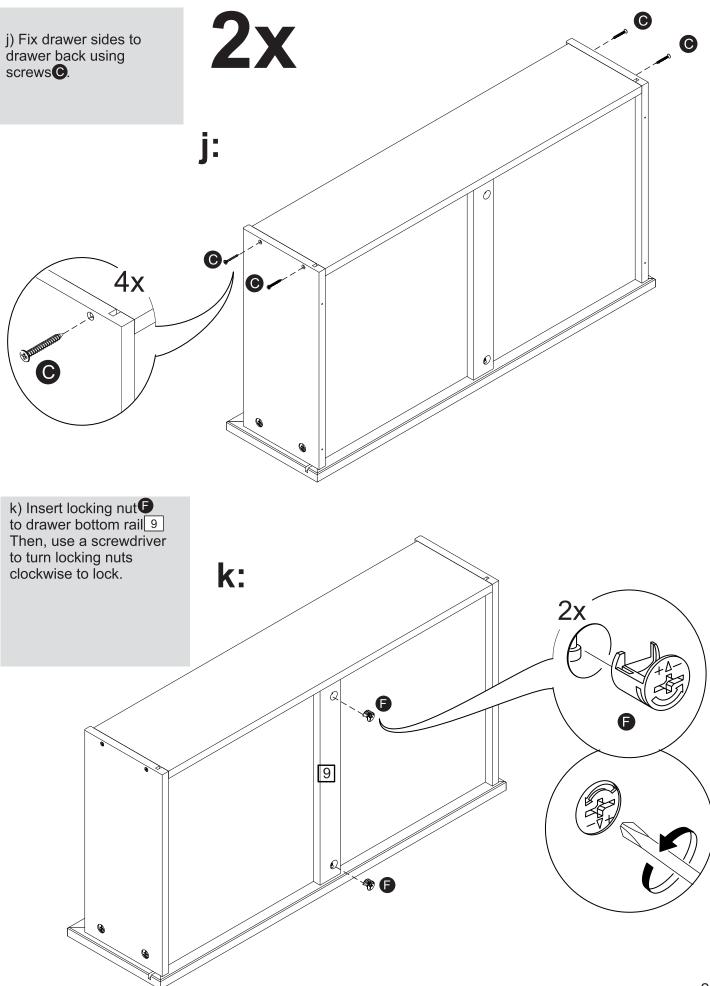


I: Fix runner left side **B** and runner right side **1** in the bottom edge of the drawers using screws **E**.

Make sure runners are correctly positioned according to the diagram prior to fixing.

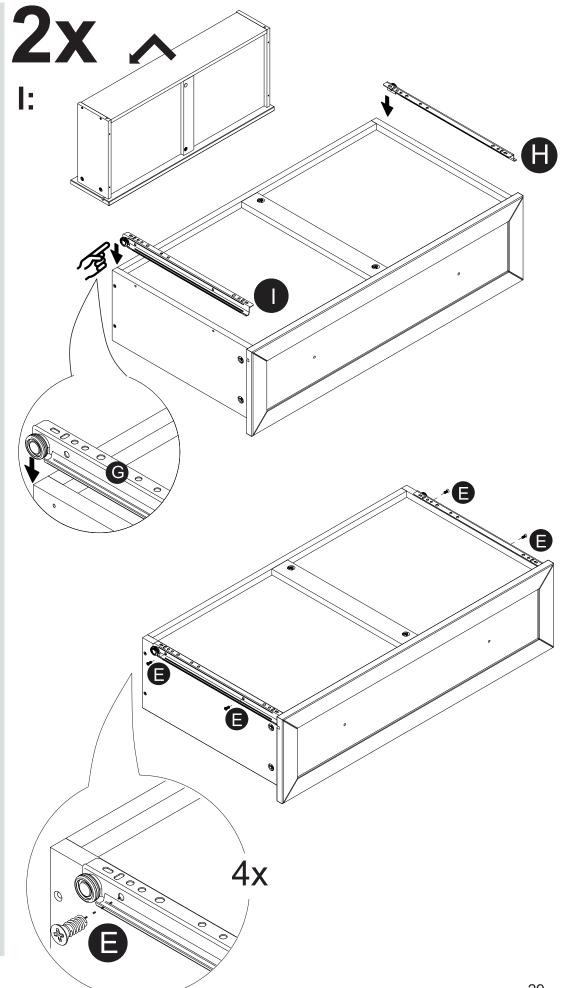


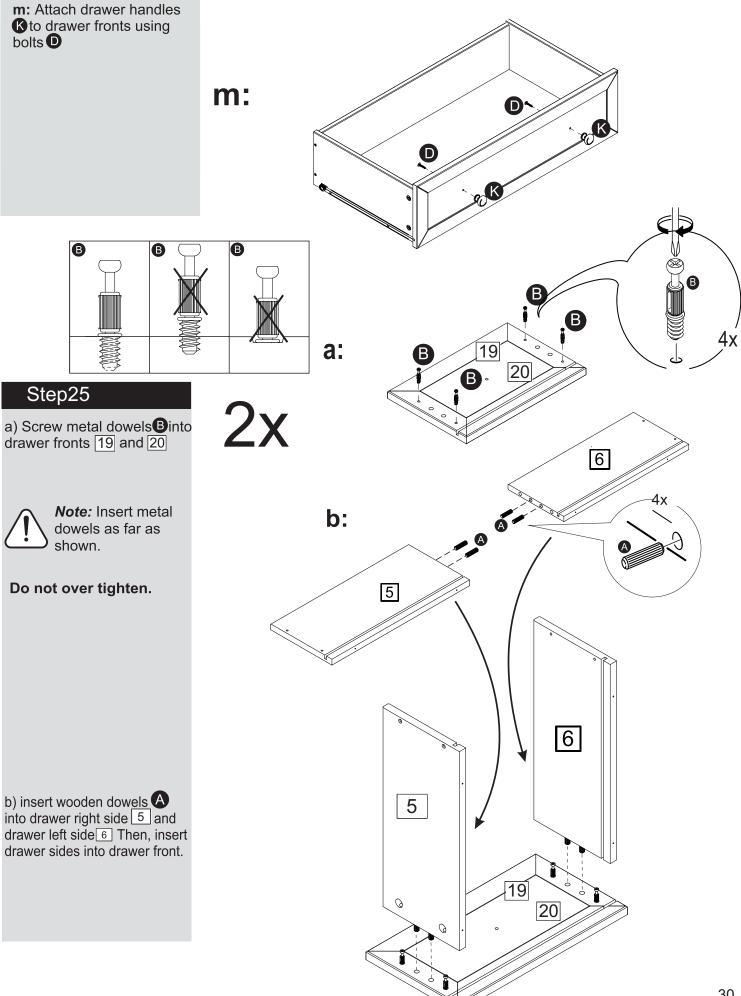


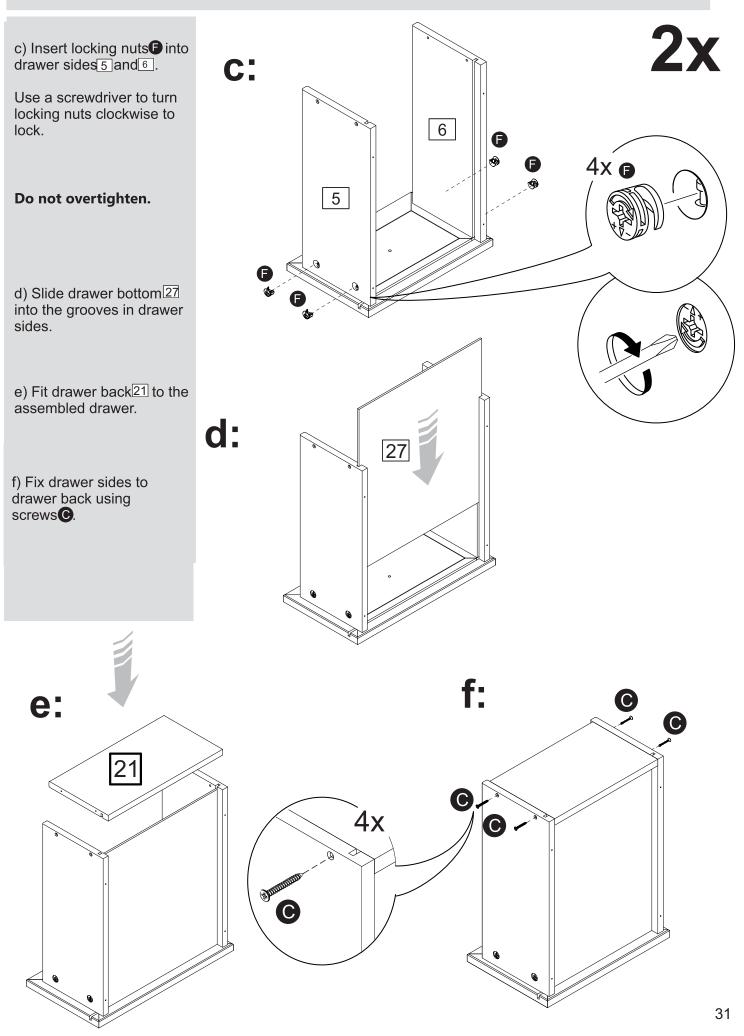

g: Fix runner left side **f** and runner right side **f** in the bottom edge of the drawers using screws **f**.

Make sure runners are correctly positioned according to the diagram prior to fixing.

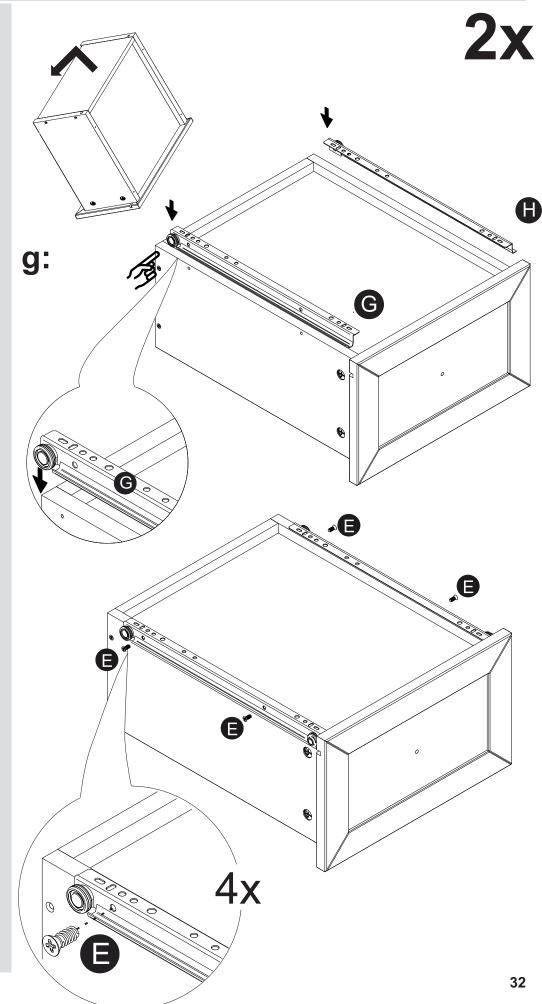

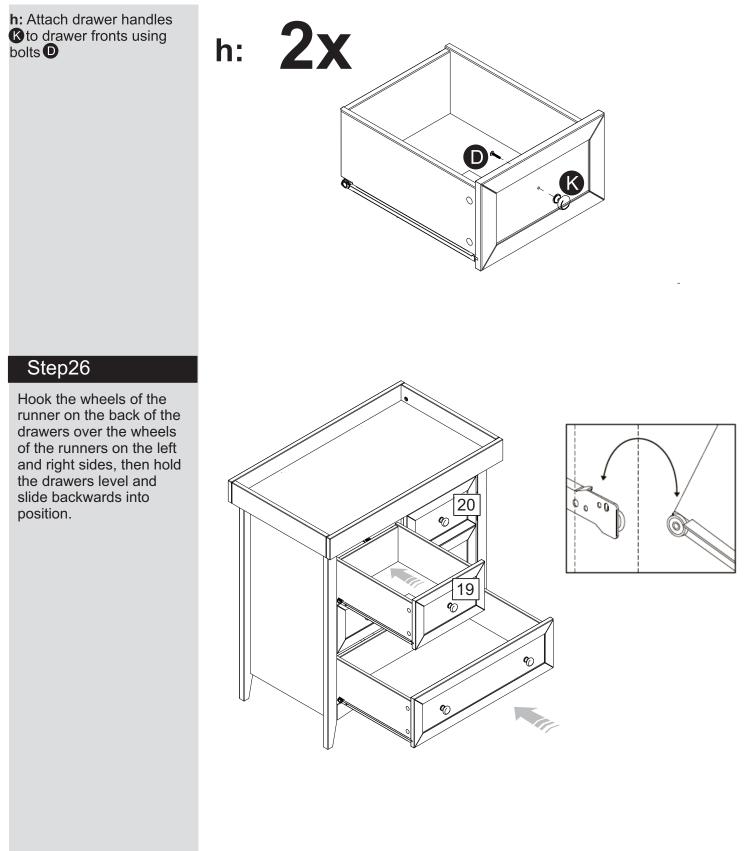

Assembly is complete.

A Guide to -Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.

Types of walls




Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualifed tradesperson if you are unsure.

Hints:


- 1: General rule: Always use a larger screw and wall plug if you are not sure.
- **2:**Ensure you use the recommended drill bit to match the wall plug and hole size.
- **3:**Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
- **4:**Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- **5**:Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

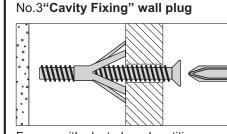

For use with plasterboard partitions or hollow wooden doors.

 
No.4"Cavity Fixing-Heavy Duty" wall plug



For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.


Safety:Always check the fitting and location to ensure your safety in and around the home.

 No.5"Hammer Fixing" wall plug



For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

 
No.6"Shield Anchor" wall plug Heavy loads



For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.


Fitting:From time to time check the fitting to ensure the wall plugs or screws do not become loose.

 No.1"General Purpose" wall plug



Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

 No.2"Plasterboard" wall plug



For use when attaching light loads on to plasterboard partitions.

