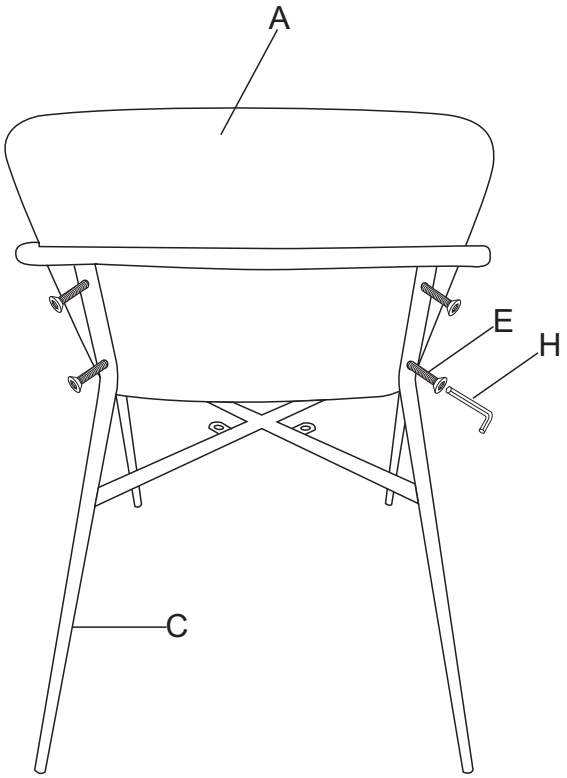
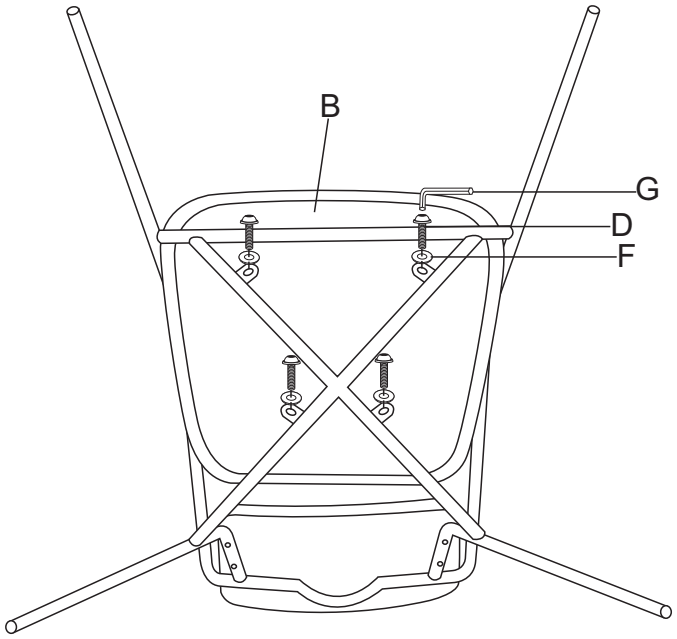
ASSEMBLY INSTRUCTION

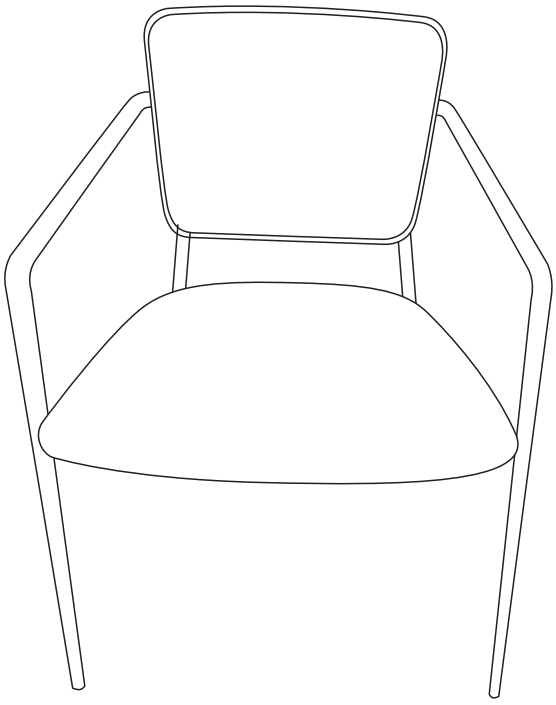
1.

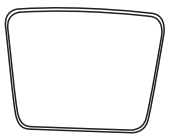

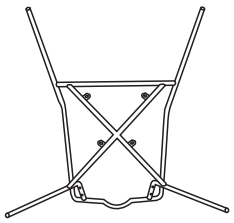




2.



3.



Ax1 	Bx1 	Cx1 
Dx4 	Ex4 	Fx4 
Gx1 	Hx1 	