
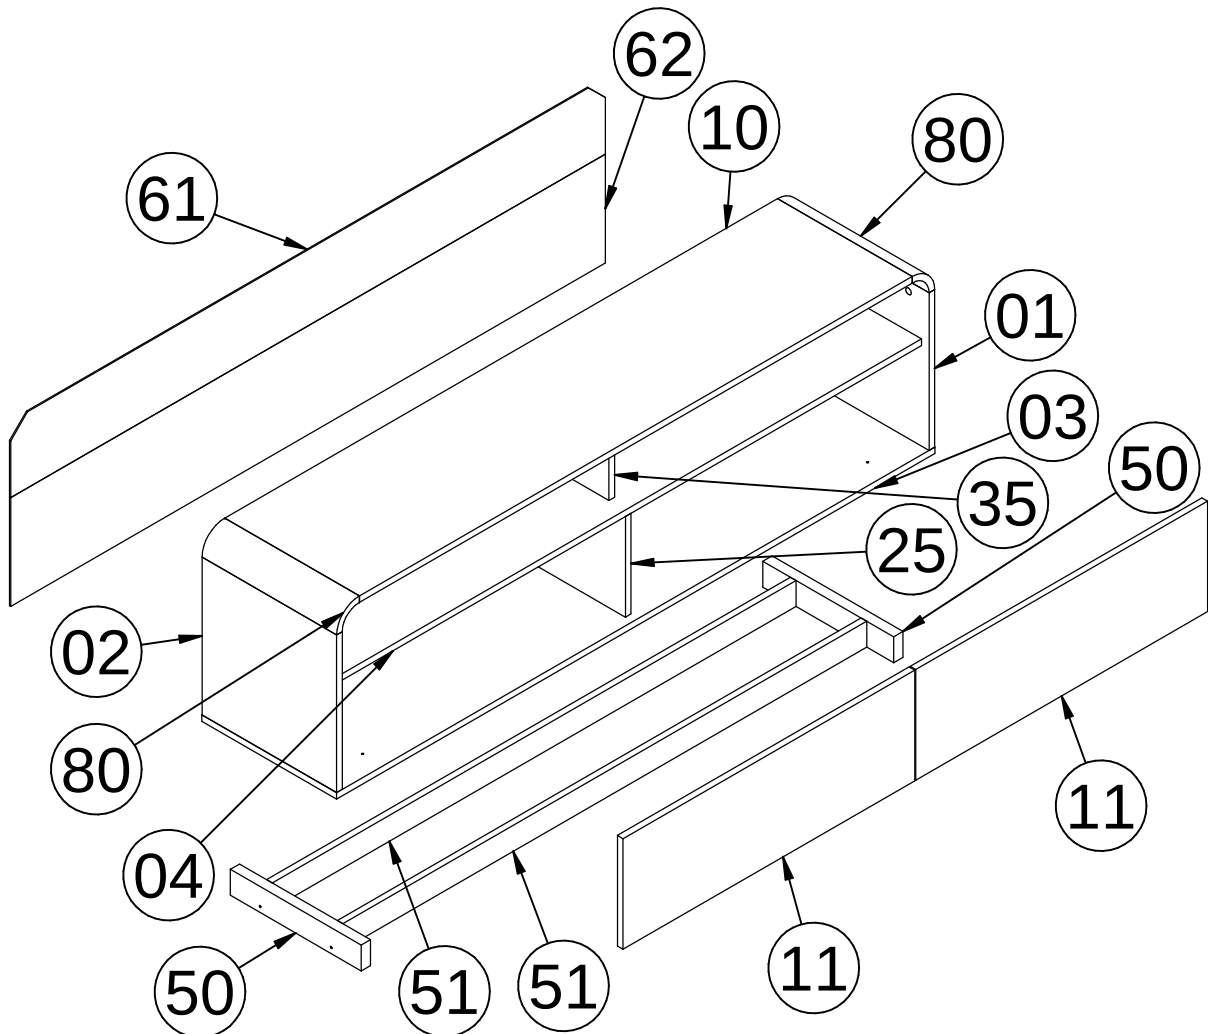


BM005

Rack Curvo
Curves TV Stand

Instruções de Montagem
Assembly Instructions / Instrucciones de Montaje

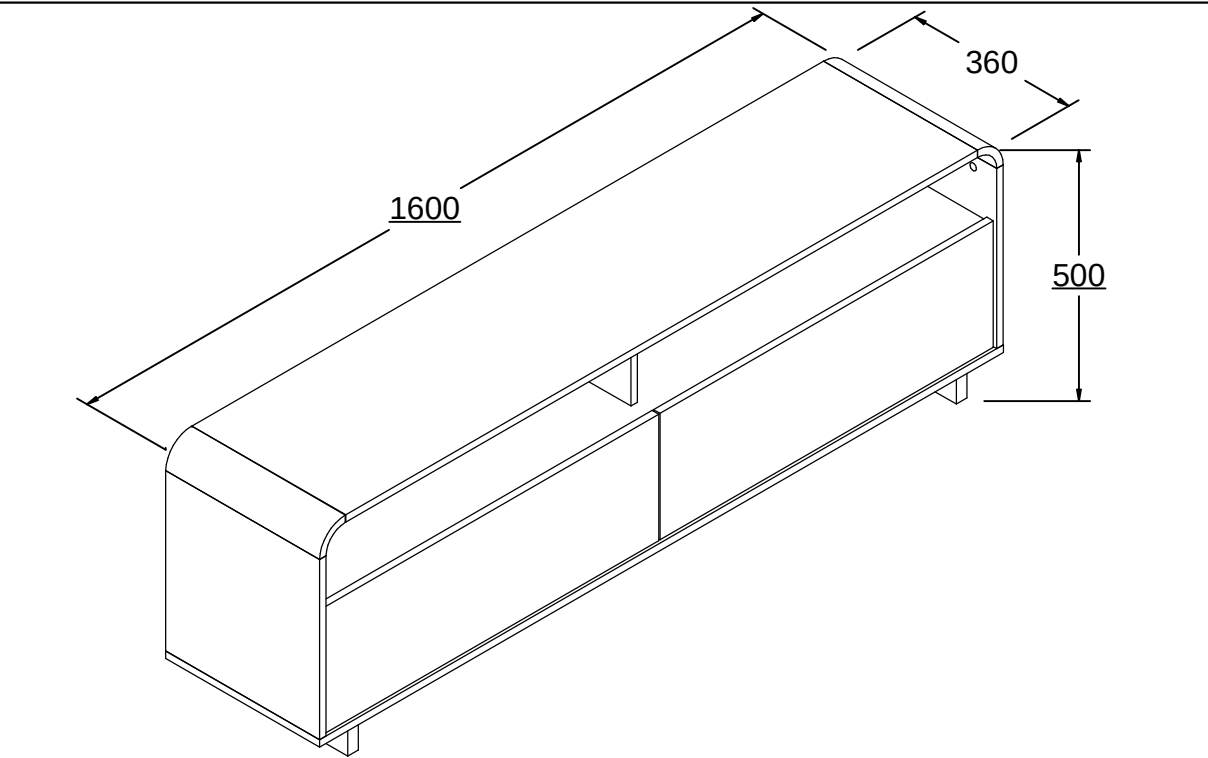


Lista de ferragens Hardware list				
REF	Lista de materiais		QNT	
A		CAVILHA Ø6X30 ESPIGA Ø6X30 DOWEL Ø6X30	36	
B		PARAFUSO CC 3,5X14 TORNILLO CC 3,5X14 SCREW CC 3,5X14	16	
C		PARAFUSO CC 3,5X40 TORNILLO CC 3,5X40 SCREW CC 3,5X40	11	
D		DOBRADIÇA BISAGRA HINGE	04	
F		PARAFUSO CF 4,5X50 TORNILLO CF 4,5X50 SCREW CF 4,5X50	04	
G		HASTE MINIFIX TORNILLO MINIFIX MINIFIX SCREW	24	
H		TAMBOR MINIFIX TORNILLO MINIFIX MINIFIX BARREL	24	
I		PREGO CLAVO NAIL	50	
L		CANTONEIRA ESCUADRA BRACKET	08	
P		SAPATA ZAPATA LEVEL FOOT	11	
Q		FIXADOR DE COSTAS FIJADOR DE TRASERA BACK FIXER	08	
R		PARAFUSO CC 3,5X16 TORNILLO CC 3,5X16 SCREW CC 3,5X16	24	
S		COLA PEGAMENTO GLUE	01	

Lista de peças / Parts lists / Lista de piezas				
Nome	C	L	E	QTD
BM005-01 _LAT DIR RACK/LAT DER RACK/RIGHT RACK SIDE	360	365	15	1
BM005-02 _LAT ESQ RACK/LAT IZQ RACK/LEFT RACK SIDE	360	365	15	1
BM005-03 BASE RACK/BASE RACK/RACK BASE	360	1600	15	1
BM005-04 PRATELEIRA RACK/REPISA RACK/RACK SHELF	340	1569	15	1
BM005-10 TAMPO RACK/TAPA RACK/RACK TOP	360	1478	15	1
BM005-11 PORTA RACK/PUERTA RACK/RACK DOOR	780	256	15	2
BM005-25 DIV MENOR RACK/DIV MENOR RACK/SMALL RACK DIVIDER	340	233	15	1
BM005-35 DIV NICHOS RACK/DIV NICHOS RACK/RACK NICHE DIVIDER	296	162	15	1
BM005-50 RODAPÉ RACK/ZÓCALO RACK/RACK TOE KICK	350	60	25	2
BM005-51 RODAPÉ CENTRAL RACK/ZÓCALO RACK/RACK TOE KICK	1400	60	15	2
BM005-61 COSTA SUP RACK/TRAS SUP RACK/UPPER RACK BACK	1590	176	3	1
BM005-62 COSTA INF RACK/TRAS INF RACK/LOWER RACK BACK	1590	252	3	1
BM005-80 MOLD CURVA RACK/MARCO CURVO/CURVED RACK FRAME	360			2

Limpar o número da peça com pano levemente umedecido com álcool

Clean the part number with a cloth slightly dampened with alcohol

Limpiar el número de la pieza con un paño ligeramente humedecido con alcohol.




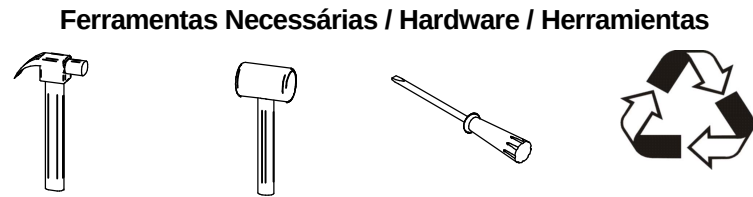






"**IMPORTANTE LER COM ATENÇÃO E GUARDAR PARA EVENTUAIS CONSULTAS**".
"IMPORTANTE LEER CON ATENCIÓN Y GUARDAR PARA EVENTUALES CONSULTAS".
"IMPORTANT TO READ CAREFULLY AND SAVE FOR ANY QUERIES".





BM005

Instruções de Montagem

Assembly Instructions / Instrucciones de Montaje

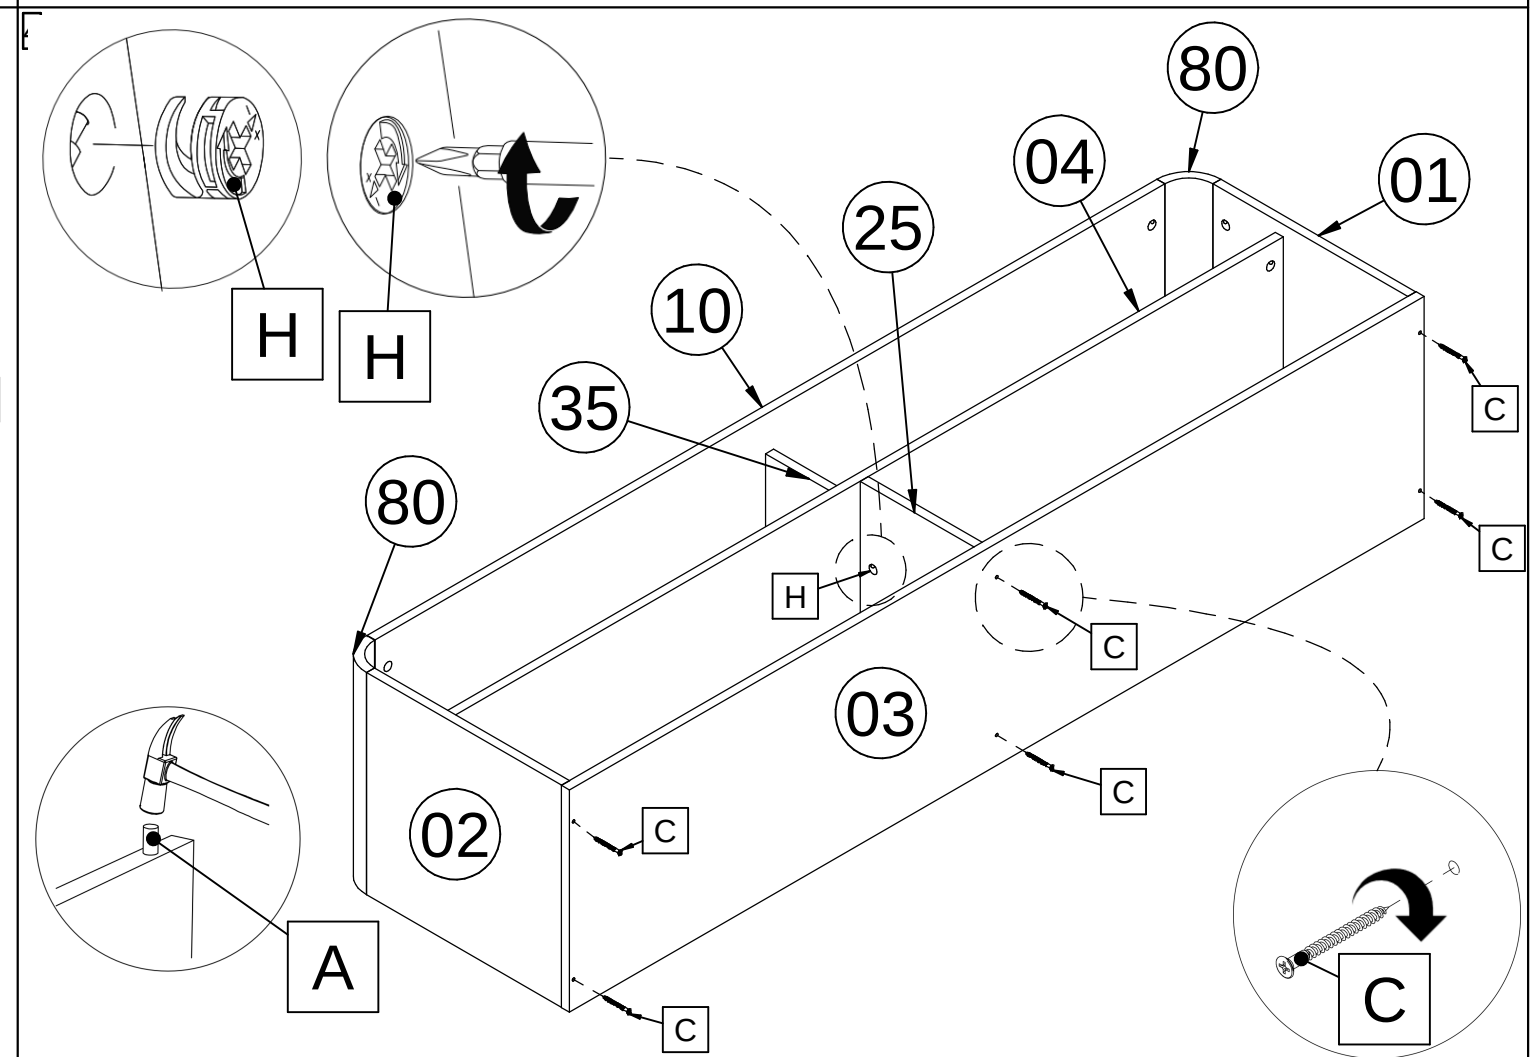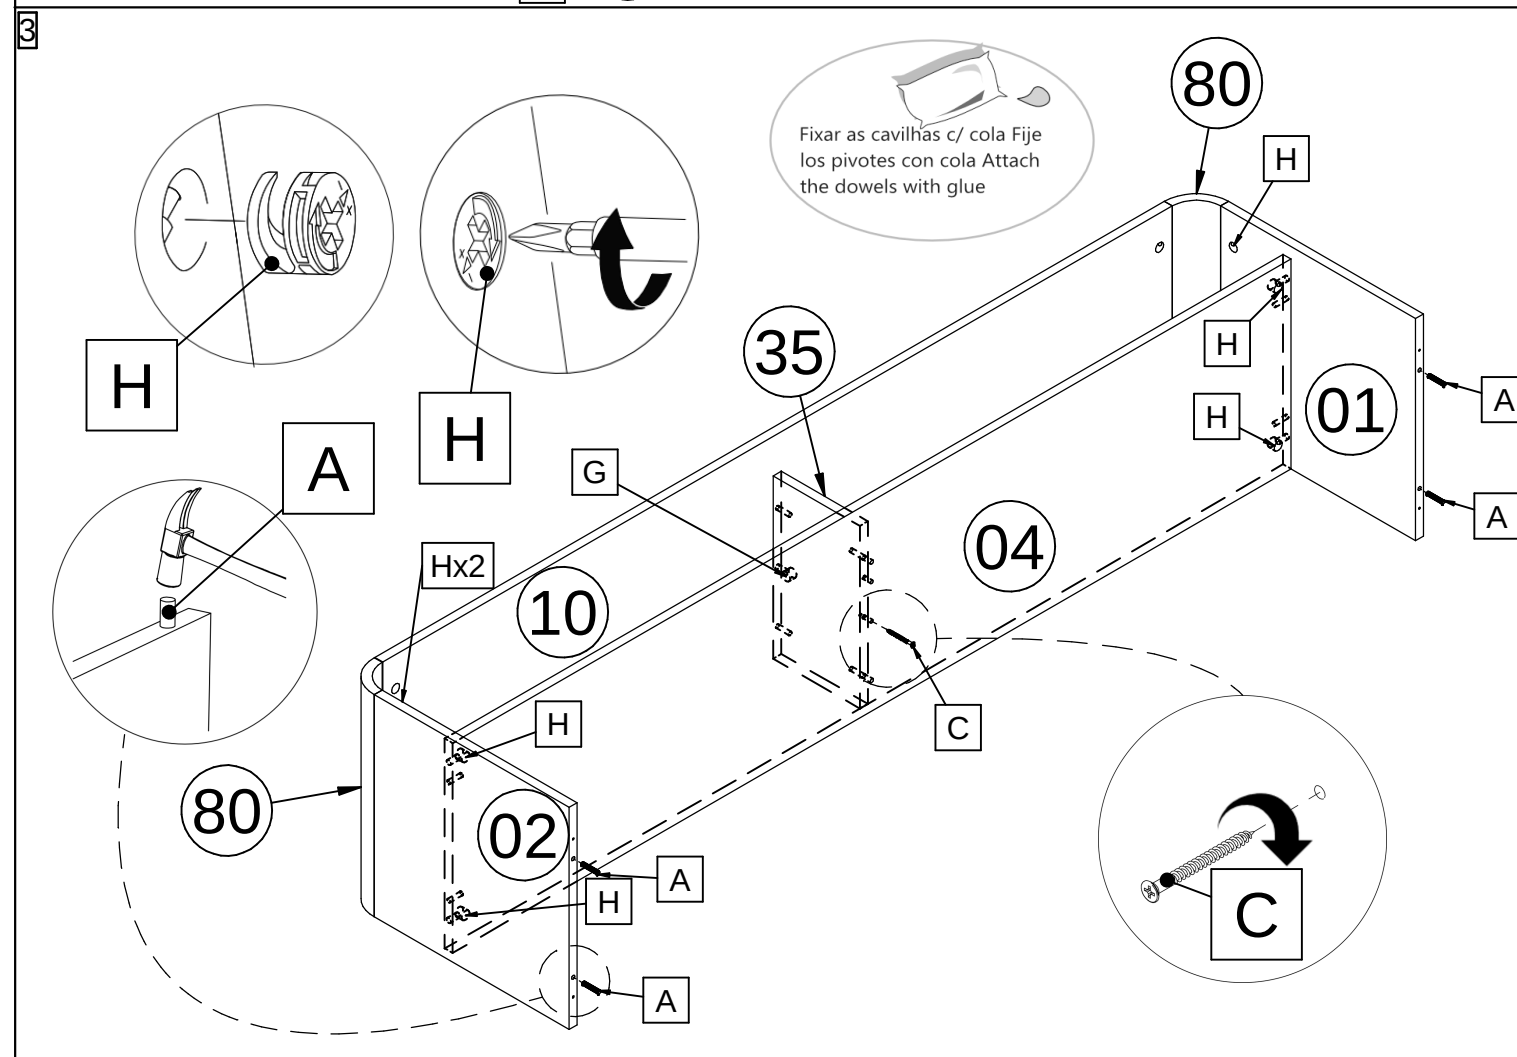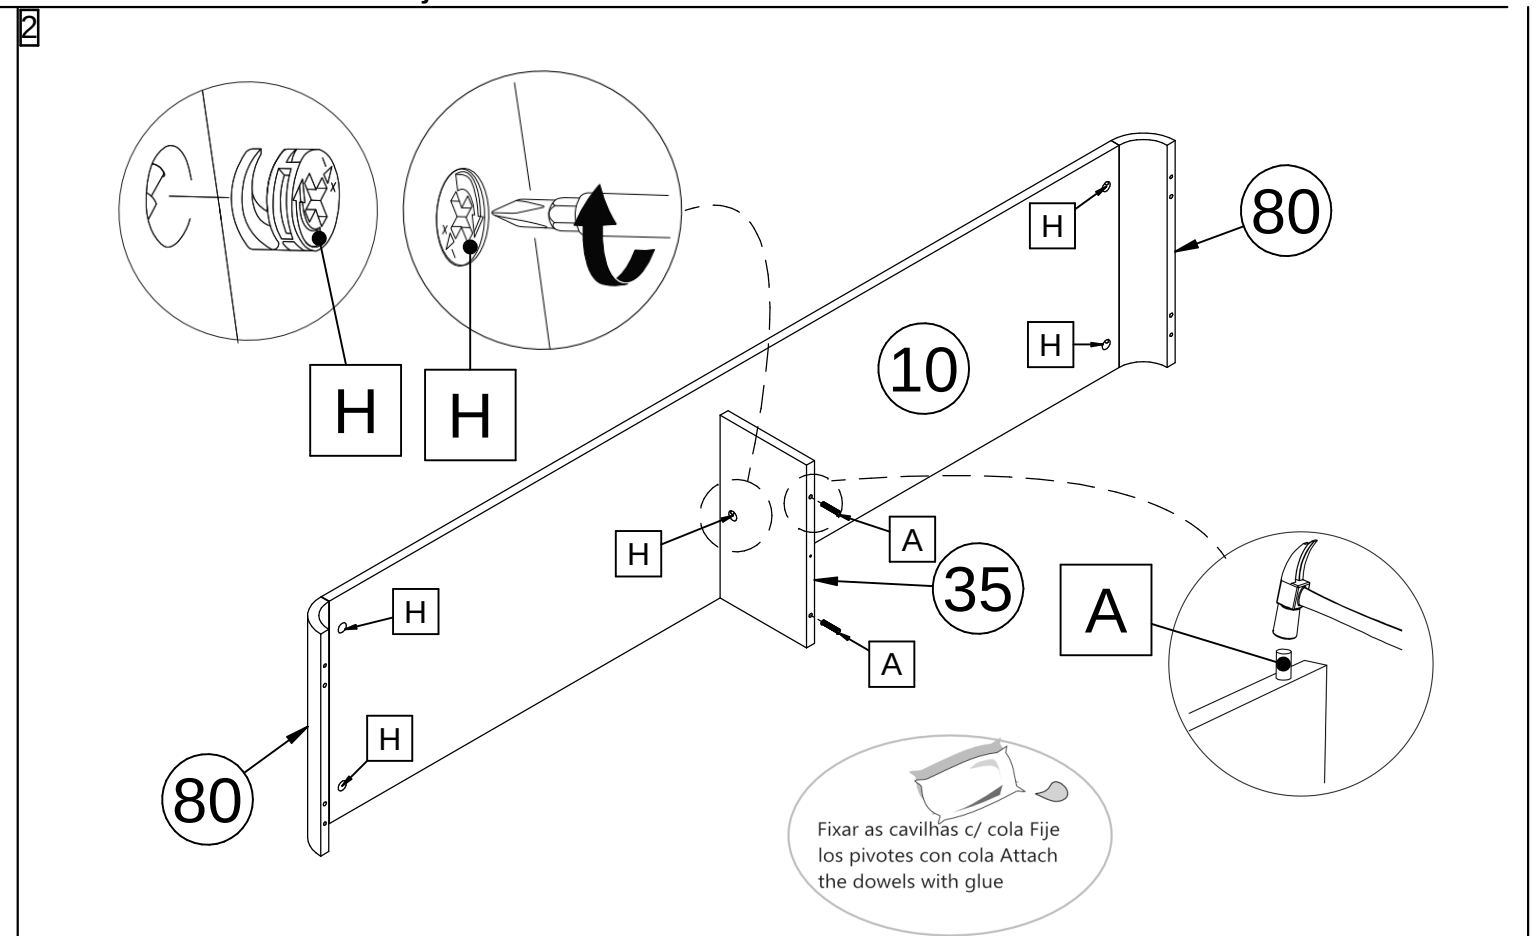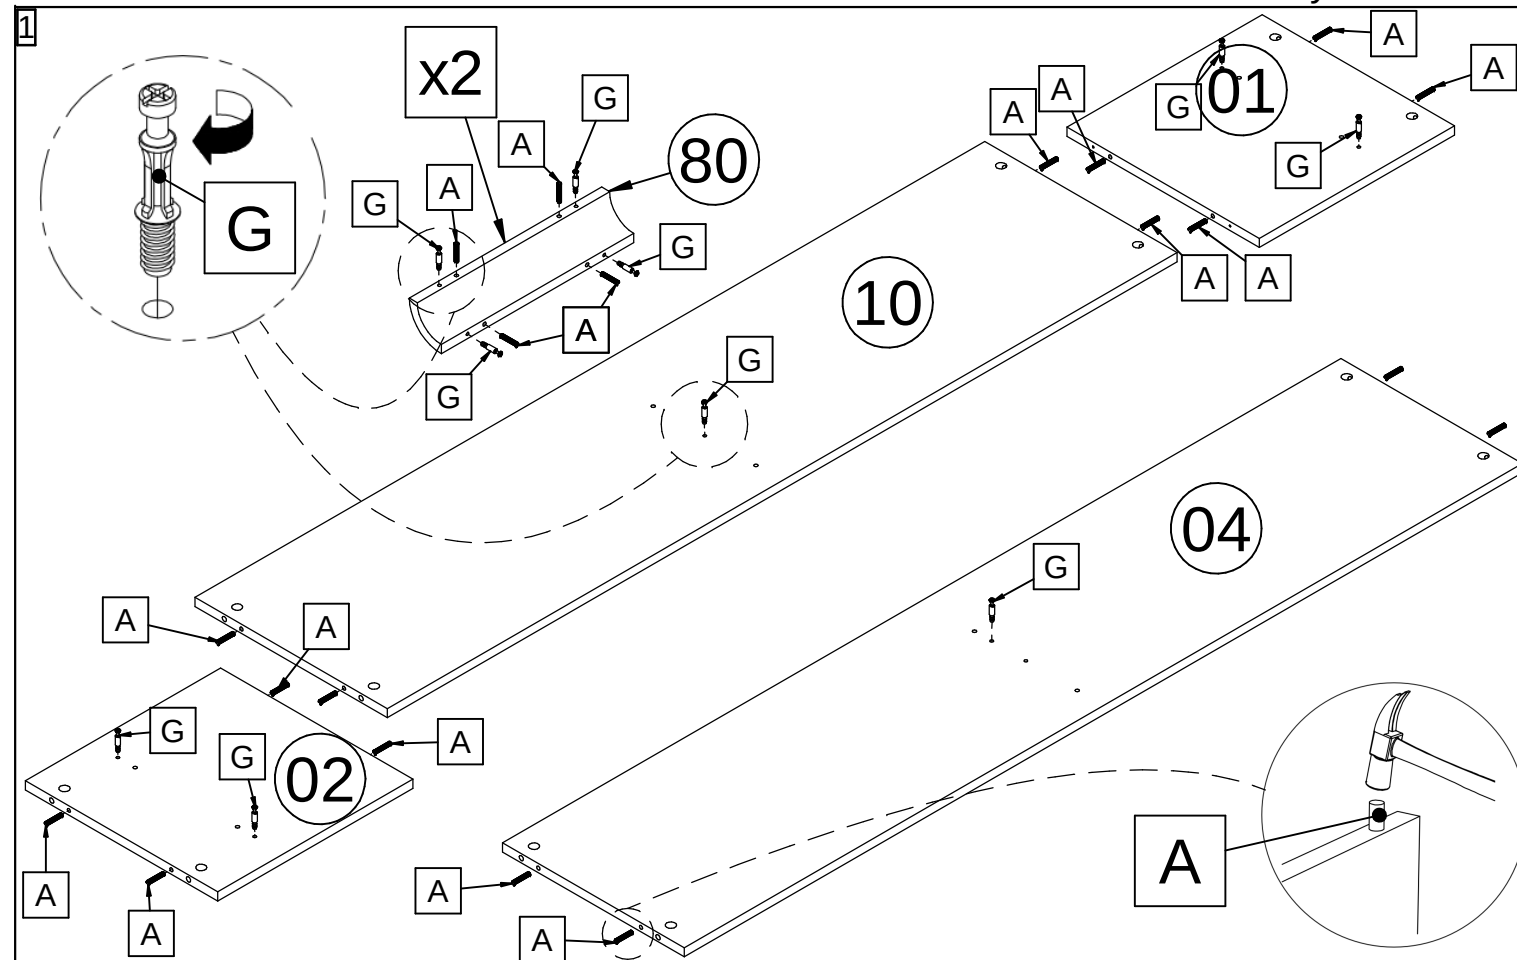

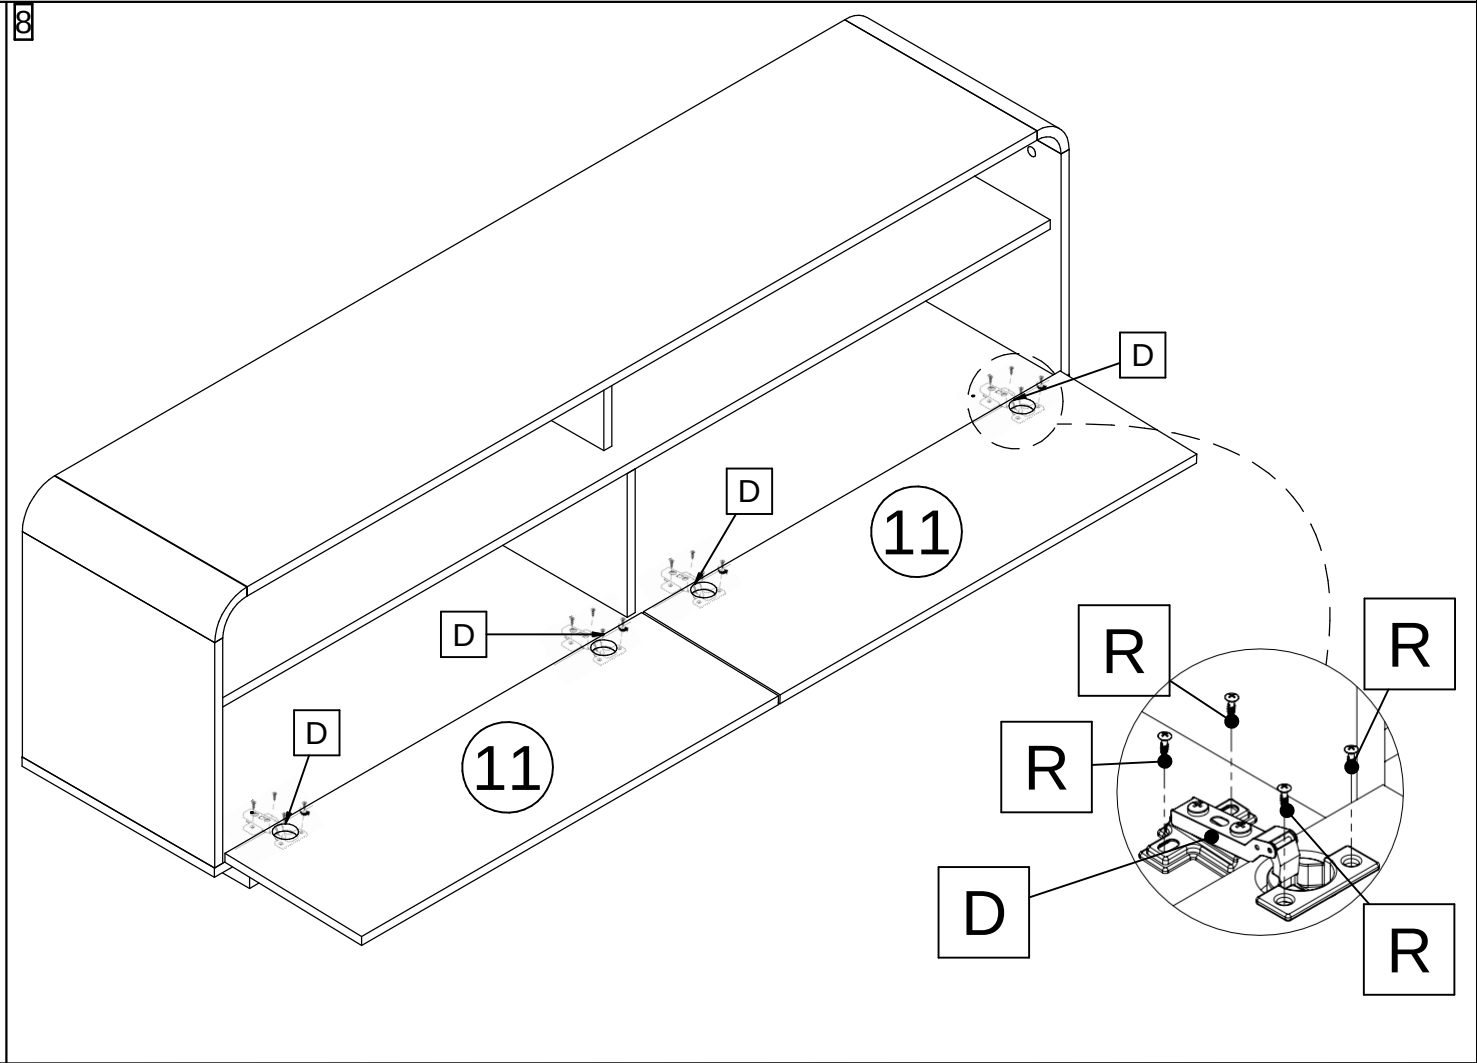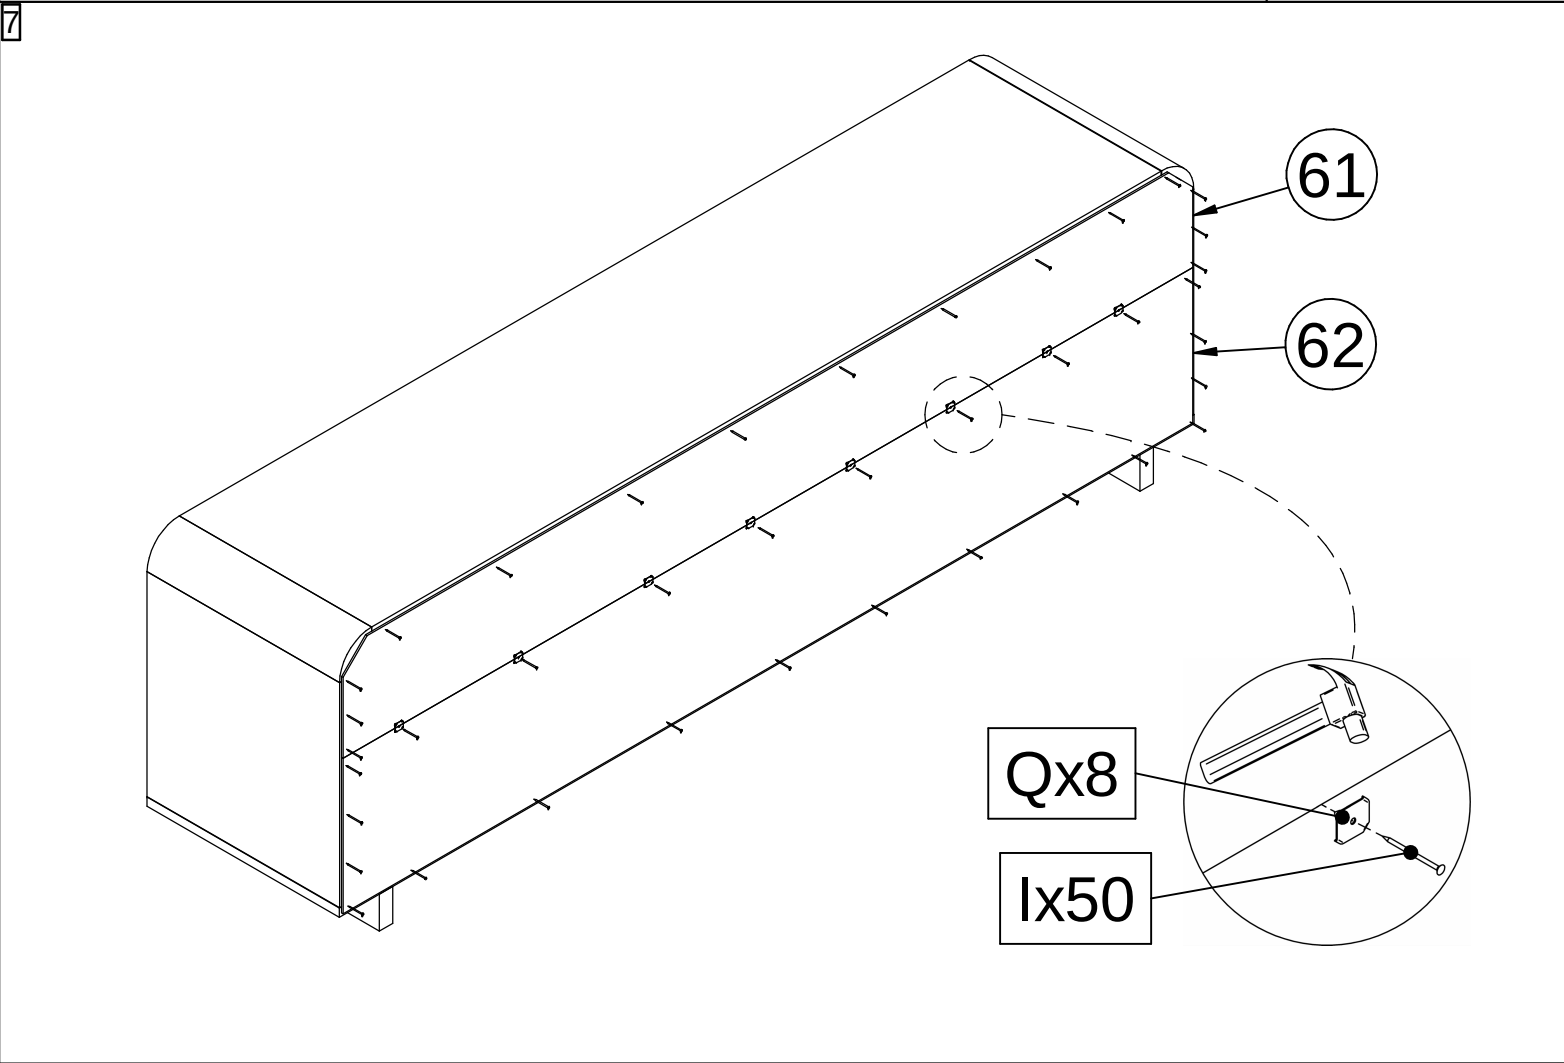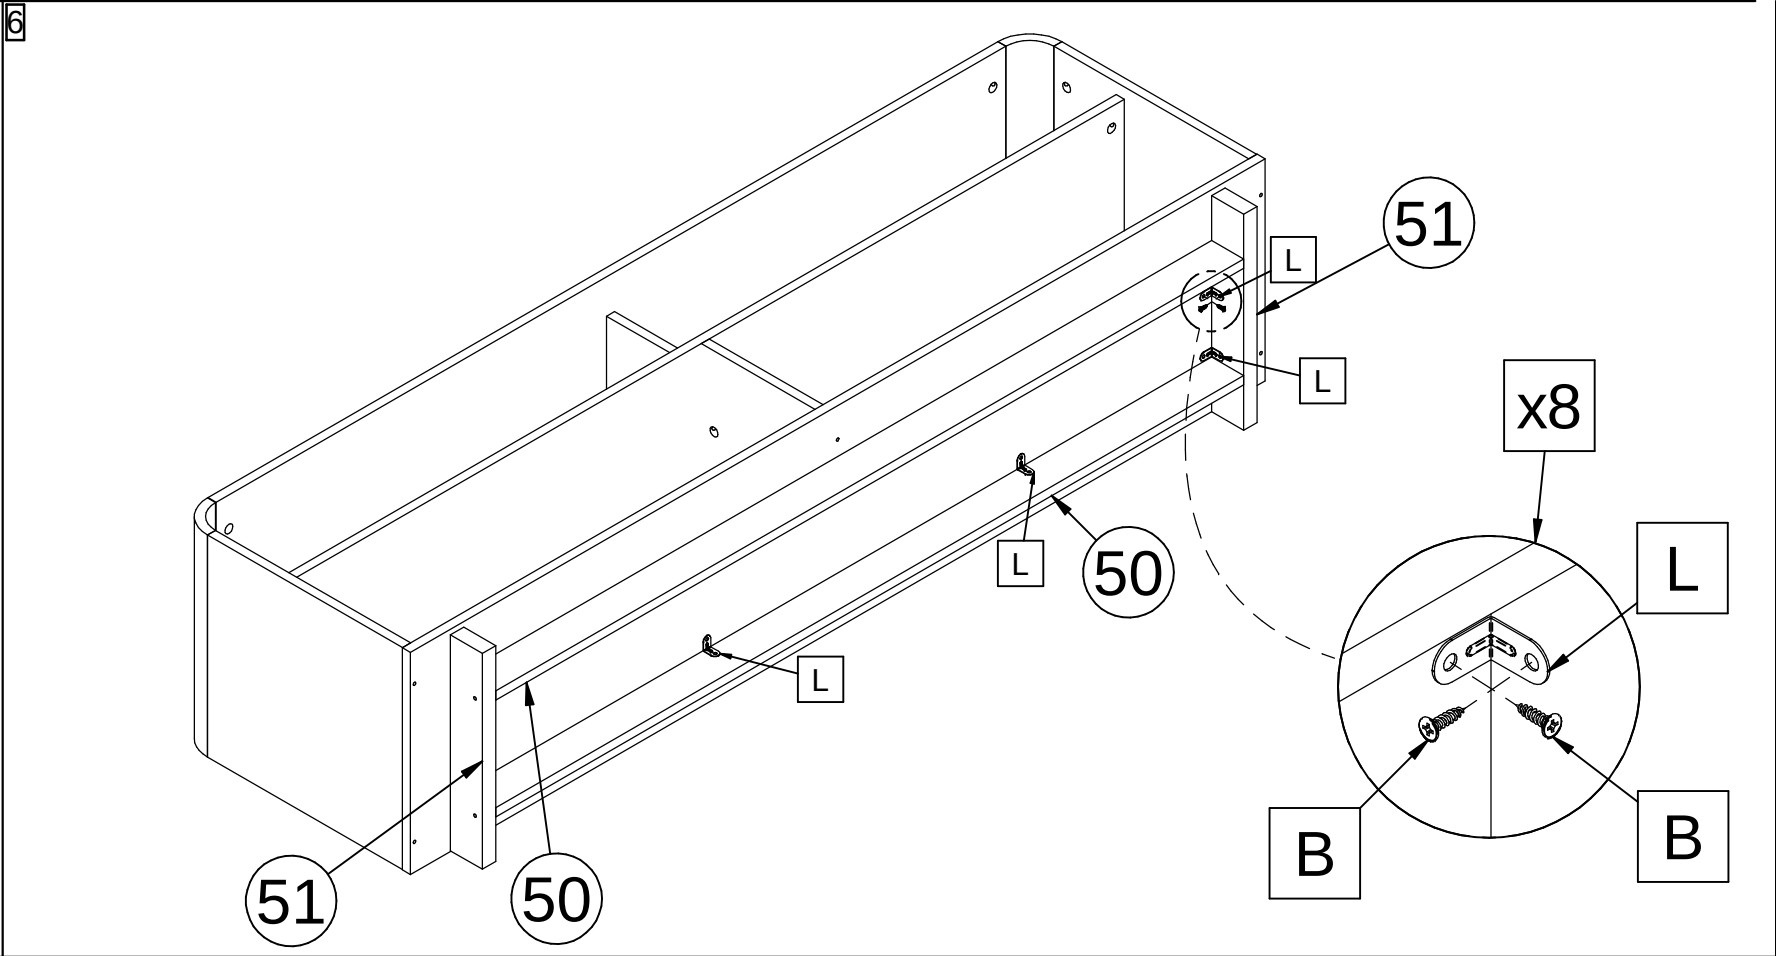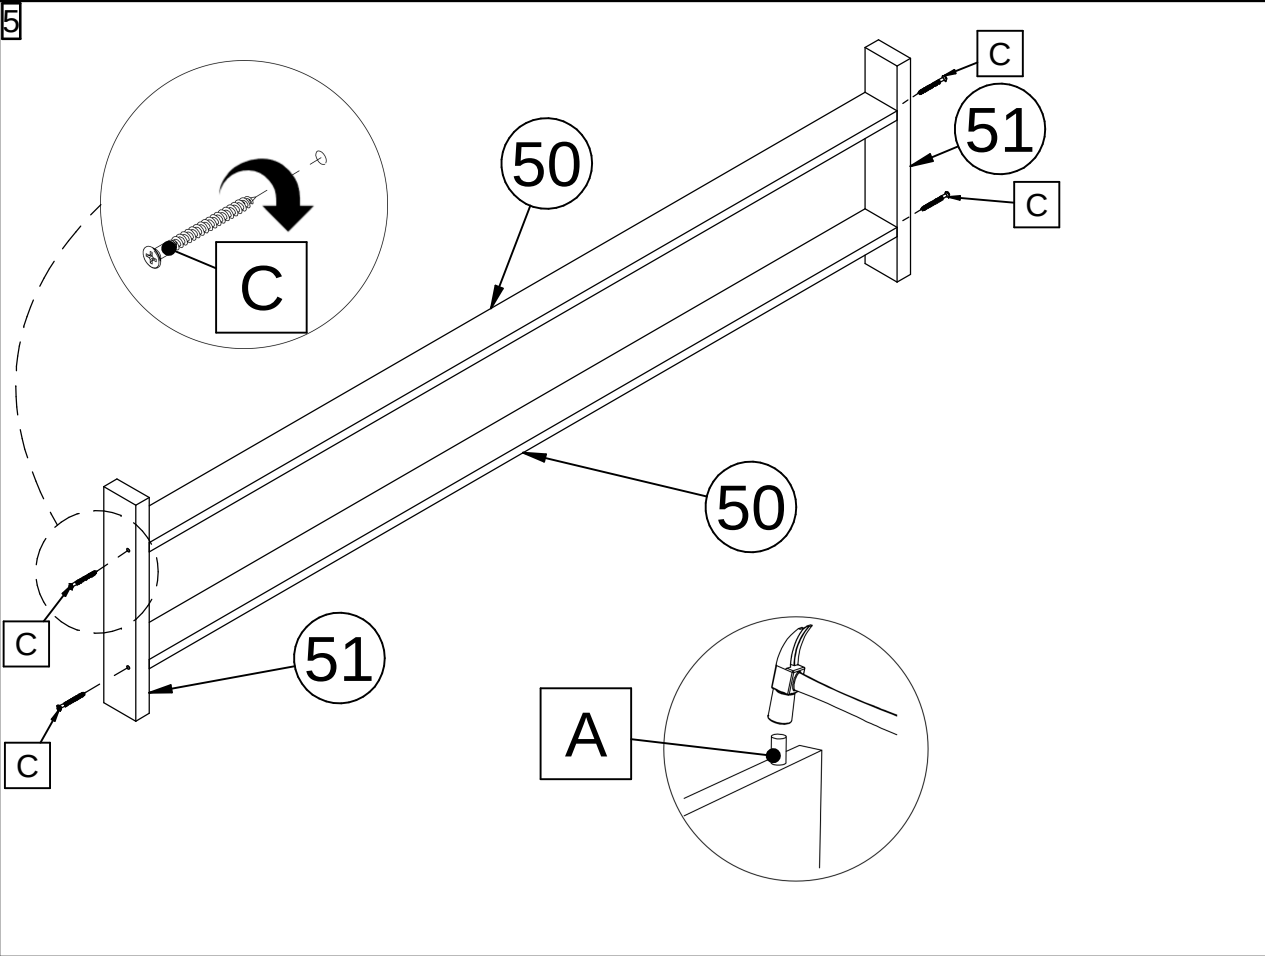

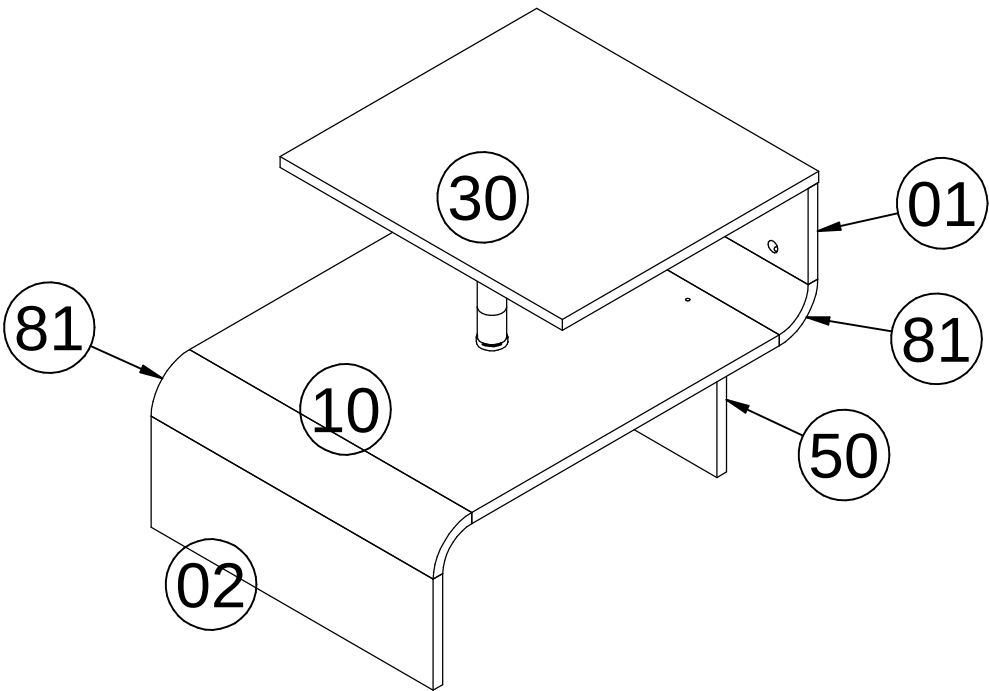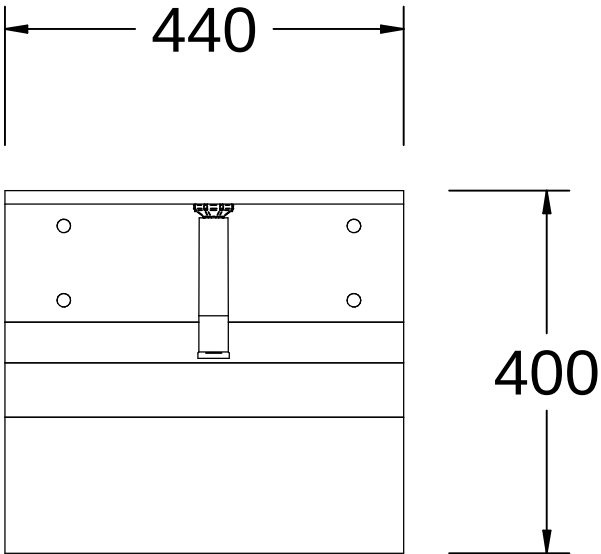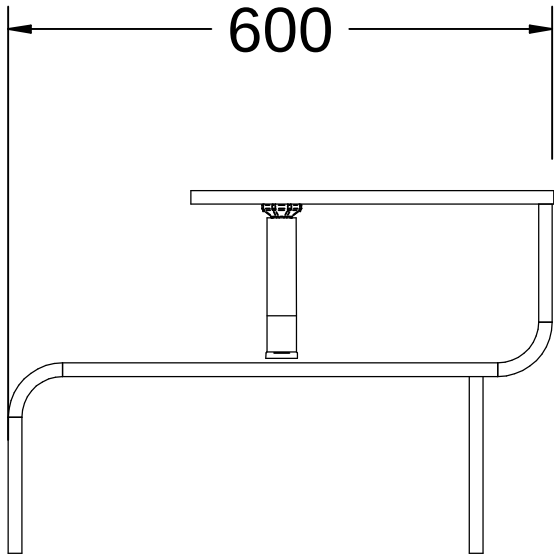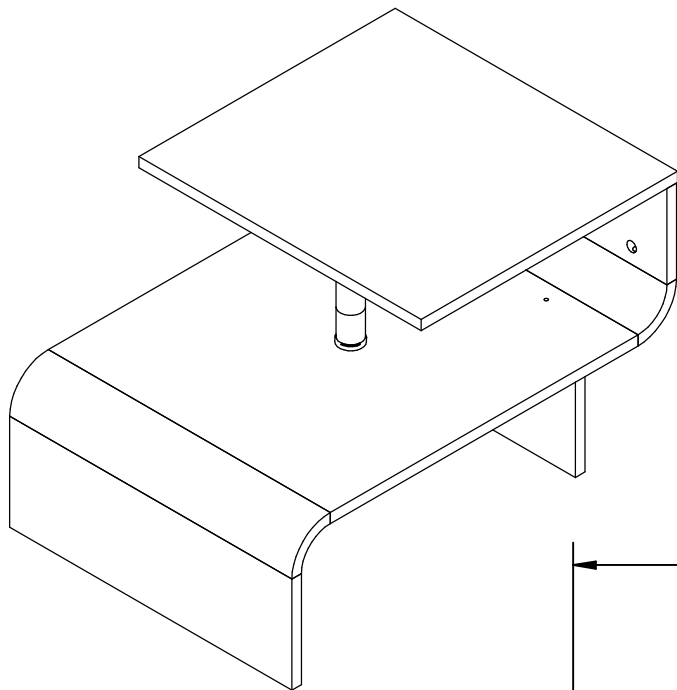

Lista de peças / Parts lists / Lista de piezas

Nome	C	L	E	QTD
MC005 _01 LAT DIR MESA/LAT DER MESA/RIGHT COFFEE TABLE SIDE	440	130	15	1
MC005 _02 LAT ESQ MESA/LAT IZQ MESA/LEFT COFFEE TABLE SIDE	440	150	15	1
MC005 _10 TAMPO MESA/TAPA MESA/TABLE TOP	440	480	15	1
MC005 _30 TAMPO MENOR MESA/TAPA MENOR/SMALL TABLE TOP	400	440	15	1
MC005 _50 RODAPÉ MESA/ZÓCALO MESA/TABLE TOE KICK	300	195	15	1
MC005 _81 MOLDURA CURVA/MARCO CURVO/CURVED FRAME	440			2



Limpar o número da peça com pano levemente umedecido com álcool






Clean the part number with a cloth slightly dampened with alcohol



Limpiar el número de la pieza con un paño ligeramente humedecido con alcohol.

Ferramentas Necessárias / Hardware / Herramientas



"**IMPORTANTE LER COM ATENÇÃO E GUARDAR PARA EVENTUAIS CONSULTAS**".
"IMPORTANTE LEER CON ATENCIÓN Y GUARDAR PARA EVENTUALES CONSULTAS".
"IMPORTANT TO READ CAREFULLY AND SAVE FOR ANY QUERIES".

1

Fixar as cavilhas c/ cola Fije los pivotes con cola Attach the dowels with glue

2

DESENROSQUE O REGULADOR DE ALTURA DO PÉ.
DESENROSQUE EL REGULADOR DE ALTURA DE LA PATA.
UNSCREW THE FOOT HEIGHT ADJUSTER.

COLOQUE O PARAFUSO NA PARTE INTERNA DO PÉ.
COLOQUE EL TORNILLO EN LA PARTE INTERNA DE LA PATA.
INSERT THE SCREW INTO THE INNER PART OF THE FOOT.

3

PARAFUSE NO TAMPO MENOR
ATORNILLE EN EL TAPA MENOR
SCREW INTO THE SMALL TOP

PARAFUSE O RESTANTE DO PÉ NA PEÇA PARAFUSADA NO TAMPO MENOR.
ATORNILLE EL RESTO DE LA PATA EN LA PIEZA ATORNILLADA EN EL TAPA MENOR.
SCREW THE REMAINING PART OF THE FOOT INTO THE PART SCREWED TO THE SMALL TOP.

4

Fixar as cavilhas c/ cola Fije los pivotes con cola Attach the dowels with glue

5

Fixar as cavilhas c/ cola Fije los pivotes con cola Attach the dowels with glue

6

Fixar as cavilhas c/ cola Fije los pivotes con cola Attach the dowels with glue

7

Fixar as cavilhas c/ cola Fije los pivotes con cola Attach the dowels with glue