

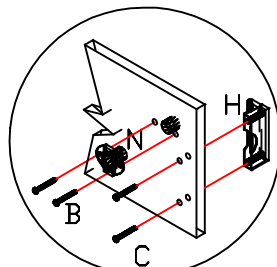



FIXE O BATENTE PRÓXIMO À BORDA DO CHAPÉU PARA FACILITAR O TRAVAMENTO DAS PORTAS.

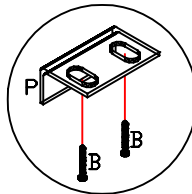



DETALHE DE COMO FIXAR O PUXADOR E A FECHADURA.

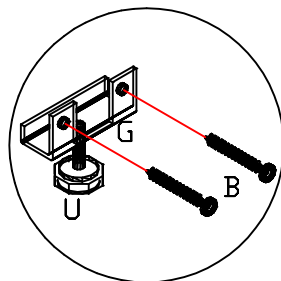



3142

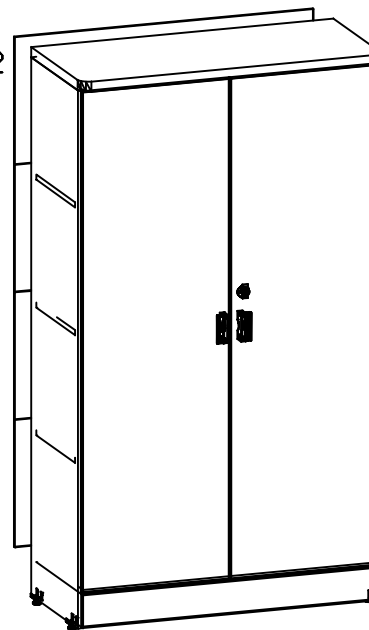

CÓD.	FERRAGEM	QTDE.
A	2592 ZINCADO BRANCO 4,0x40	10
A	4042 ZINCADO PRETO 4,0x40	10
B	4214 3,5x14	17
C	14773 3,5x25	04
D	4207 3,0x14	04
E	4207 3,0x14	06
F	4207 3,0x14	06
G	1737 1737	04
H	5710 5710	02
J	1802 1802	25
L	107 10x10	65
N	1620 1620	01
□	1621 1621	01
P	1622 1622	01
Q	41 41	01
R	1423 1423	28
S	1178 3,5x16	04
T	85 85	02
U	1736 1736	04
V	58 kappesberg	01

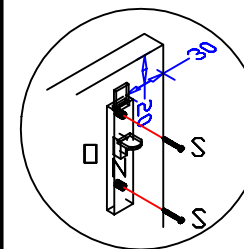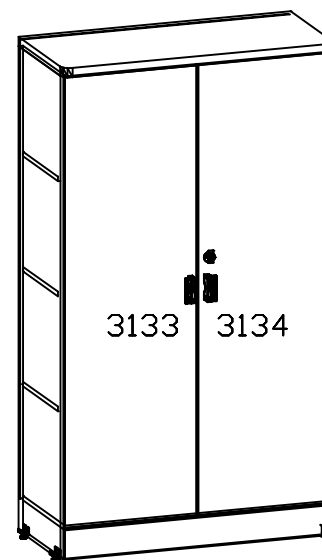

OBS: Para solicitar assistência técnica, utilize o código da ferragem indicada.

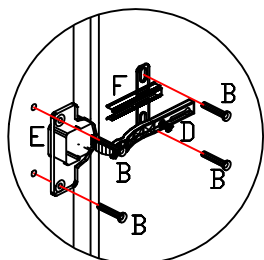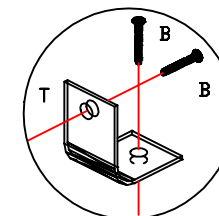

- 3133-PORTA ESQUERDA
- 3134-PORTA DIREITA
- 3135-LATERAL ESQUERDA
- 3136-LATERAL DIREITA
- 3137-CHAPÉU
- 3138-RODAPÉ
- 3139-BASE
- 3140-PRATELEIRA
- 3141-PRATELEIRA FIXA
- 3142-FUNDO

OBS: Para solicitar assistência técnica, utilize o código da peça indicada.

"GARANTIA PARA DEFEITOS DE FABRICAÇÃO DE 03 MESES."