


MANUAL DE MONTAGEM - CAMA BAÚ JADE C/ GAVETA

ATENÇÃO SR. MONTADOR: LEIA ATENTAMENTE ESTE MANUAL ANTES DE INICIAR A MONTAGEM.

VISTA EXPLODIDA

DIMENSÃO		
	SOLTEIRO	
COMPR.	PROF.	ALTURA
1270 MM	2180 MM	900 MM


DETALHE DE GAVETAS

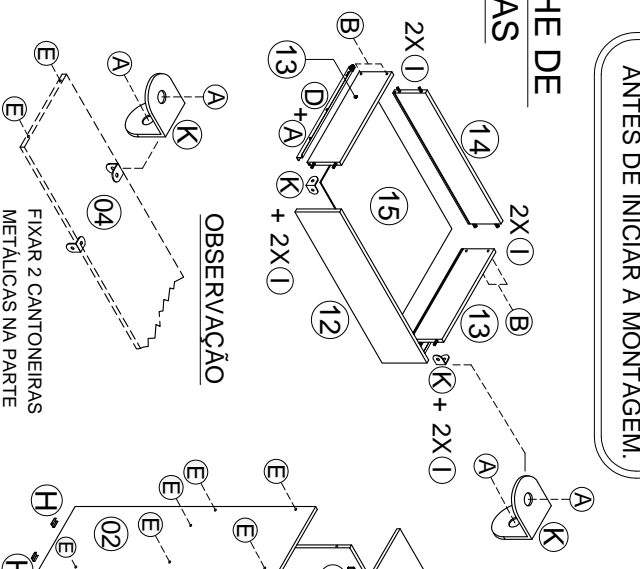


OBSERVAÇÃO

FIXAR 2 CANTONEIRAS METÁLICAS NA PARTE INFERIOR DO FUNDO DO BAÚ.

PORTA

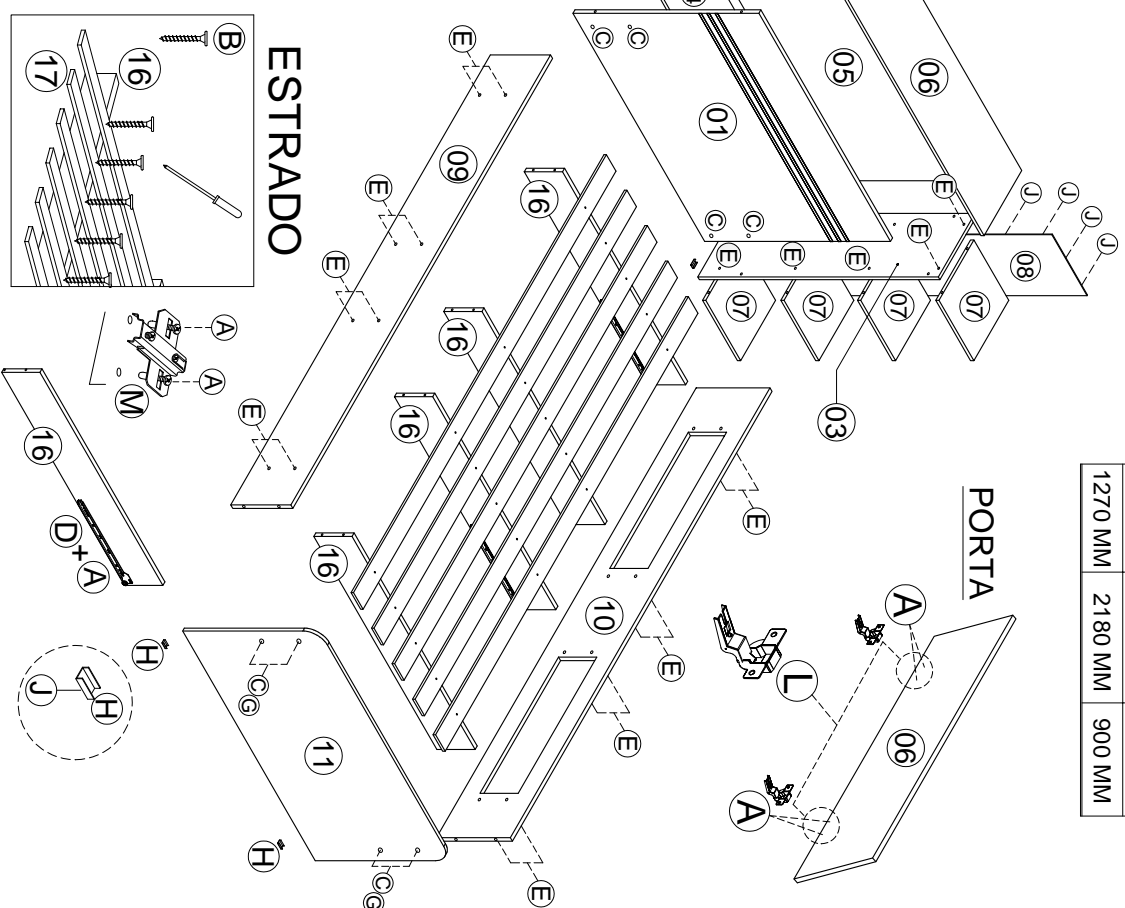

ESTRADO

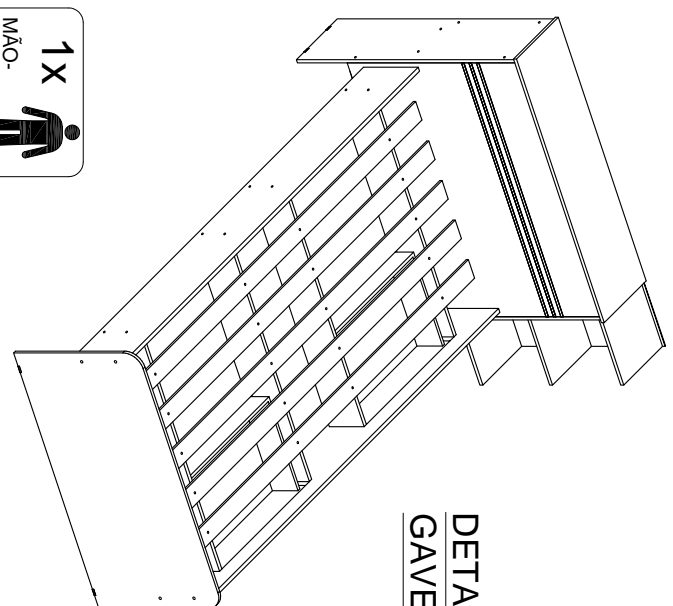

KIT ACESSÓRIOS

CÓD.	QTD/DE	DESCRIÇÃO	ILUSTRAÇÃO
A	36	PARAFUSO 3,5 X 12 CHATA PH.	
B	28	PARAFUSO 3,5 X 25 CH	
C	08	PARAFUSO 7,0 X 80 PHS TP 13	
D	02	PAR CORREDIÇA METÁLICA	
E	36	PARAFUSO PONTA	
G	04	TAMPA CPL 13 MM	
H	06	SAPATA "U" 12 X 12	
I	08	CAVILHA 8 X 30	
J	30	PREGO 12 X 12	
K	06	CANTONEIRA METÁLICA	
L	02	DOBRADIÇA AL2 BAIXA	
M	02	CALÇO 3 MM	

Nº	DESCRIÇÃO	QTDE
01	PAINEL	1
02	LATERAL ESQUERDA	1
03	LATERAL DIREITA	1
04	FUNDO DO BAÚ	1
05	TRAVESSA TRASEIRA DO BAÚ	1
06	TAMPO DO BAÚ	1
07	PRATELEIRA	4
08	FUNDO TRASEIRO	1
09	BARRA ESQUERDA	1
10	BARRA DIREITA VAZADA	1
11	PESEIRA	1
12	FRENTE DE GAVETA	2
13	LATERAL DE GAVETA	4
14	CONTRA FUNDO DE GAVETA	2
15	FUNDO DE GAVETA	2
16	TRAVESSA DO ESTRADO	4
17	RIPA DE ESTRADO	5

Rua São Paulo, nº 1120
 Centro - Jaci-SP - Cep. 15155-000
 Fone: (17) 3283-9400 / Fax: (17) 3283-9407
 e-mail: assistencia@jamoveis.com.br



This document was created with Win2PDF available at <http://www.win2pdf.com>.
The unregistered version of Win2PDF is for evaluation or non-commercial use only.
This page will not be added after purchasing Win2PDF.