

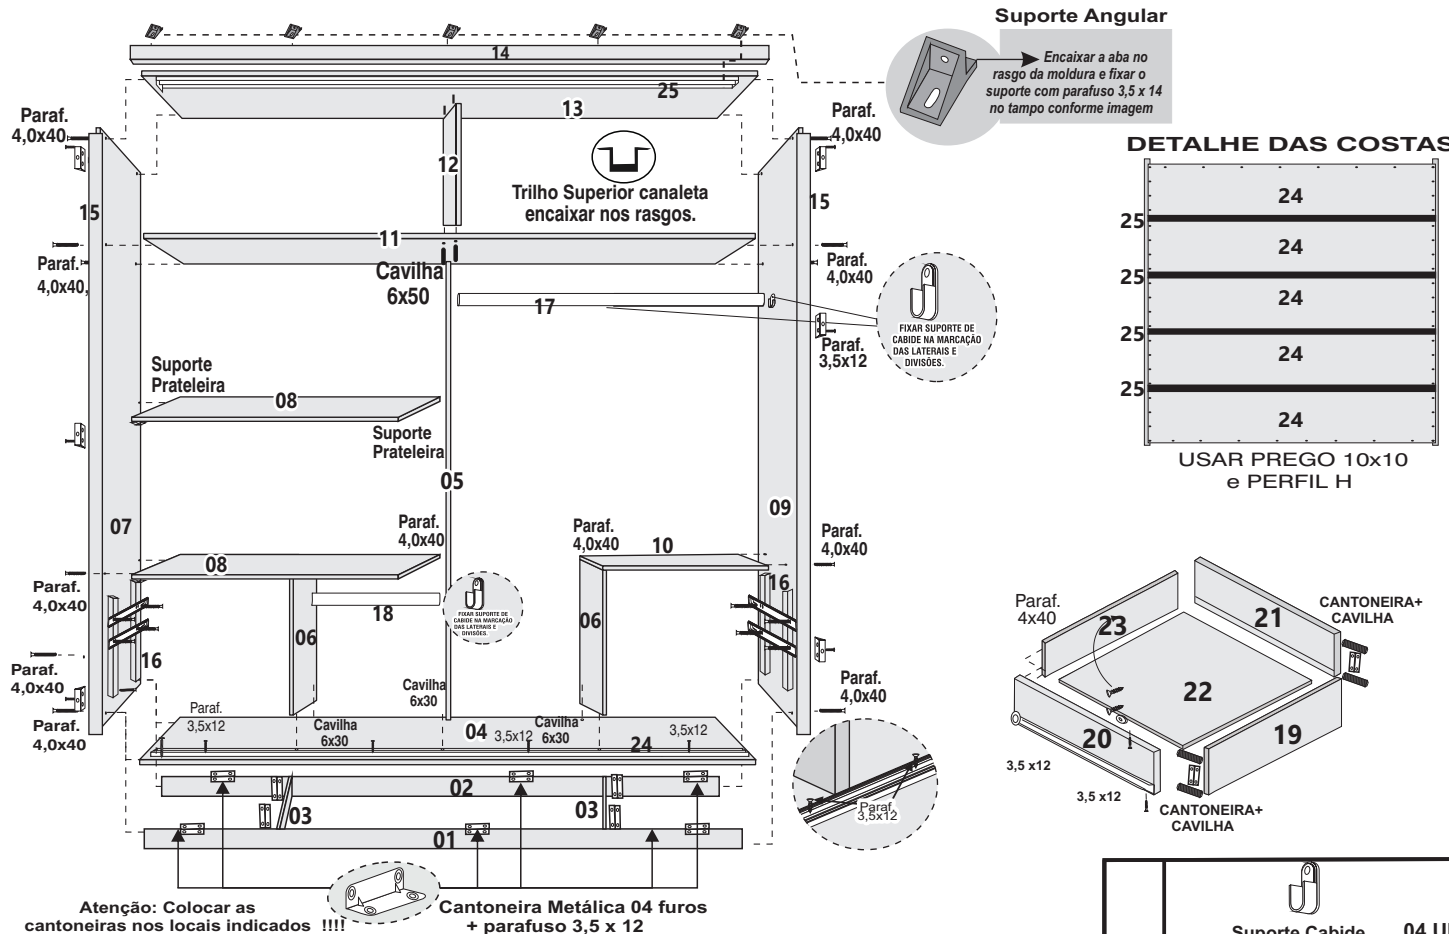
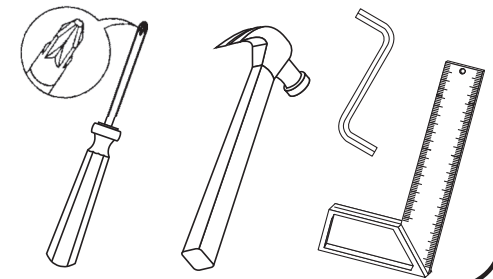











ROUPEIRO SPACE

ESQUEMA DE MONTAGEM

10/07/2017

Ferramentas
Necessárias:



	Suporte Angular	05 UN
	Sapata	10 UN
	Prego 10 x 10 (fixar nas costas)	85 UN
	Parafuso 3,5 x 35 (FIXAR NO DISTANCIADOR)	16 UN
	Parafuso 3,5 x 12	194 UN
	Parafuso 4,0 x 40 (Montagem Gaveta e Divisórias)	44 UN
	Cavilha 6 x 30	22 UN
	Cantoneira 04 Furos	18 UN
	Cavilha 6 x 50	02 UN

04 UN
Suporte Prateleira 6 x 8

06 UN
Cantoneira Plastica

Roldanas Superiores

Suporte Cabide 04 UN
04 PAR
Par de Corrediça

Roldanas Inferiores

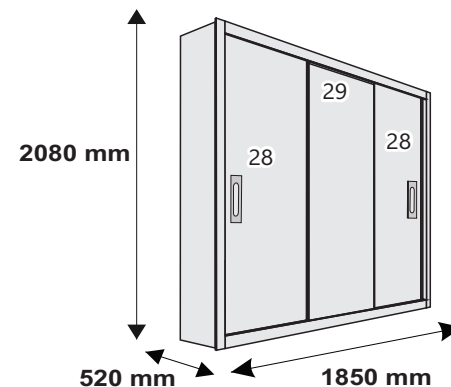


siena móveis

www.madeiramadeira.com.br

Roupeiro Space

Código 8471



CÓDIGO	Nº	DESCRIÇÃO	QT.	CANELA	IMBUÍIA MEL	BRANCO	YPÊ RUSTICO	
7937	01	RODAPÉ FRONTAL	01	7937	7937	7937	7937	
7939	02	RODAPÉ TRASEIRO	01	7939	7939	7939	7939	
7941	03	RODAPÉ CENTRAL	02	7941	7941	7941	7941	
7936	04	BASE ROUPEIRO	01	7936	7936	7936	7936	
7943	05	DIVISÃO CENTRAL	01	7943	7943	7943	7943	
7942	06	DIVISÃO GAVETEIRO	02	7942	7942	7942	7942	
7950	07	LATERAL ESQUERDA	01	7950	7950	7950	7950	
7944	08	PRATELEIRA MAIOR	02	7944	7944	7944	7944	
7949	09	LATERAL DIREITA	01	7949	7949	7949	7949	
7945	10	PRATELEIRA MENOR	01	7945	7945	7945	7945	
7946	11	TAMPO MALEIRO	01	7946	7946	7946	7946	
7947	12	DIVISÃO MALEIRO	01	7947	7947	7947	7947	
7948	13	TAMPO SUPERIOR	01	7948	7948	7948	7948	
7954	14	MOLDURA SUPERIOR	01	7954	7954	7954	7954	
7951	15	MOLDURA LATERAL	02	7951	7951	7951	7951	
7956	16	DISTANCIADOR DE GAVETA	08	7956	7956	7956	7956	
1069	17	CABIDEIRO	01	1069	1069	1069	1069	
8062	18	CALCEIRO	01	8062	8062	8062	8062	
7958	19	FRENTE DE GAVETA	04	7958	7958	7958	7958	
7960	20	LATERAL ESQUERDA GAVETA	04	7960	7960	7960	7960	
7961	21	LATERAL DIREITA GAVETA	04	7961	7961	7961	7961	
7964	22	FUNDO DE GAVETA	04	7964	7964	7964	7964	
7962	23	TRASEIRO DE GAVETA	04	7962	7962	7962	7962	
8056	24	TRILHO INFERIOR	01	8056	8056	8056	8056	
8055	25	TRILHO SUPERIOR	02	8055	8055	8055	8055	
8057	26	PERFIL ARREMATE	04	8057	8057	8057	8057	
-----	27	KIT FERRAGEM	01	8036	8054	8052	8053	
7966	28	PORTA LATERAL	02	7966	7966	7966	7966	
8048	29	PORTA CENTRAL	01	8048	8048	8048	8048	