



# ESQUEMA DE MONTAGEM

## ASSEMBLY INSTRUCTIONS


## INSTRUCCIONES DE MONTAJE

NECESSÁRIO / NECESSARY / NECESIDAD



FERRAMENTAS NÃO INCLuíSAS  
NO TOOLS INCLUDED  
HERRAMIENTAS NO INCLUIDAS


### CAMA 1500 LINHA PRINT

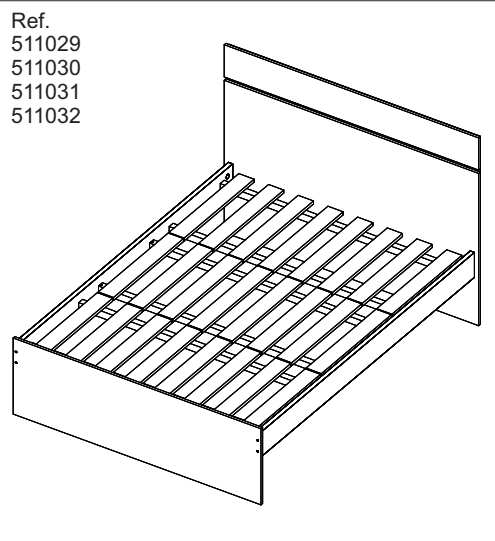

Ref.  
511029  
511030  
511031  
511032

| CÓD.   | Nº | PEÇA                   | QUAN. |
|--------|----|------------------------|-------|
| 226678 | 01 | Cabeceira 1500x1110x30 | 01    |
| 226669 | 02 | Barra 1900x147x25      | 02    |
| 226679 | 03 | Peseira 1460x450x25    | 01    |
| 226571 | 04 | Lastro 625x90x18       | 24    |
| 200566 | 05 | Sarrafo 1400x35x40     | 04    |
| 203462 | 06 | Sarrafo C/F 1400x35x40 | 02    |


|          |  |                   |    |
|----------|--|-------------------|----|
| <b>A</b> |  | 8.0 x 30          | 08 |
| <b>B</b> |  | 4.5 x 50          | 04 |
| <b>C</b> |  | 1/4" x 75 (Allen) | 08 |
| <b>D</b> |  | Moia Lua 1/4"     | 08 |
| <b>E</b> |  |                   | 01 |
| <b>F</b> |  | Sapata deslizando | 04 |
| <b>G</b> |  | Prego 15x18       | 48 |

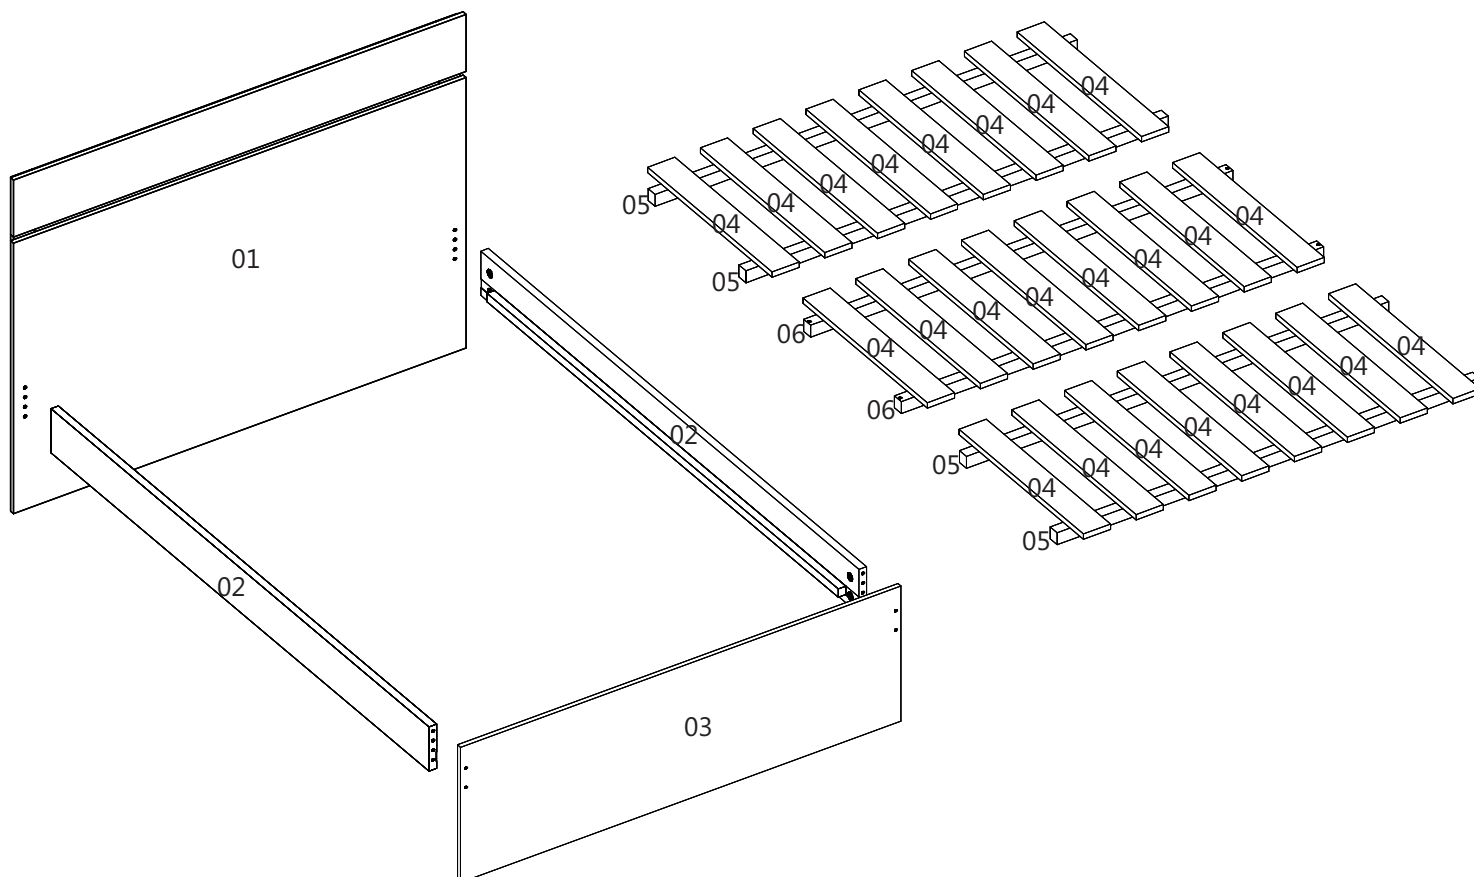




FERRAMENTAS NÃO INCLuíSAS  
NO TOOLS INCLUDED  
HERRAMIENTAS NO INCLUIDAS


**01** Encaixar as sapatas na cabeceira (01) e peseira (03).

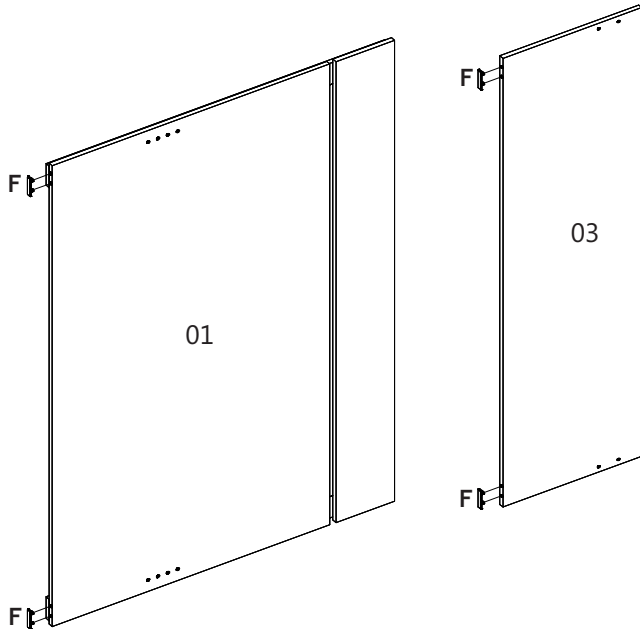

**02** Encaixar a cabeceira (01) e peseira (03) nas barra (02). Apertar os parafusos com a chave Z (E) que vai junto no

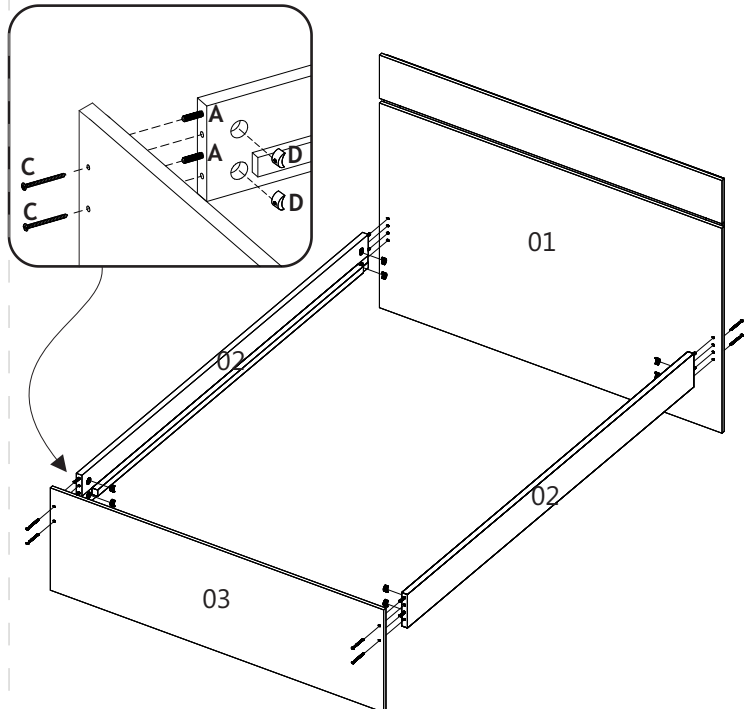

**03** Pregar os lastros (04) nos sarrafos (05) e sarrafos com furação (06).

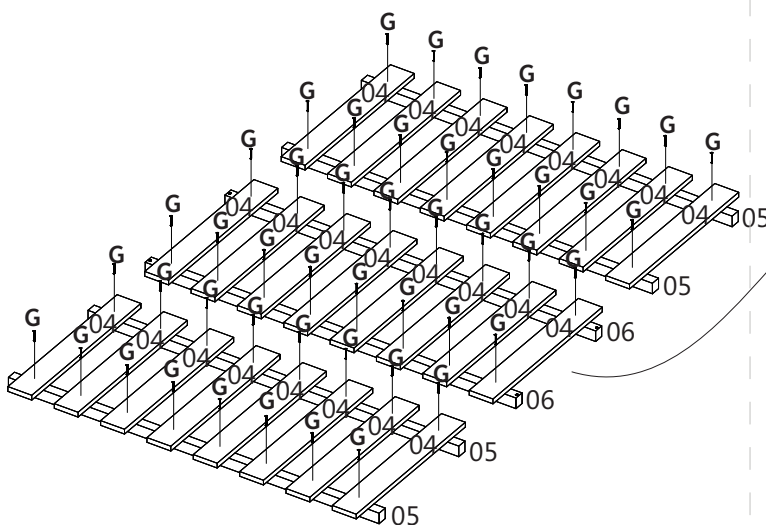

**04** Encaixar os lastros (04) pregados nas barras (02) fixando os sarrafos (06) Sarrafo com parafuso(B).

