



ESQUEMA DE MONTAGEM


ASSEMBLY INSTRUCTIONS
INSTRUCCIONES DE MONTAJE

NECESSÁRIO / NECESSARY / NECESIDAD



FERRAMENTAS NÃO INCLuíSAS
NO TOOLS INCLUDED
HERRAMIENTAS NO INCLuíSAS


CAMA 1700 LINHA PRINT

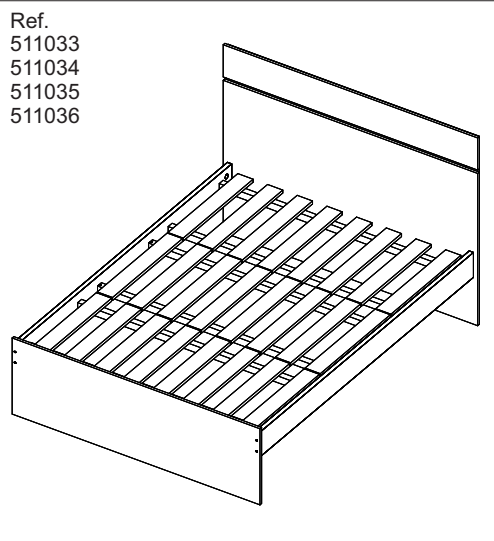

Ref.
511033
511034
511035
511036

CÓD.	Nº	PEÇA	QUAN.
226689	01	Cabeceira 1700x1110x30	01
226688	02	Barra 2000x147x25	02
226687	03	Peseira 1660x450x25	01
226571	04	Lastro 625x90x18	27
200569	05	Sarrafo 1600x35x40	04
203568	06	Sarrafo C/F 1600x35x40	02


A		8.0 x 30	08
B		4.5 x 50	04
C		1/4" x 75 (Allen)	08
D		Moia Lua 1/4"	08
E		Sapata deslizante	01
F		Sapata deslizante	04
G		Prego 15 x 18	54

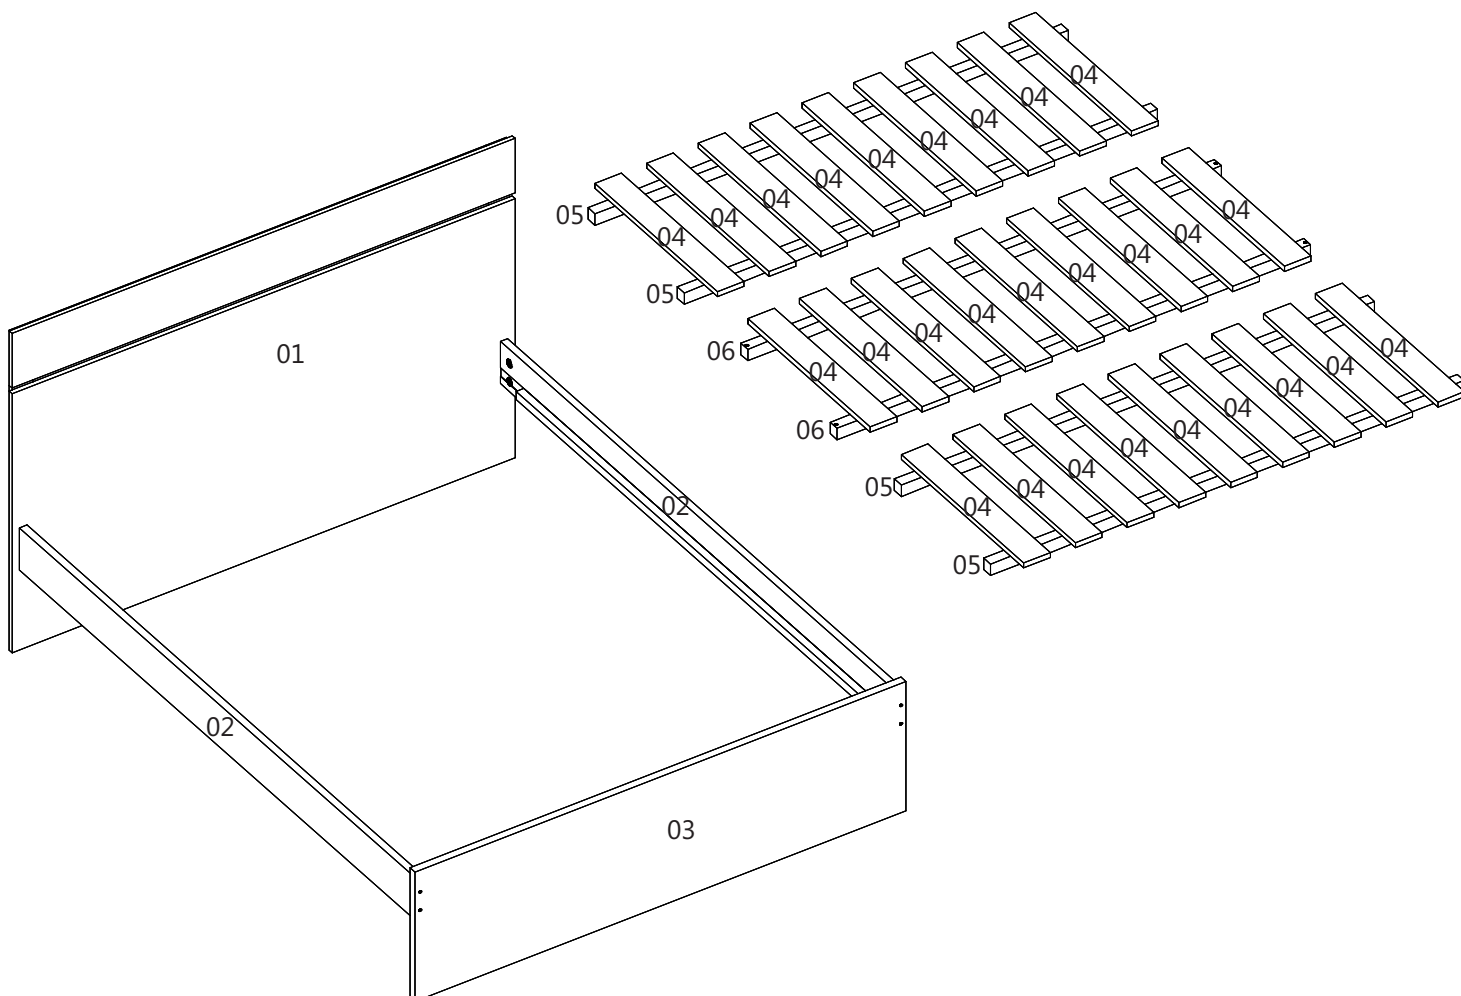




FERRAMENTAS NÃO INCLuíSAS
NO TOOLS INCLUDED
HERRAMIENTAS NO INCLUIDAS


01 Encaixar as sapatas na cabeceira (01) e peseira (03).

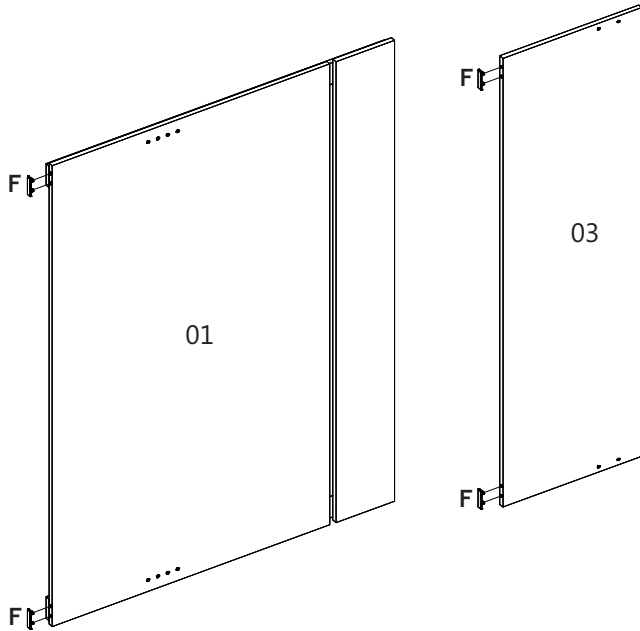

02 Encaixar a cabeceira (01) e peseira (03) nas barras (02). Apertar os parafusos com a chave Z (E) que vai junto no

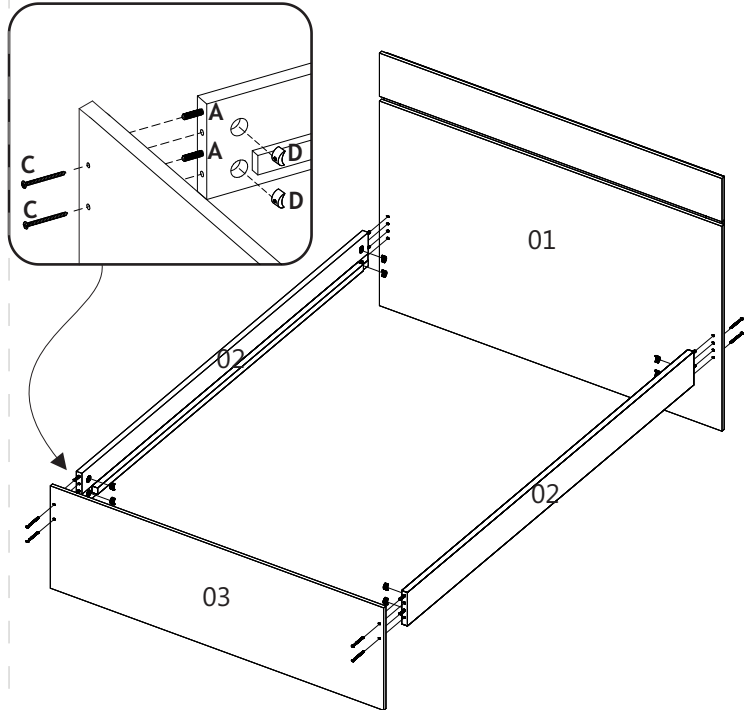

03 Pregar os lastros (04) nos sarrafos (05) e sarrafos com furação (06).

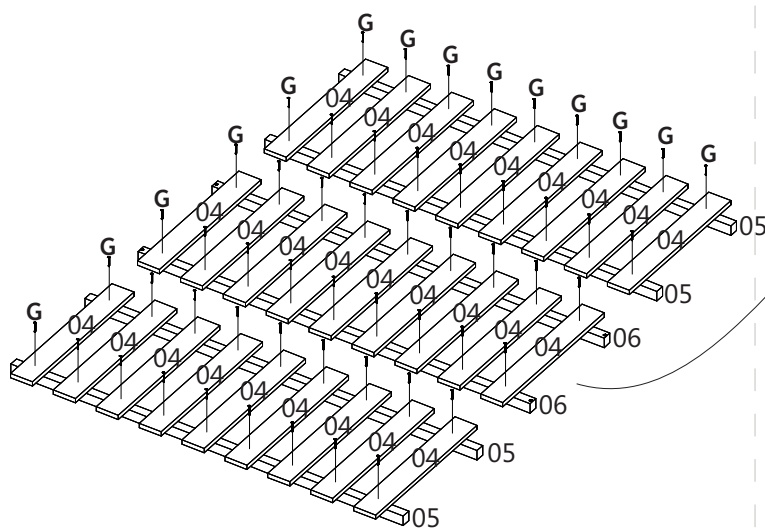

04 Encaixar os lastros (04) pregados nas barras (02) fixando os sarrafos (06).

