


Montagem Mounting Montaje

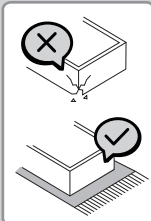

C CAVILHA 6x30
CLAVITA 6x30
DOWEL 6x30 **64**

G PARAFUSO CC 3,5x40 **56**

V PARAFUSO CC 3,5x35
TORNILLO 3,5x35
SCREW 3,5x35 **12**

F PARAFUSO CC 3,5x25
TORNILLO 3,5x25
SCREW 3,5x25 **10**

T PARAFUSO CC 3,5x14
TORNILLO 3,5x14
SCREW 3,5x14 **104**

U FIXADOR TRIANGULAR
CERRIE TRIANGULAR
TRIANGULAR FASTENER **24**

M MINIFIX **10**

X PINO MINIFIX **10**

S CANTONEIRA
4 FUROS **10**

J PREGO **86**

L CORREDIÇA
TELESCÓP. **03**

O SUPORTE PINO **08**

H PERFIL H **03**

K SAPATA PLÁSTICA **10**

R CABIDEIRO
METAL **01**

D SUPORTE CABIDEIRO
OBLONGO **02**

P PERFIL
PUXADOR **03**

W TRILHO
INFERIOR **01**


Z TRILHO
SUPERIOR **01**

A PERFIL
ANTIEMPEÑO **01**

B KIT SISTEMA PORTA
DE CORRER **02**


E KIT ESPELHO
OPCIONAL **01**

Nº	DESCRIÇÃO	QTD	COMP	LARG
1	BASE E TAMPO	2	1692	586
2	RODAPÉ	3	90	1692
3	LATERAL ESQUERDA	1	2300	600
4	LATERAL DIREITA	1	2300	600
5	TRAVESSA RODAPÉ	1	90	538
6	DIVISÃO DIREITA	1	2138	450
7	PRATELEIRA FIXA	7	840	450
8	DISTANCIADOR	4	510	70
9	FRENTE GAVETA	3	771	150
10	LATERAL GAVETA ESQUERDA	3	400	120
11	LATERAL GAVETA DIREITA	3	400	120
12	TRASEIRO GAVETA	3	730	120
13	PORTA	2	2110	815
14	MOLDURA LATERAL	2	2300	60
15	FUNDO GAVETA	3	736	397
16	TRASEIRO	4	1710	537

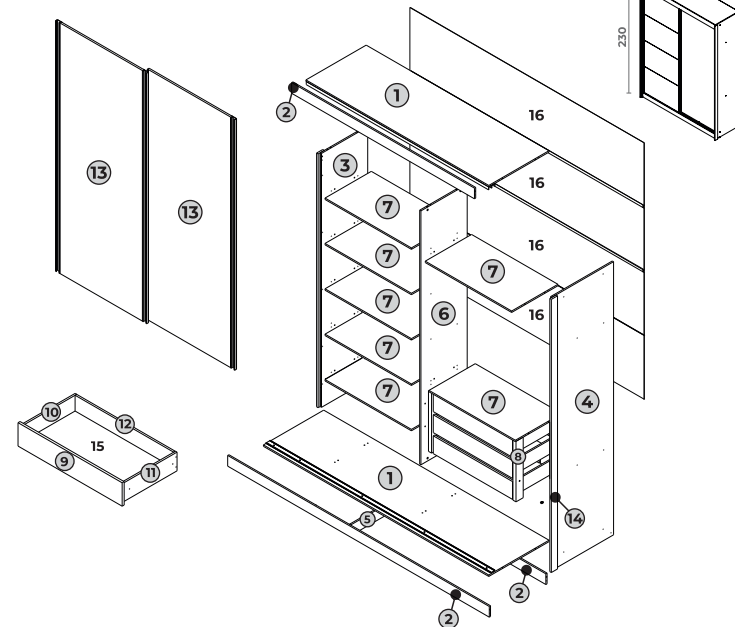


01

C 2x
K 10x
J 10x
S 6x
E 36x

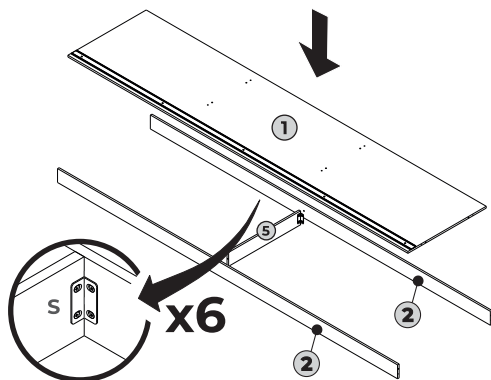


02

L 3x
C 12x
M 6x
F 12x
T 18x
X 6x

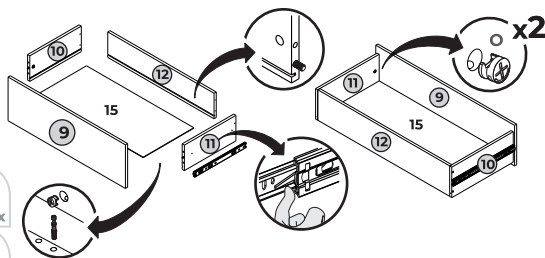


03

C 26x
G 24x
M 2x
X 2x

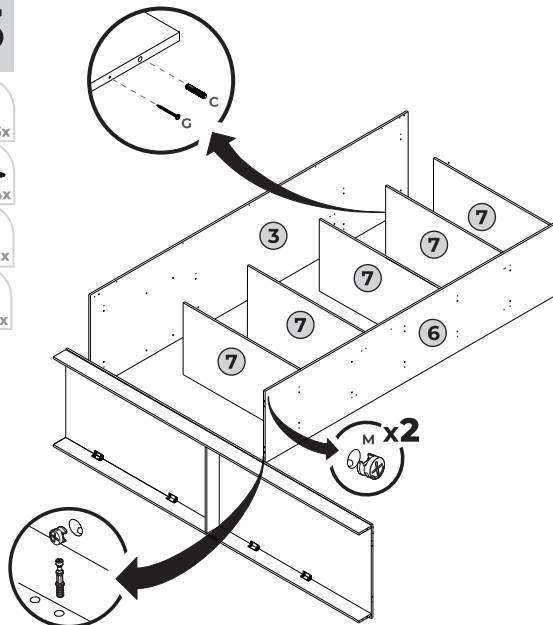


04

C 12x
G 12x

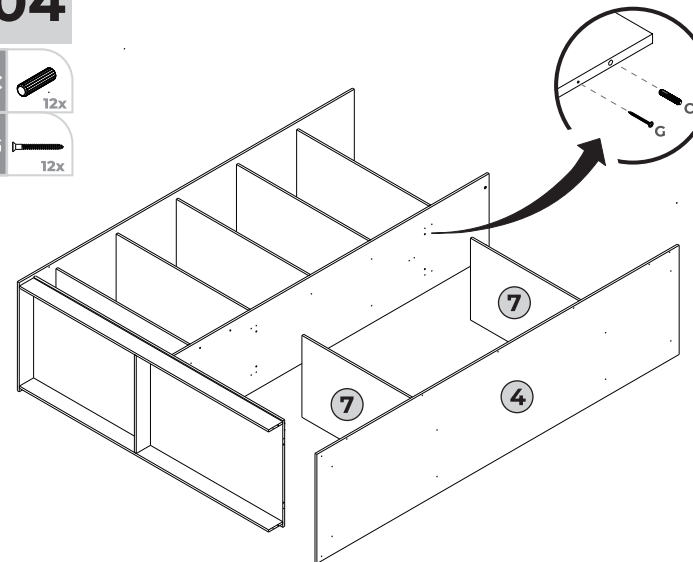


06

- C 6x
- M 2x
- F 6x
- T 16x
- X 2x
- S 4x

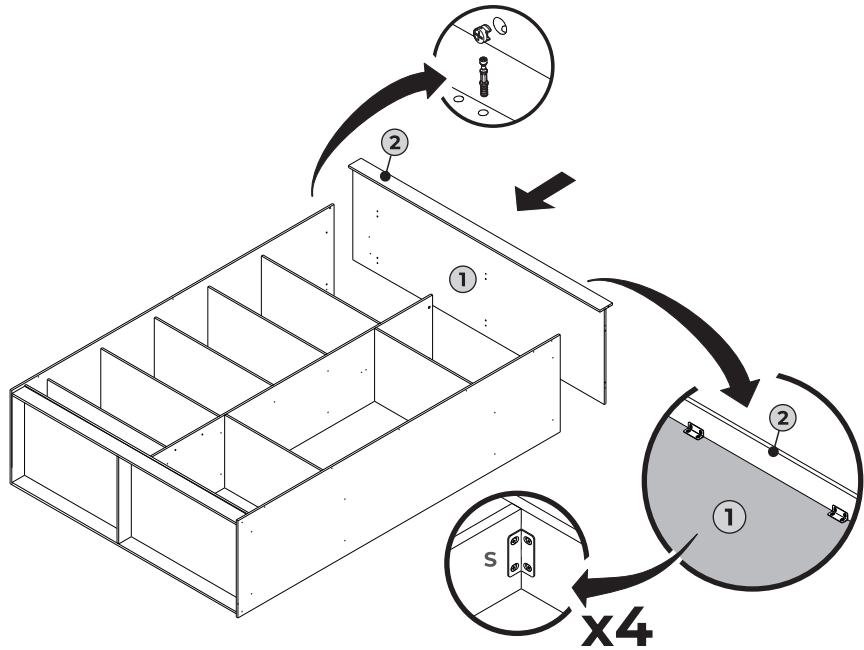


07

- D 2x
- E 4x
- O 8x
- G 8x

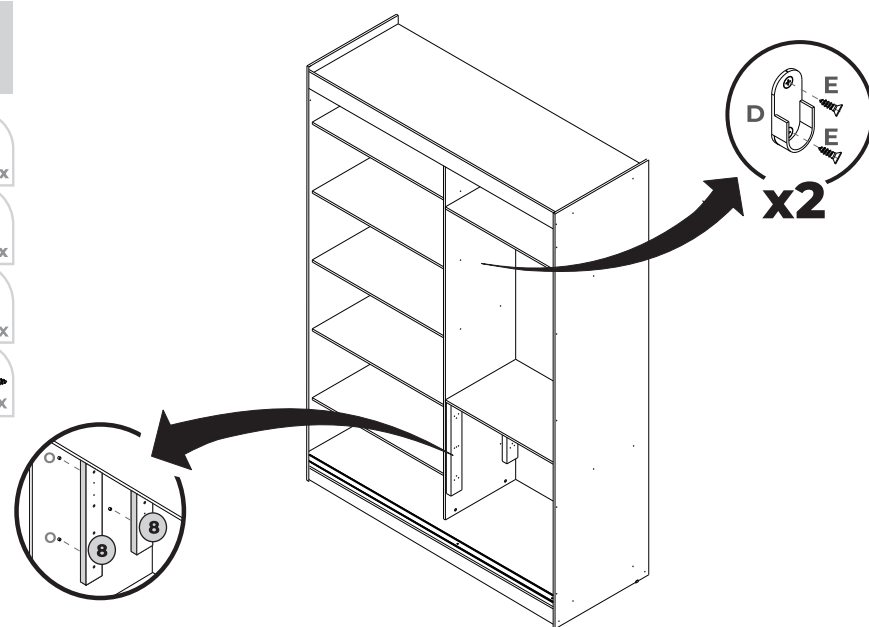


08

- T 18x

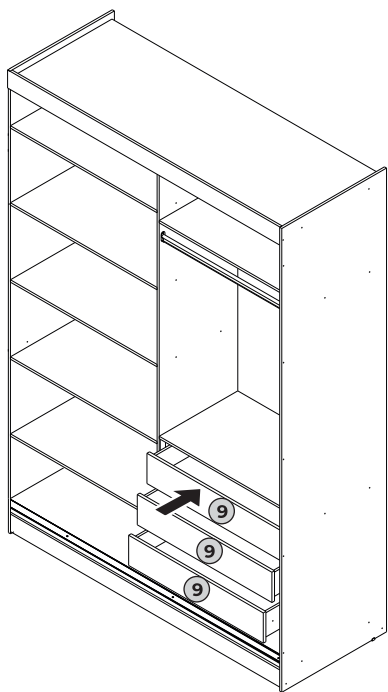


09

- J 76x
- H 3x

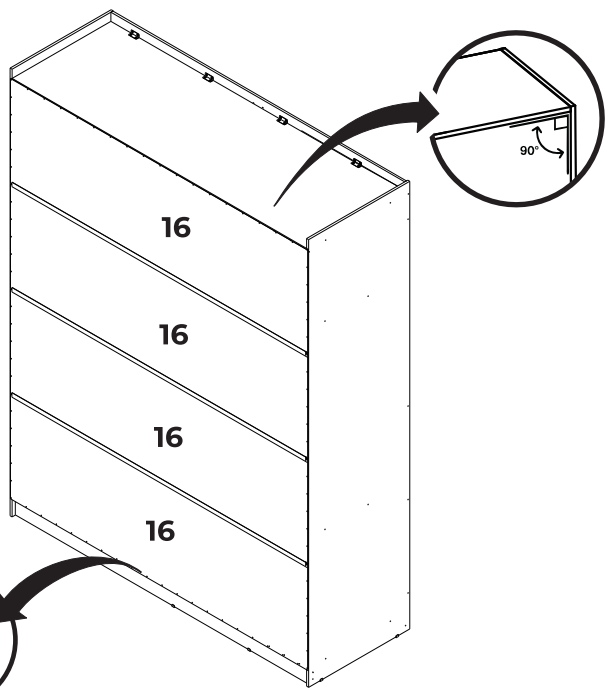

10

- P 3x
- W 1x
- Z 1x
- A 1x
- B 2x

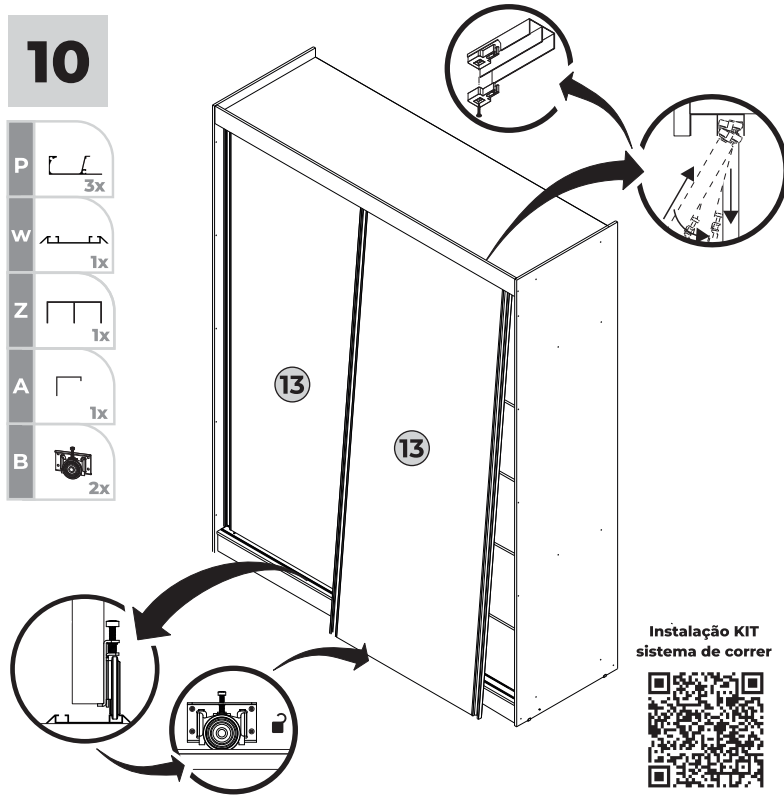

Instalação KIT sistema de correr

