











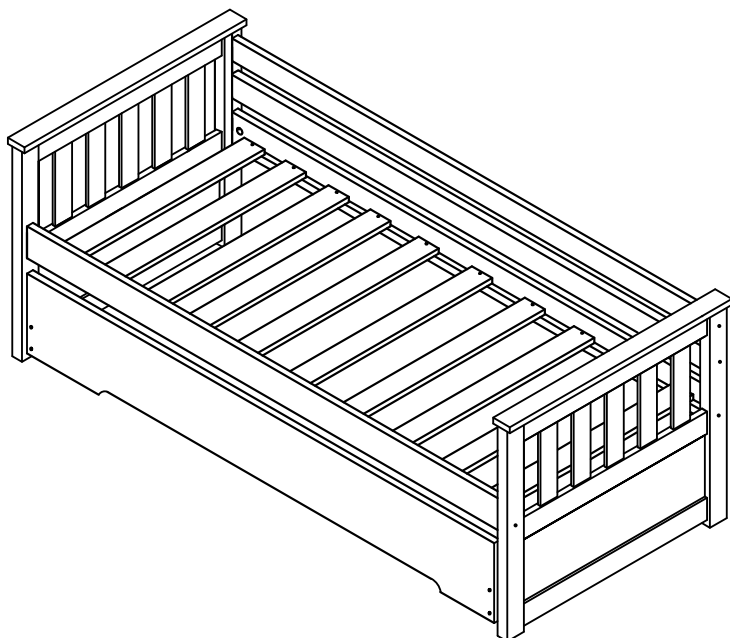



Bicama Mission






A	 Ø10x40mm	12
B	 Ø1/4"x80mm - Ø17	04
C	 Ø7x50mm - 17	08
D	 Ø7x70mm - 17	04
E	 Ø3,5x14mm	16
F	 Ø3,5x30mm	48
G	 Ø1/4"x25mm	04
H	 4mm	01
I		04
J	 SPACER spacer	02



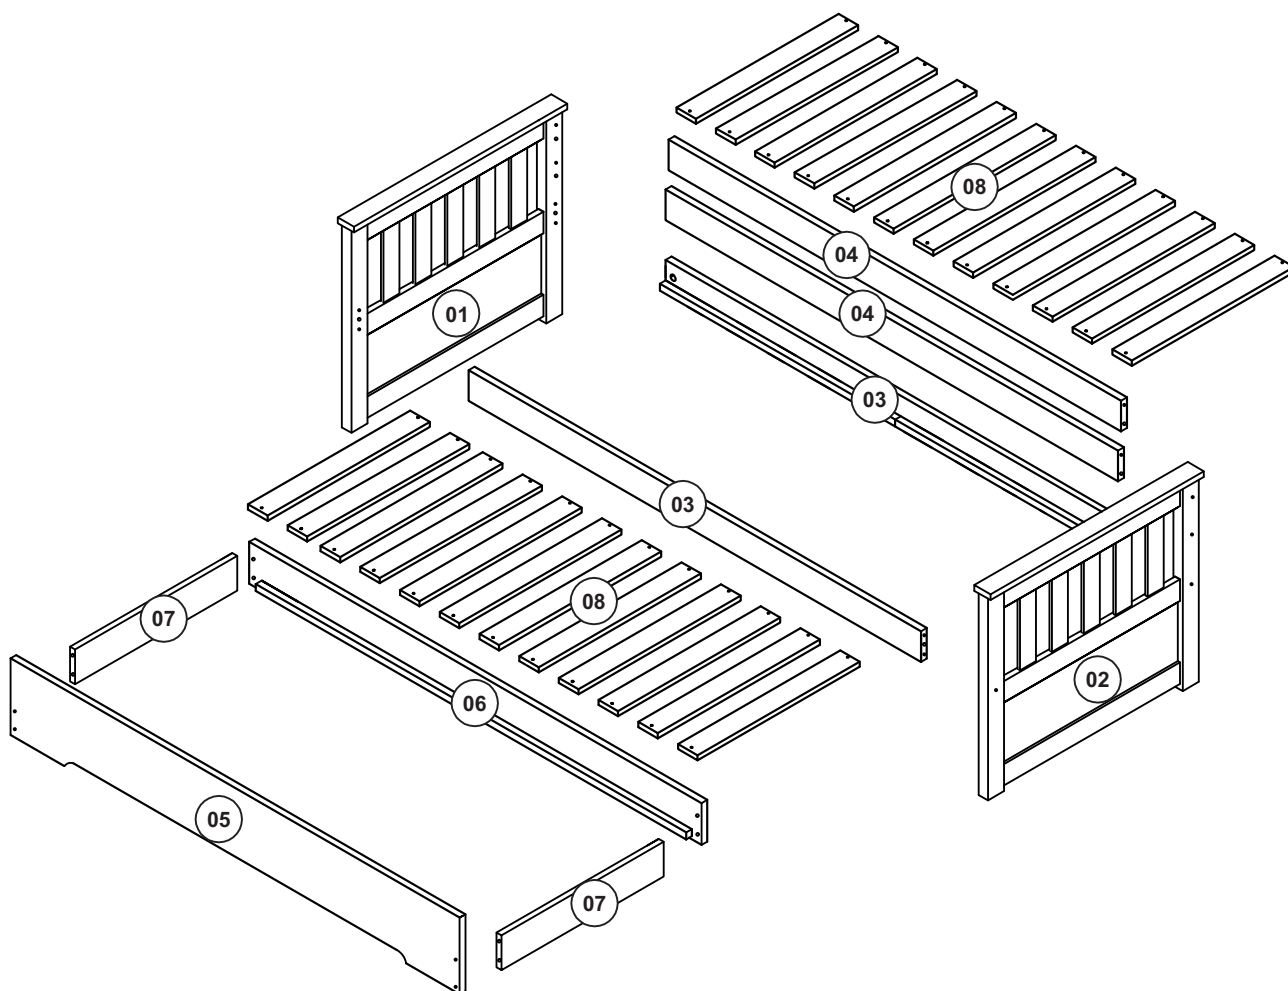
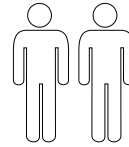



0:45min







Do Not Use Power Tools




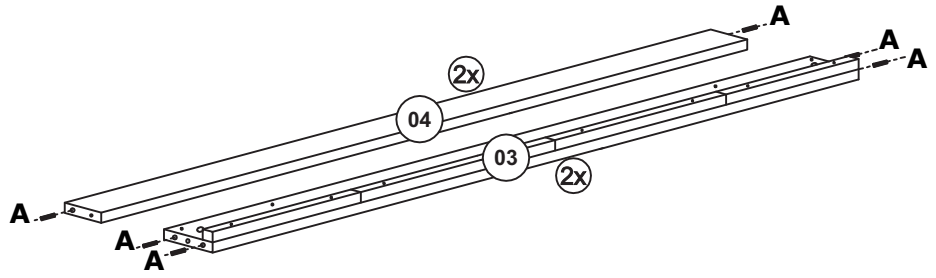
01

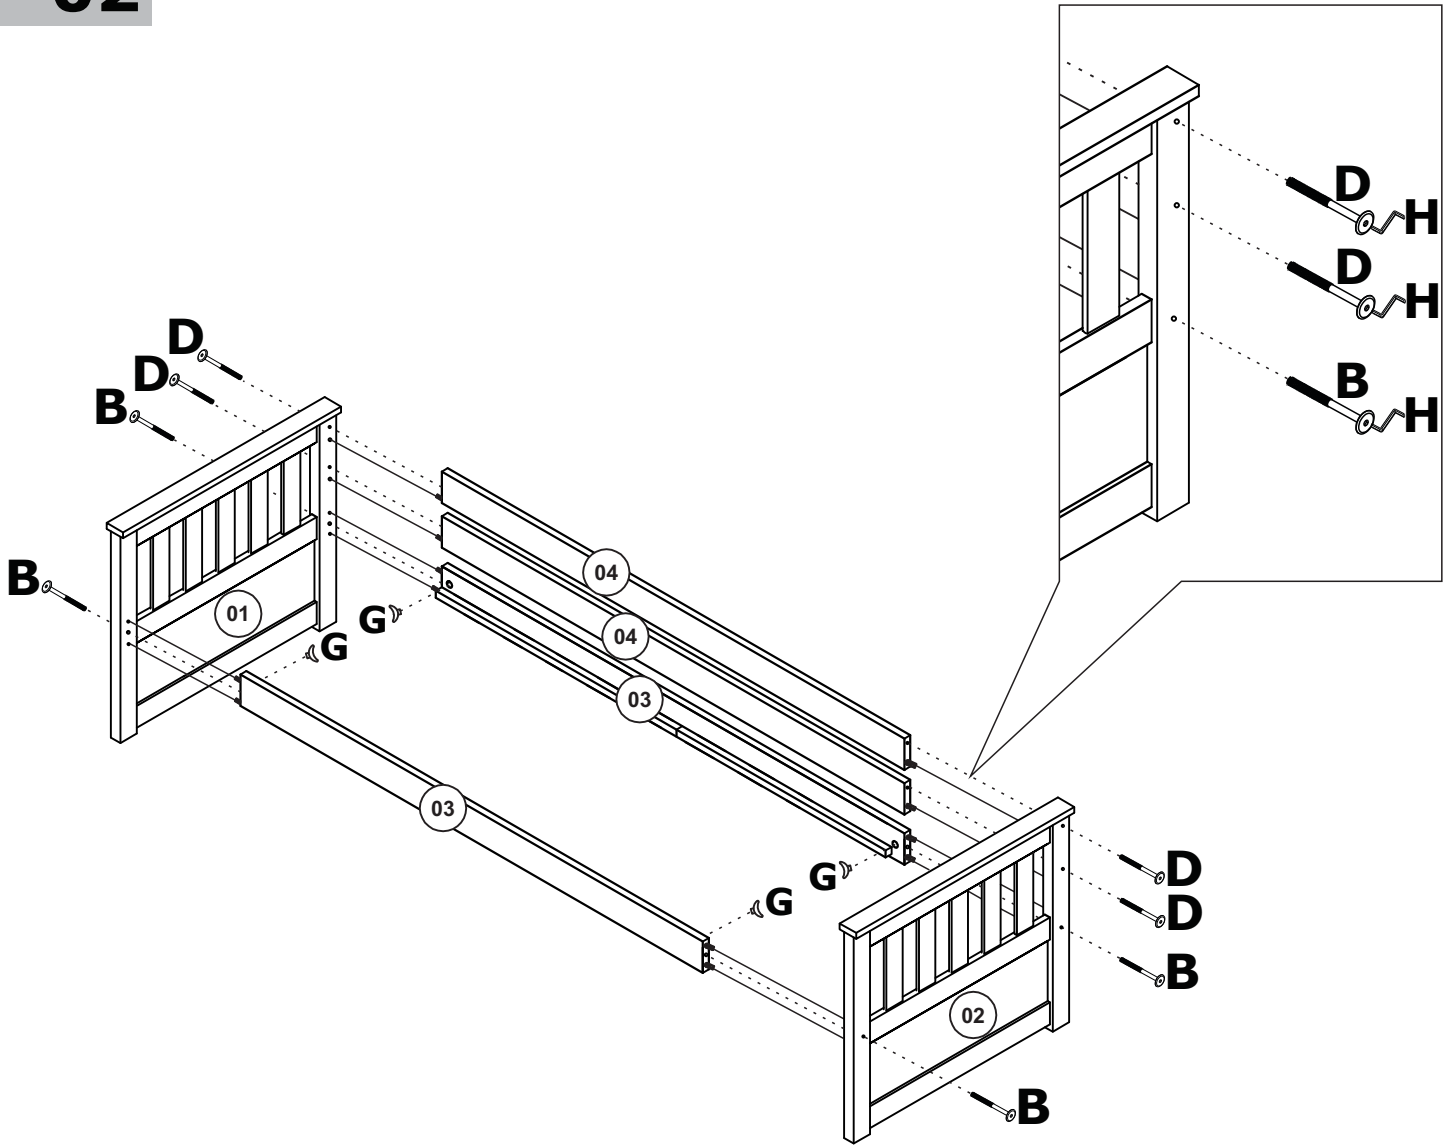





02




03

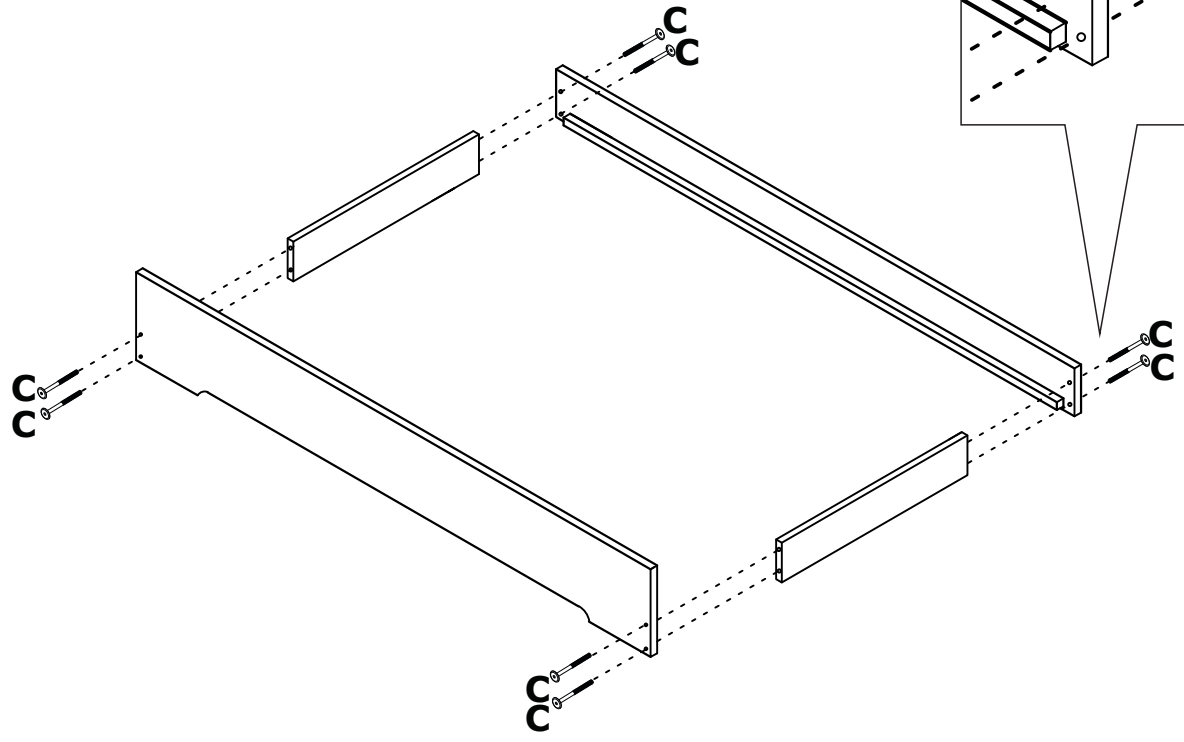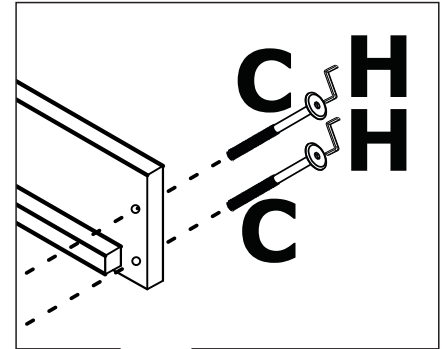

04

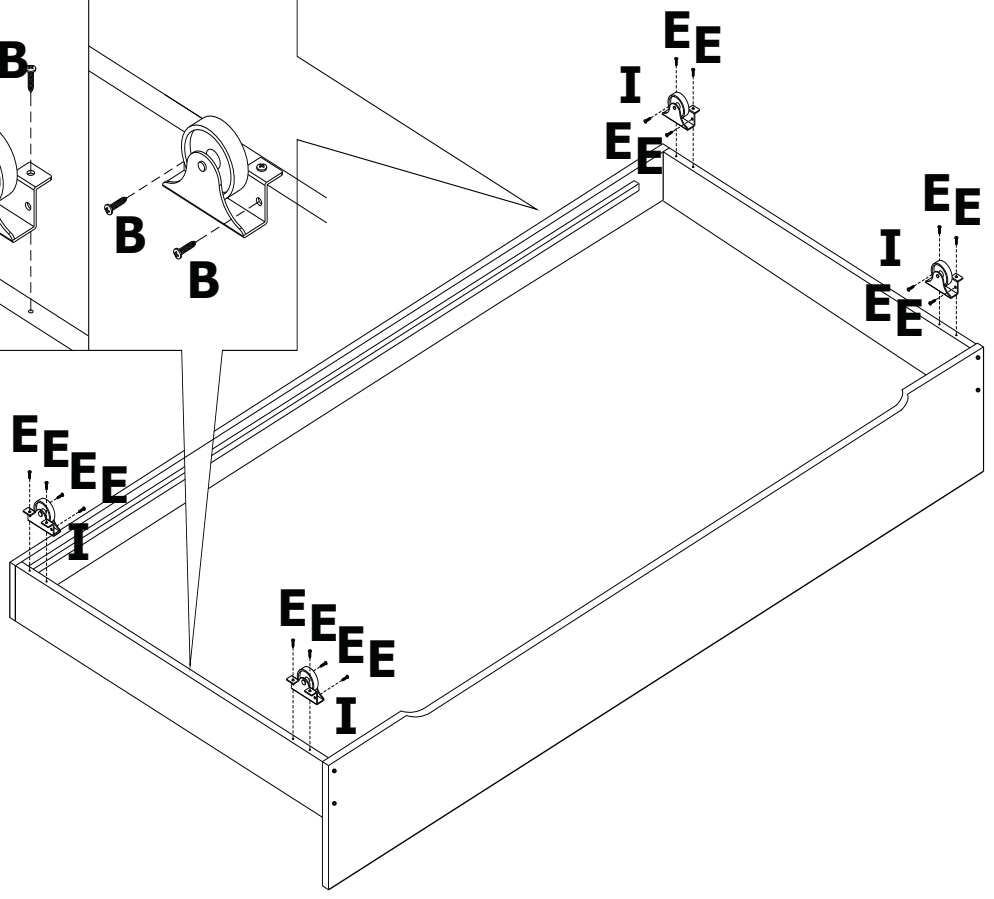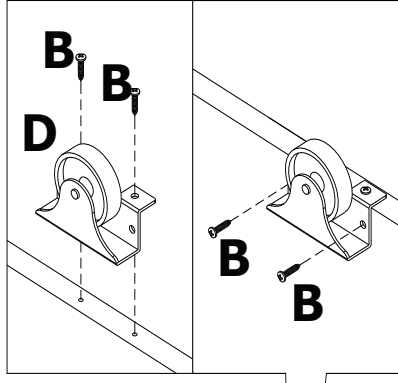

05

F  **48x**
Ø3,5x30mm

