


















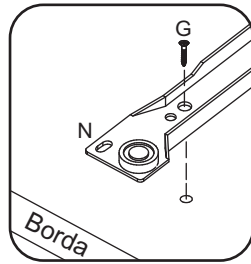





GB01 - Gabinete Banheiro

A		40
B		20
C		06
D		04
E		04
F		50
G		72
H		08
J		02
K		02
L		03
M		01
N		02
O		01
P		12
Q		02
R		01
S		02
T		04




Colocar o parafuso, conforme indicado.


1

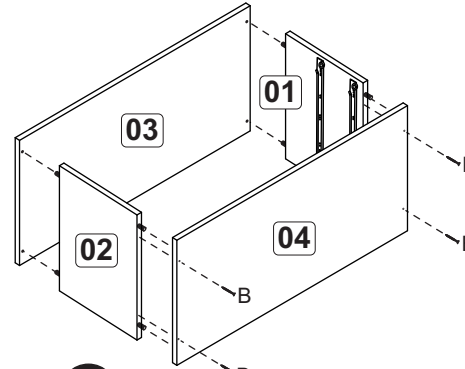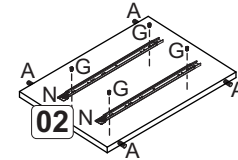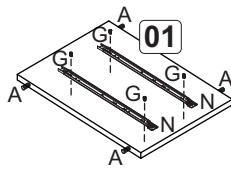



2

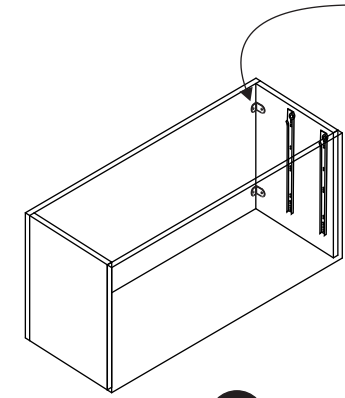



3

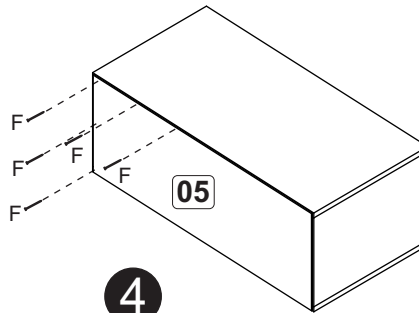



4

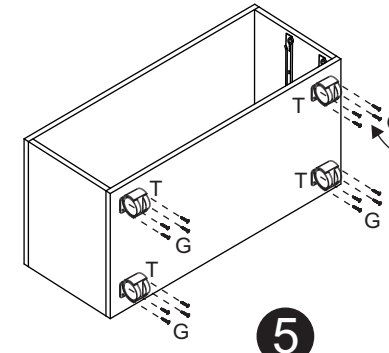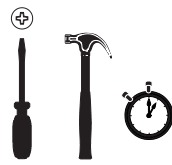


5

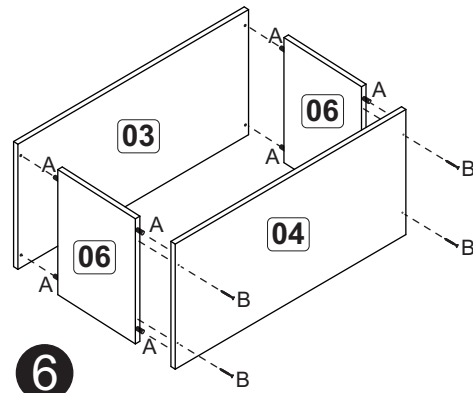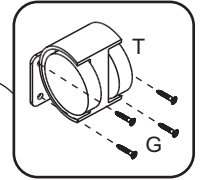



6

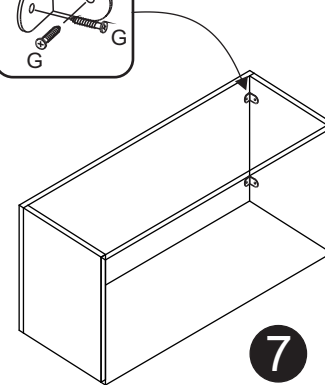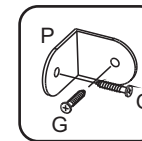

7

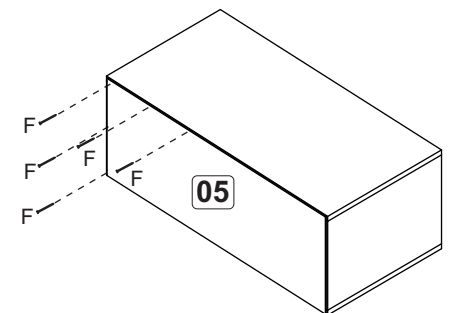


8

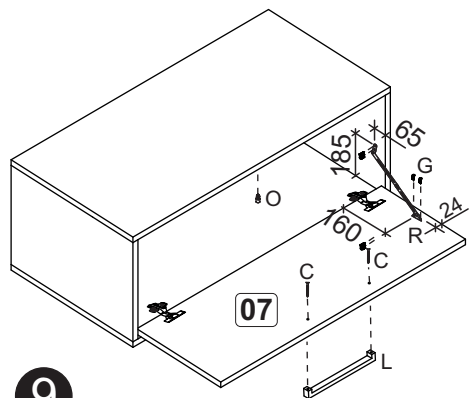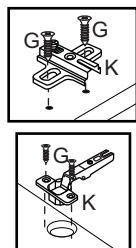


9


*Gaveta montar (2x)

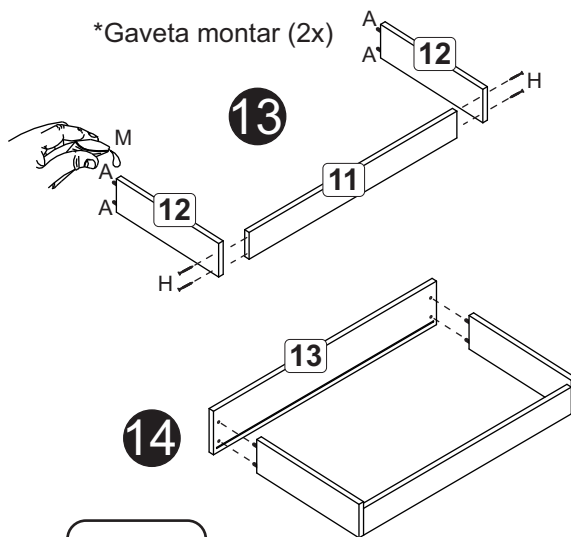


14

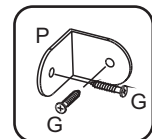


15

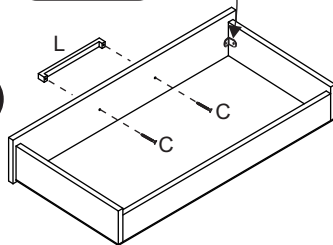

16

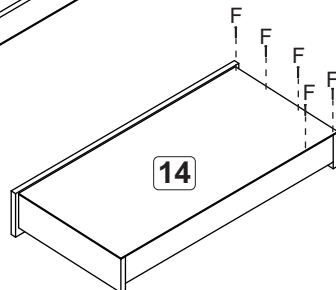

17

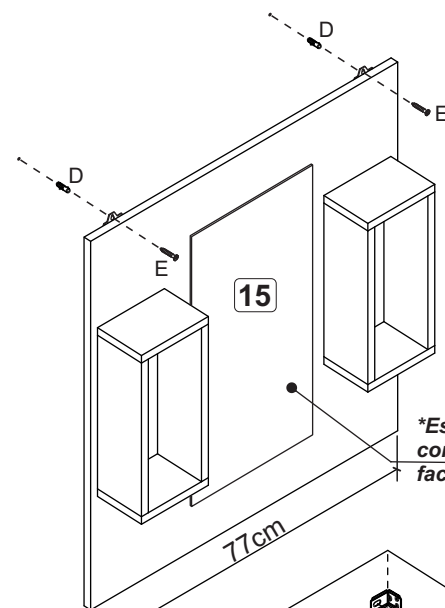


*Espelho fixar com fita dupla face (Q)

*Altura conforme necessidade

80cm


Piso

18

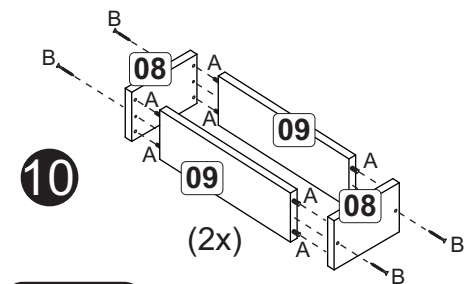


10

(2x)

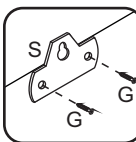

11

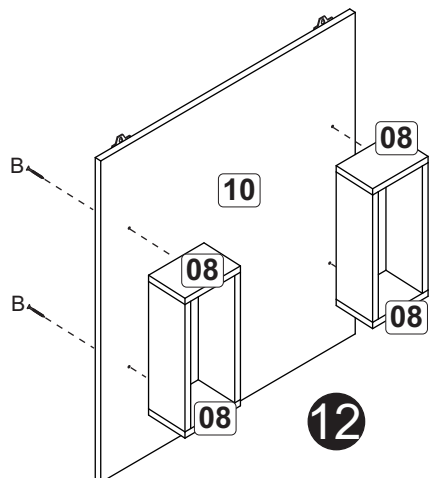

12

Fixação na parede

