

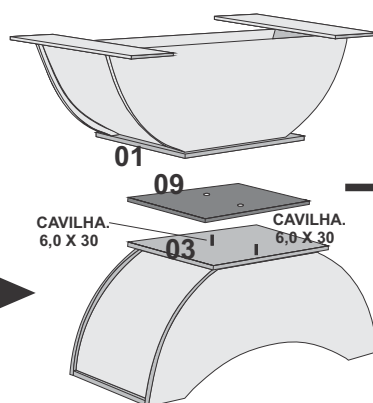
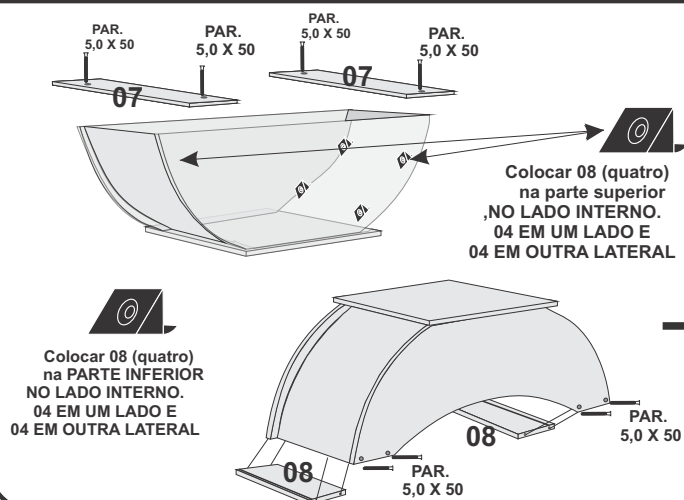


A black and white line drawing of four common tools. On the left is a screwdriver with a long handle and a flat tip. Above the handle is a circular inset showing a close-up of the tip. In the center is a claw hammer with a long handle and a double-pointed metal head. To the right is an adjustable wrench, shown in its open position. Below the wrench is a ruler with a triangular base and a long, graduated edge.


13/03/2018

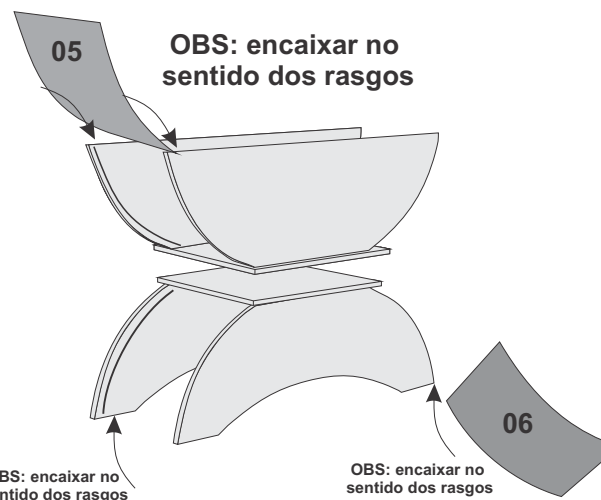


PEGAR OS 04 PARAFUSOS 4,0 X 45
E PARAFUSAR NOS LOCAIS INDICADOS
TAVANDO A PARTE SUPERIOR NA PARTE INFERIOR

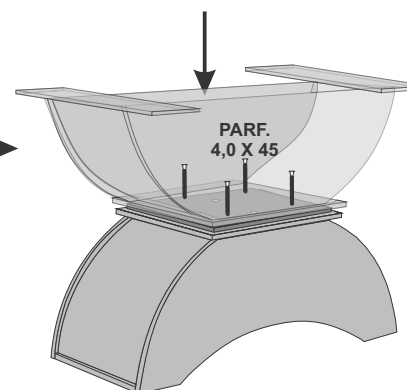

CONTINUAÇÃO NO VERSO...


	Sapata Reta 02 furos	04 UN
	Parafuso 5,0 x 50	16 UN
	Parafuso 3,5 x 25	08 UN
	Parafuso 3,5 x 14	24 UN
	Tampa cabeça de parafuso c/ pino 10 MM	08 UN
	CAVILHA 6 X30	02 UN
	Suporte Triangular	08 UN
	Parafuso 4,5 x 45	04 UN
	Giz de Correção	01 UN
	Silicone p/ tampo de vidro	06 UN

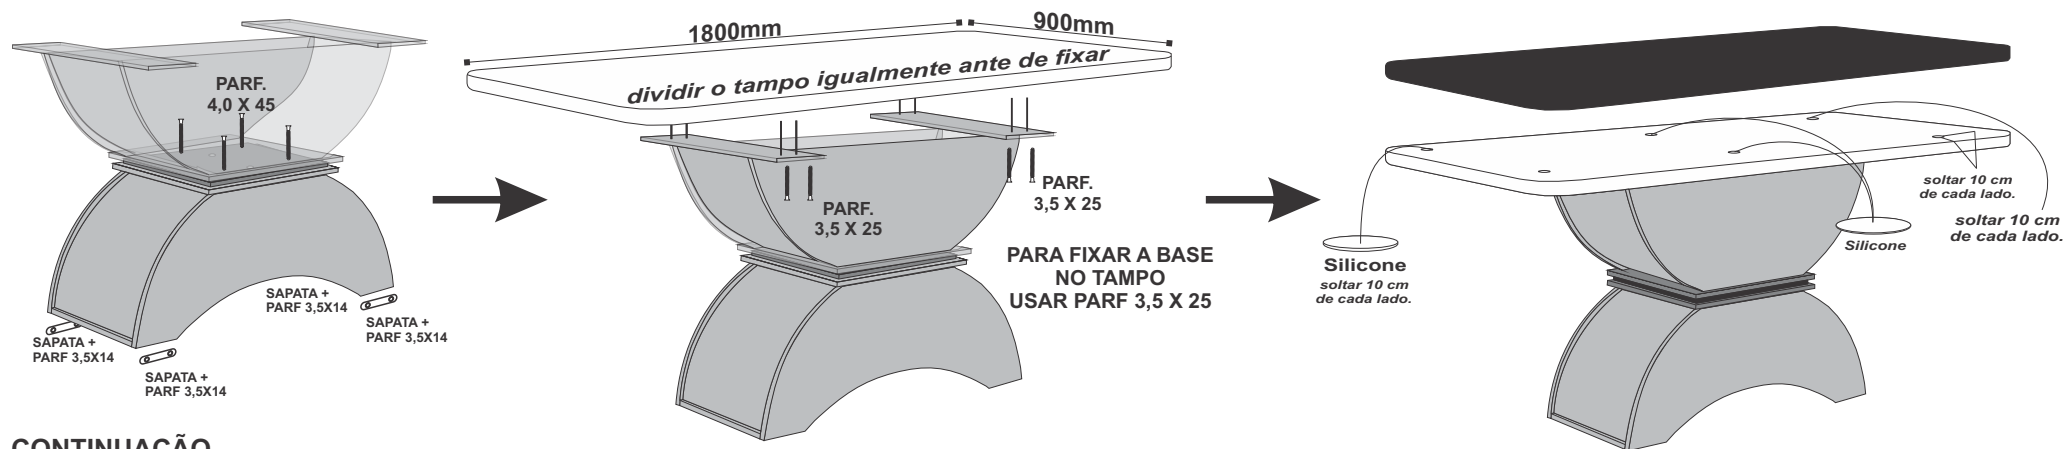

CONTINUAÇÃO

MESA ATENAS

CÓD: 9103 TAMPO QUINA RETA
CÓD: 9332 TAMPO QUINA COPO

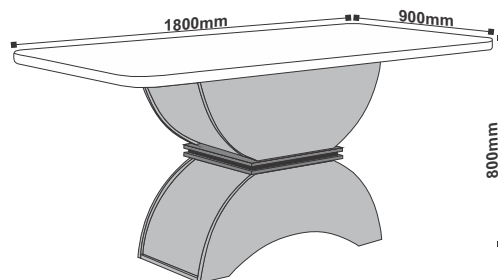

CÓDIGO	Nº	DESCRIÇÃO	QT.	CÓD. BRANCO/IMBUÍR	CÓD. IMBUÍR/BRANCO	CÓD. OFF WHITE/IMBUÍR	
9115	01	APLIQUE CENTRAL MAIOR	01	9115	9115	9115	
9109	02	LATERAL SUPERIOR	02	9109	9109	9109	
9115	03	APLIQUE CENTRAL MAIOR	01	9115	9115	9115	
9109	04	LATERAL INFERIOR	02	9109	9109	9109	
9118	05	APLIQUE CENTRAL SUPERIOR	02	9118	9118	9118	
9117	06	APLIQUE CENTRAL INFERIOR	02	9117	9117	9117	
9113	07	SAPATA SUPERIOR	02	9113	9113	9113	
9111	08	SAPATA INFERIOR	02	9111	9111	9111	
9116	09	APLIQUE CENTRAL	01	9116	9116	9116	
-----	10	TAMPO	01	-----	-----	-----	
9797	11	KIT FERRAGEM	01	9797	9797	9797	