



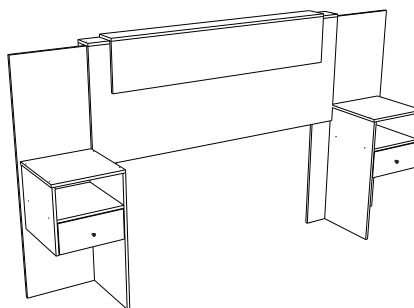











Ref. CA004

**Cabeceira
Cabecera
Oslo**







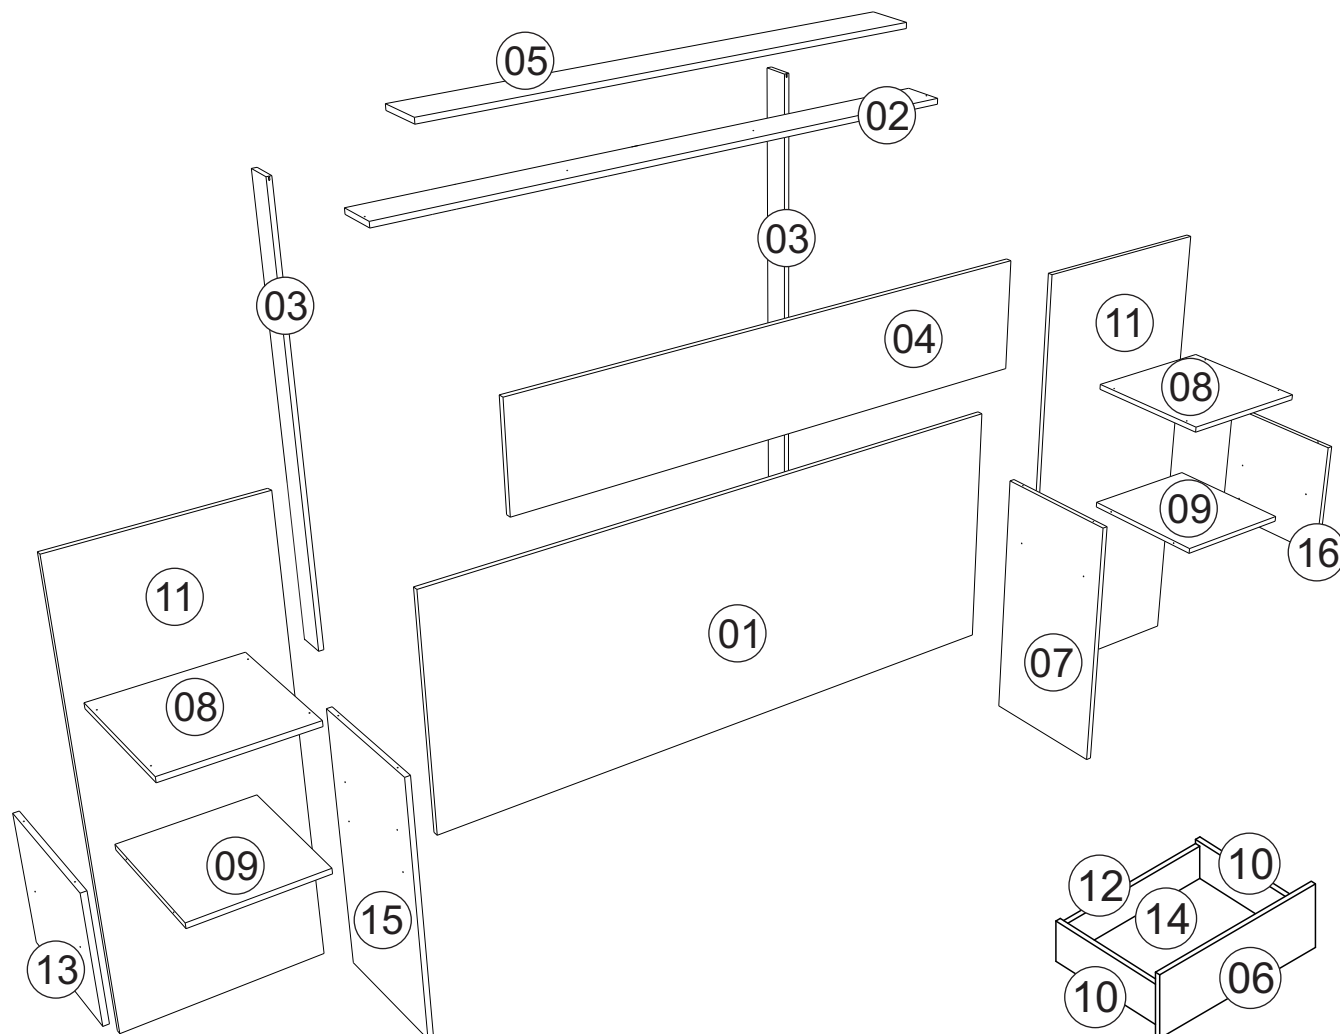


Nº	CÓDIGO	NOME DA PEÇA/DESCRIPCIÓN PIEZAS	MEDIDAS (mm)	QTD.	TAUPE	OFF-WHITE	TERRANO	TERRANO RIPADO	HAVANA	HAVANA RIPADO
01	CA004.40.01	Painel cabeceira/ Panel cabecera	1500x630x15	01	114789		114879		90429	
02	CA004.33.01	Tampo cabeceira/ Tapa cabecera	1500x90x15	01	114790		114880		90430	
03	CA004.22.03	Lateral interna /Lateral	1172x73x15	02	114791		114881		90431	
04	CA004.48.00	Acabamento / acabado	1245x240x15	01		114792		114882		114047
05	CA004.12.00	Ripa envoltório/ Ripa envoltura	1245x105x15	01		114793		114883		114048
06	CA004.14.00	Frente gaveta/ Frente cajón	346x150x15	02		114794		116406	90434	
07	CA004.22.01	Lateral direita/ Lateral derecha	620x380x15	01	114795		114886		90435	
08	CA004.33.00	Tampo criado / Tapa mesilla	383x383x15	02	114796		114887		90436	
09	CA004.02.00	Base interna/ Base interna	350x380x15	02	114797		114888		90437	
10	CA004.15.00	Lateral gaveta/ Lateral cajón	350x100x15	04	90440		90440		90440	
11	CA004.40.00	Painel criado/ Panel mesilla	1172x700x15	02	114798			114889		116669
12	CA004.29.00	Ripa traseira gaveta/ Trasero cajón	294x80x15	02	90442		90442		90442	
13	CA004.22.02	Lateral esquerda/ Lateral izquierda	295x380x15	01	114799		114890		90443	
14	CA004.34.00	Forro gaveta/ Revés cajón	304x355x2,5	02	90444		90444		90444	
15	CA004.21.00	Lateral int. esquerda/ Lateral int. izquierda	620x380x15	01	114800		114891		102931	
16	CA004.20.00	Lateral int. direita/ Lateral int. derecha	295x380x15	01	114801		114892		102932	

Ferragens/Herrajes

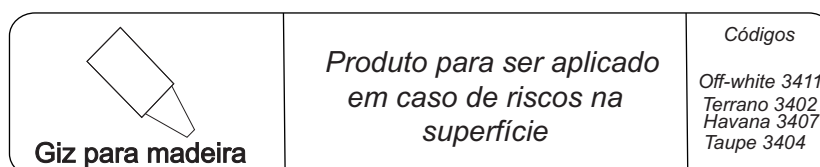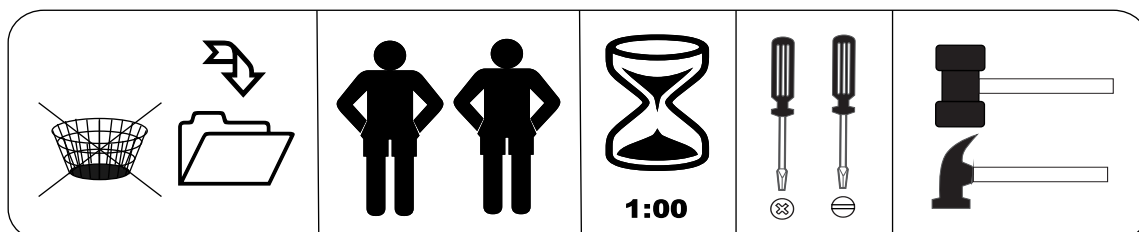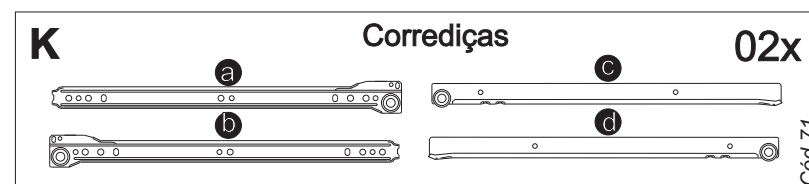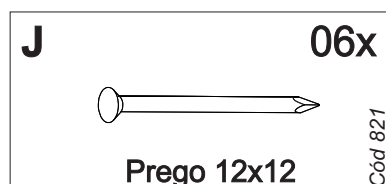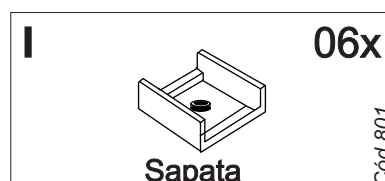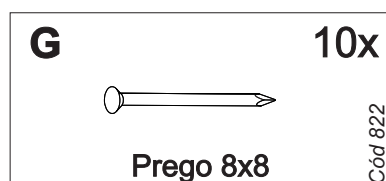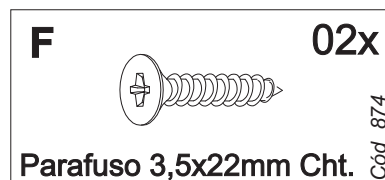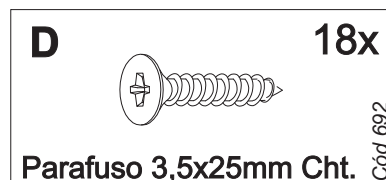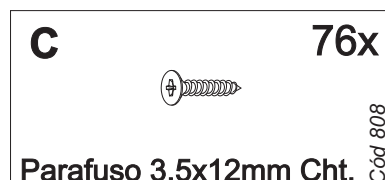
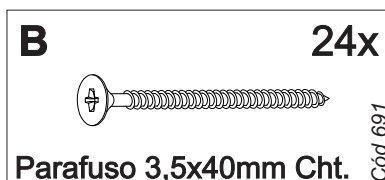


Pré-Montagem/Preparación Piezas

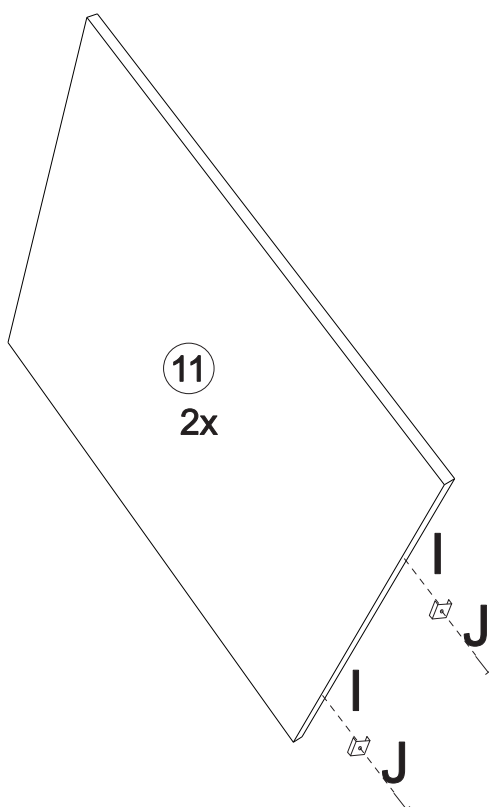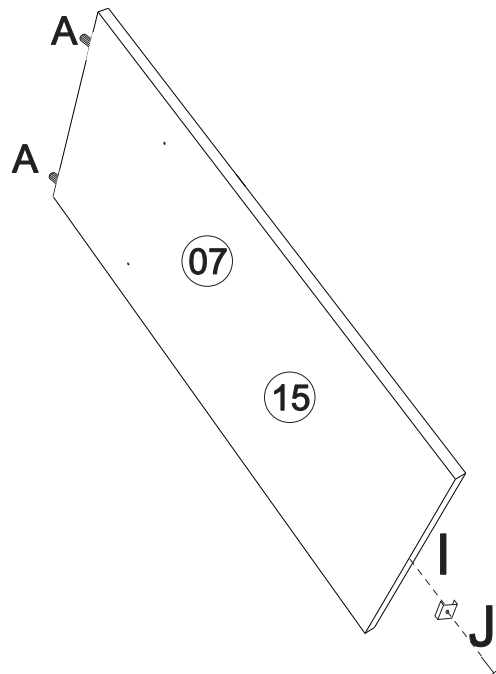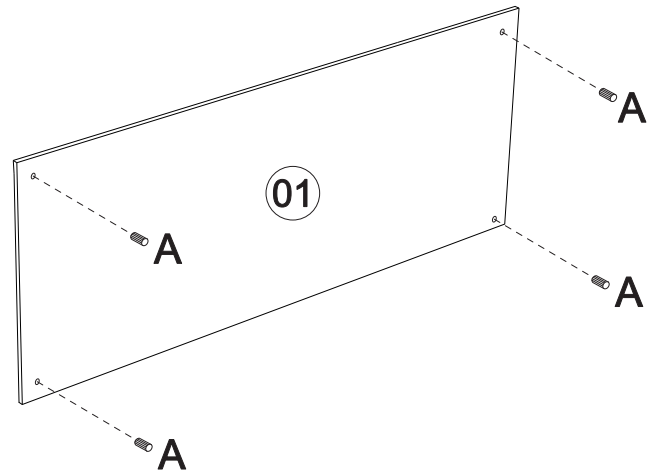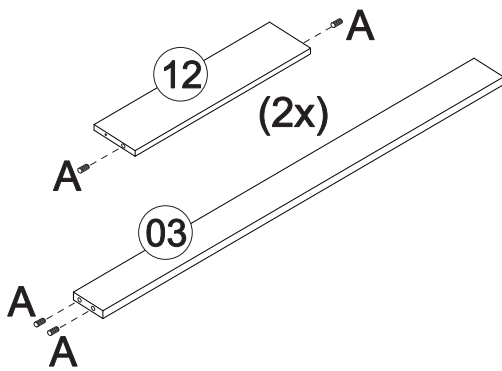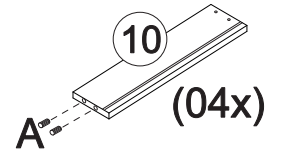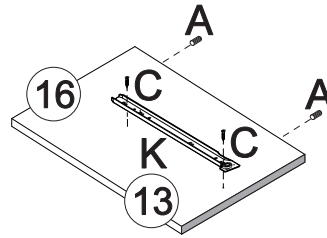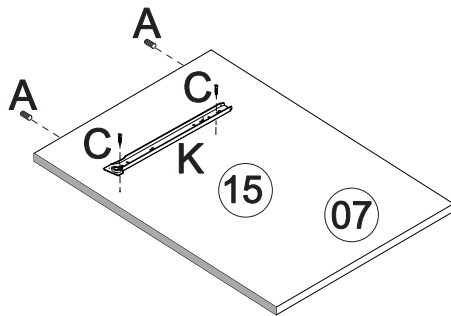


Montagem/Montaje

01

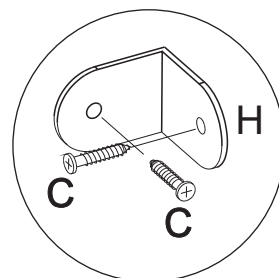
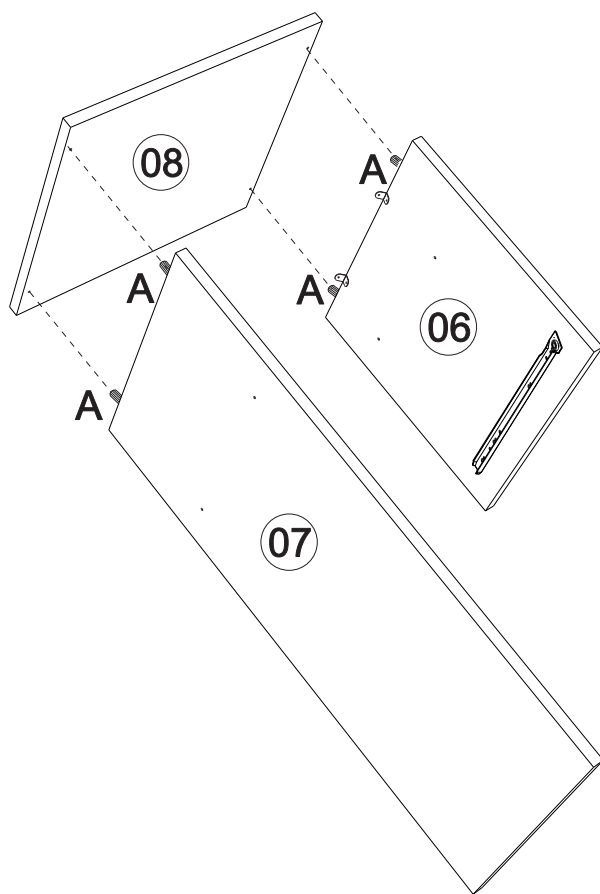


Usar 4 cantoneiras (L)
para fixar o tampo.
Usar 4 piezas (L) para
fijar la tapa.


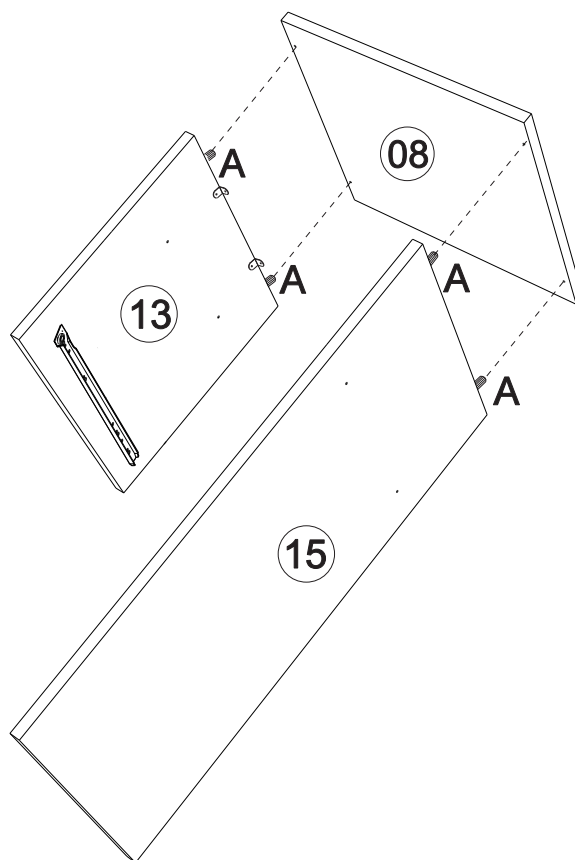


Montagem/Montaje



02

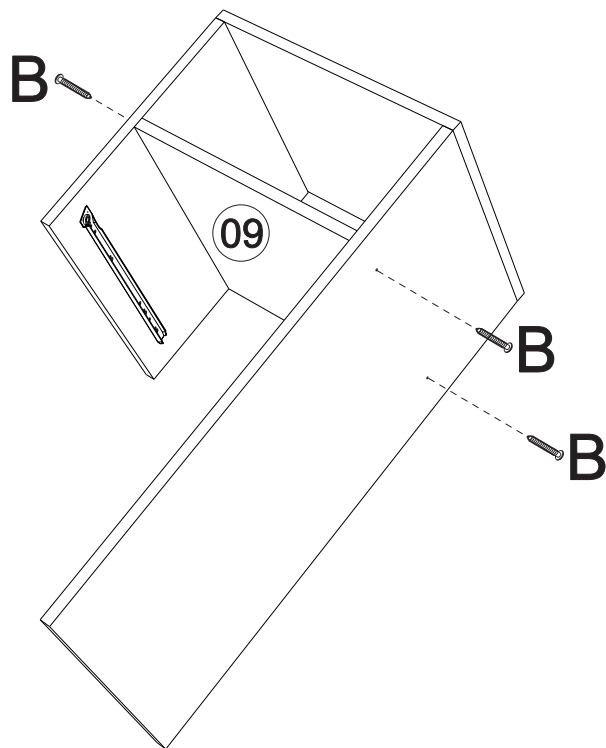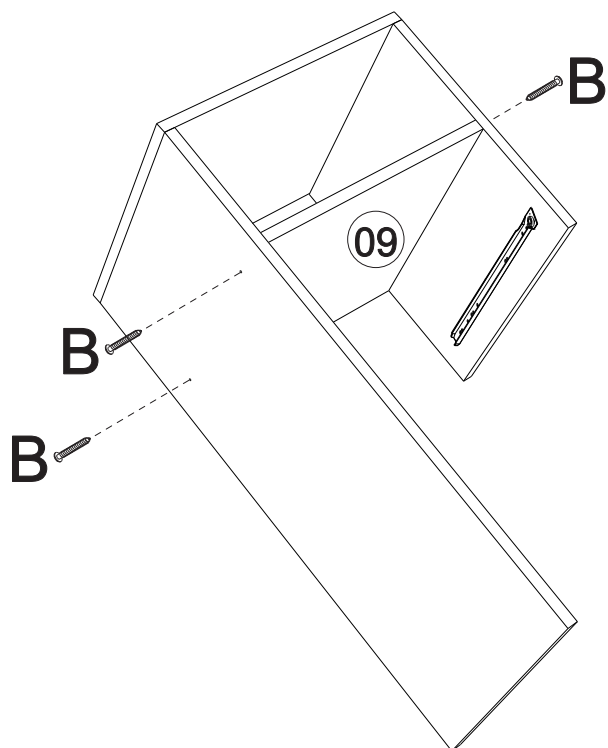

03

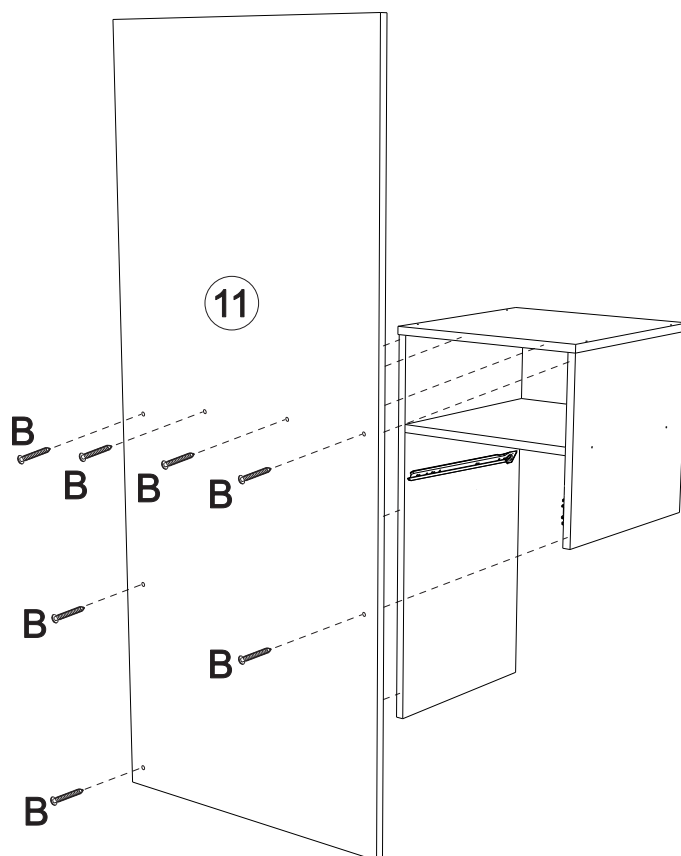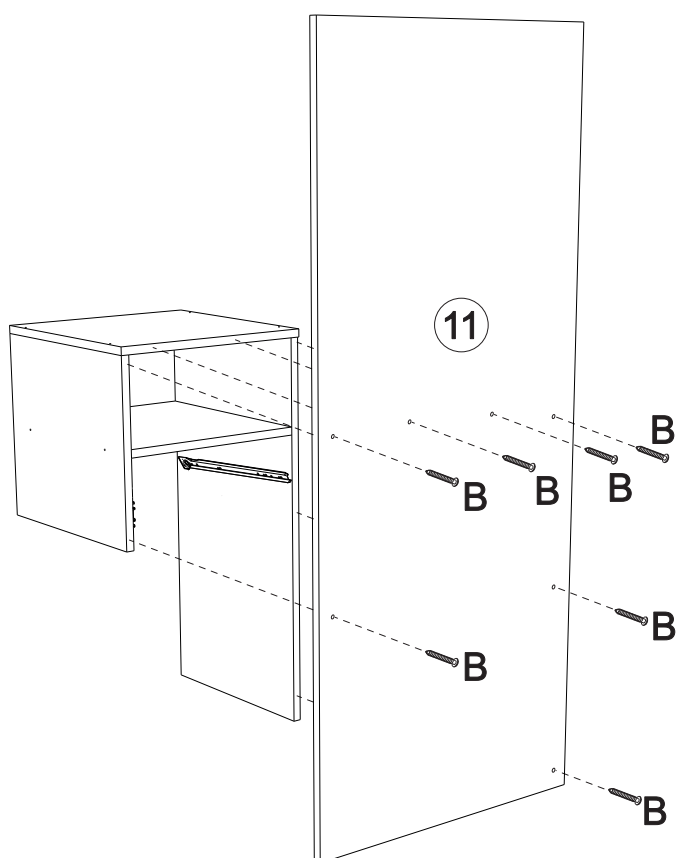


Medidas para encaixar o colchão

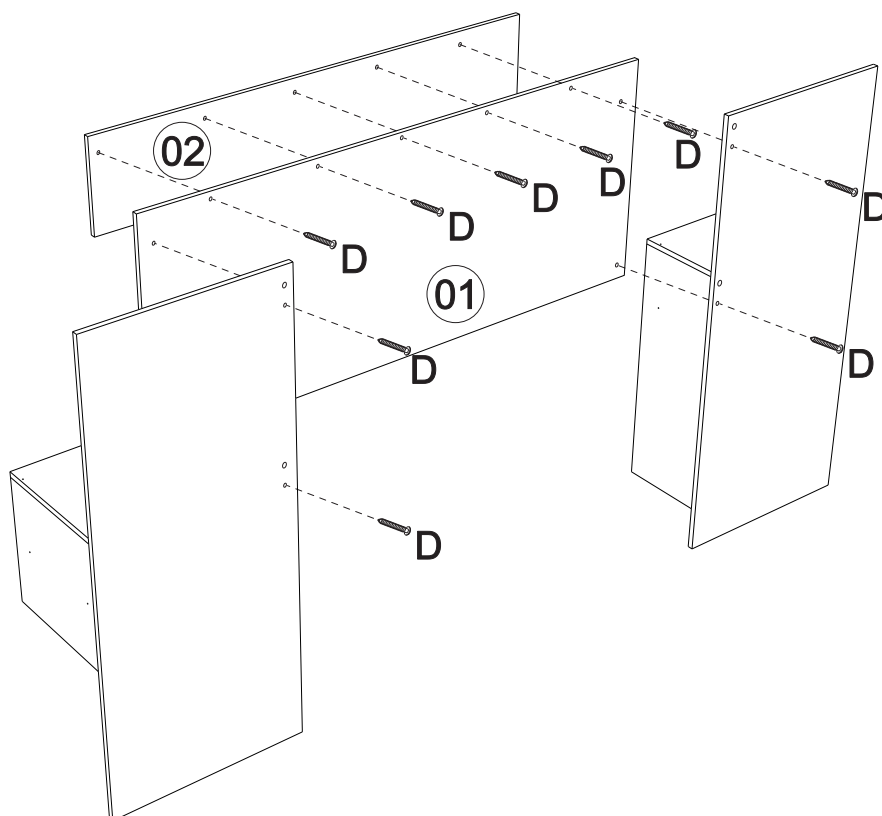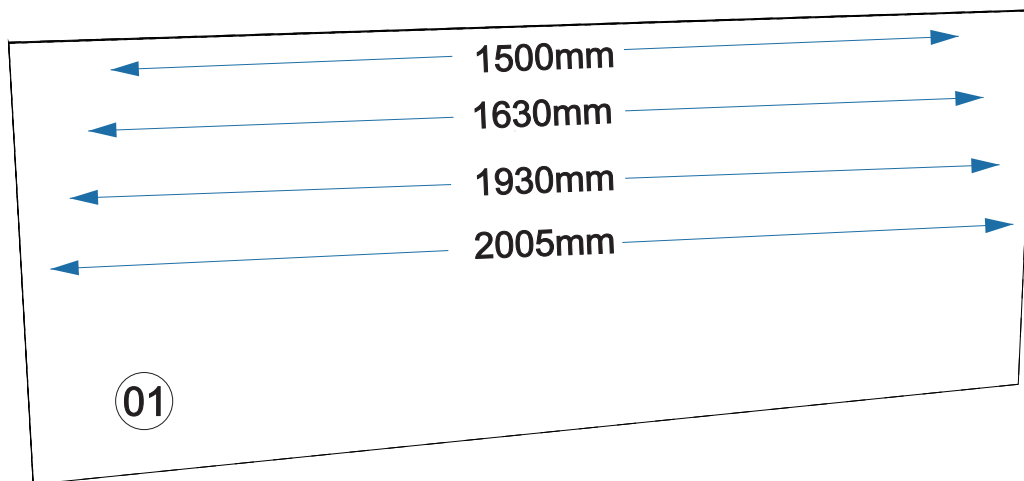


Montagem/Montaje

06

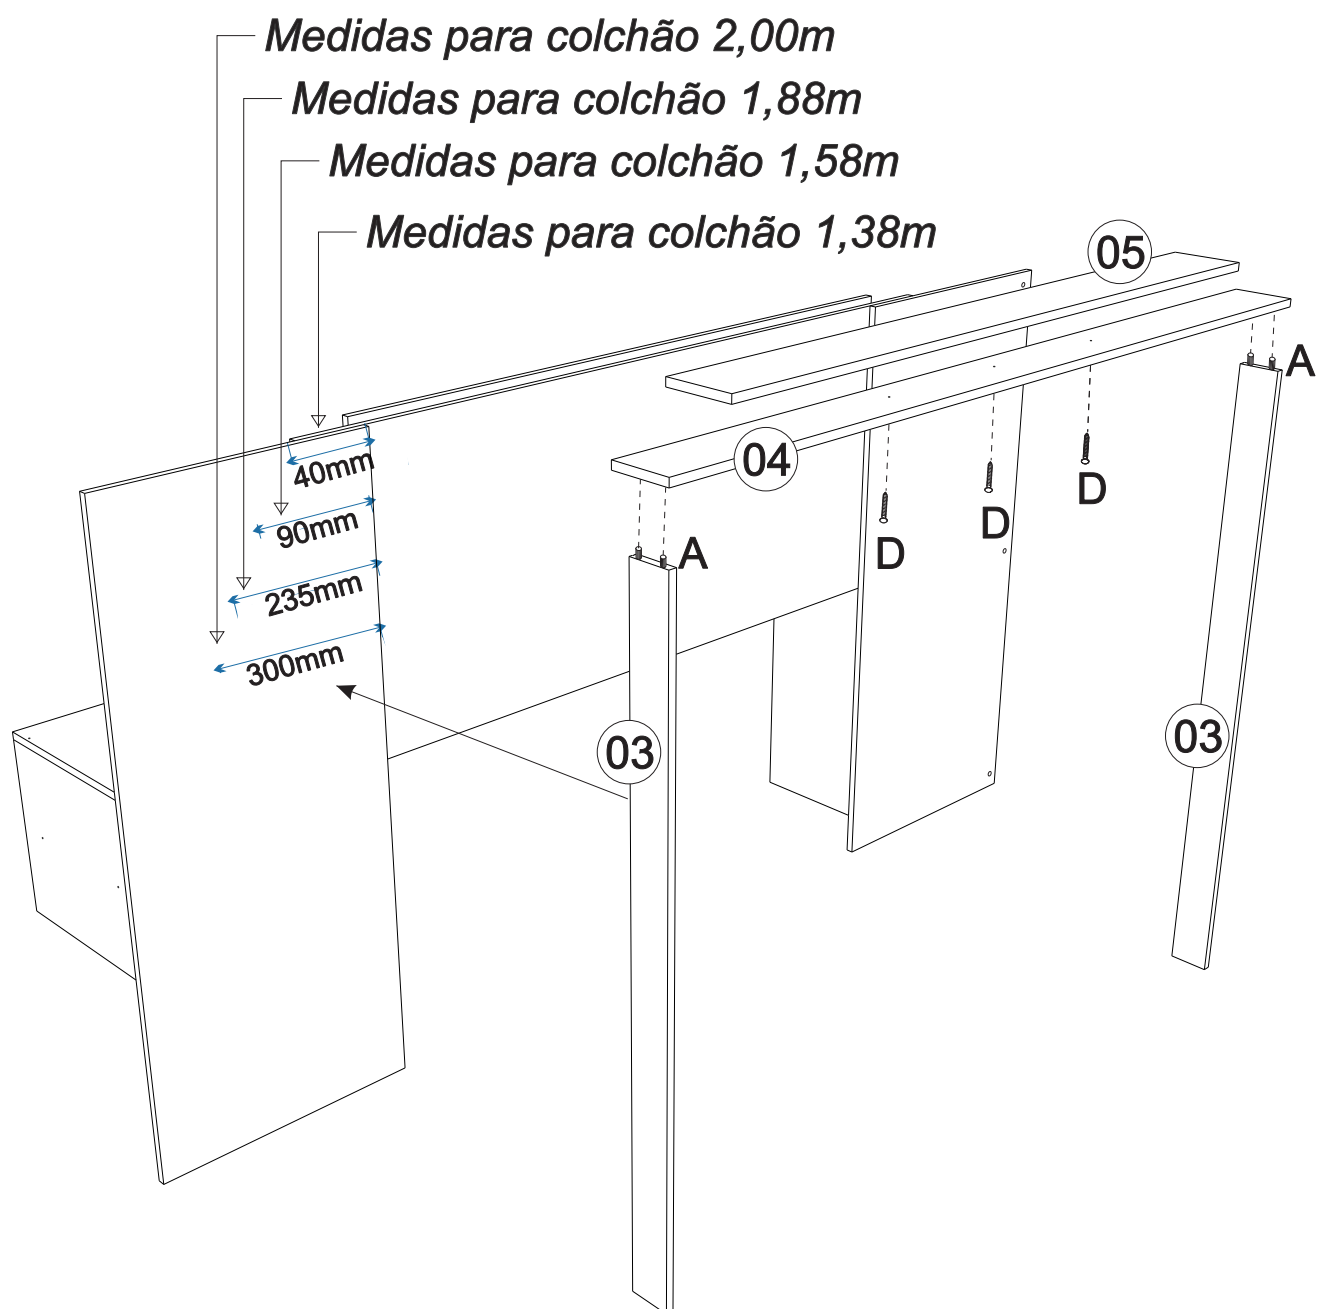

Montagem/Montaje

07

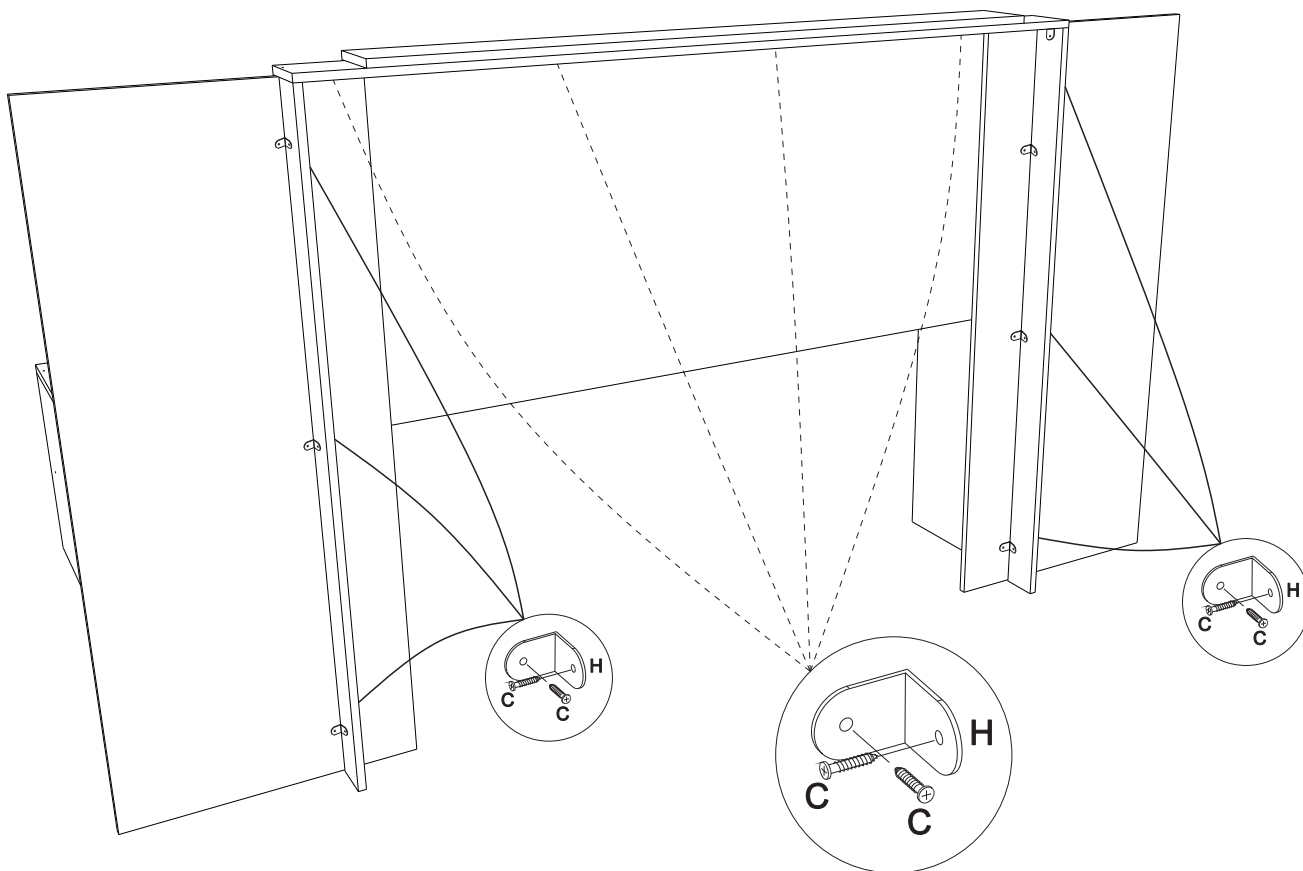

08

