


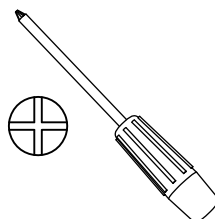
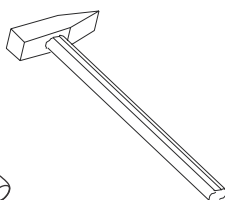
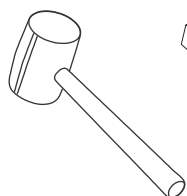
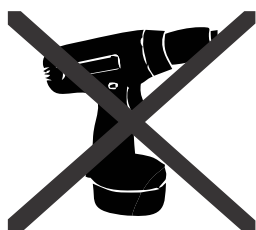





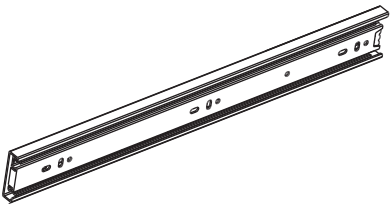







COMODA 3 GAVETAS

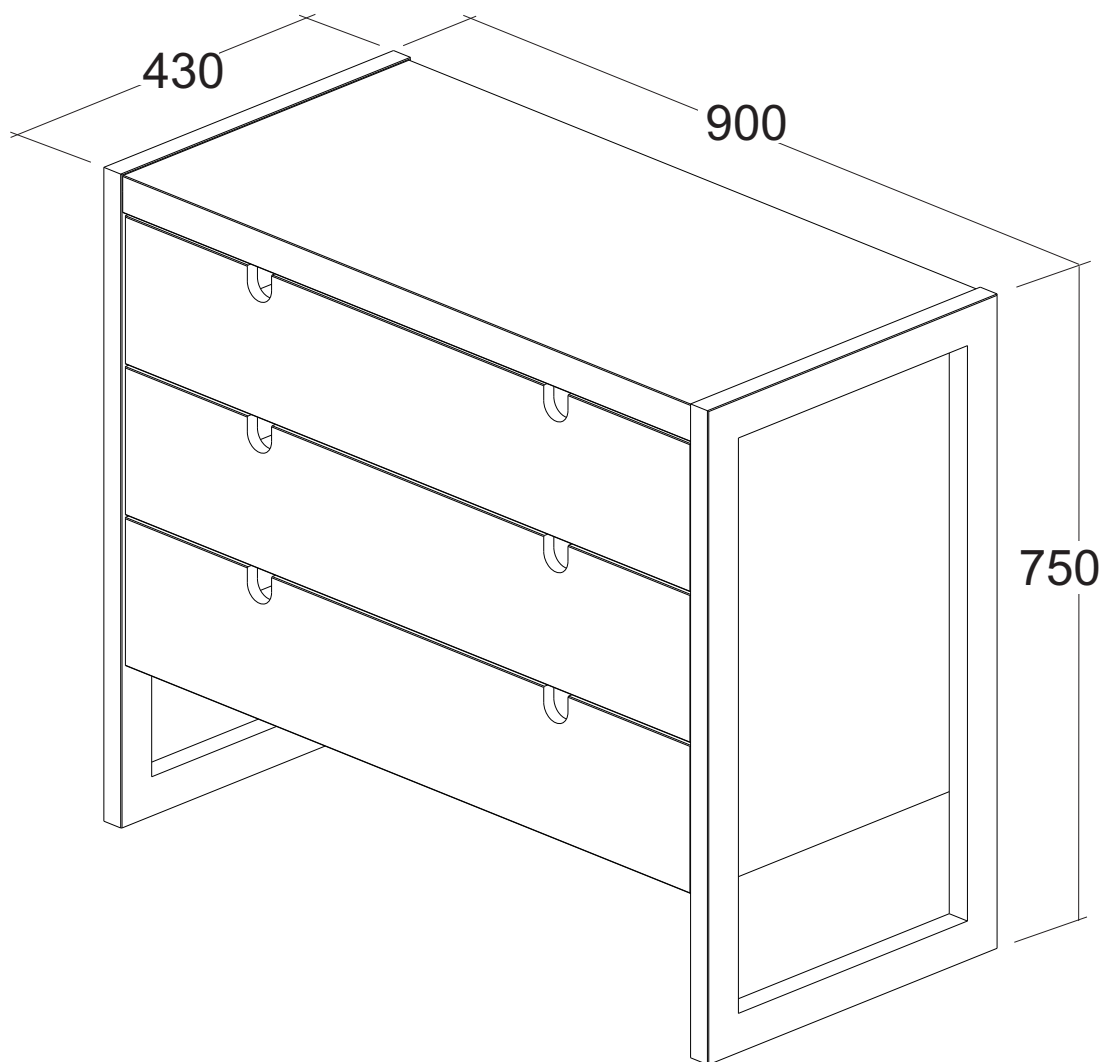


90min.

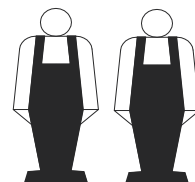


FERRAGEM



A	 8,0x30	28	G	 10x10	32
B	 Soberbo	20	H	 350mm	06
C		20			
D	 4,0x30	08	I		04
E	 3,5x30	12	J	 180mm	01
F	 3,5x14	31	K	 M4	02

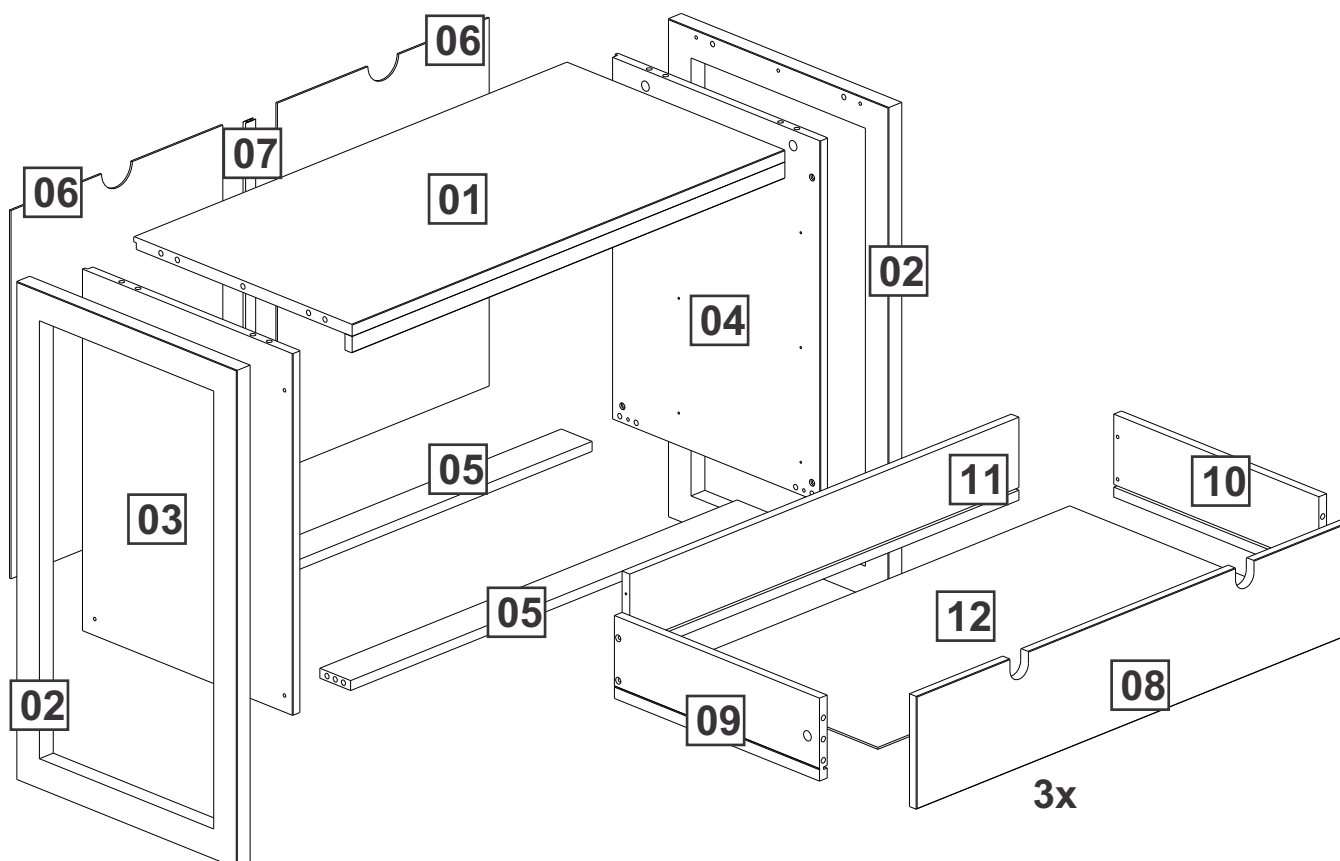
PARTES DO PRODUTO

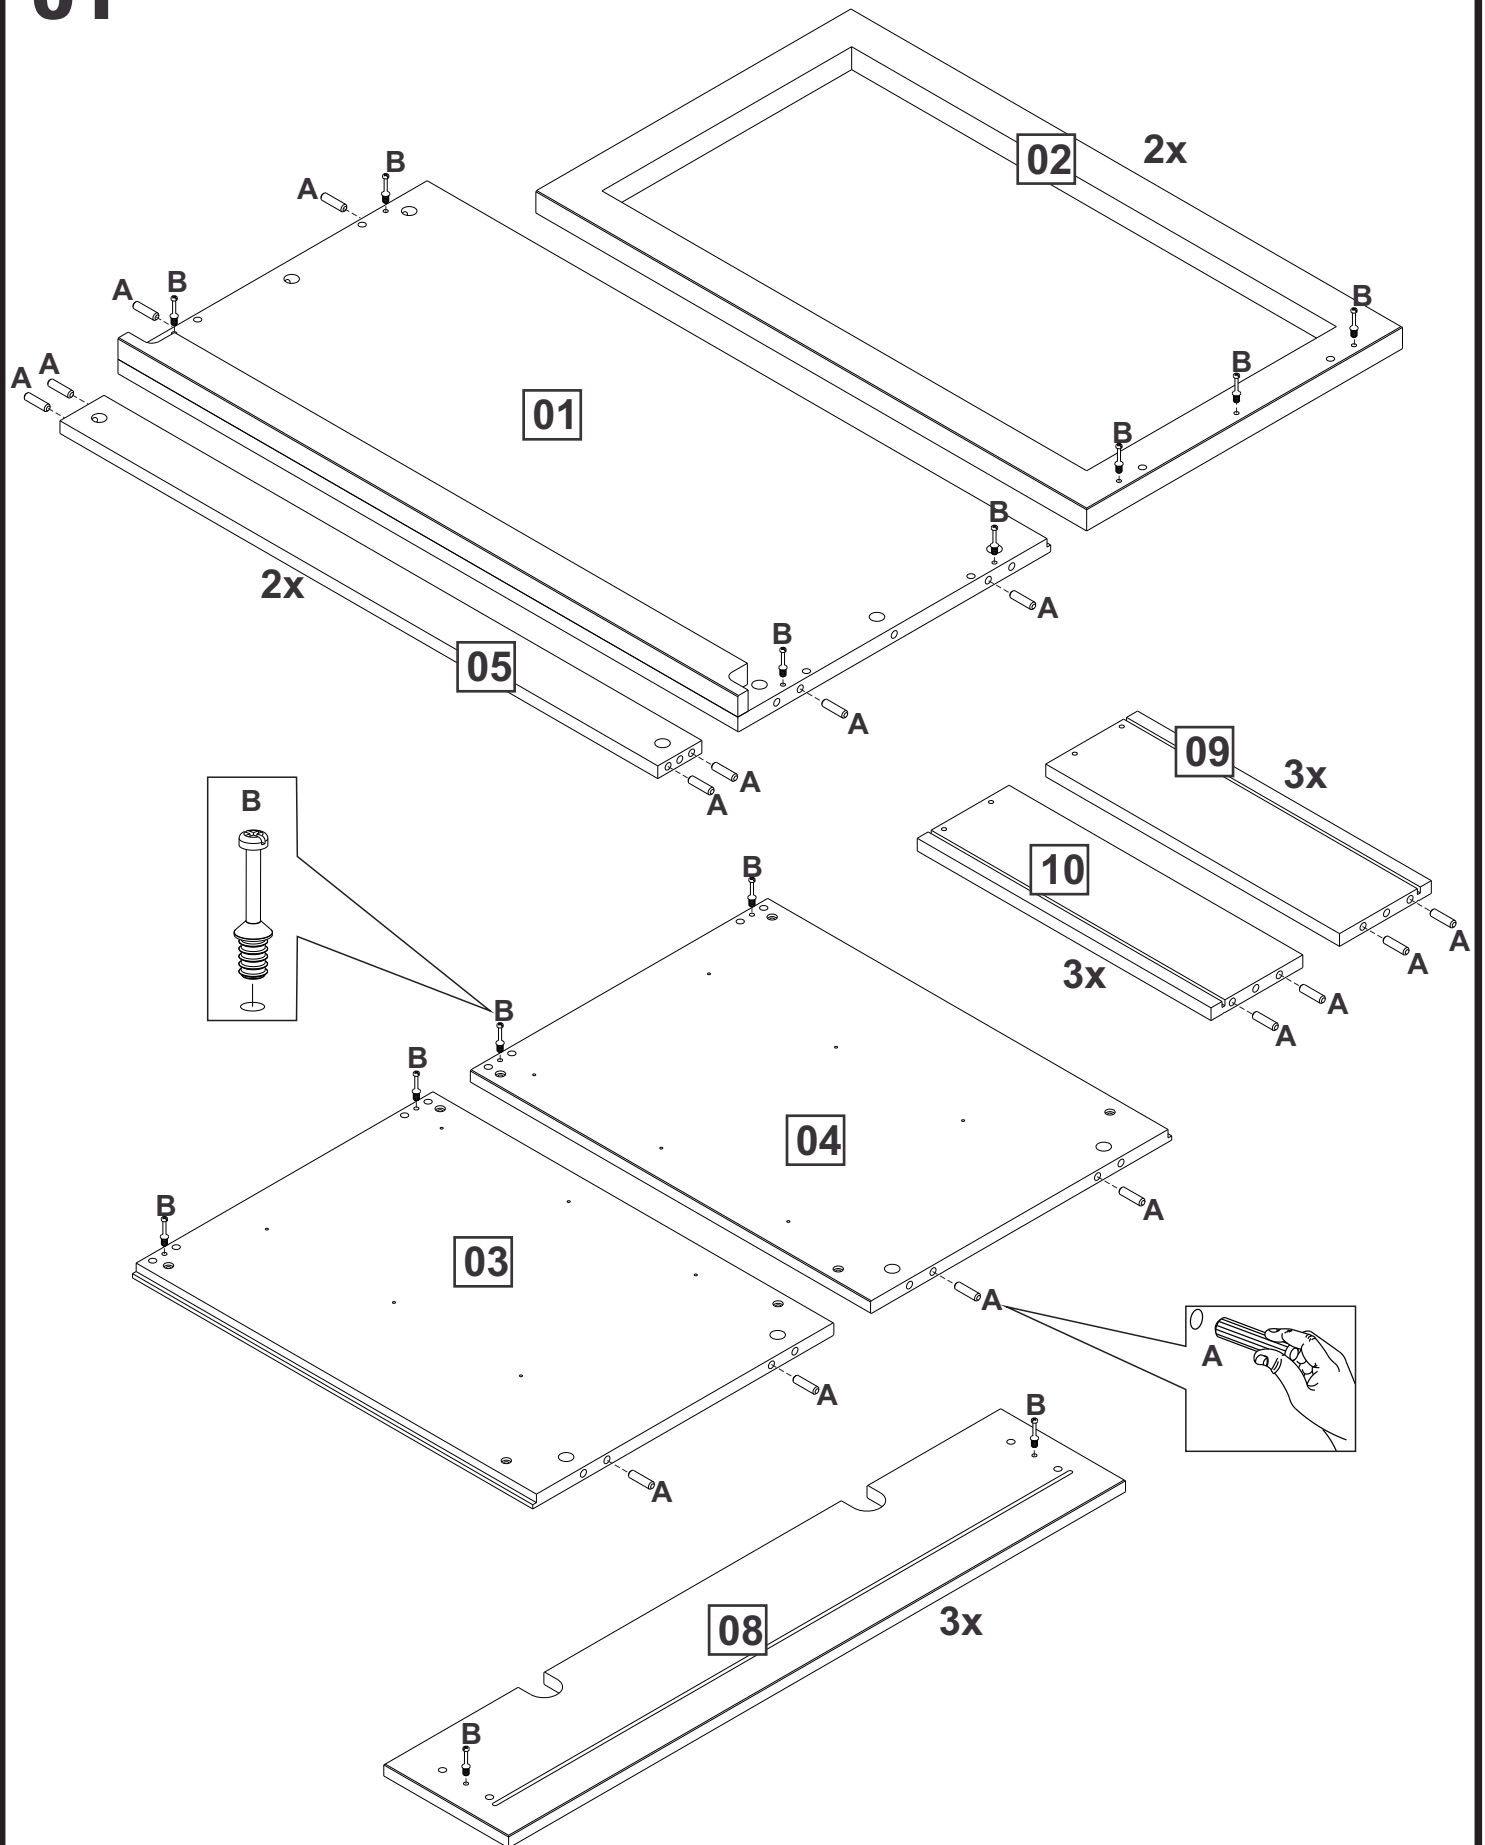


01


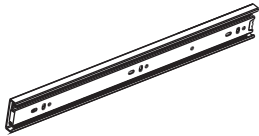


A	 8,0x30	28
B	 Soberbo	20

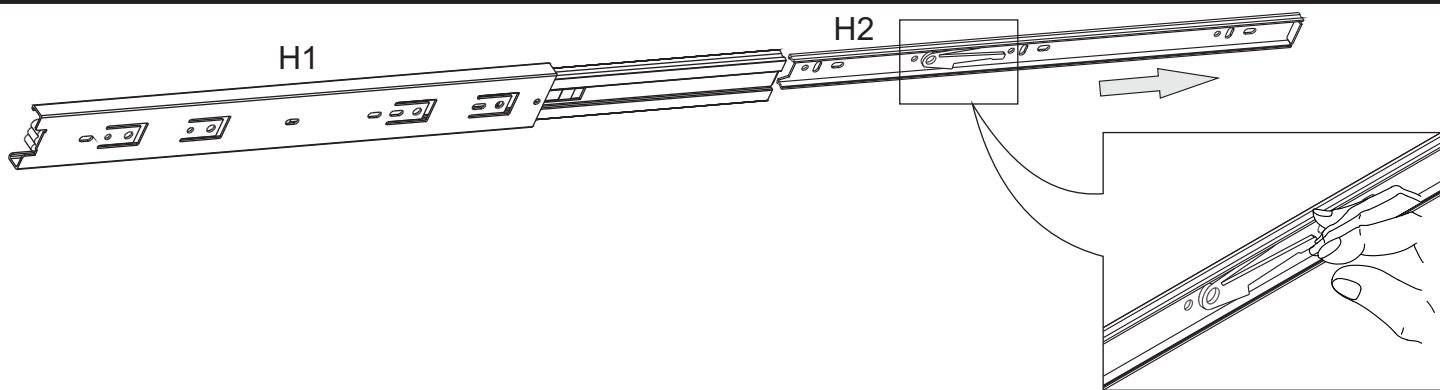


02

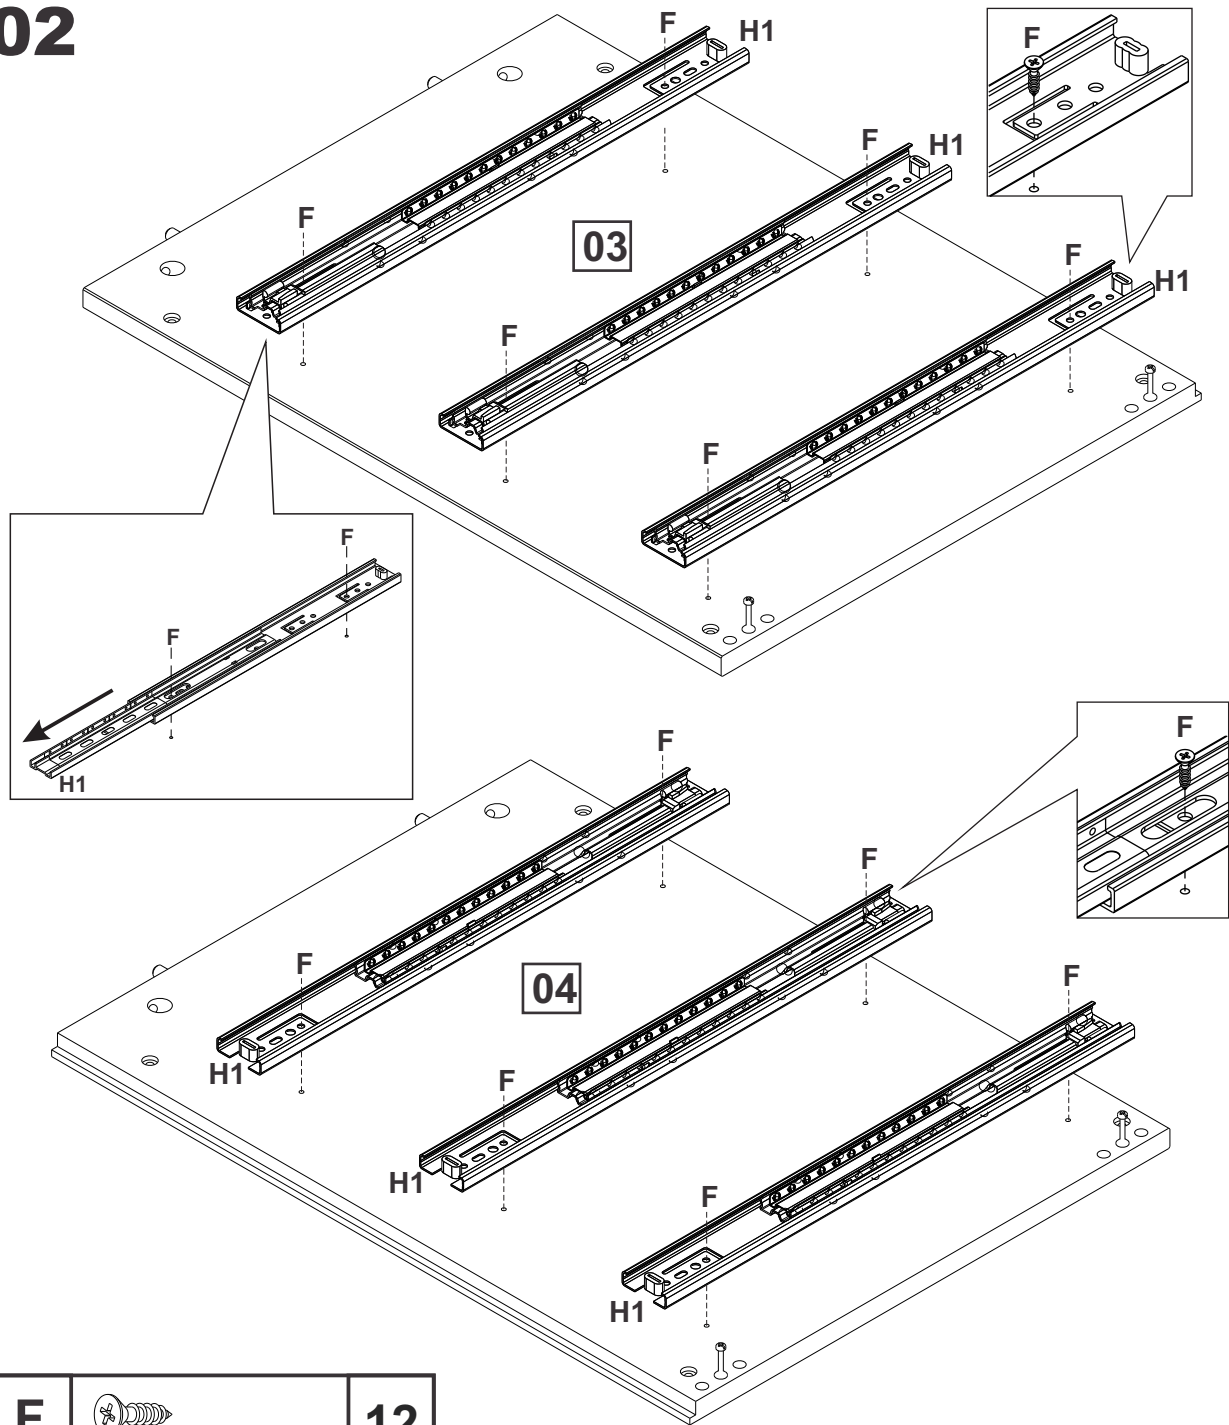

F		3,5x14	12
H		350mm	06

03

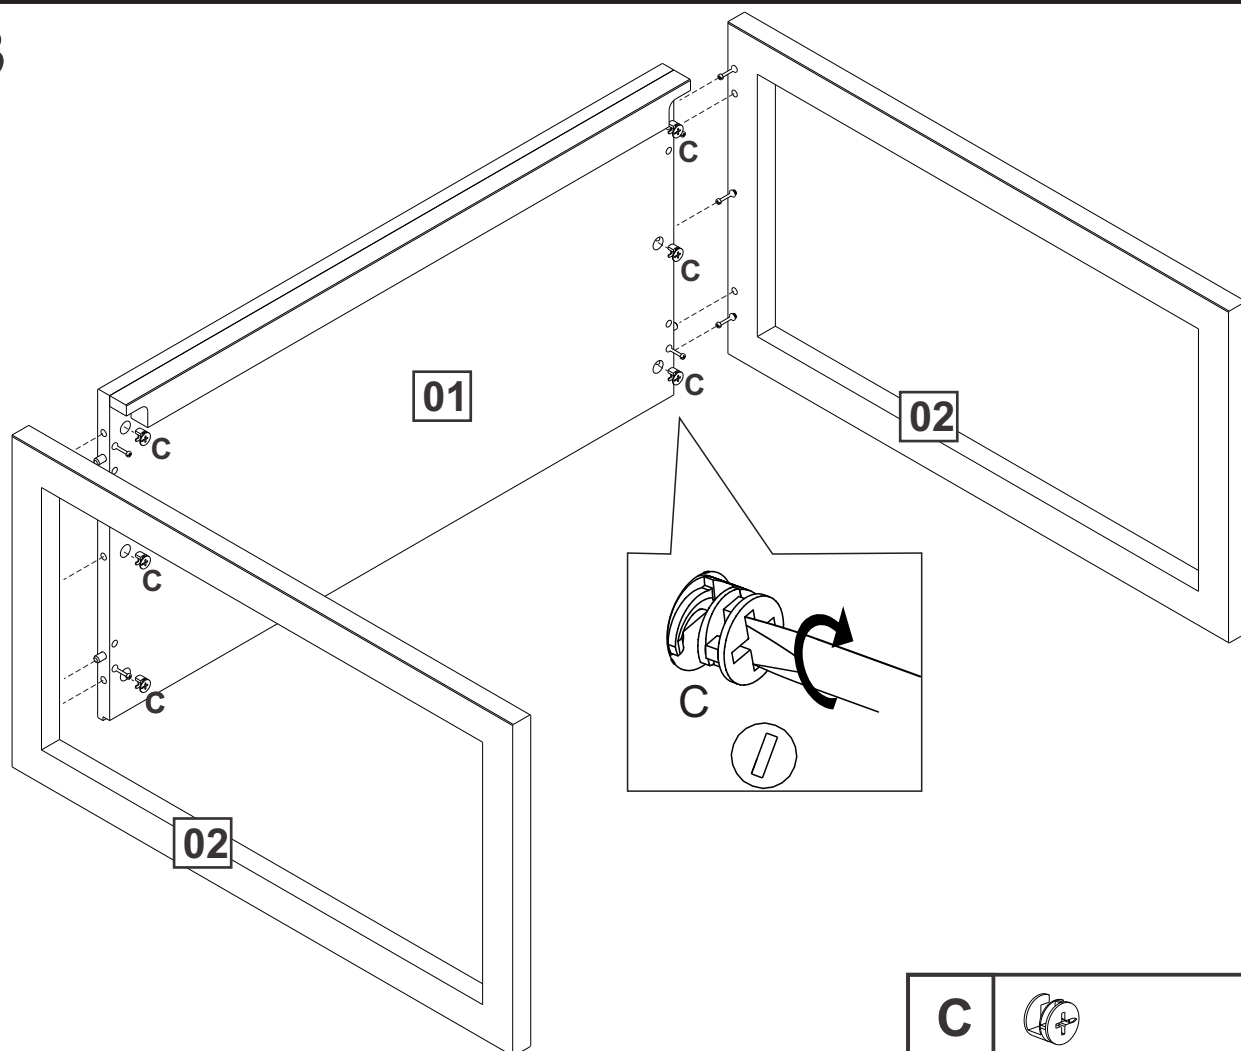


C



06

04

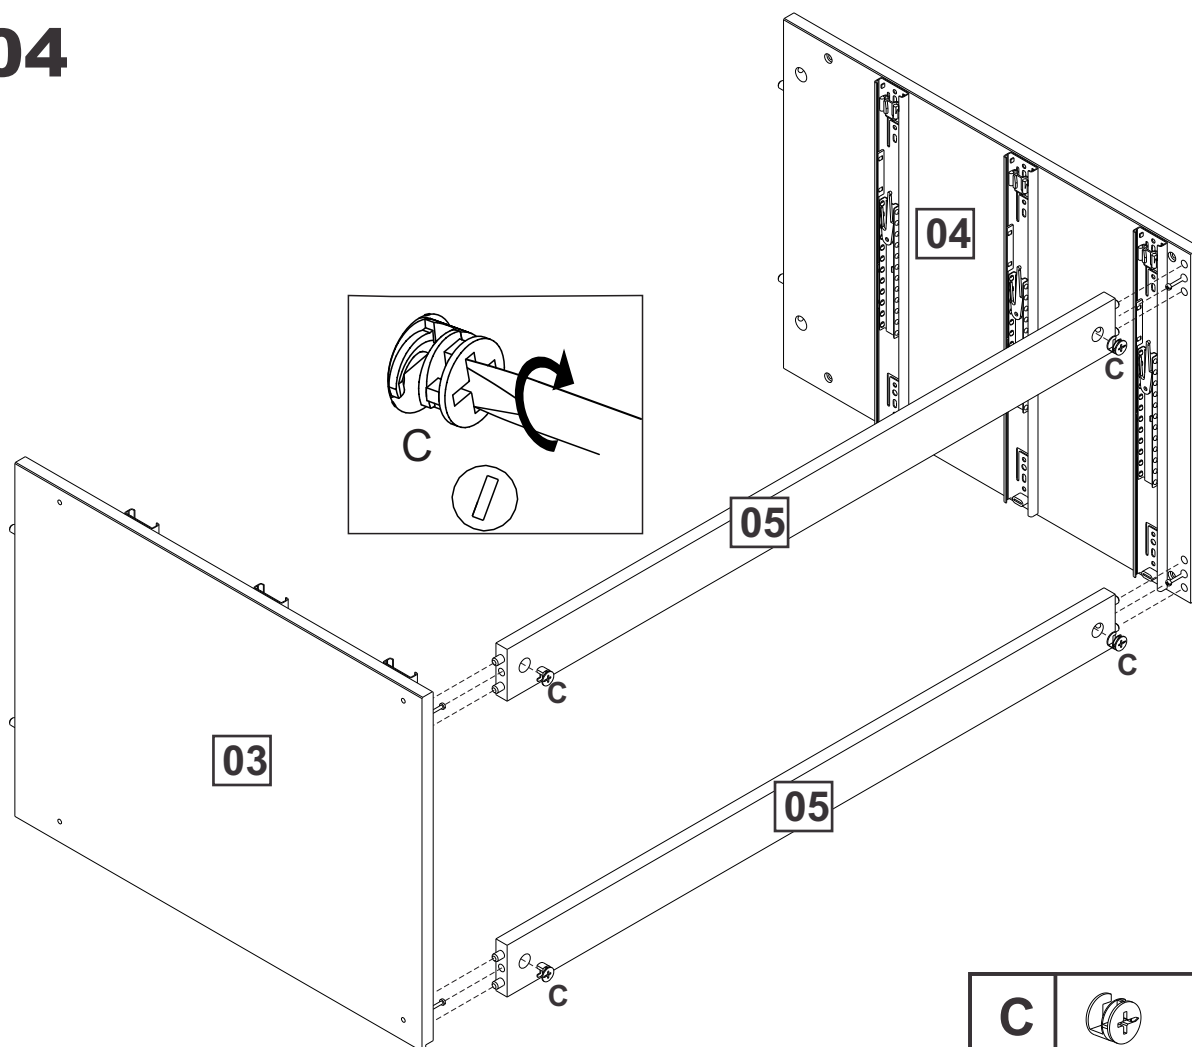


C




04


05

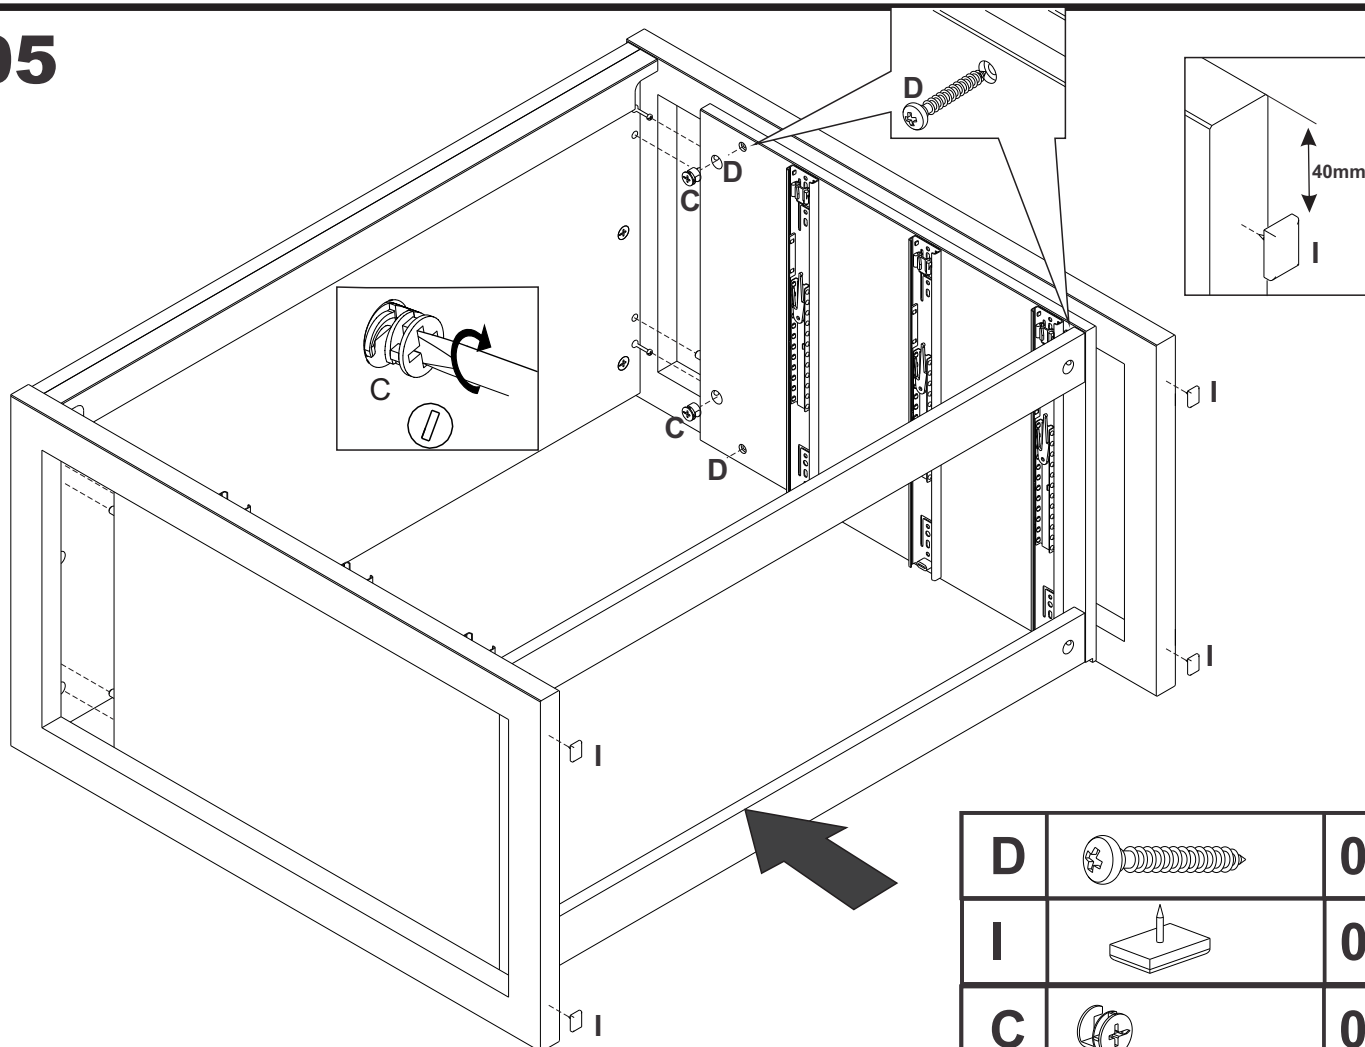





06

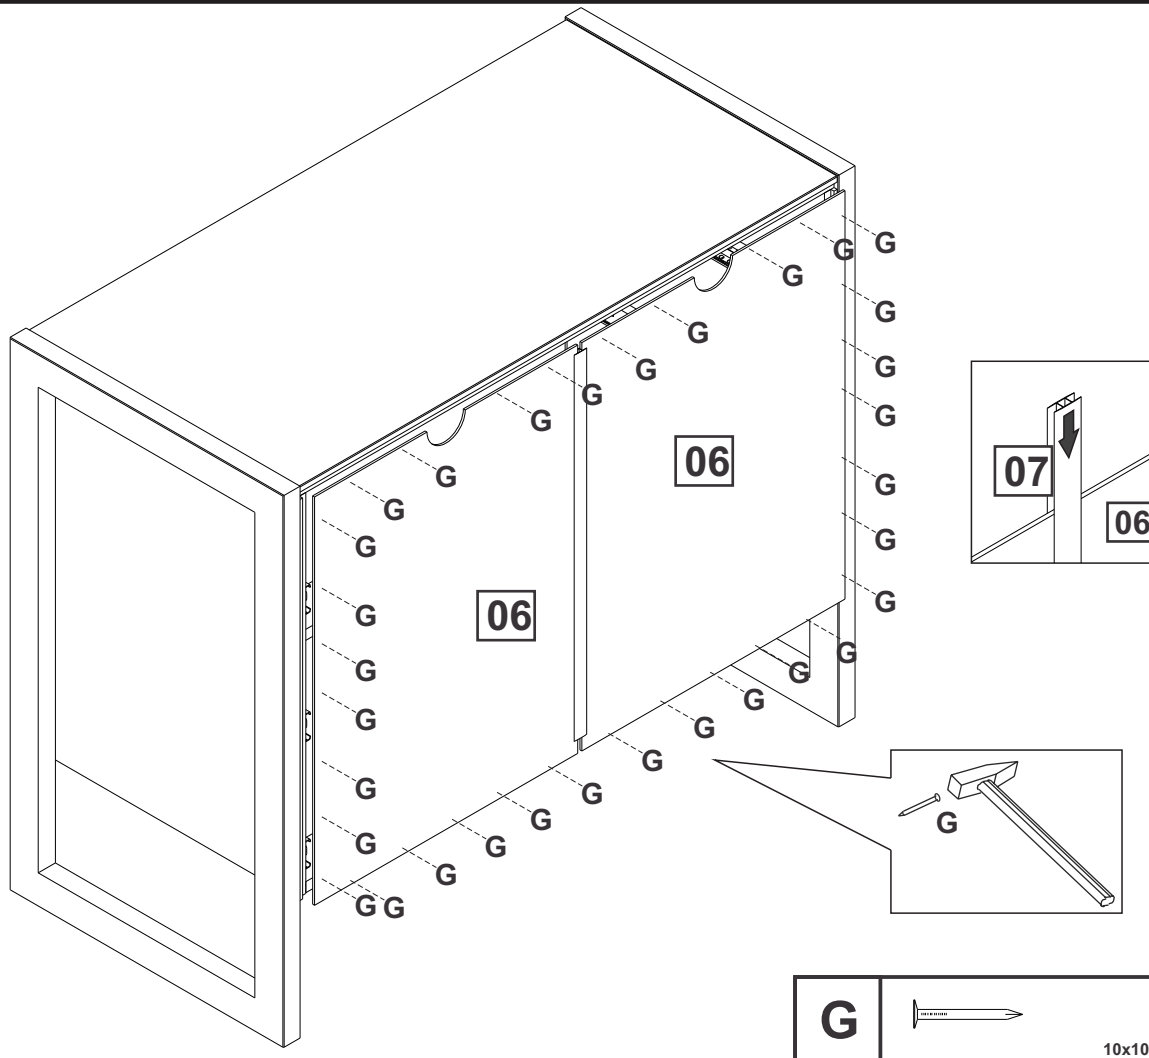



07

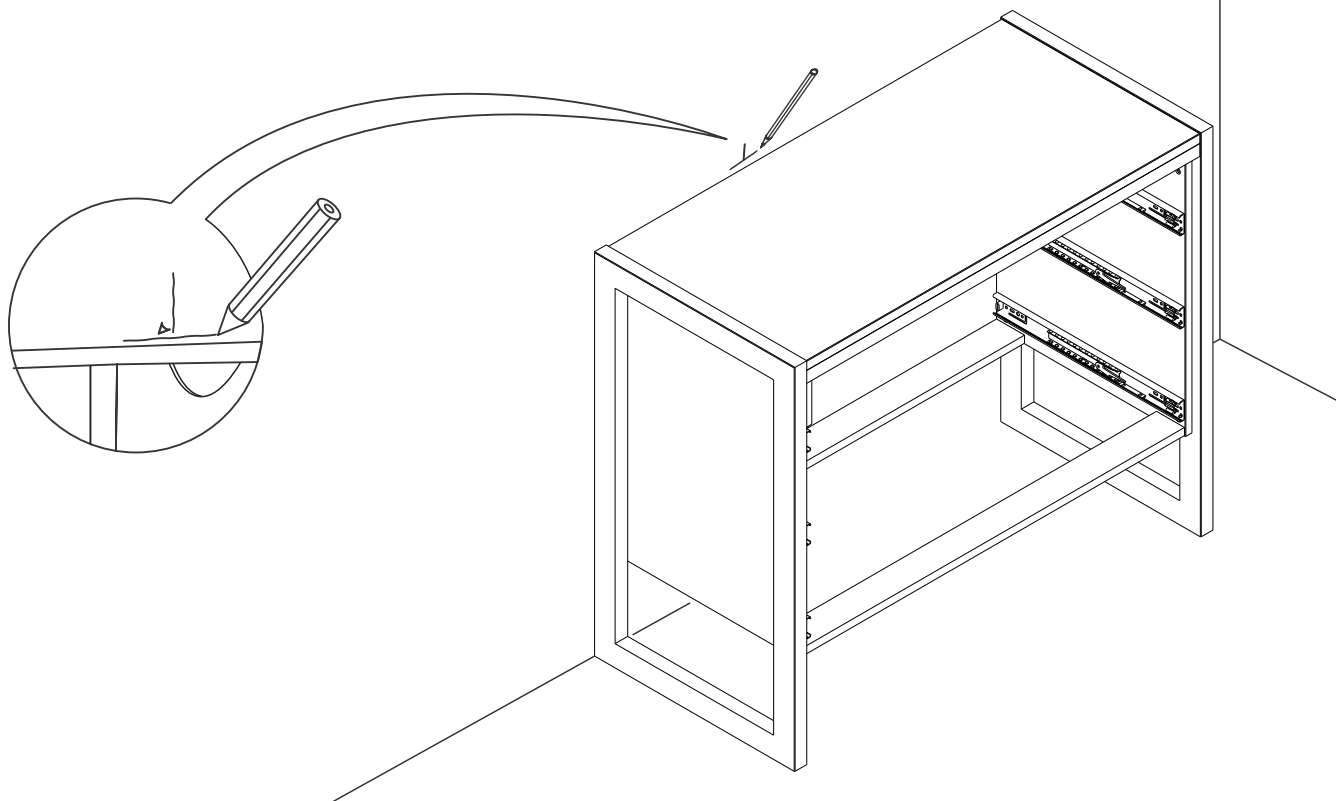



08

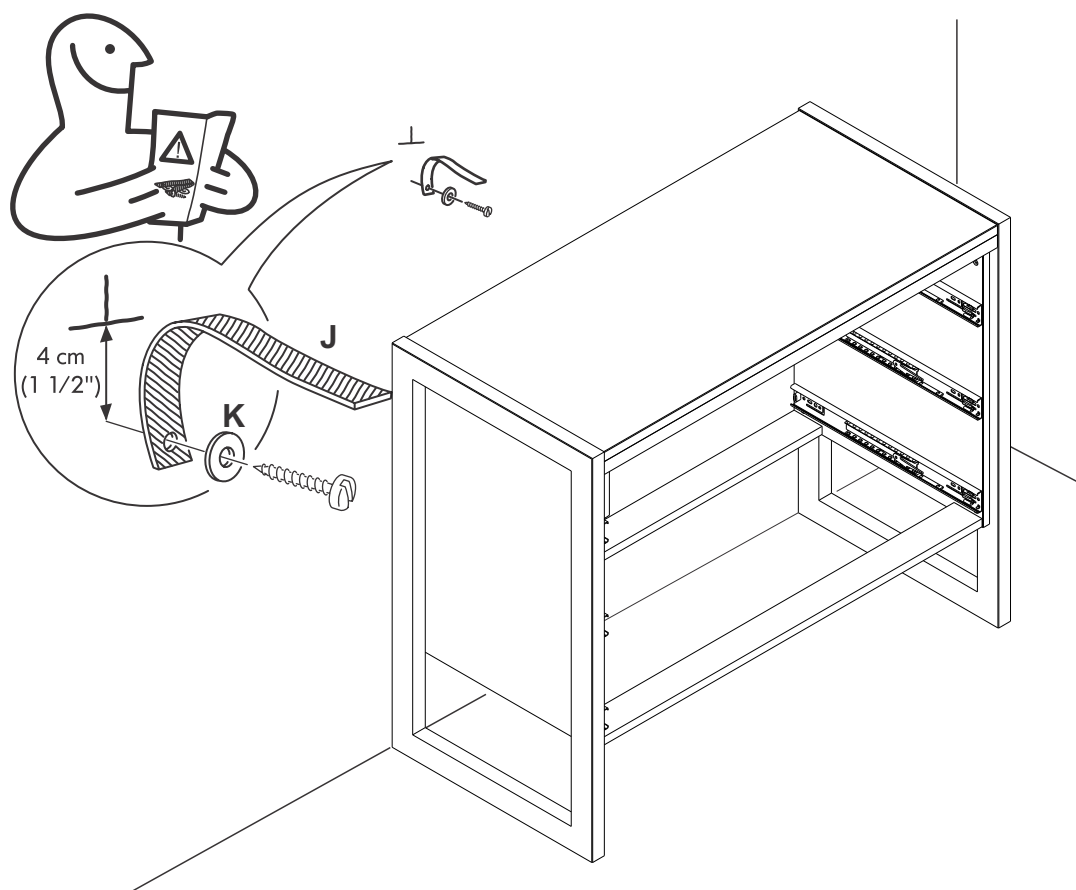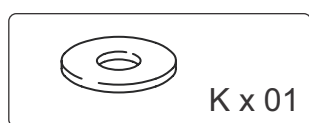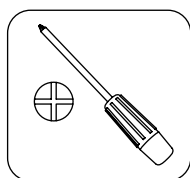



09





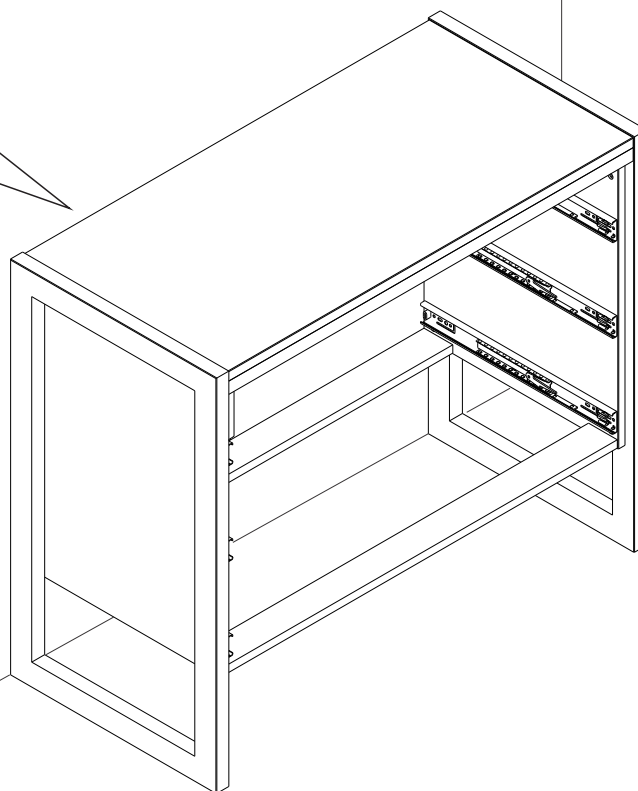
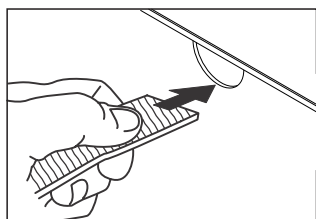


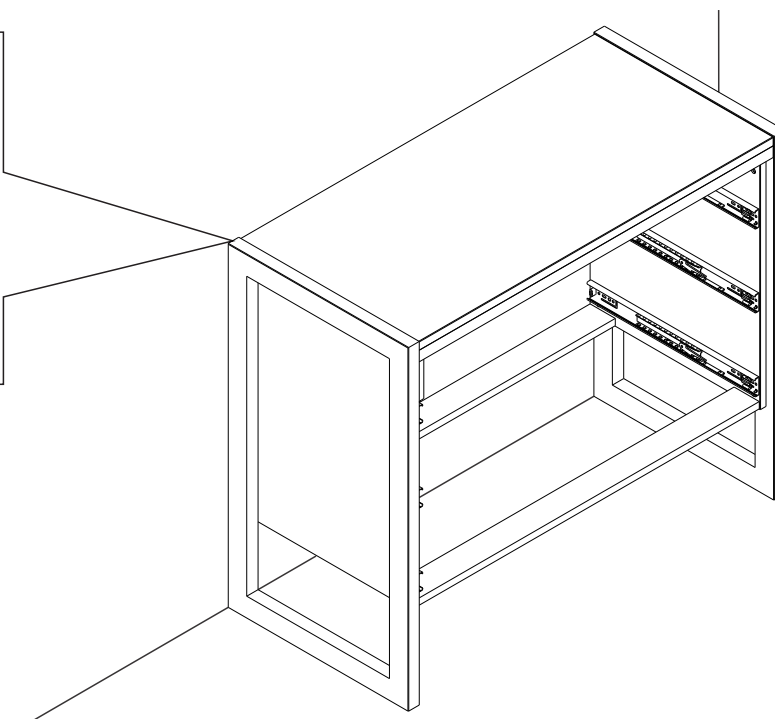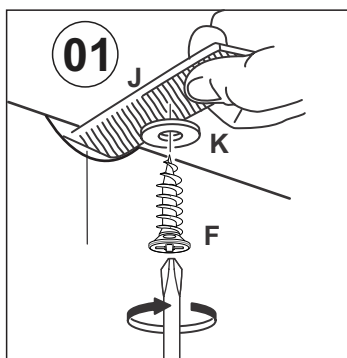



10



F		01
K		01

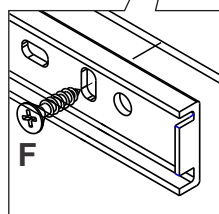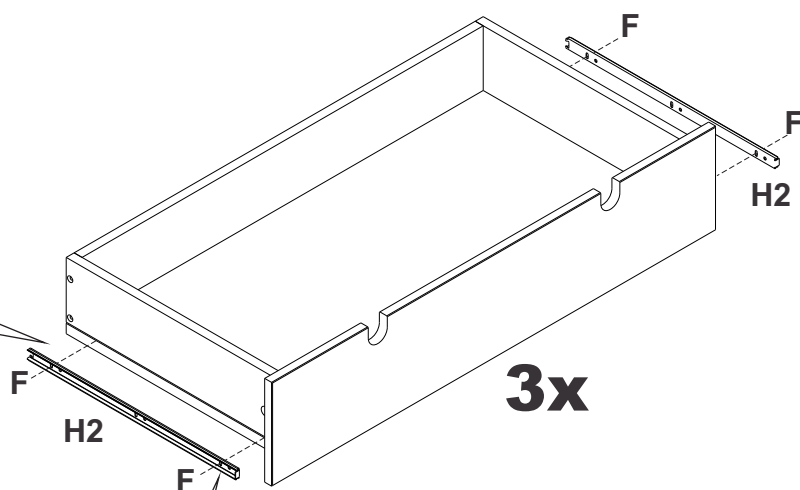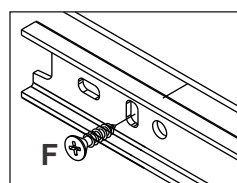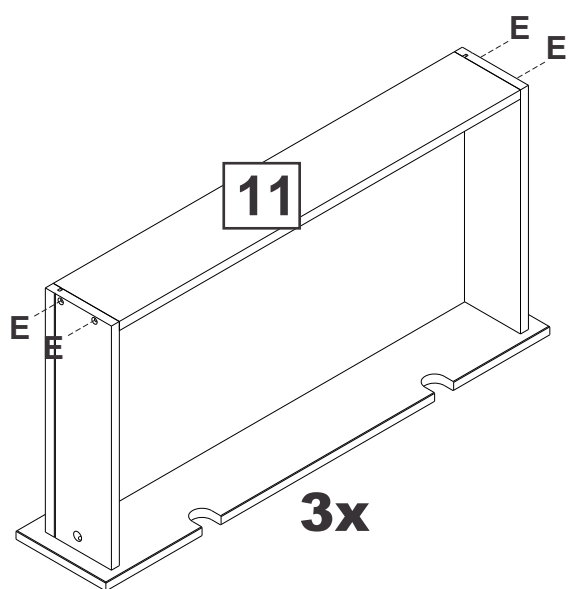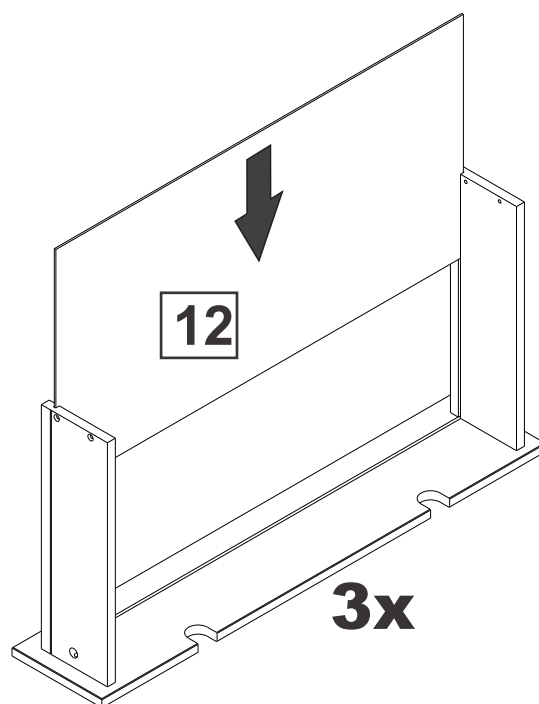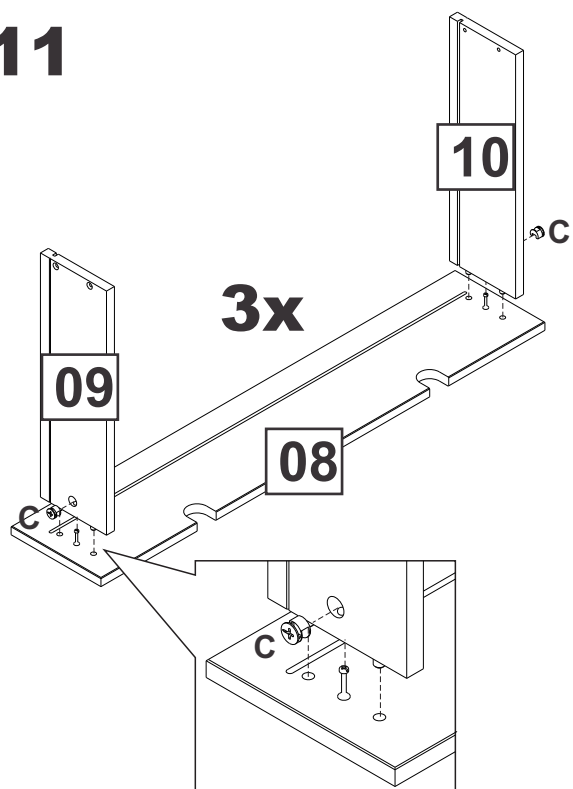11



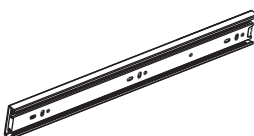C		06
E	 3,5x30	12
F	 3,5x14	12
H	 350mm	03

