














ACESSÓRIOS | ACCESSORIES | ACCESORIOS | LISTE D'ACCESSOIRES

A x14  CAVILHA MADEIRA 6x30	B x33  PARAFUSO 4,5x50 CC	C x84  PARAFUSO 3,5x12 CF	D x06  PARAFUSO 4,5x25 CC	E x08  MINI SAPATA PLASTICA	F x12  SUPPORT ÉTAGÈRE 26	G x12  DOBRADIÇA CANECO 26	H x07  CANTONEIRA PLASTICA 18x18MM	I x46  PREGO 8x8
J x02  SUORTE CABIDEIRO 18MM	K x01  CABIDEIRO C13	L x29  TAPA FURO PVC 18MM	M x03  PUXADOR FILETE 300MM	N x02  PERFIL H PLASTICO 1080 MM	O x02  PERFIL H PLASTICO 920MM	P x01  SUORTE DE CABIDE	Q x02  PARAFUSO 3,5x20 CF	

Início da Montagem | Assembly Start | Inicio del Ensamble | Début du Montage


1º Passo - Preparação das Peças

Pass / Paso / Étape

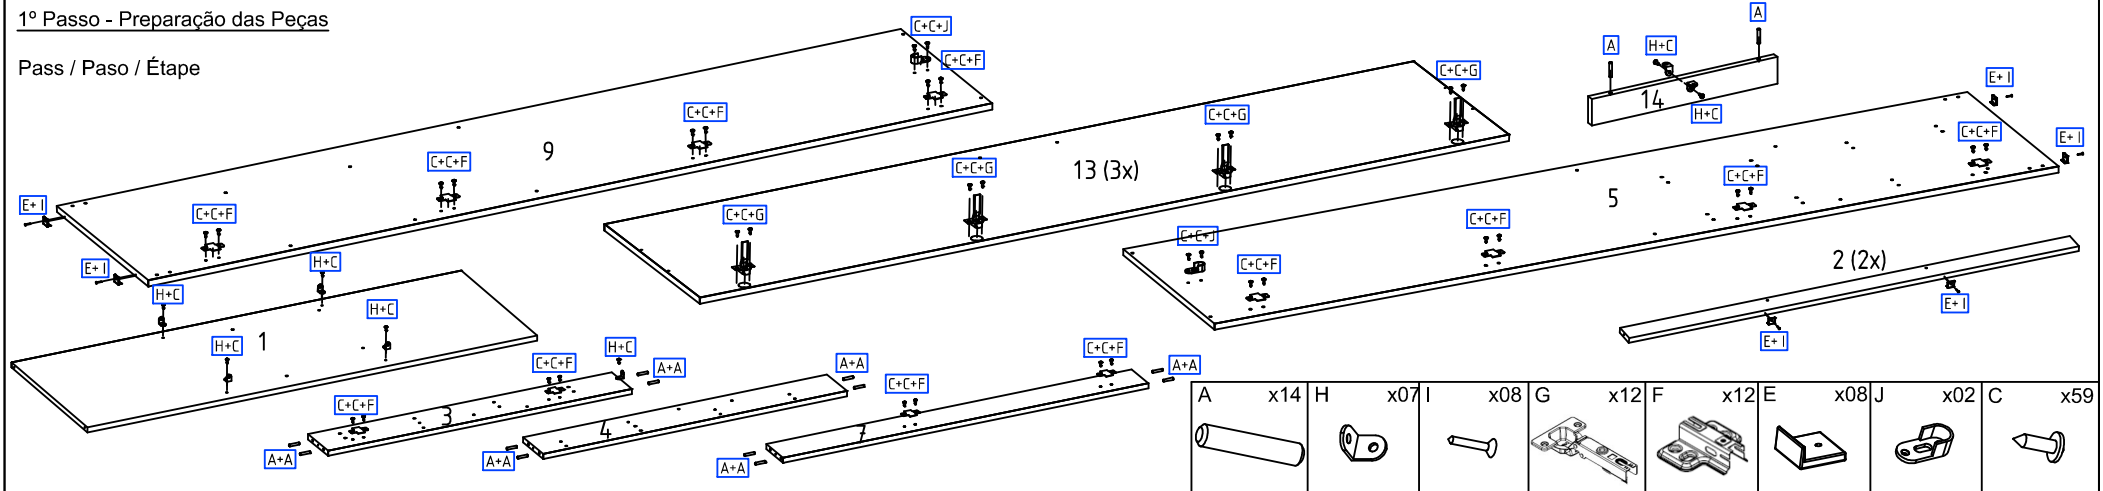


2º Passo

Pass / Paso / Étape

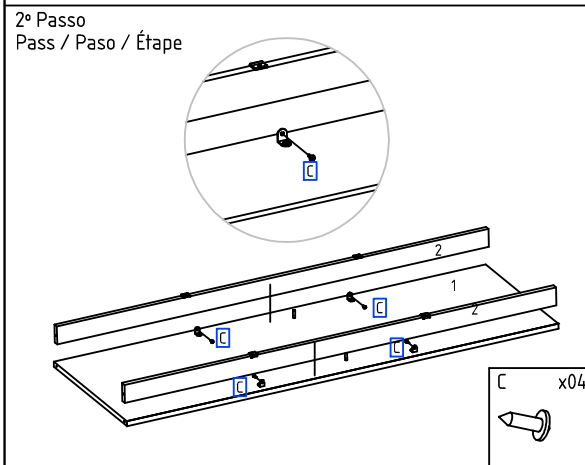


3º Passo

Pass / Paso / Étape

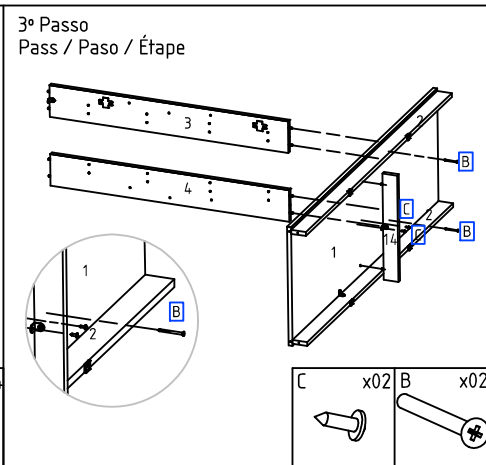


4º Passo

Pass / Paso / Étape

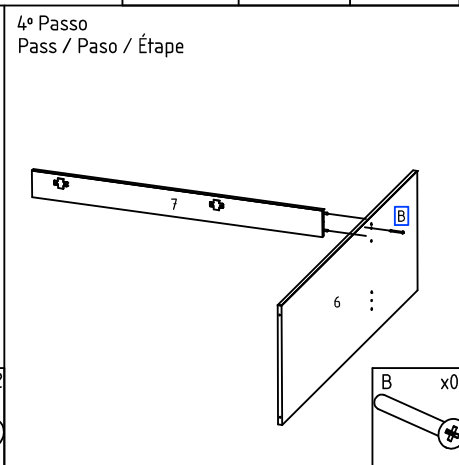


5º Passo

Pass / Paso / Étape

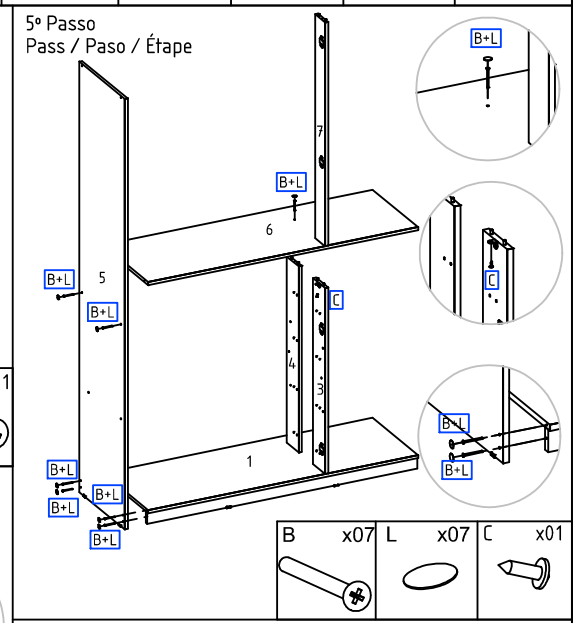


6º Passo

Pass / Paso / Étape

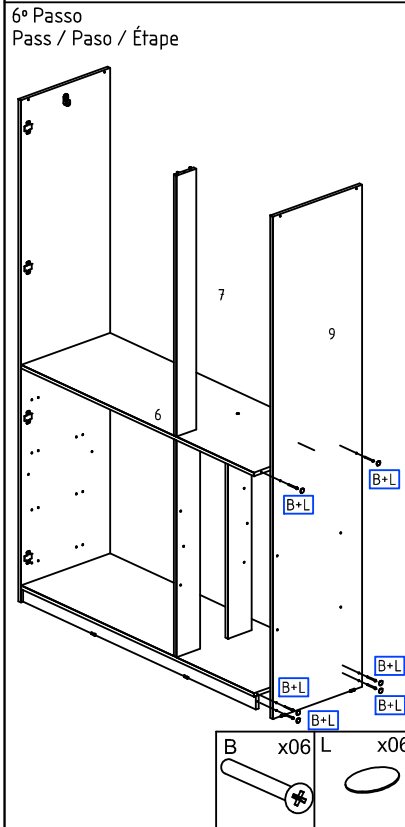


Se comprado com pés de plástico
If purchased with plastic feet
Si se compra con pies de plástico
Si acheté avec des pieds en plastique

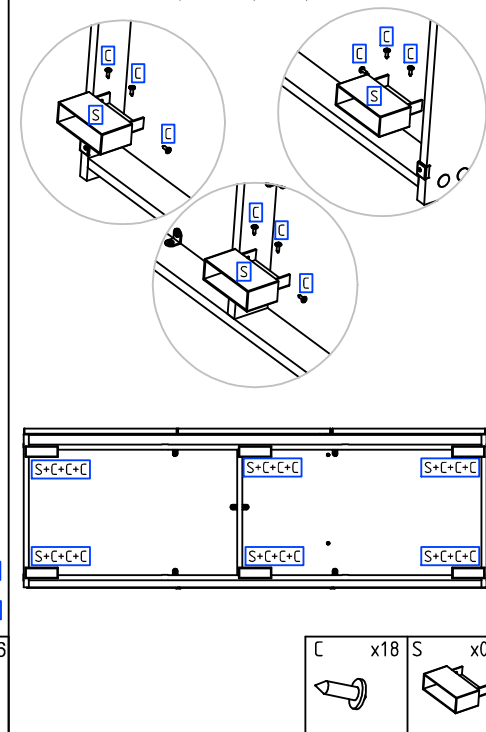


7º Passo

Pass / Paso / Étape

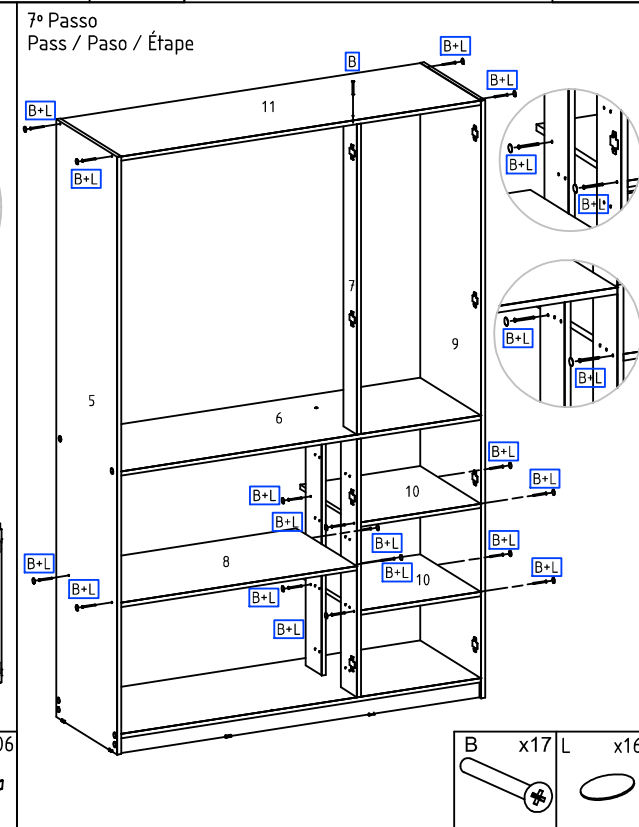


8º Passo

Pass / Paso / Étape

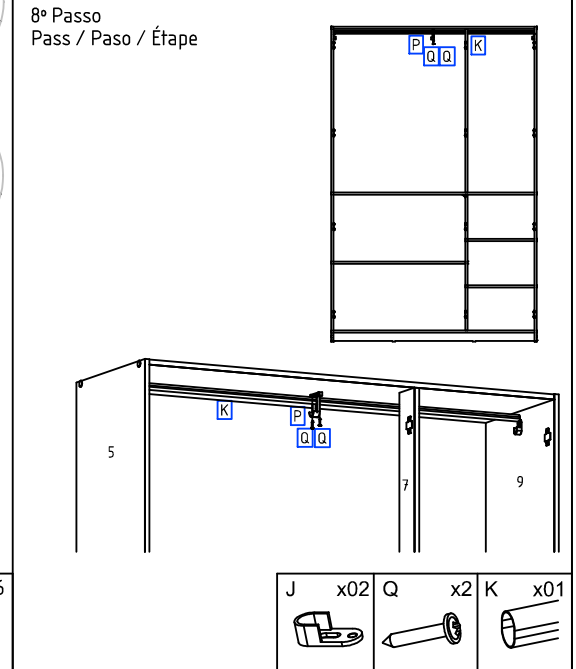


9º Passo

Pass / Paso / Étape

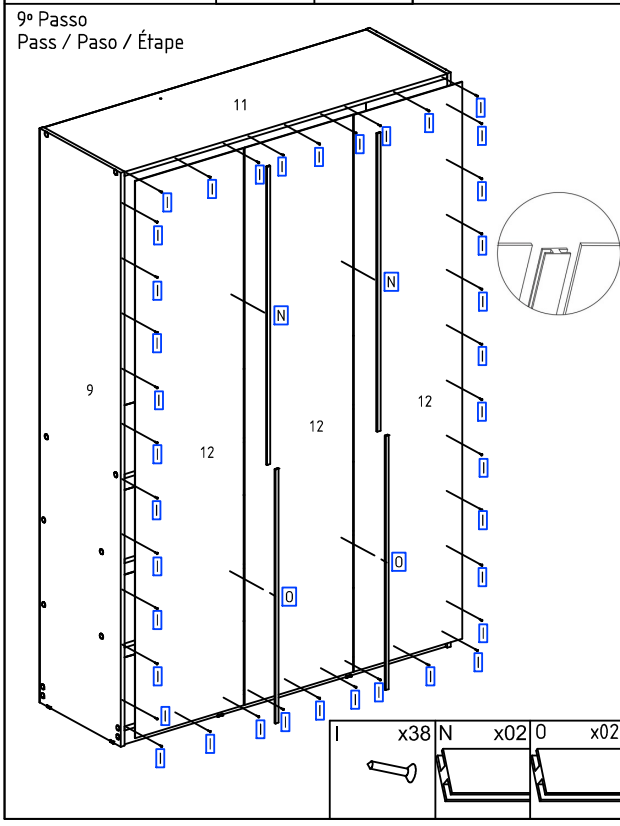

10º Passo

Pass / Paso / Étape

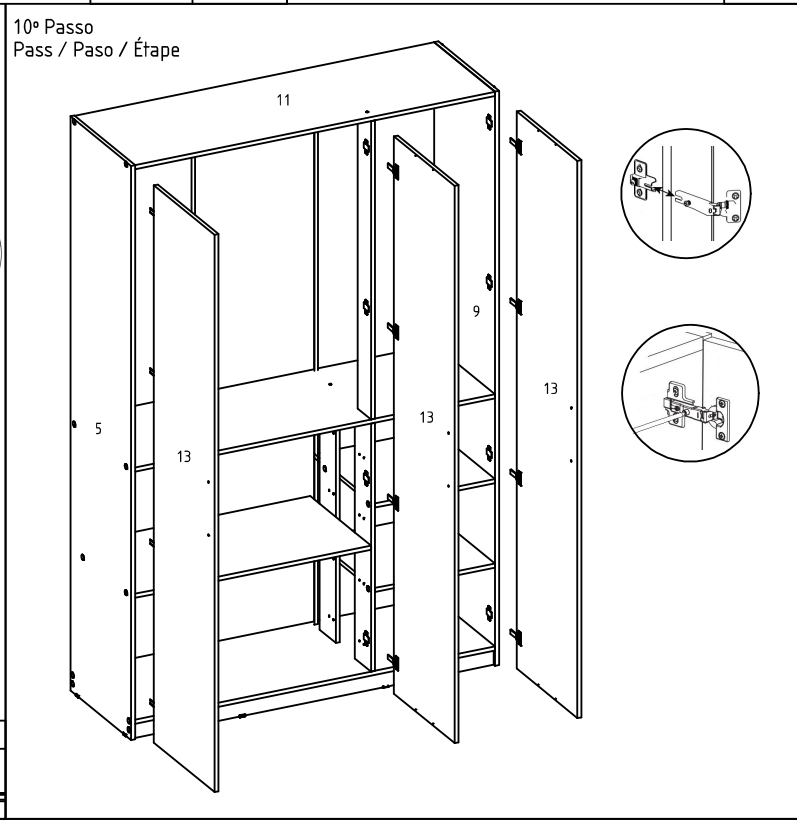

11º Passo

Pass / Paso / Étape

