





# INSTRUÇÃO DE MONTAGEM

Cama Casal 1,60 Ouro

Ref.: 2218



1h

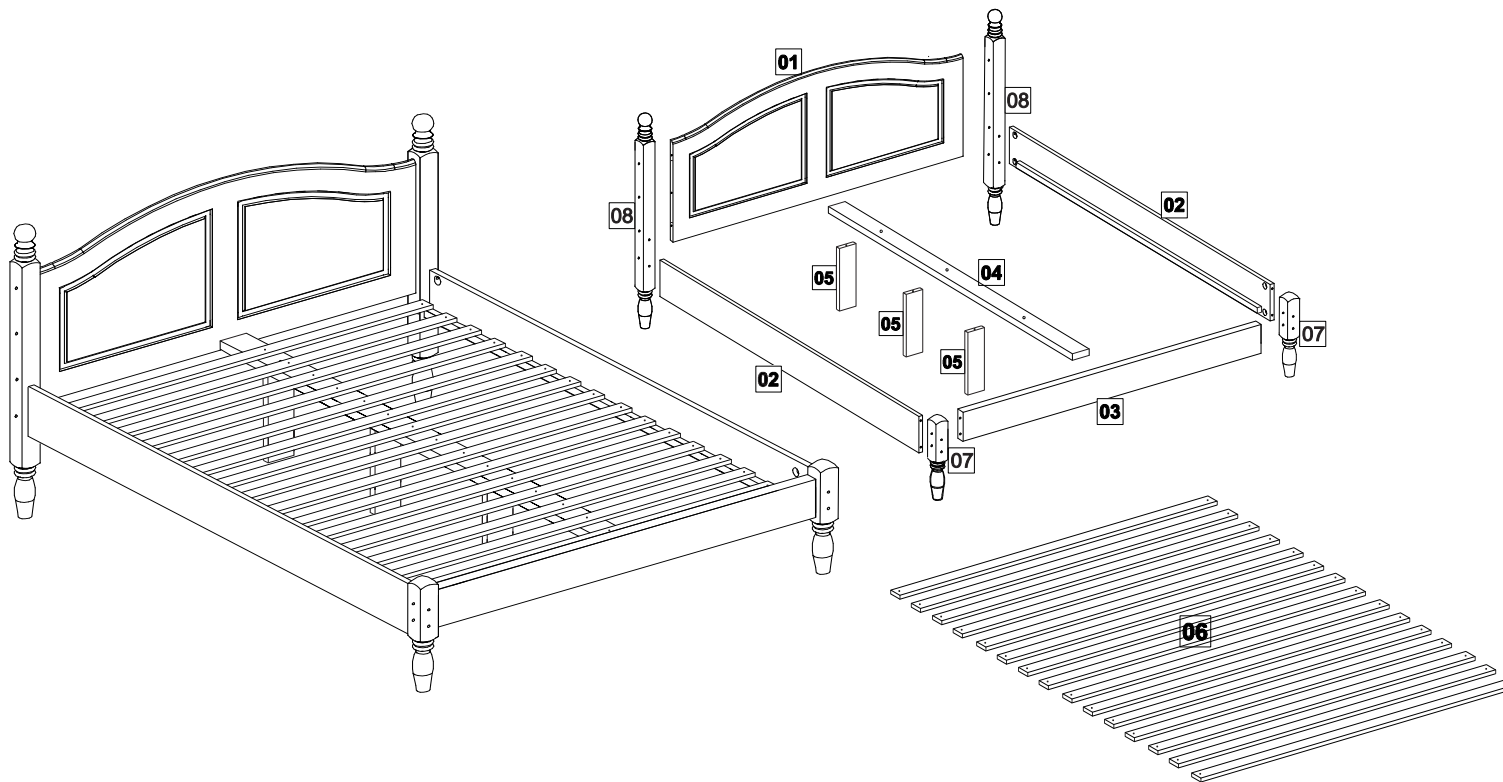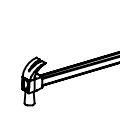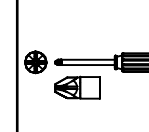


## Lista de peças

QT.


1-CABECEIRA	2218.01W	01
2-BARRA LATERAL	2218.52W	02
3-PESEIRA	1422.01W	01
4-SUPORE DE ESTRADO	2218.55	01
5-PÉ CENTRAL	2216.60	03
6-ESTRADOS	2218.54	15
7-PÉ MENOR	1420.01W	02
8-PÉ MAIOR	1400.17W	02

A




1/4 x 130 x 08

B




x08

C




x01

D



7 x 50 x03

E




4 x 40 x06

F



x01

G




7 x 120 x16

H



x20

I



3.5 x 20 x03

J




4.0 x 30 x45

L




x01

M




1/4 x 35 x01


01

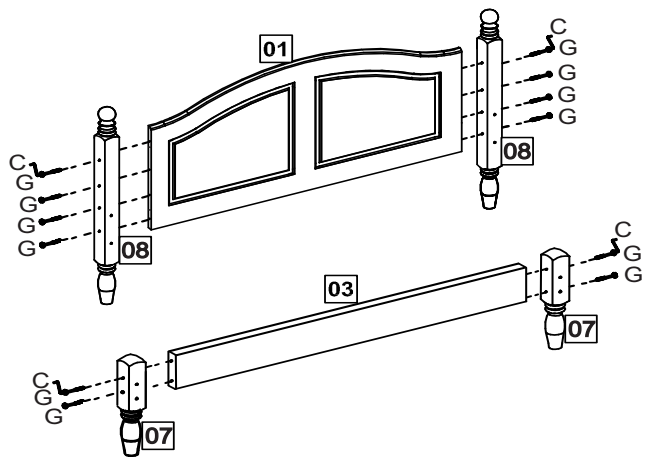


02

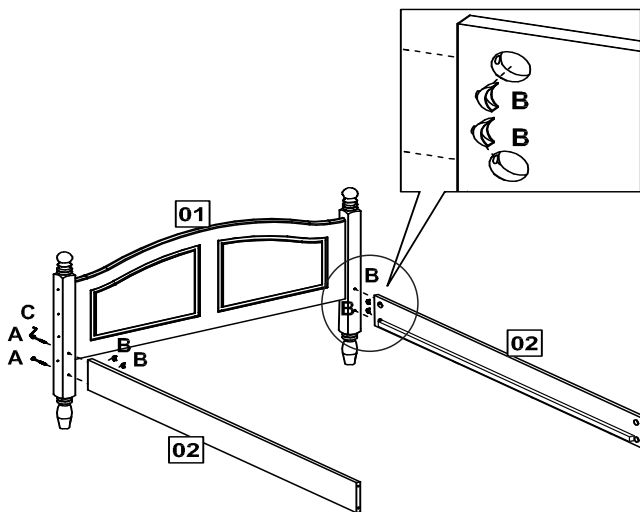



03

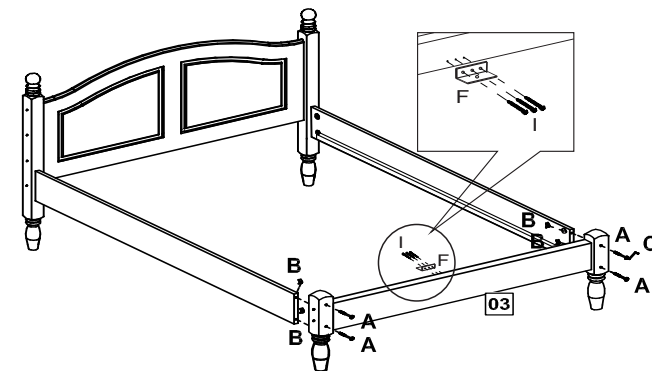

04

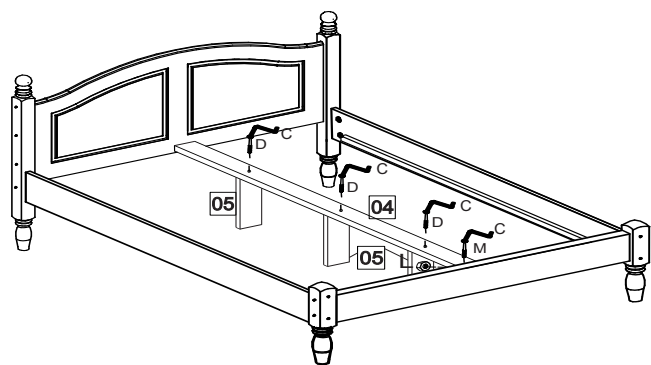

05

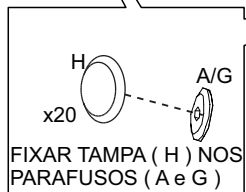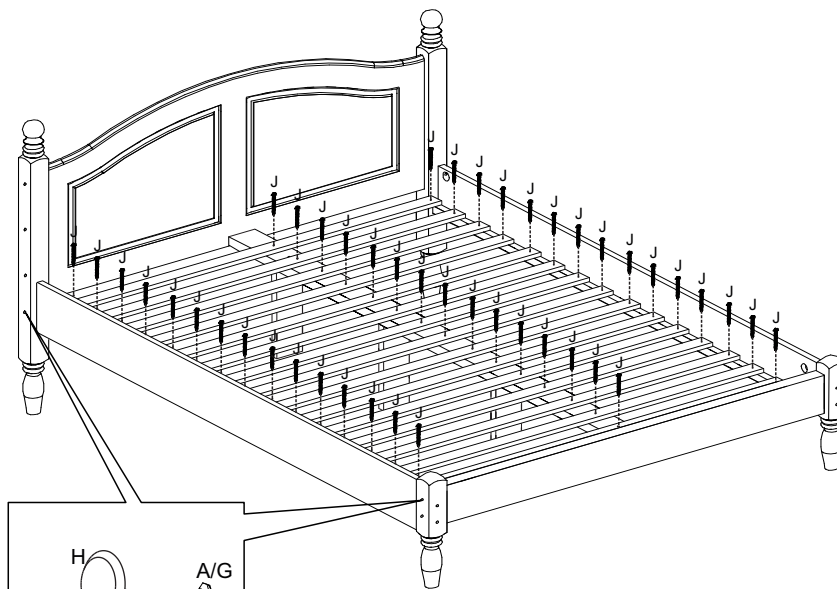

FIXAR TAMPA ( H ) NOS  
PARAFUSOS ( A e G )