








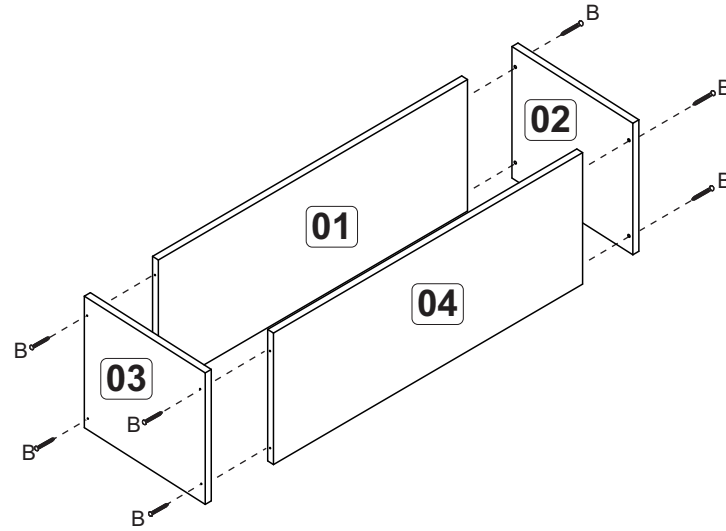
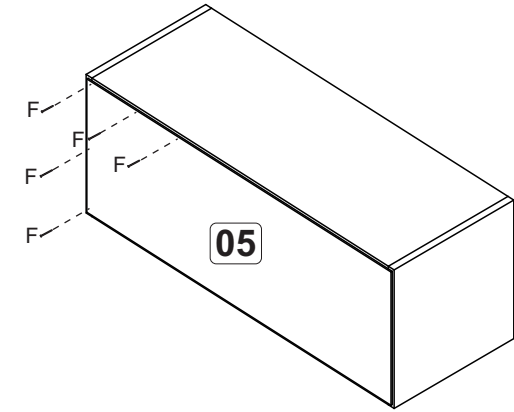



B		08
C		20
D		02
E		02
F		20
G		04
H		02
J		02
K		04



1


















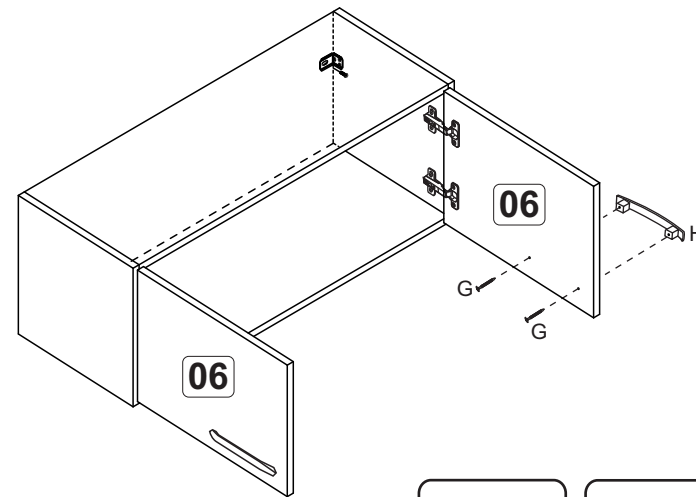



2

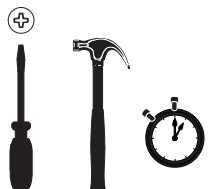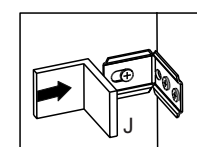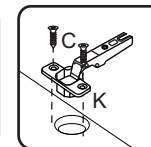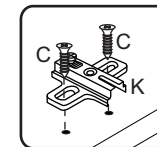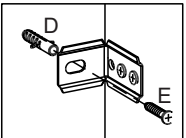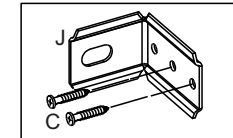


3


Fixação na parede




A		6x30	02
B		4,0x40	10
C		Suporte metal com capa	04
D		3,5x14	34
E		5,0x45	04
F		10x10	40
G		Cantoneira metálica 22x22	01
H		3,5x25	06
J		Dobradiça com calço	06
K		Bucha 8mm	04
L		160mm - cromado	03
M		Cola	01
N		Suporte prateleira	04

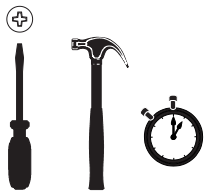


Obs.: Usar cola nas cavilhas (A).

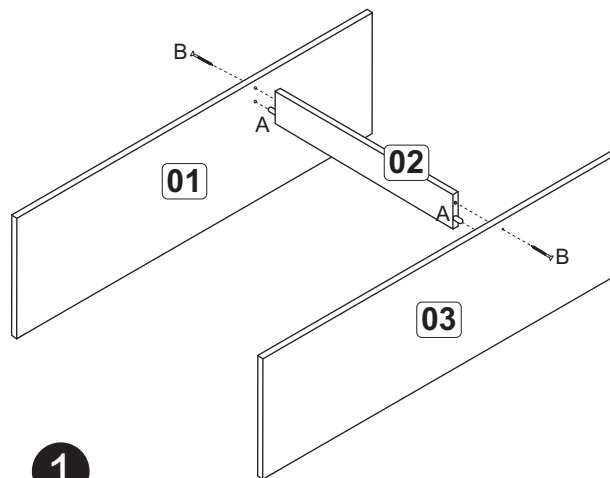

1






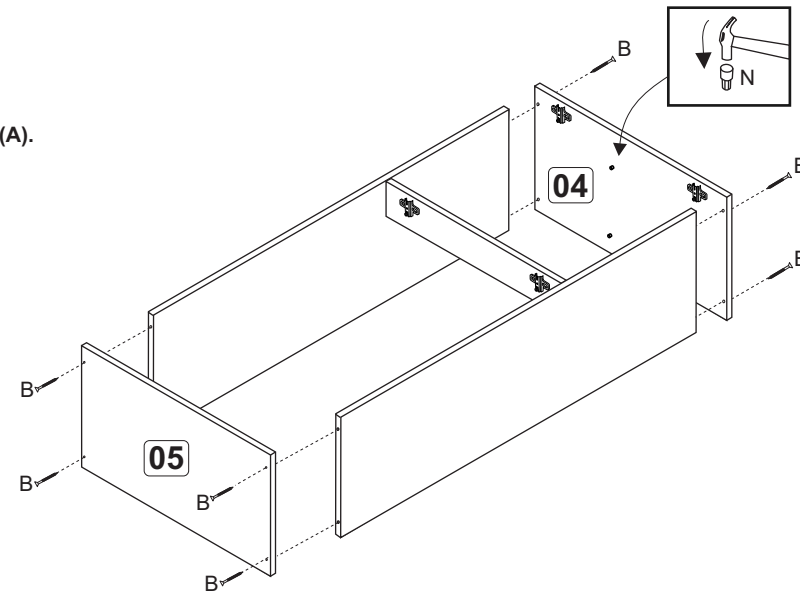


2

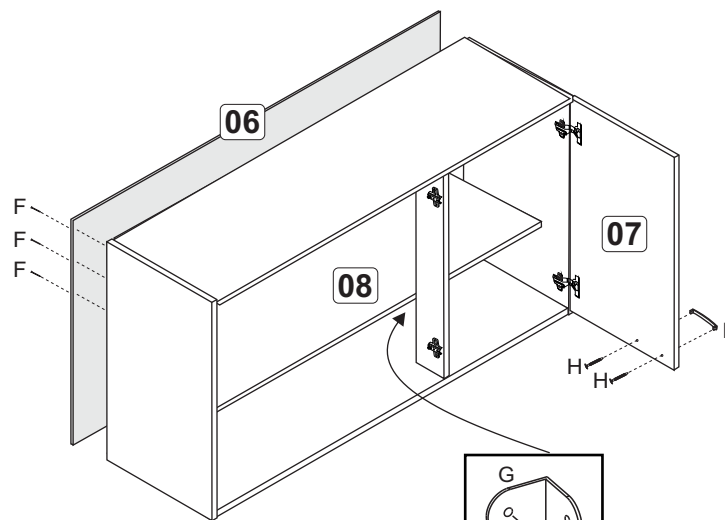



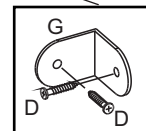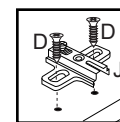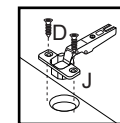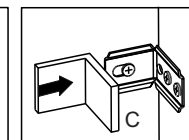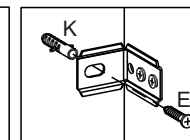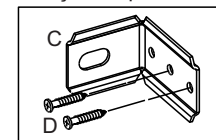











3

Fixação na parede




BA 06 - Balcão com tampo 80cm - Max

A		6x30	04
B		4,0x40	08
C		Cola	01
D		3,5x14	24
E		Pé Cinza	04
F		10x10	40
G		5,0x45	04
H		3,5x25	04
J		Dobradiça com calço	04
K		Suporte de prateleira	04
L		160mm - cromado	02
M		Cantoneira metálica 22x22	05

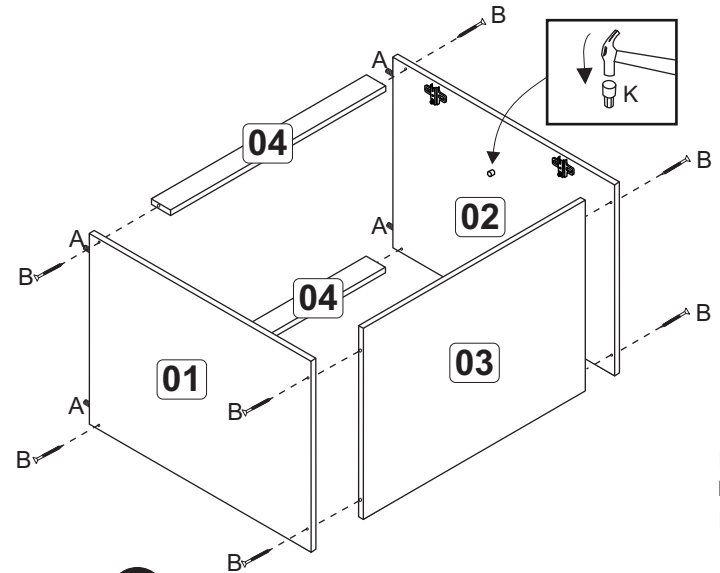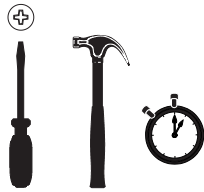


1

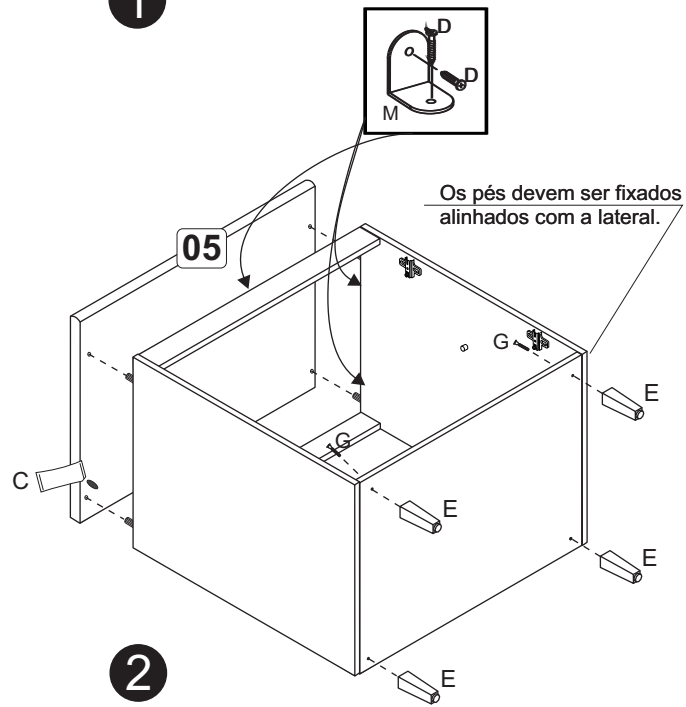




2

Pregar as costas (06) na prateleira (10).

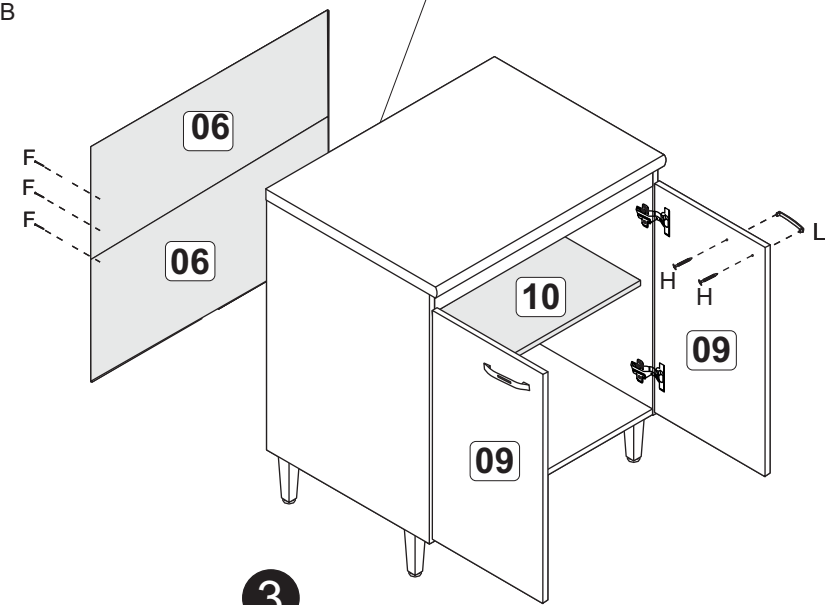

3

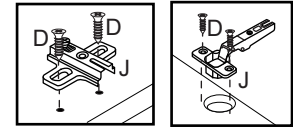

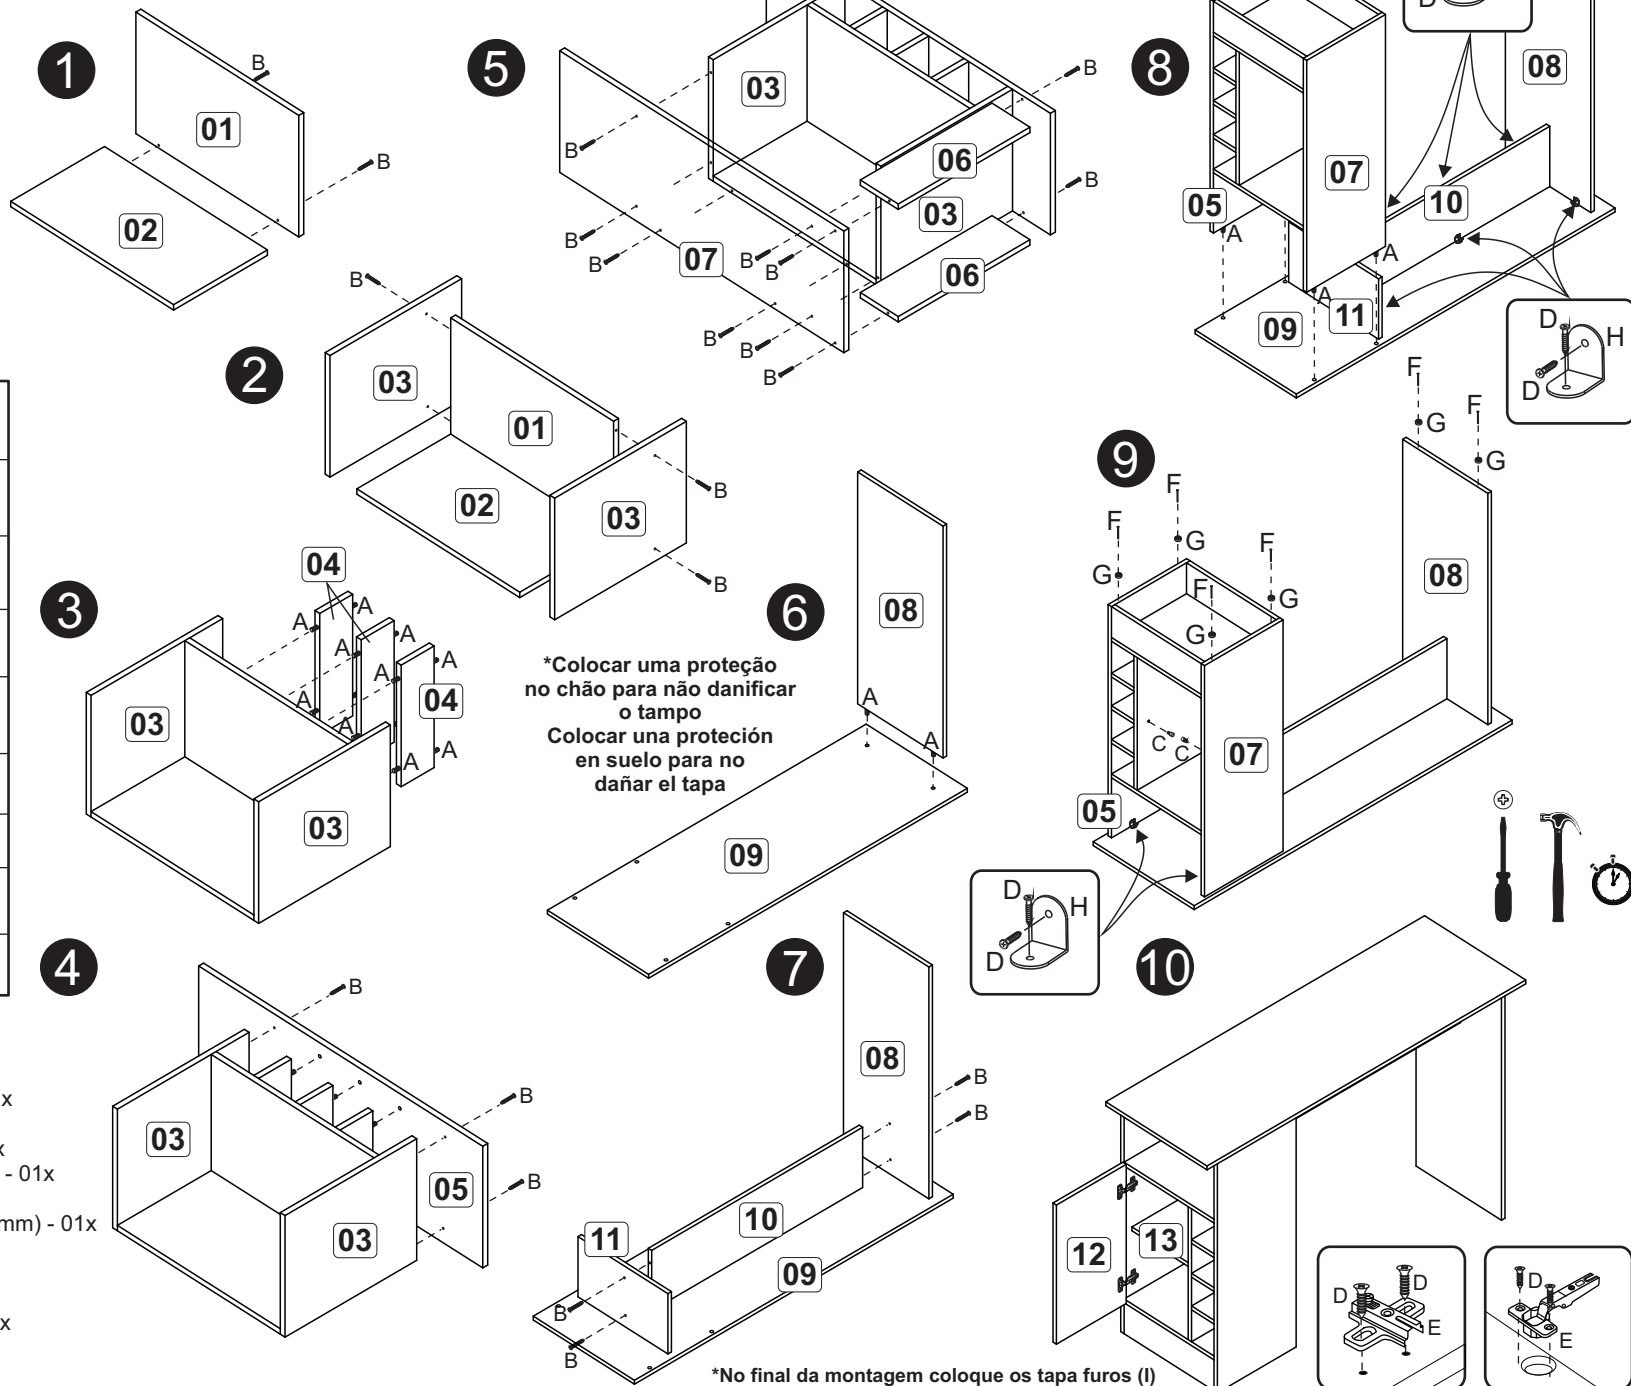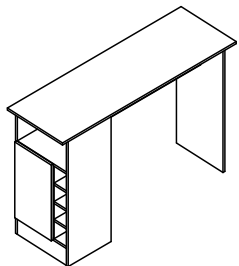















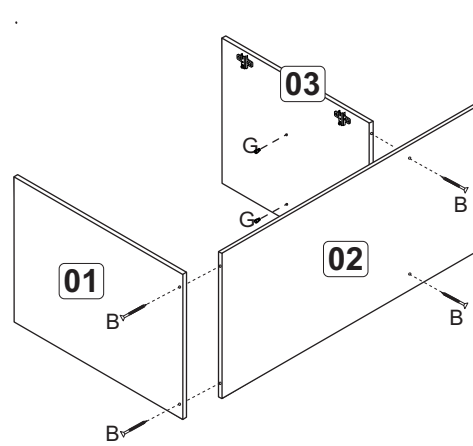
A		18
B		30
C		04
D		24
E		02
F		06
G		06
H		08
I		30

Relação de peças/Lista de piezas


- 01. Divisória/Divisoria (516x336x14mm) - 01x
- 02. Costa painel/Revés panel (516x285x14mm) - 01x
- 03. Base/Base (400x336x15mm) - 02x
- 04. Prateleira fixa/Repisa fija (100x336x15mm) - 03x
- 05. Lateral direita/Lateral derecha (900x336x14mm) - 01x
- 06. Rodapé/Zócalo (400x120x15mm) - 02x
- 07. Lateral esquerda/Lateral izquierda (900x336x14mm) - 01x
- 08. Pé-lateral/Pata-lateral (900x380x14mm) - 01x
- 09. Tampo/Tapa (1360x450x15mm) - 01x
- 10. Saia/Travesaño (900x234x14mm) - 01x
- 11. Costa painel/Revés panel (234x400x14mm) - 01x
- 12. Porta/Puerta (540x298x14mm) - 01x
- 13. Prateleira/Repisa (285x285x15mm) - 01x

*No final da montagem coloque os tapa furos (I)
Al final de montaje coloque los tapa agujeros (I)


A		6x30	04
B		4,0x40	10
C		Cantoneira metalica 22x22	04
D		3,5x14	50
E		5,0x45	05
F		10x10	50
G		Suporte prateleira	04
H		3,5x25	08
J		Dobradiça com calço	06
K		Pé Cinza	05
L		160mm - cromado	04
M		Cola	01
N		350mm	01
O		13x15	04



1

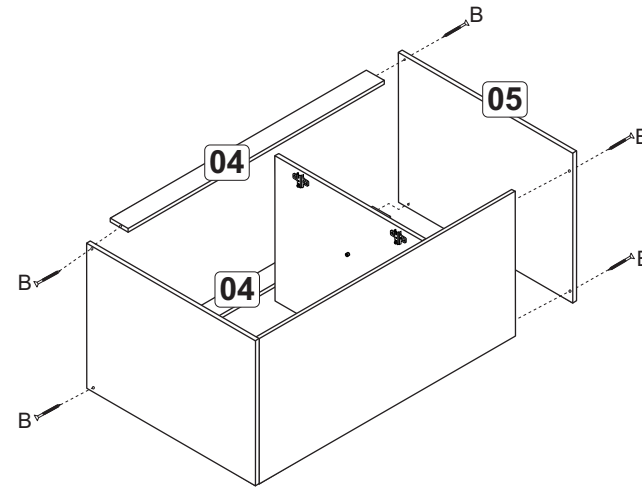


2



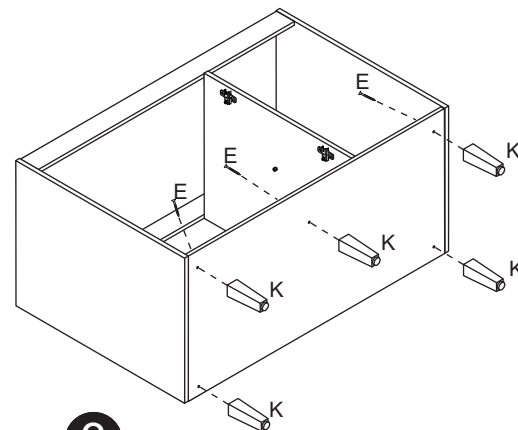


3






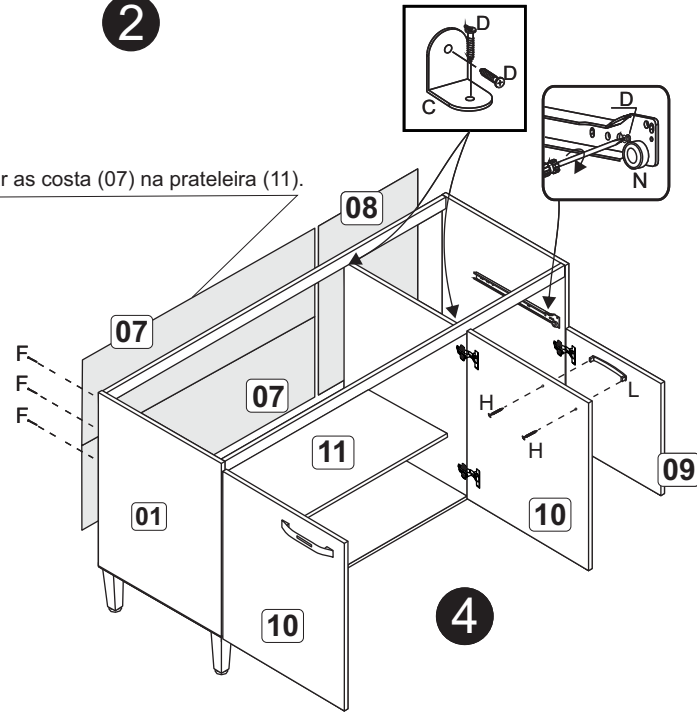





Pregar as costa (07) na prateleira (11).

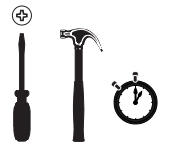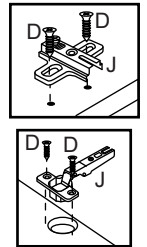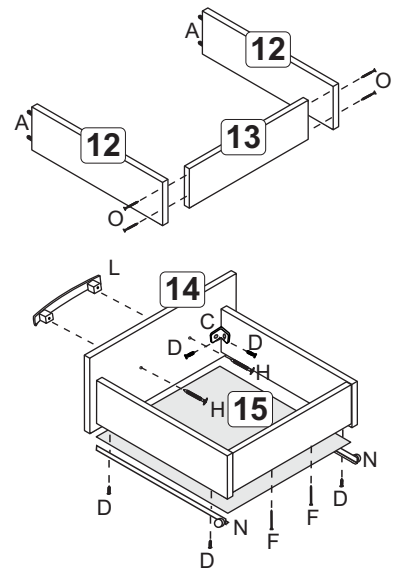


4




KD 21 - Kit duplo - Max


A		6x30	12
B		4,0x40	22
E		5,0 x 45	04
F		10x10	60
G		3,5x14	42
H		3,5x25	08
J		Pé cinza	04
K		Calço/dobradiça	08
L		160mm - cromado	04
M		suporte prateleira	04
O		22x22	05
Q	Cola		01

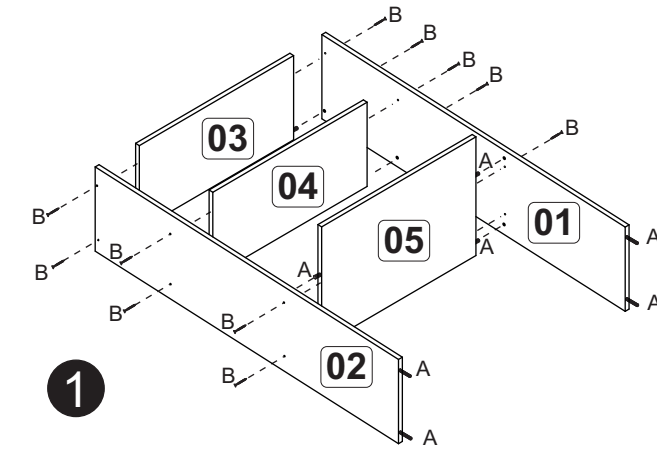


1

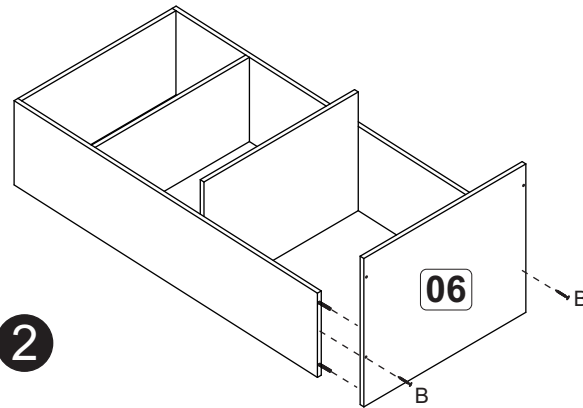


2

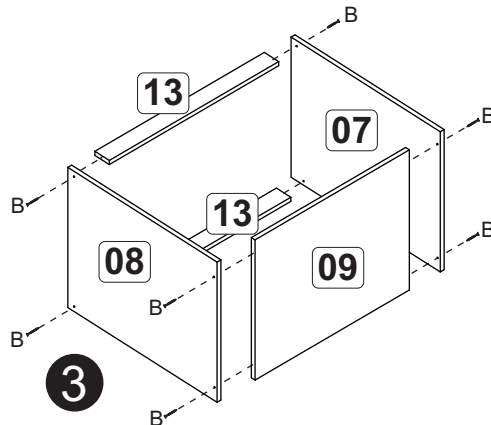


3

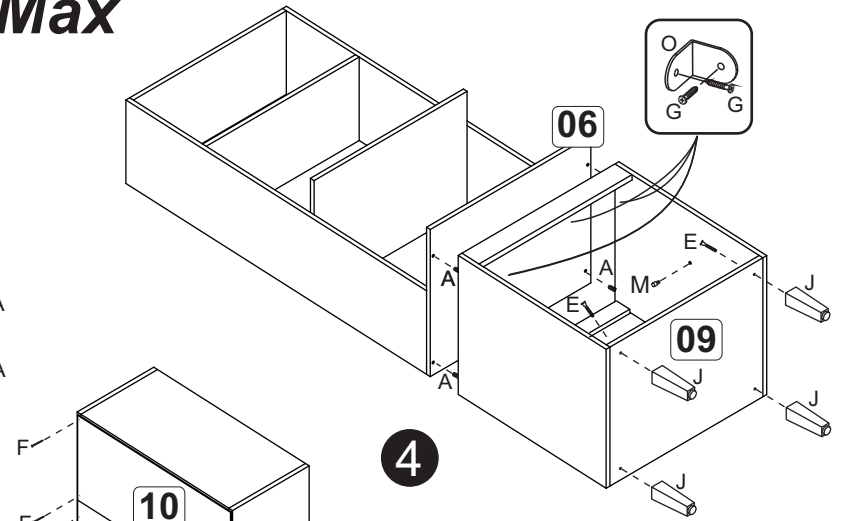

4

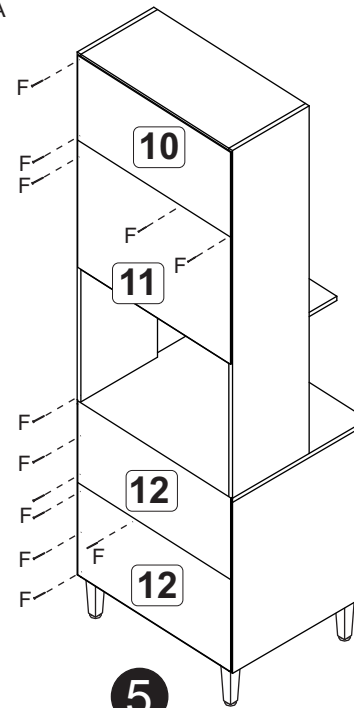

5

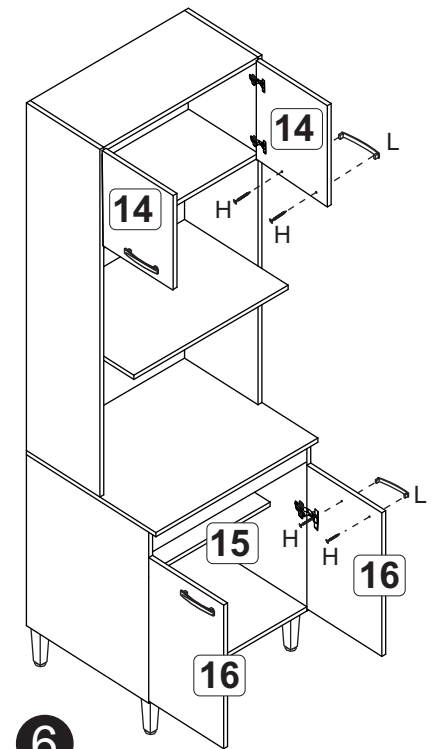

6

