




M01 - Balcão 3P com tampo - Cozinha Madri

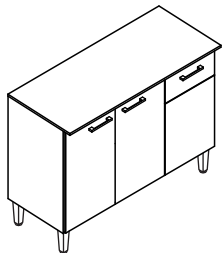


A		6x30	10
B		4,0x40	06
C		350mm	01
D		Suporte de prateleira	04
E		5,0 x 45	05
F		10x10	40
G		3,5x30	08
H		3,5x12	50
J		Pé cinza	05
K		Dobradiça com calço baixo	06
L		Puxador cromado Style 192 mm	03
M		Cantoneira	03
N		Bisnaga de Cola	03
O		13x15	03

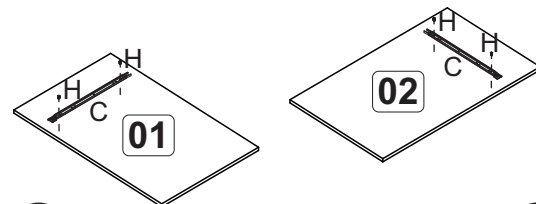


1

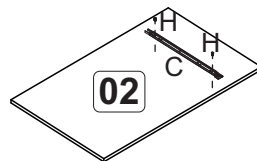


2

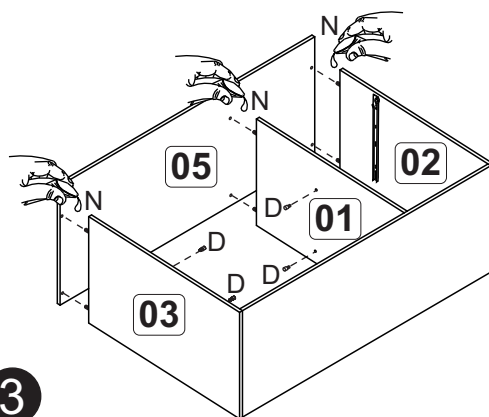



3

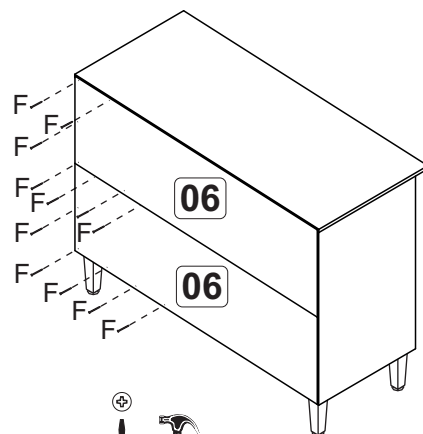



5

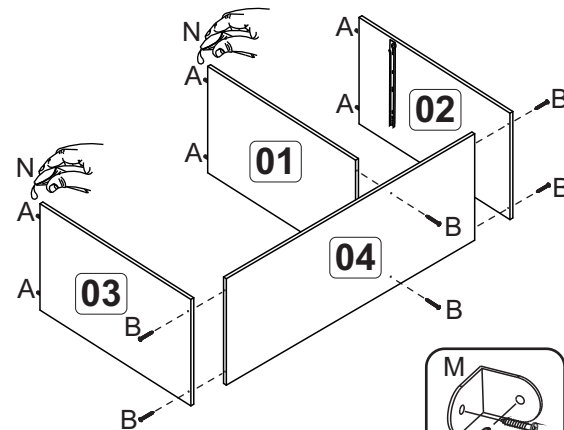







4

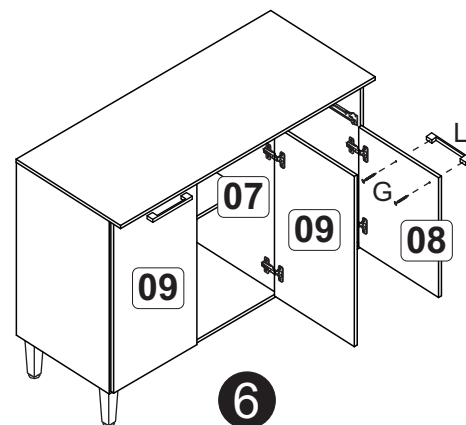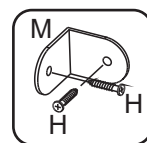




6

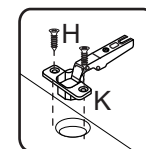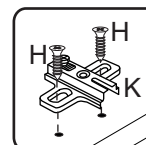




Montagem Gaveta

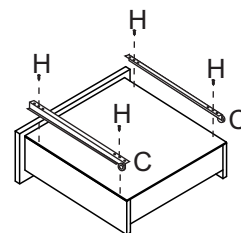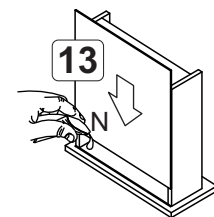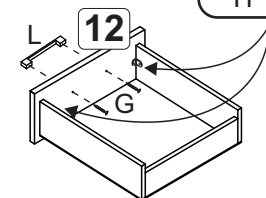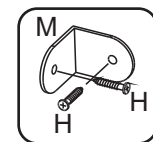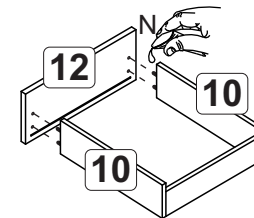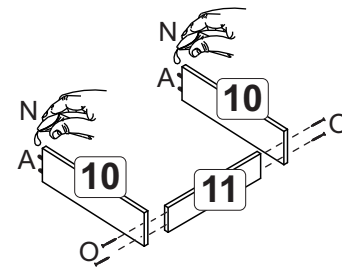

M02 - Aéreo 2P 105cm e Nicho 60cm - Cozinha Madri

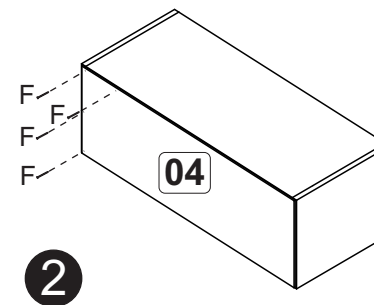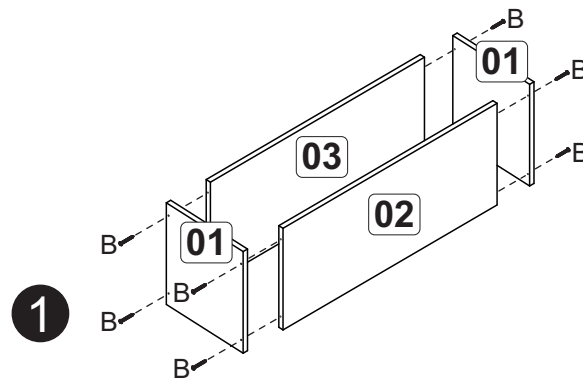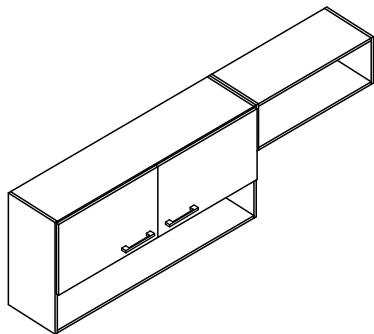

A		3,5x30	04
B		4,0x40	20
C		Suporte aéreo metal com capa	04
D		Puxador cromado Style 192 mm	02
E		5,0 x 45	04
F		10x10	50
G		Bucha 8mm	04
H		3,5x12	24
J		Dobradiça com calço baixo	04

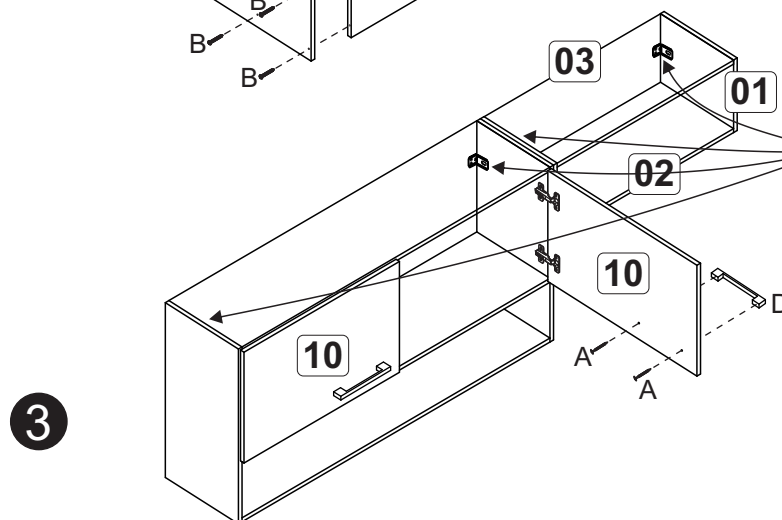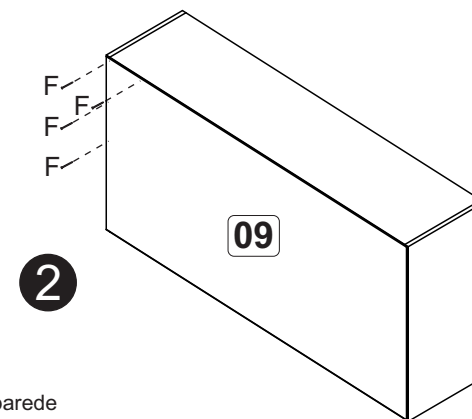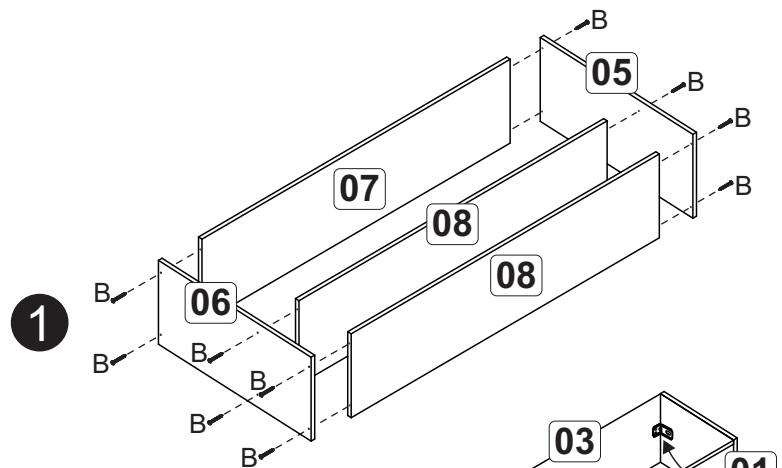

Fixação na parede

