


LA 1200

AÉREO 120

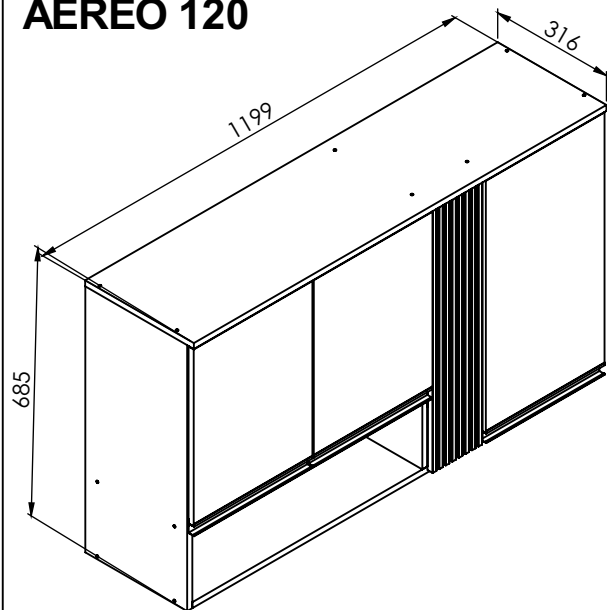

Instruções de montagem

Assembly Instructions / Instrucciones de Montaje




1


REF	DESC	COMP	LARG	ESP	QTD.
LA1200-01	LATERAL DIREITA/LADO DERECHO/RIGHT SIDE	670	296	15	1
LA1200-02	LATERAL ESQUERDA/LADO IZQUIERDO/LEFT SIDE	670	296	15	1
LA1200-03	BASE/BASE/BASE	1168	296	15	1
LA1200-04	CHAPEU/SOMBRERO/HAT	1199	316	15	1
LA1200-05	PRATELEIRA/ESTANTE/SHELF	669	296	15	1
LA1200-06	PILASTRA/PILLAR/PILAR	654	60	15	1
LA1200-08	PRATELEIRA/ESTANTE/SHELF	483	235	15	1
LA1200-09	DIVISÃO/DIVISIÓN/DIVISION	654	296	15	1
LA1200-10	PORTA/PUERTA/DOOR	345	450	15	2
LA1200-11	PORTA/PUERTA/DOOR	345	635	15	1
LA1200-20	COSTA/FONDO/BACK	336	1190	3	2
RIP0001 -	RIPADO/RASGADO/RIPPED	660	150	15	1

LISTA DE FERRAGENS / LISTA DE ACCESORIOS / HARDWARE LIST			LIST
COD	DESCRIÇÃO / DESCRIPCIÓN / DESCRIPTION		QTD
A	CAVILHA Ø6X30 CLAVIJA Ø6X30 WOOD DOWEL Ø6X30		22
B	PARAFUSO CC 3,5X12 REBAIXE TORNILLO CC 4X12 SCREW CC 4X12		58
C	PARAFUSO CC 4X40 TORNILLO CC 4X40 SCREW CC 4X40		20
D	PARAFUSO CC 4X30 TORNILLO CC 4X30 SCREW CC 4X30		04
DB	DOBRADIÇA 35 RETA AMORT BISAGRA HINGE		06
E	CANTONEIRA CORNER ESQUINERO		08
F	PARAFUSO CF 4,5X50 TORNILLO CF 4,5X50 SCREW CF 4,5X50		03
G	SUPORTE FIXAÇÃO SOPORTE DE FIJACIÓN FIXING SUPPORT		03
H	PROTEÇÃO SUP CANTONEIRA PROTECCIÓN ANGLE BRACKET		03
I	BUCHA PLÁSTICA CASQUILLO BUSHING		03
M	PREGO 10X10 CLAVO 10X10 NAIL		55
N	ADESIVO TAPA FURO ADHESIVO STICKER		10
PX	PUXADOR 345 mm TIRADOR HANDLE		03
R	FIXADOR COSTA FIJADOR PARA FONDO BACK SUPPORT		03
V	COLA PEGAMENTO GLUE		01
Y	PERFIL 668 mm PERFIL PROFILE		02

REV.: 00
DATA:26/011/2021

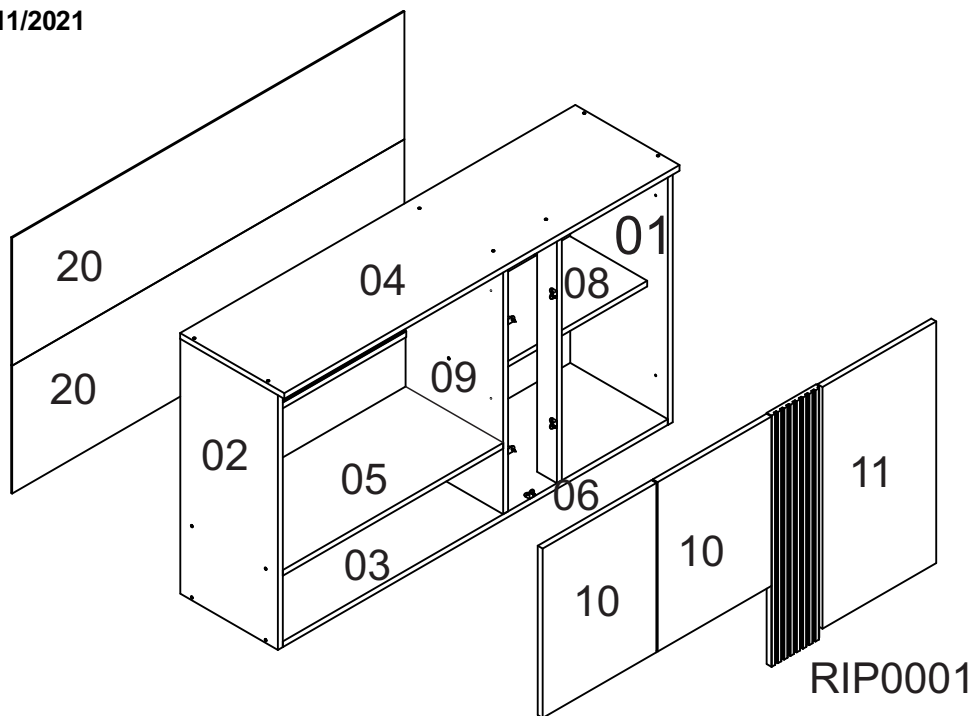

FERRAMENTAS NECESSÁRIAS:
HERRAMIENTAS NECESARIAS:
NECESSARY TOOLS:




**"IMPORTANTE LER COM ATENÇÃO
E GUARDAR PARA EVENTUAIS
CONSULTAS".**

**"IMPORTANTE LEER CON ATENCIÓN Y GUARDAR PARA
EVENTUALES CONSULTAS".**


**"IMPORTANT TO READ CAREFULLY AND SAVE FOR ANY
QUERIES".**

1


LA 1200

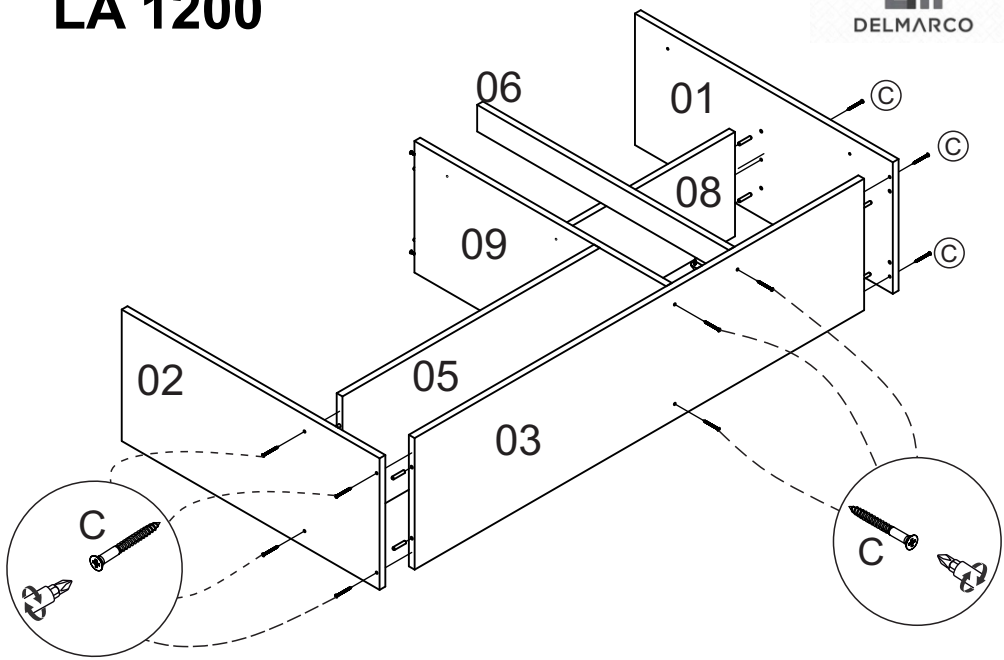


2

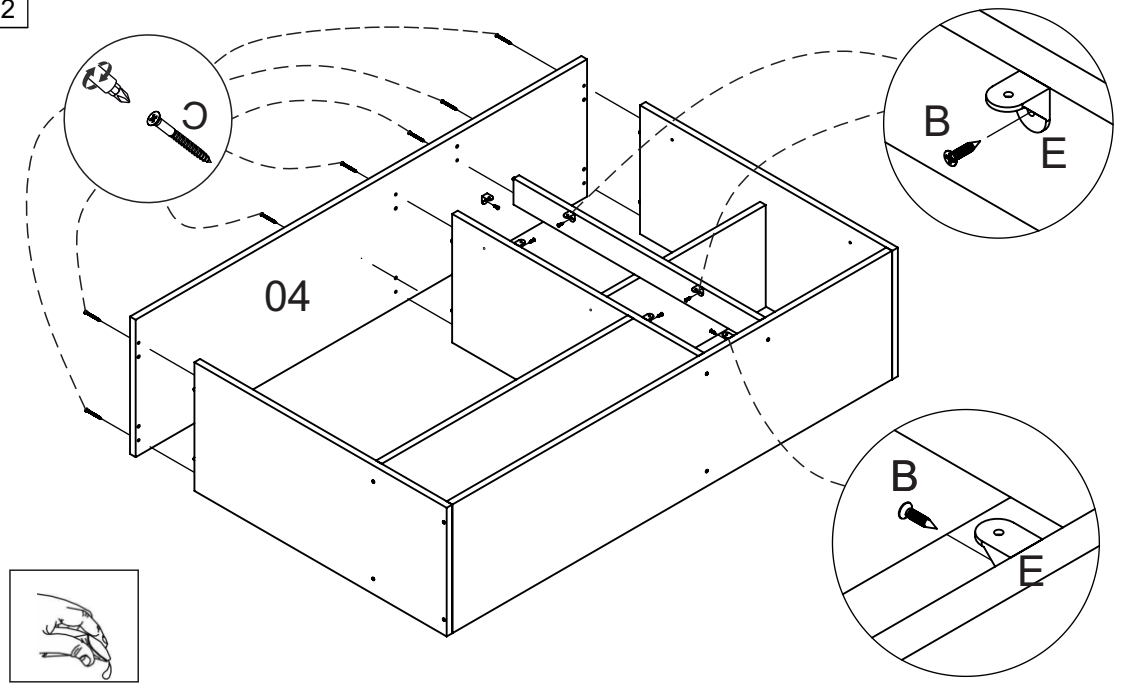

3

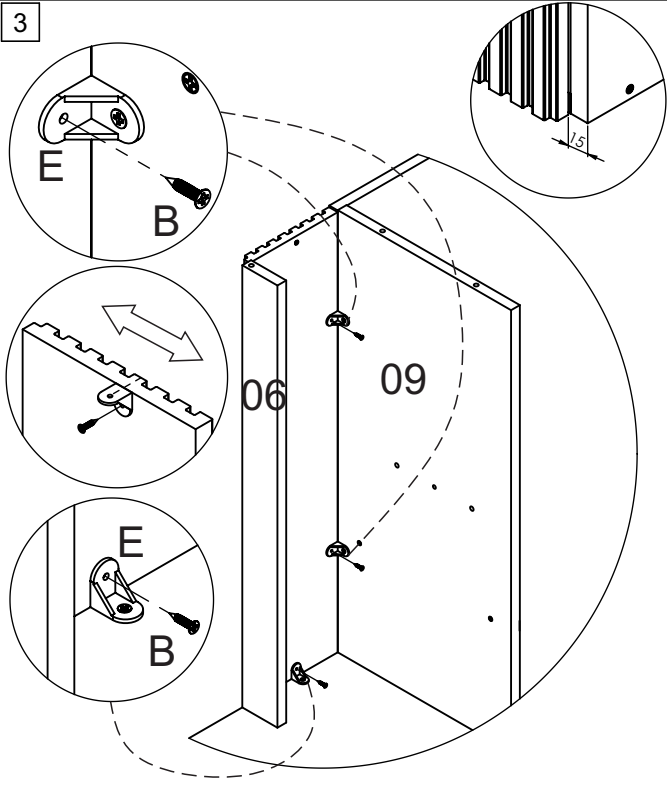

4

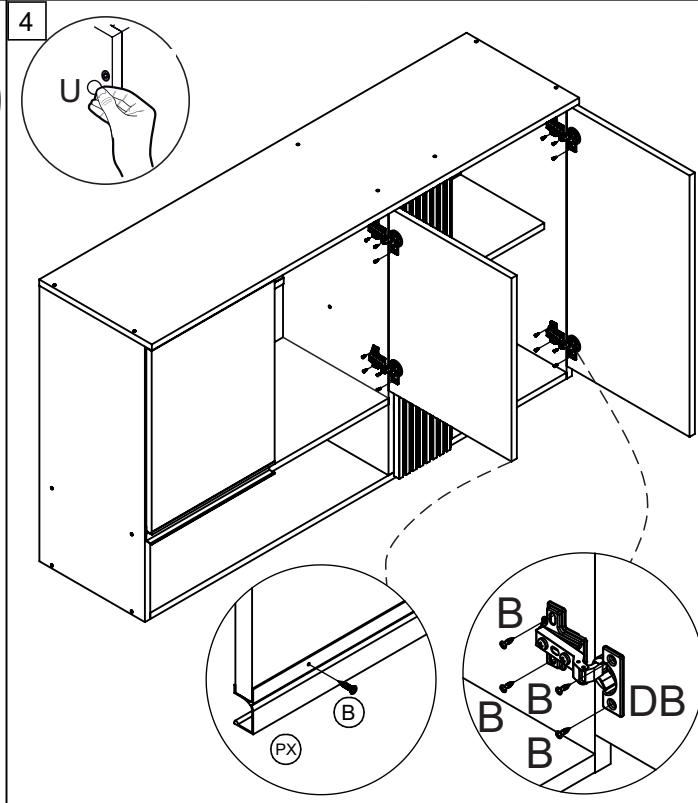

5

