






# INSTRUÇÃO DE MONTAGEM

## Balcão 3 Portas Rubi

Ref.: 8927
















**90 min.**

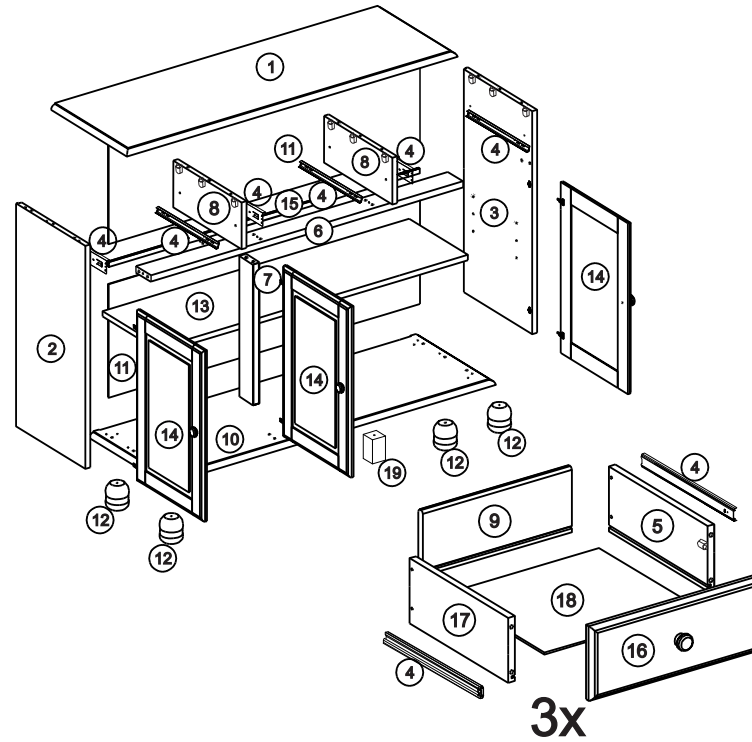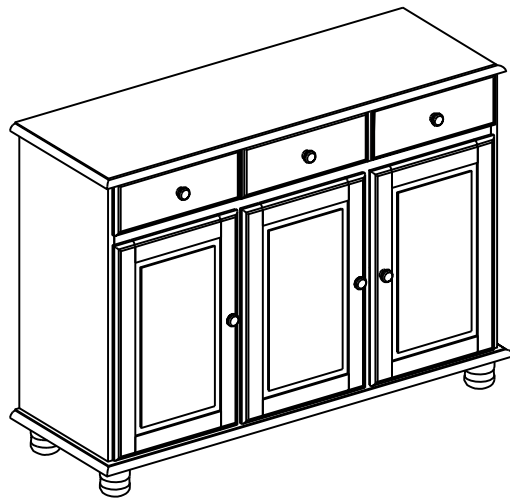


### Lista de peças Balcão QT.


Qtd.	Nome da Peça	Referência	QT.
01	1 Tampo	8926.01V	01
01	2 Lateral Esquerda	8925.55V	01
01	3 Lateral Direita	8925.54V	01
06	4 Corrediças	2867	06
03	5 Lateral Gaveta Direita	8925.50V	03
01	6 Travessa Horizontal	8926.07V	01
01	7 Travessa Vertical	8926.08V	01
02	8 Divisoria Gaveta	8925.56V	02
03	9 Traseira Gaveta	8926.09V	03
01	10 Base	8926.02V	01
02	11 Compensados	8926.14V	02
04	12 Pé	8392 / W: 8391	04
01	13 Prateleira	8926.03V	01
03	14 Portas	8926.15BB	03
01	15 Perfil	2993	01
03	16 Frente De Gaveta	8926.12BB	03
03	17 Lateral Gaveta Esquerda	8925.51V	03
03	18 Compensado Gaveta	8926.13V	03
01	19 Pé Central	7052.30	01

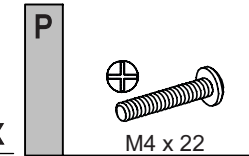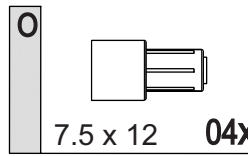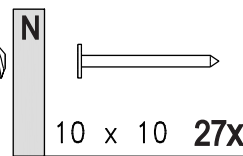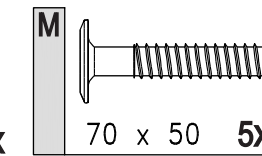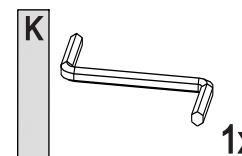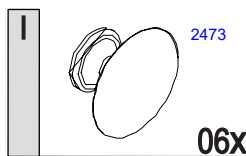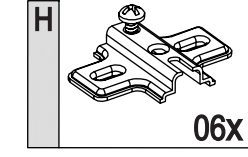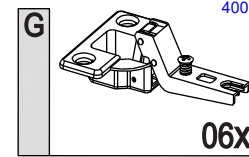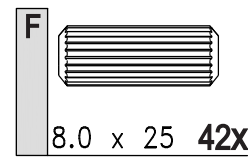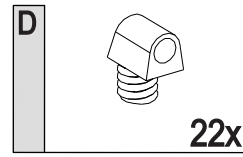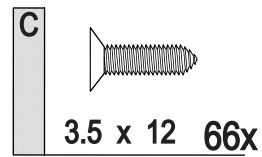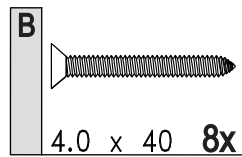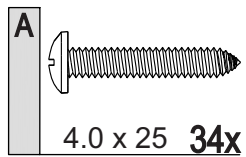


1

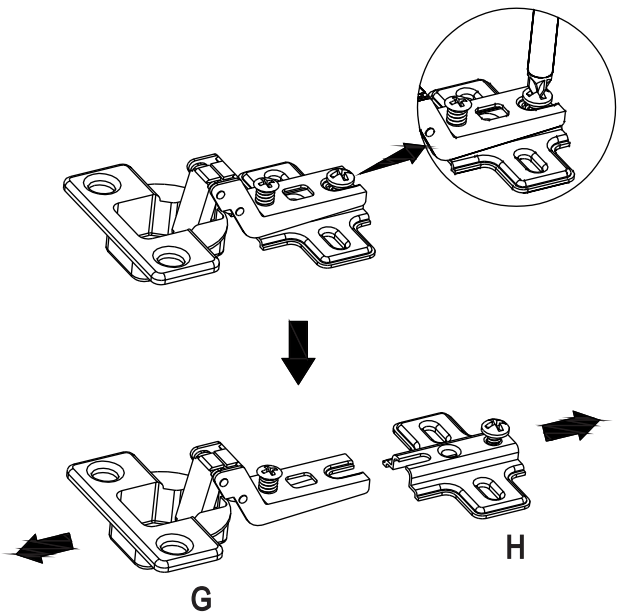


2

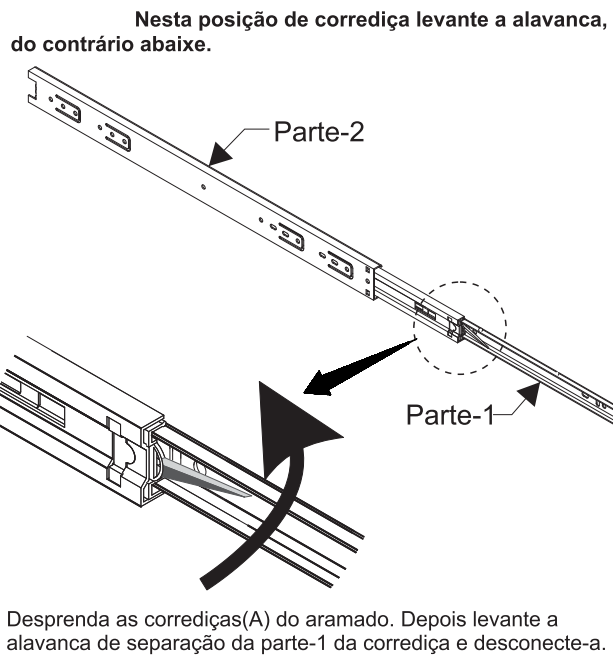


3

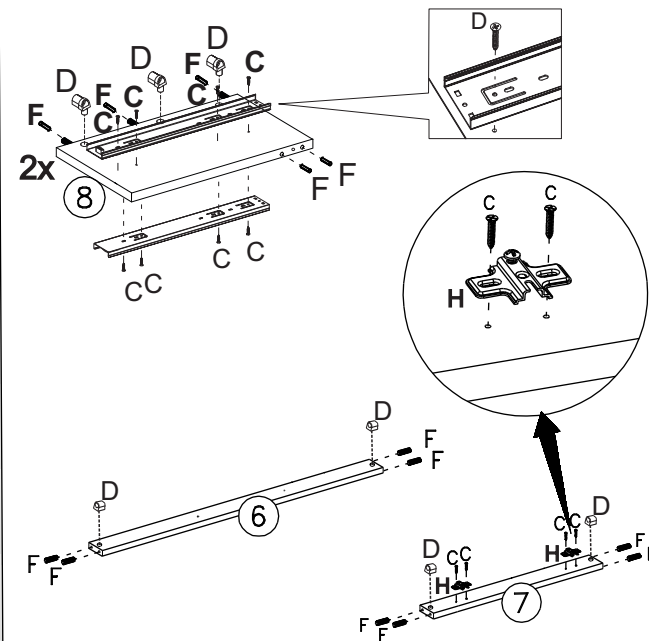


4

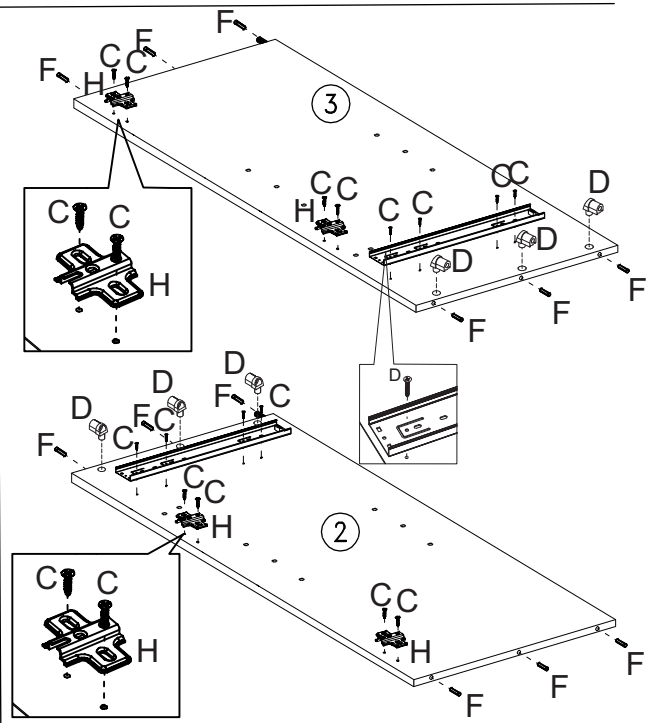


5

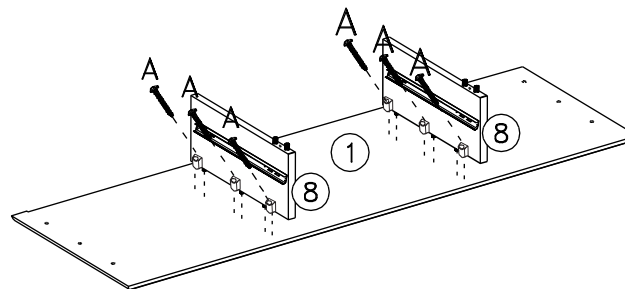


6

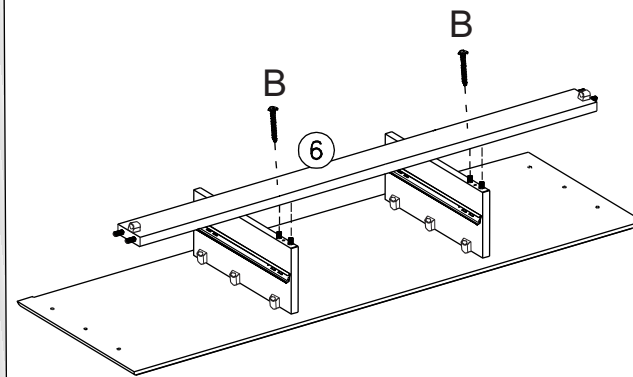


7

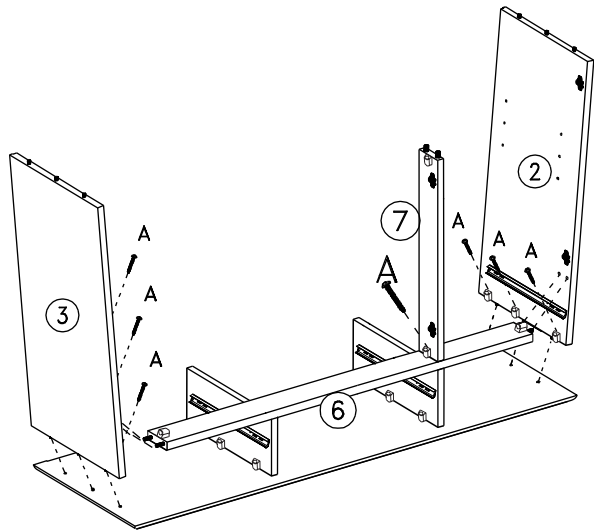


8

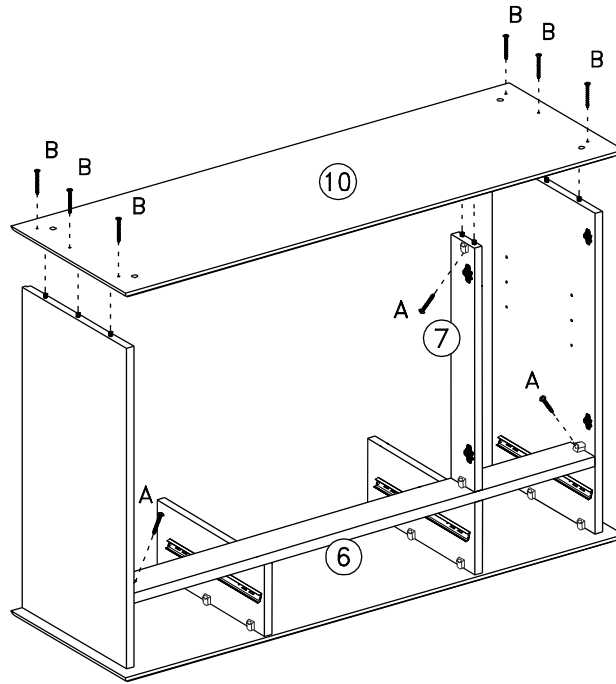


9

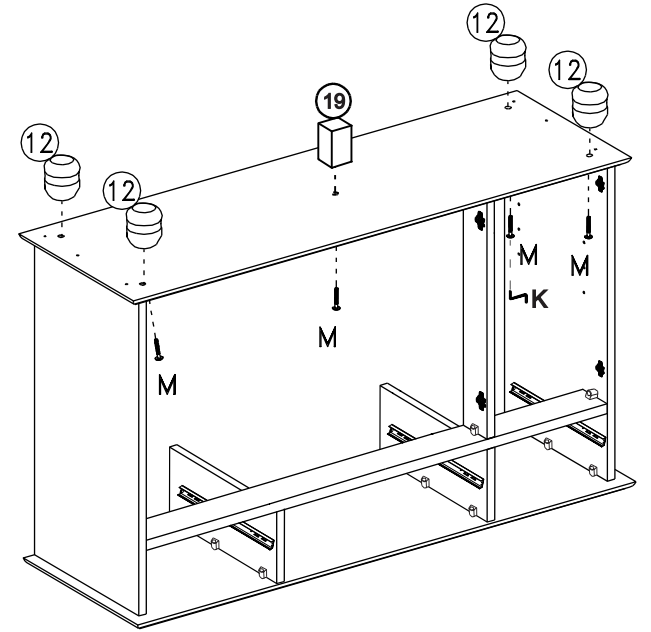


10

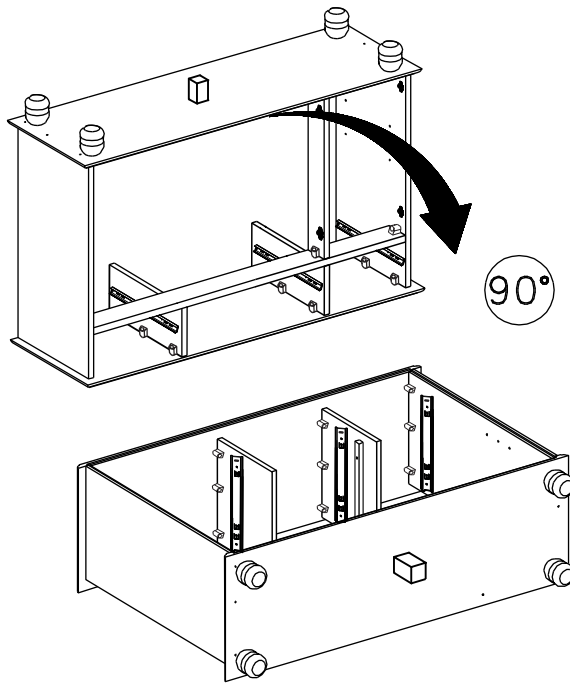


11

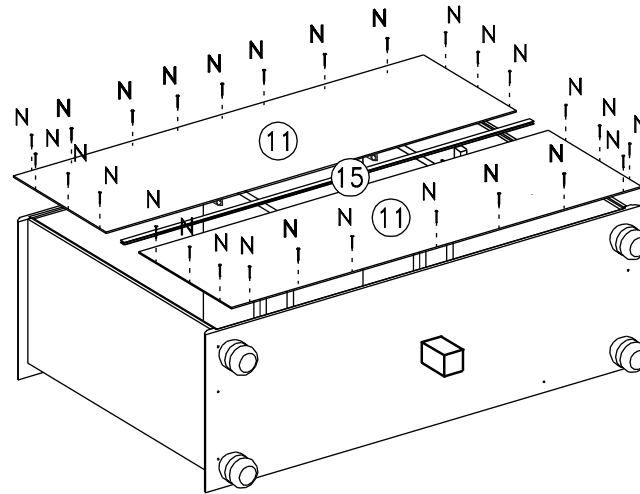


12

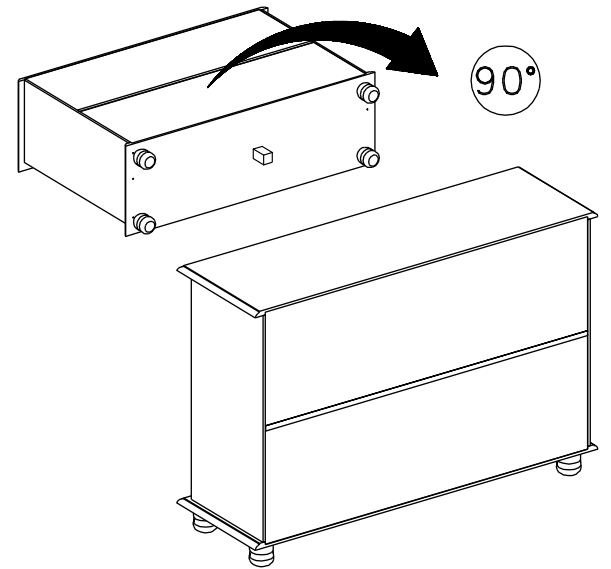


13

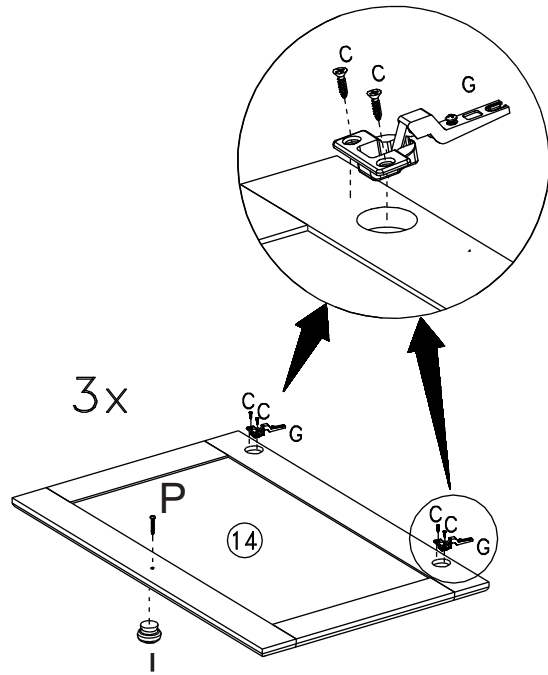


14

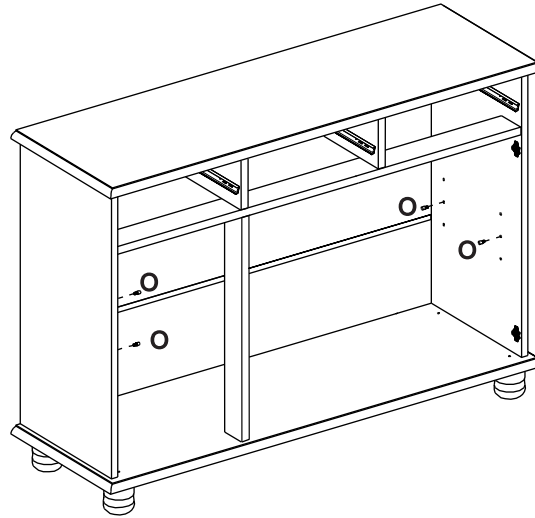


15

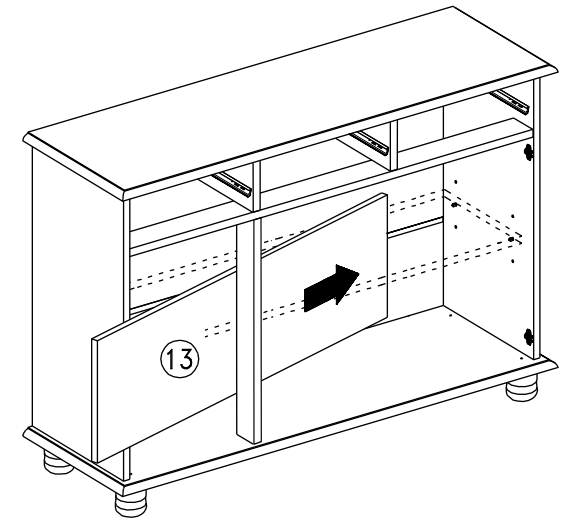


16

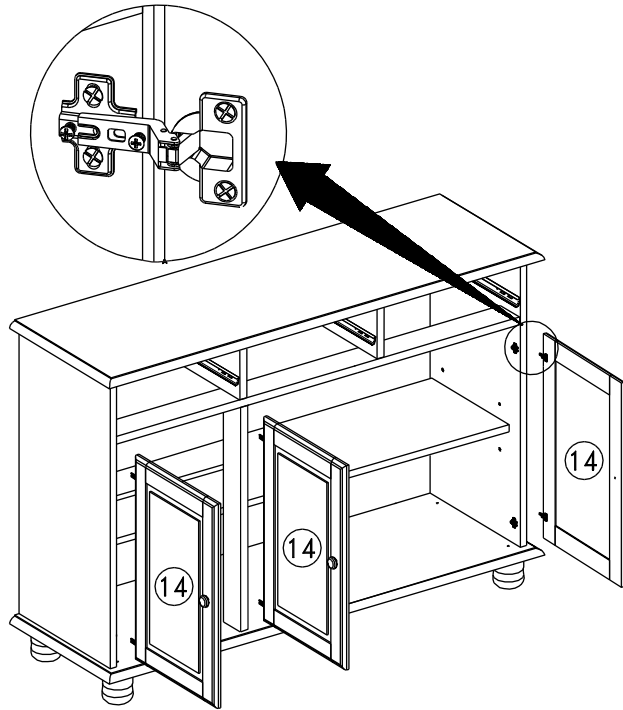


17

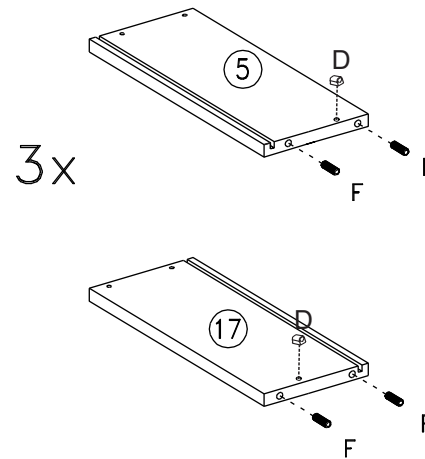


18

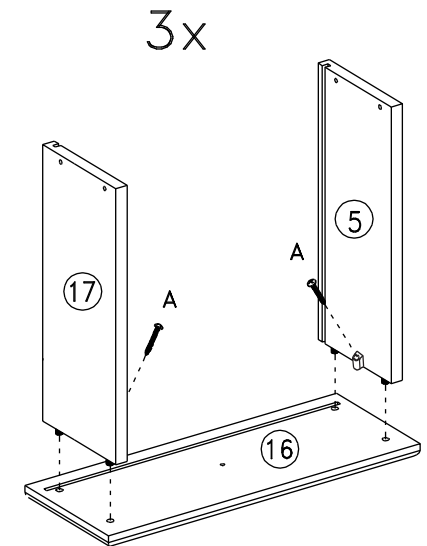


19

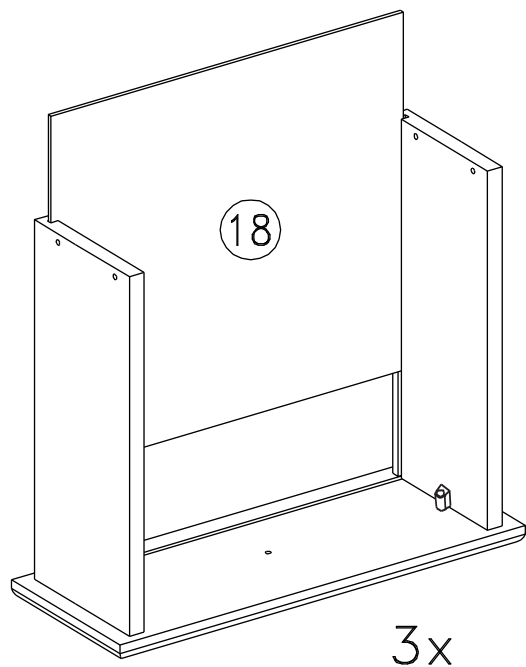

20

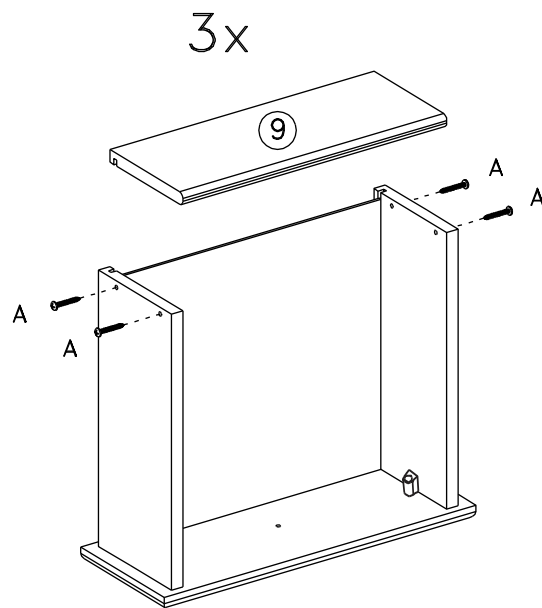

21

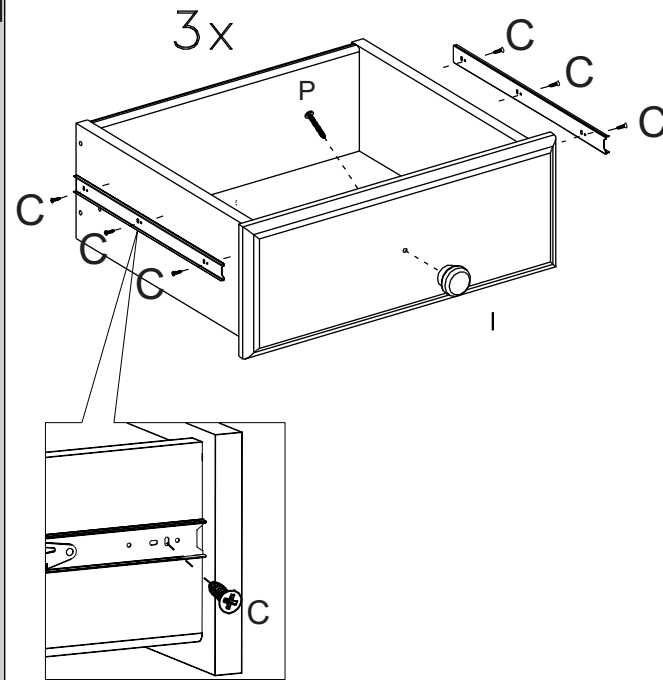

22

