




INSTRUÇÃO DE MONTAGEM

Balcão 2 Portas Rubi














Ref.: 8928




Lista de peças

QT.

1 Tampo Balcão	8926.41V	01
2 Lateral Esquerda	8925.55V	01
3 Lateral Direita	8925.54V	01
4 Corrediças	2867	04
5 Perfil	8393	01
6 Travessa Horizontal	8926.44V	01
7 Prateleira	8926.43V	01
8 Divisória Gaveta	8925.56V	01
9 Base	8926.42V	01
10 Pé	8392 / W: 8391	04
11 Traseiro balcão	8926.51V	02
12 Frente de Gaveta	8926.12BB	02
13 Lateral de Gaveta Direita	8925.50V	02
14 Taseiro de Gaveta	8926.09V	02
15 Fundo de Gaveta	8926.13V	02
16 Lateral de Gaveta Esquerda	8925.51V	02
17 Portas	8926.15BB	02

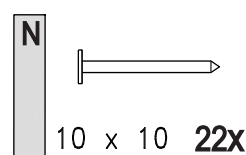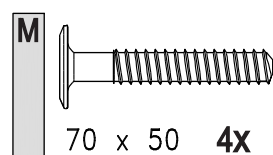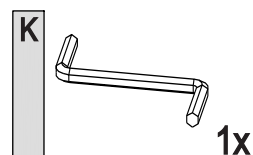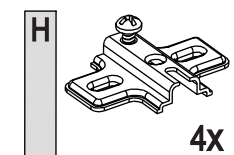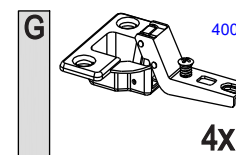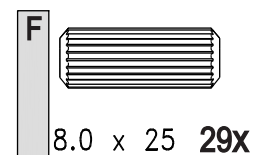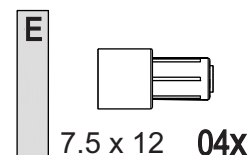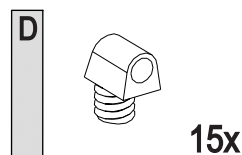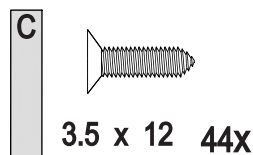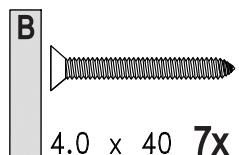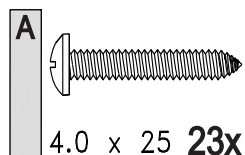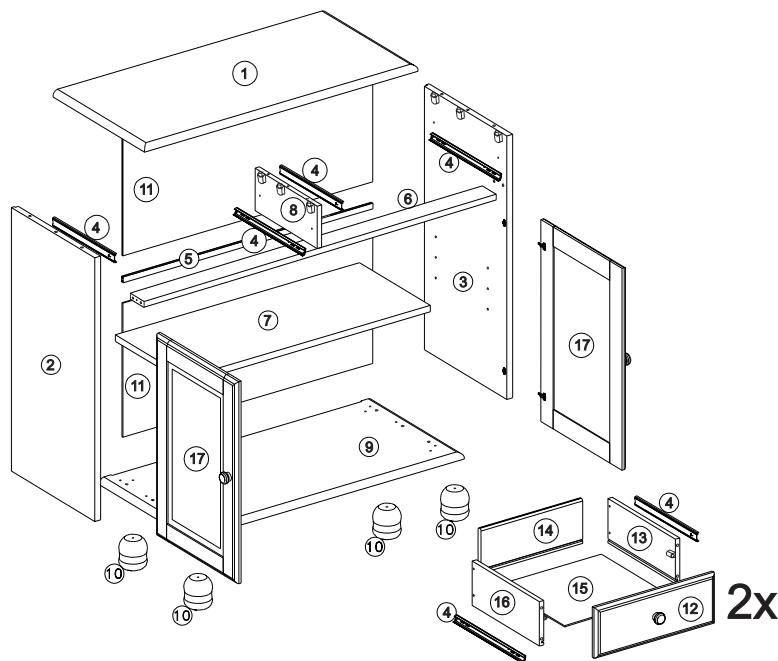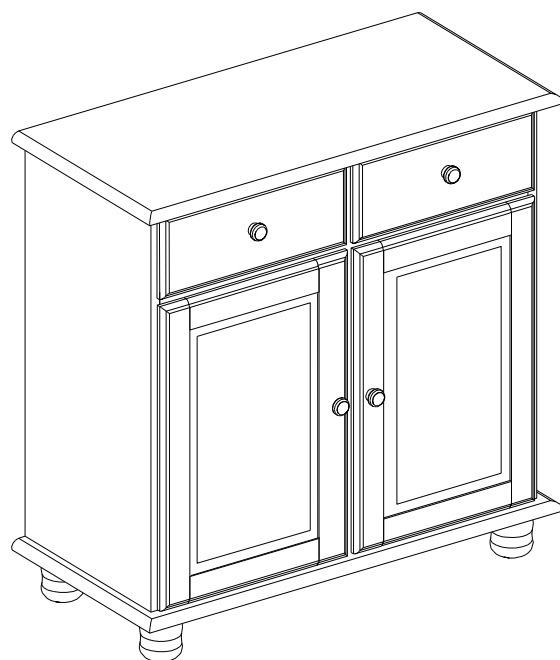


1

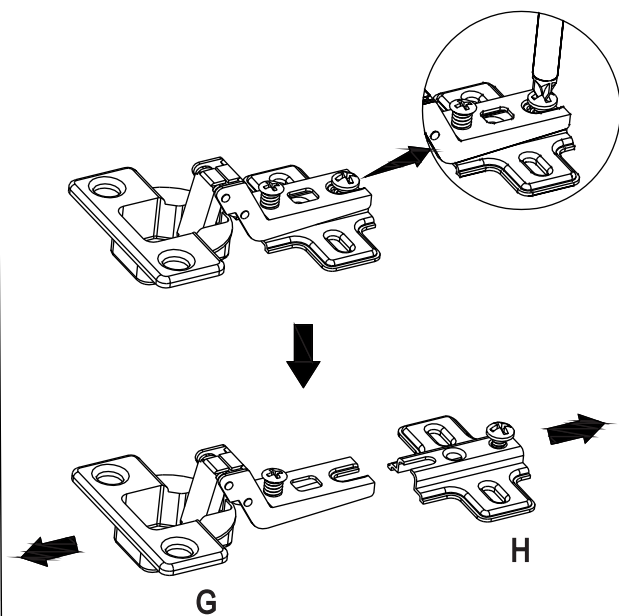


2

Nesta posição de correção levante a alavanca, do contrário abaixe.

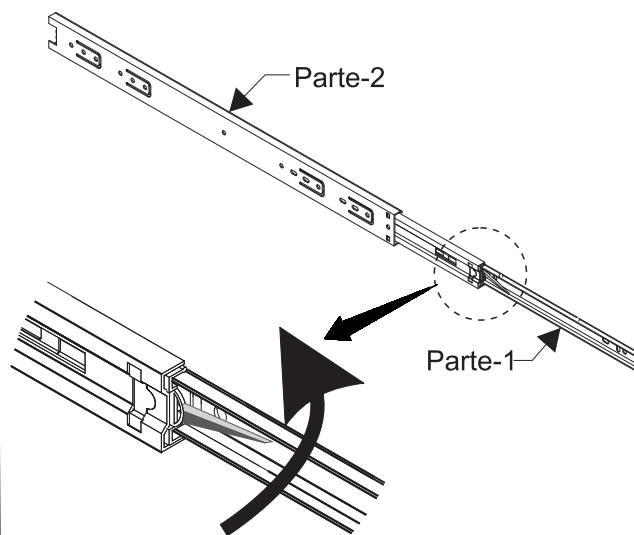


Desprenda as correções(A) do armado. Depois levante a alavanca de separação da parte-1 da correção e desconecte-a.


3

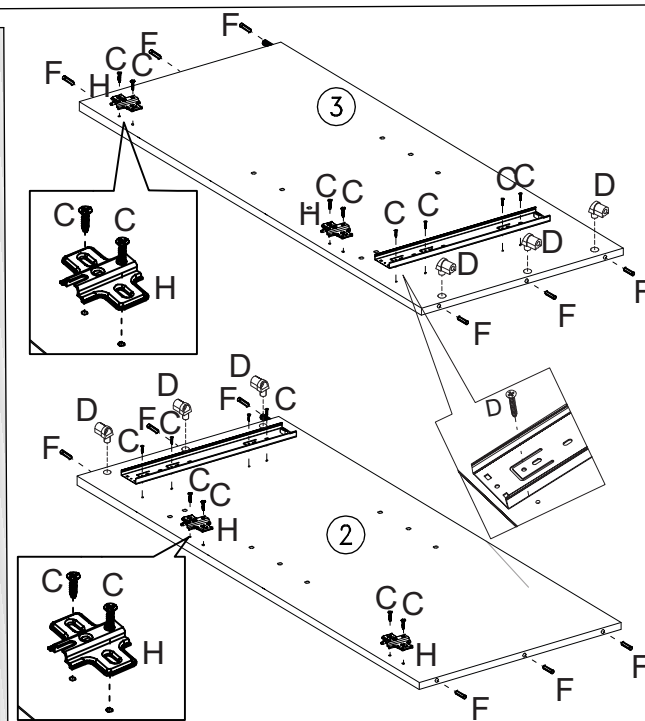


4

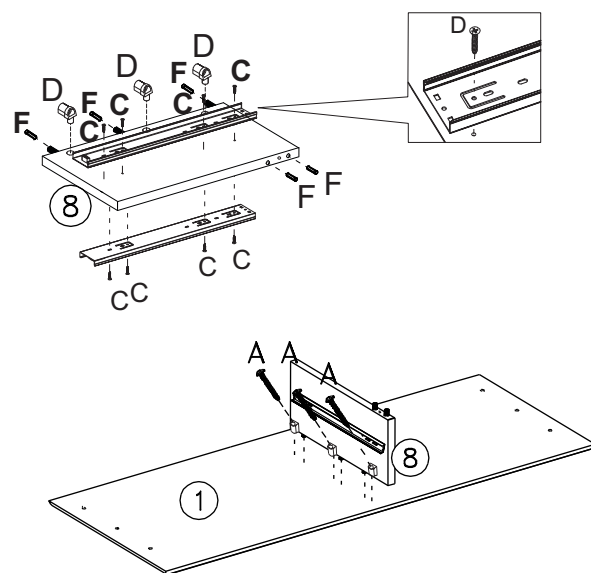


5

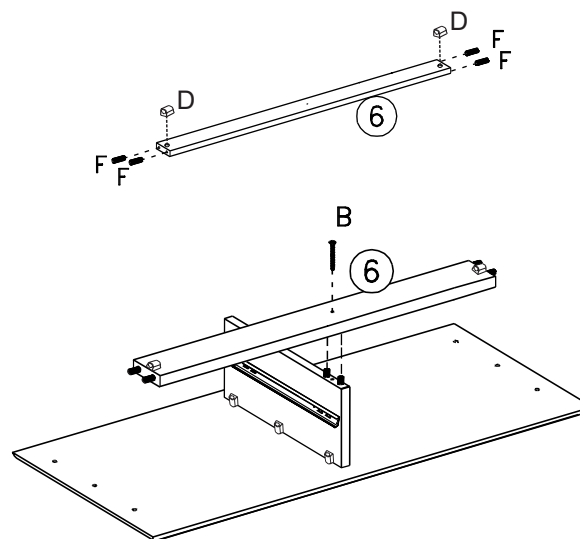


6

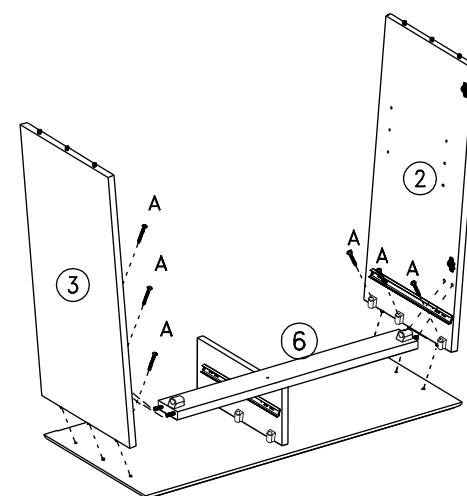


7

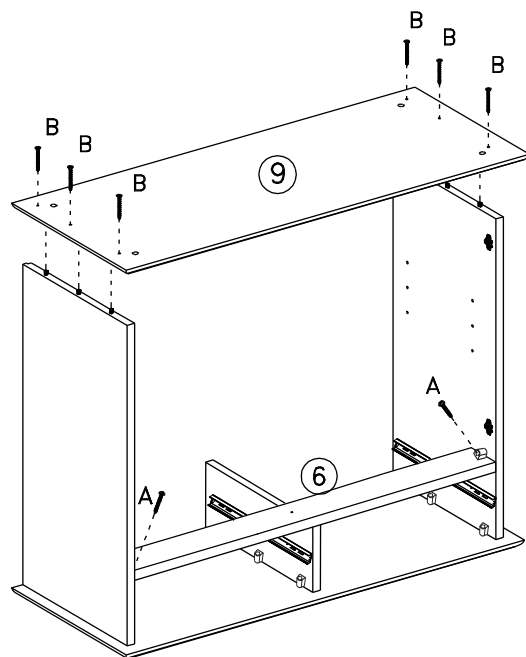


8

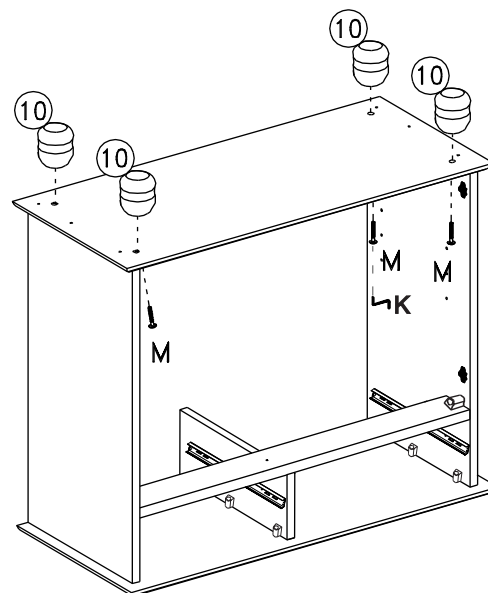


9

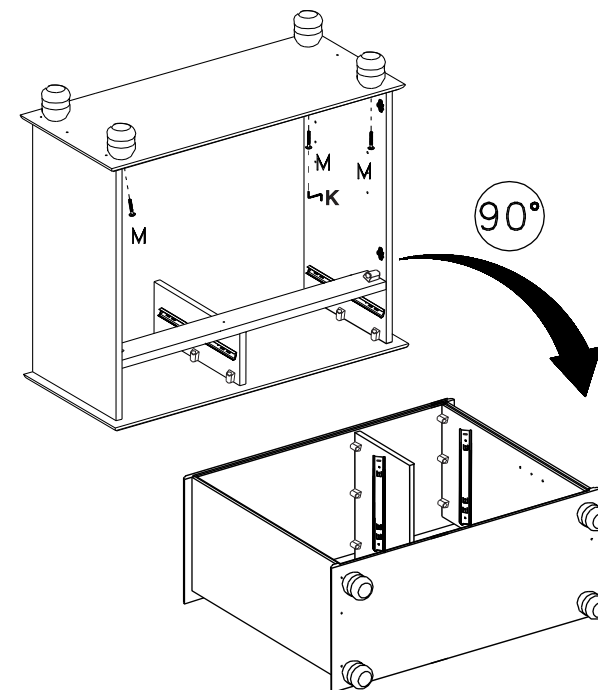


10

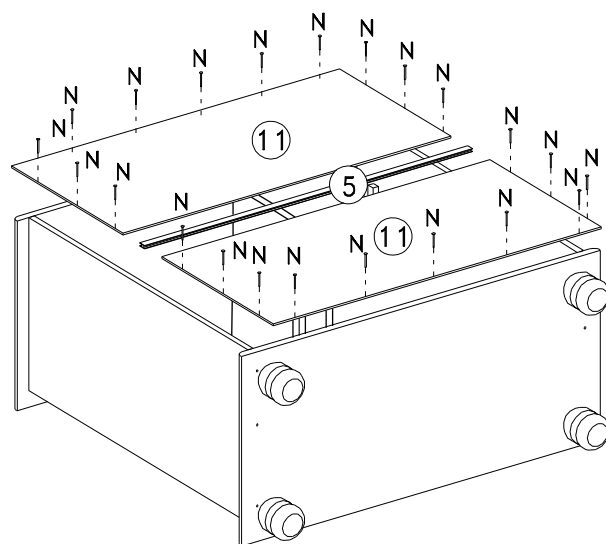


11

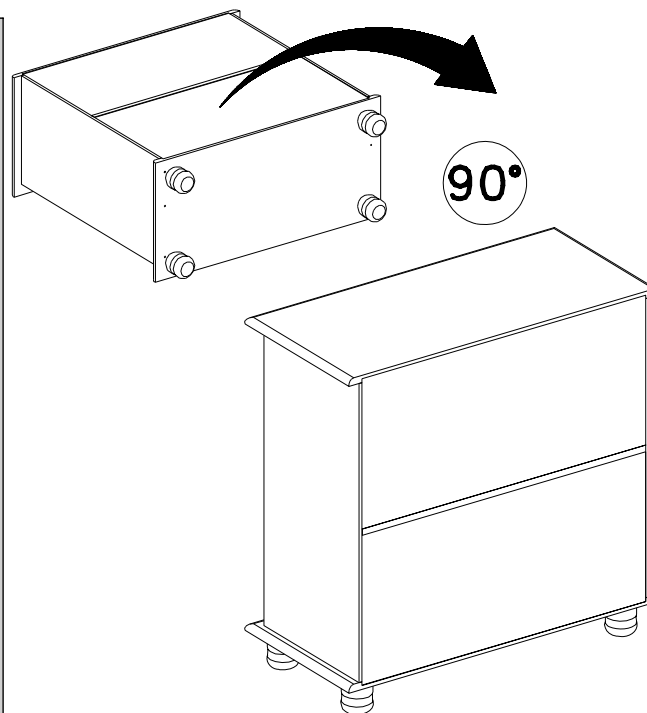


12

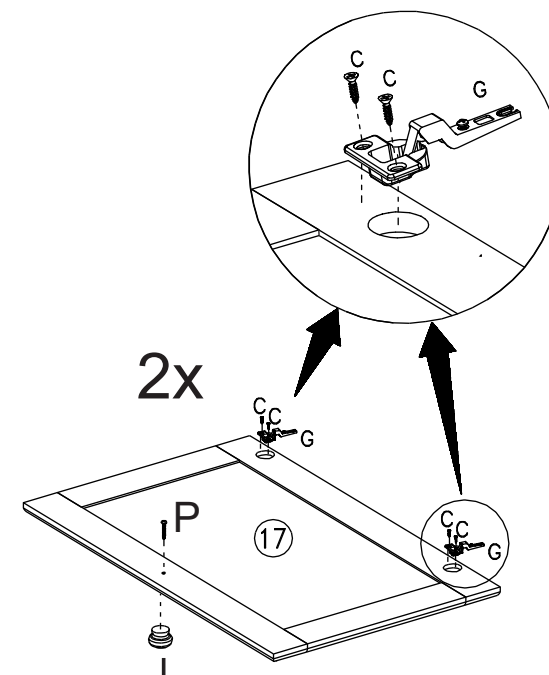


13

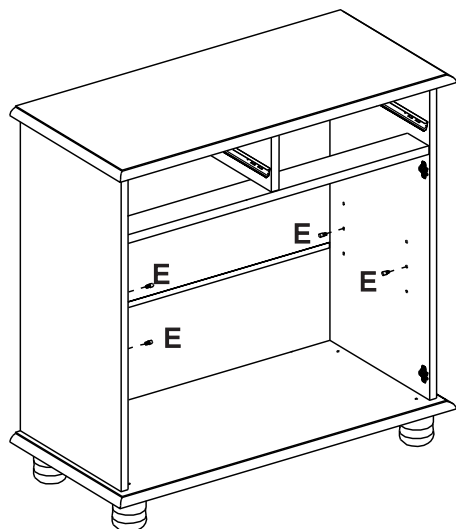


14

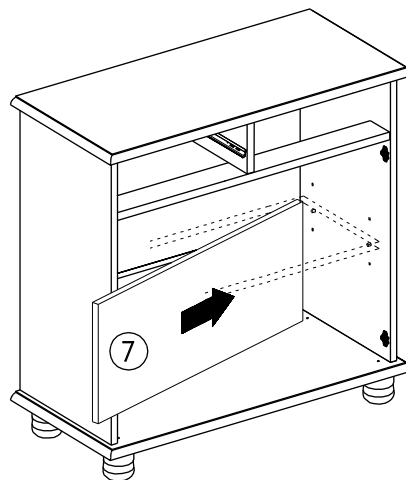


15

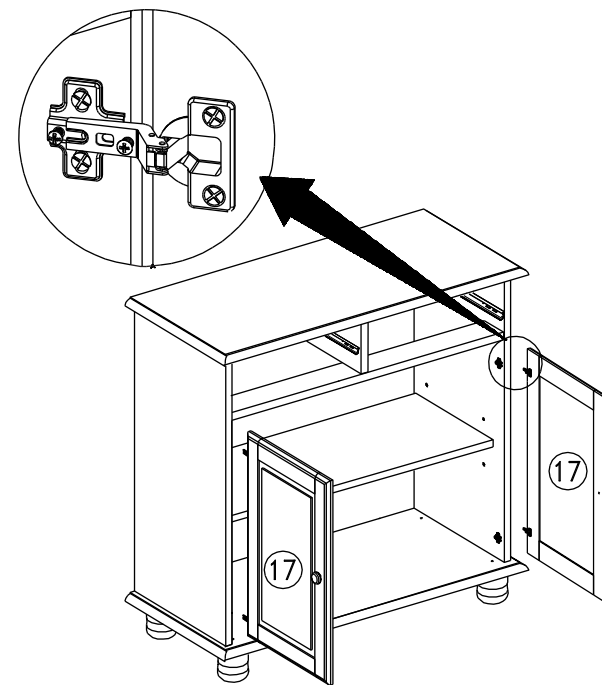


16

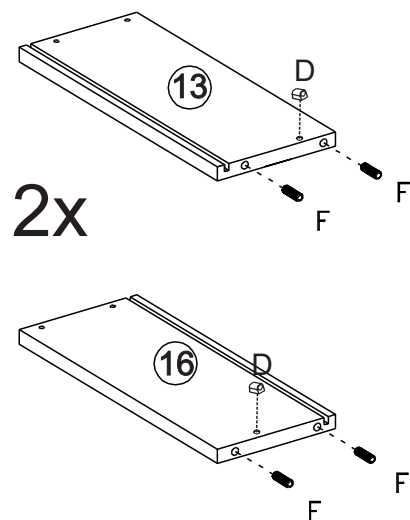


17

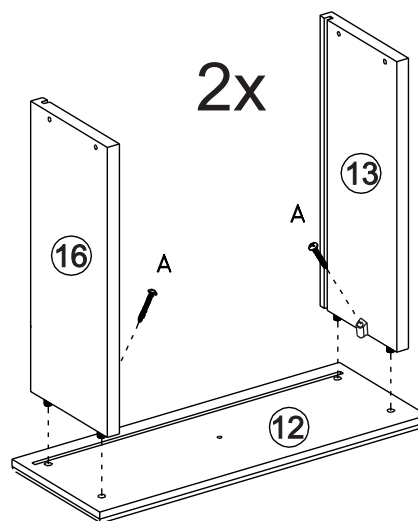


18

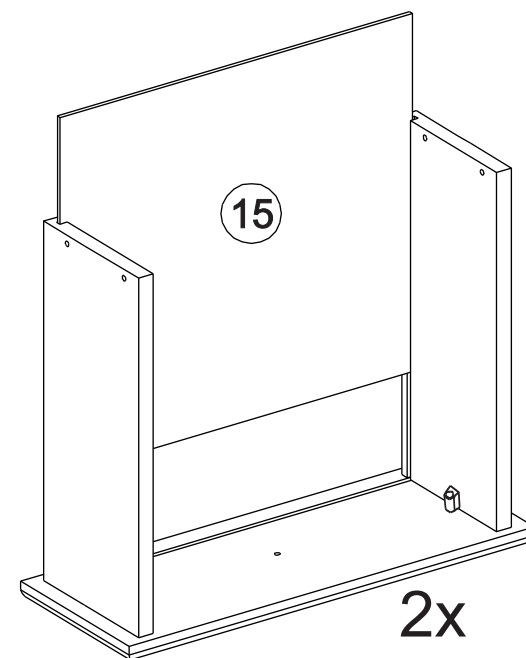

19

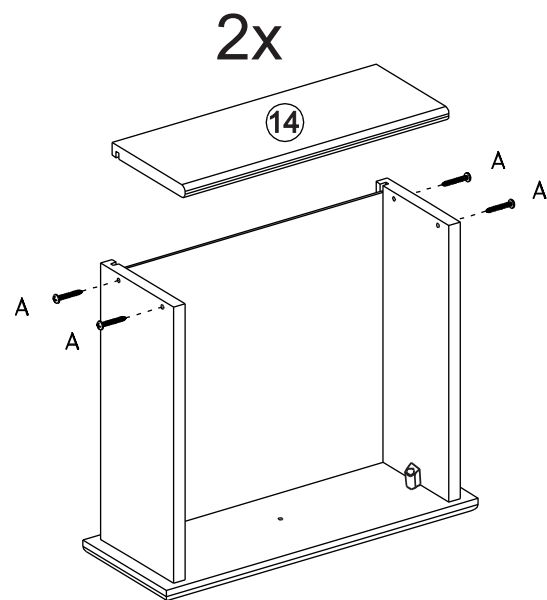

20

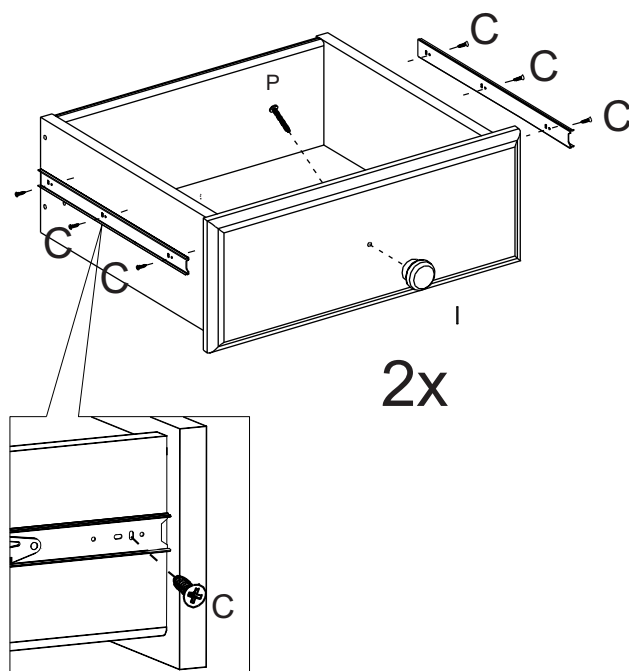

21

