



Assembly Instruction




1  6 x 30mm 34 pcs	2  3.5 x 14mm 44 pcs	3  3.5 x 25mm 10 pcs	4  4 x 50mm 18 pcs	5  6 pcs	6  Plastic foot 4 pcs	7  18mm MiniFix cap 18 pcs	8  Handle 4 pcs	9  Nail 54 pcs	10  10a 8 pcs	10b  10b 8 pcs	11  Profile 1 pcs	12  V-Bracket 2 pcs	13  Cylinder pipe 1 pcs	14  14 a 2 Sets (300 mm)	14 b  14 b 2 Sets (300 mm)	Dowel / Mini Fix Installation 
---	--	--	--	---	---	--	---	--	--	--	---	---	---	--	--	---

PART LIST

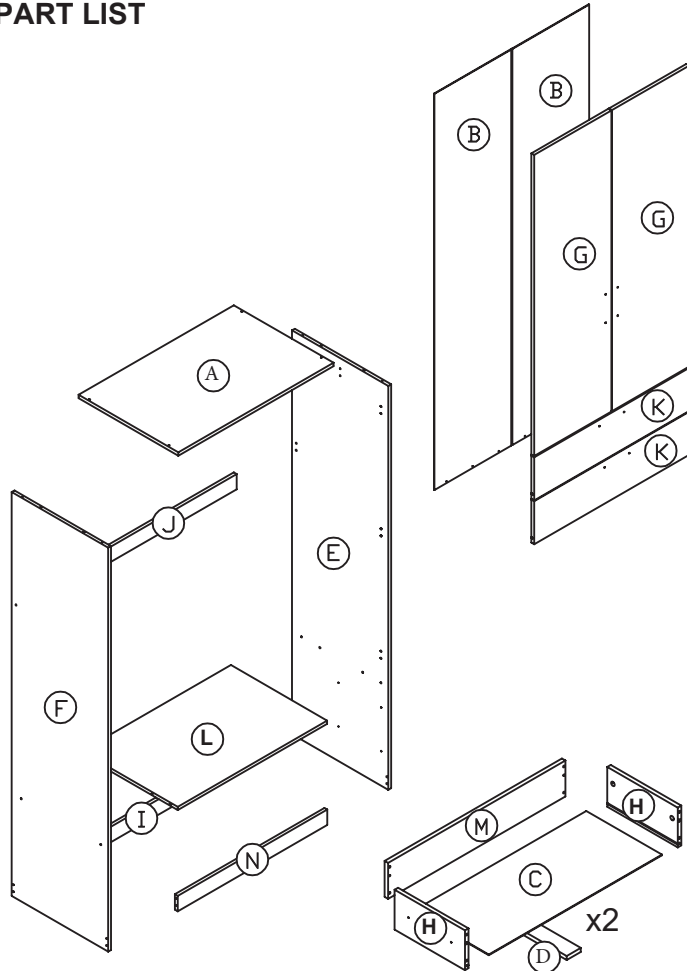


Step 1

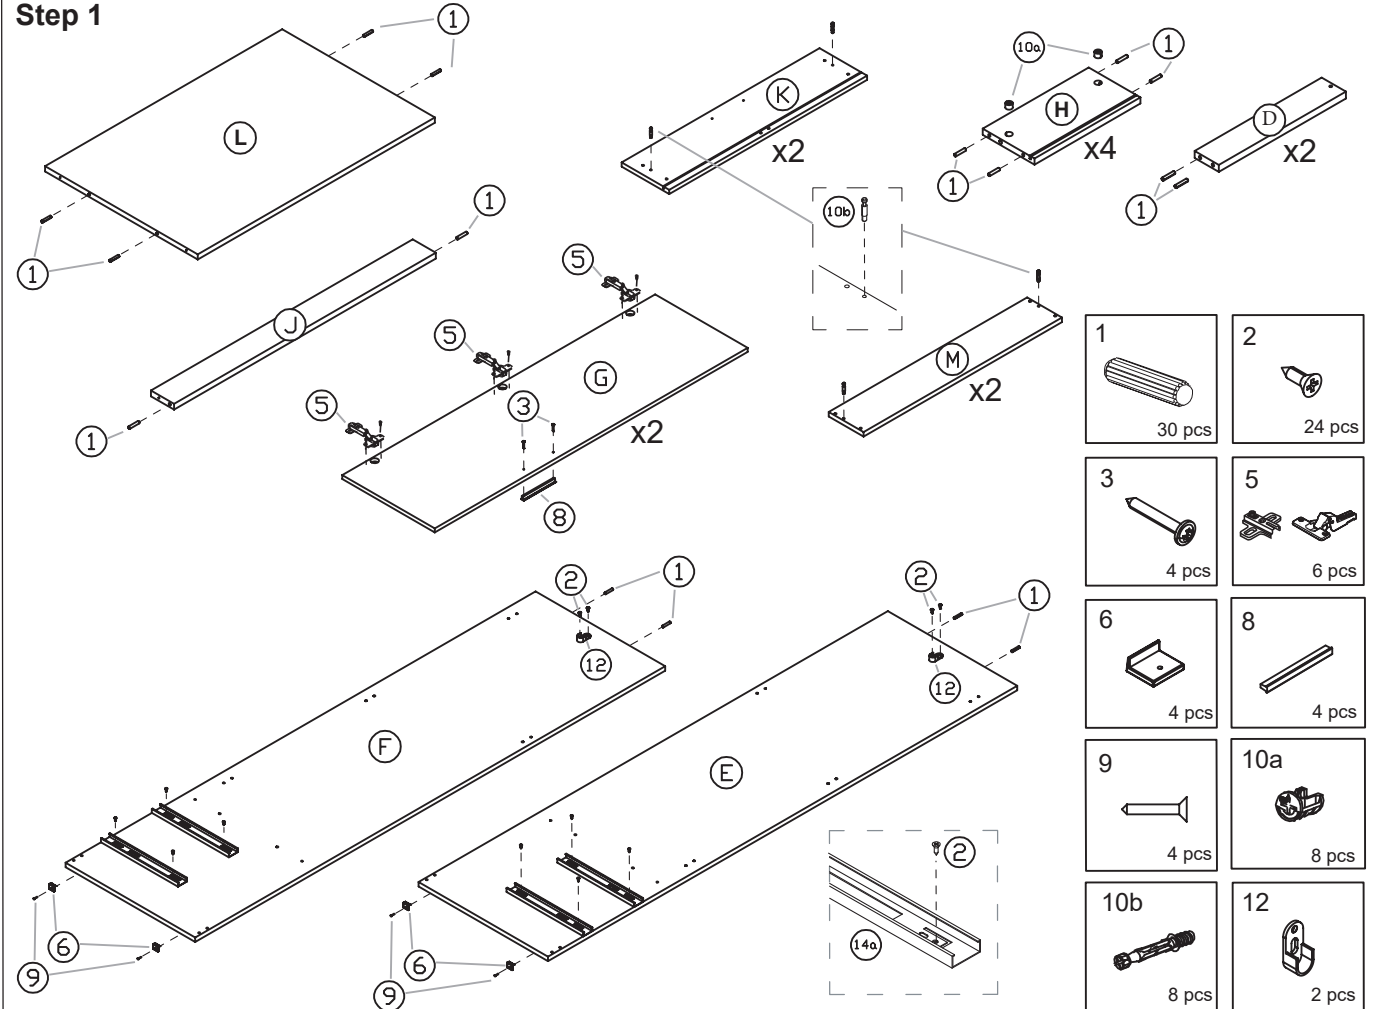


Assembly Instruction


Step 2

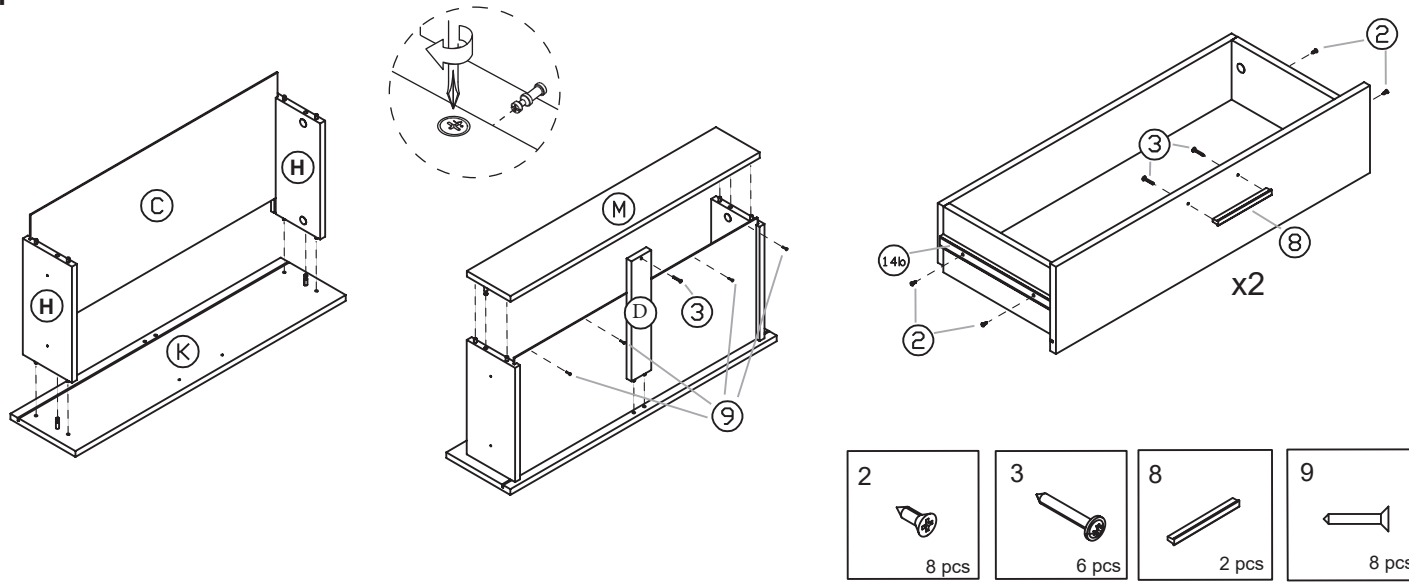



Step 5

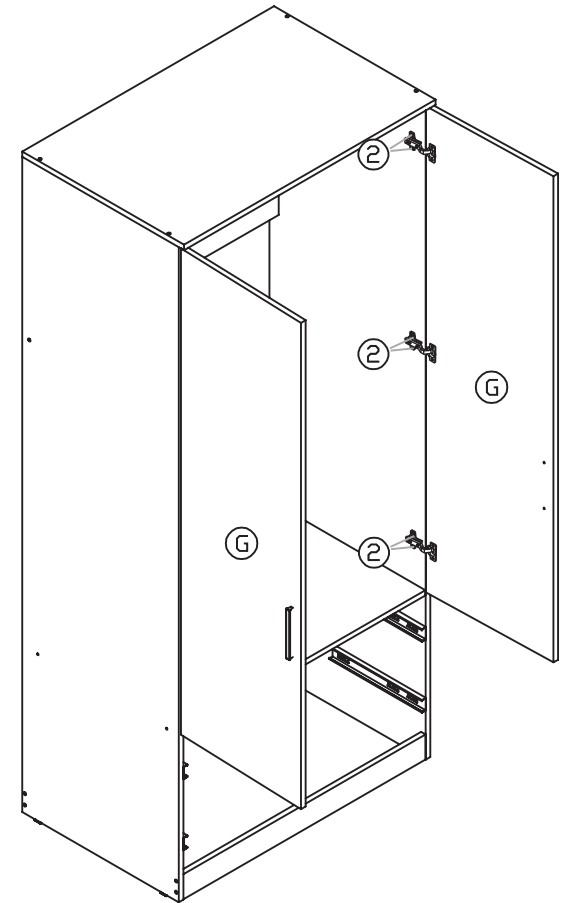

Step 3


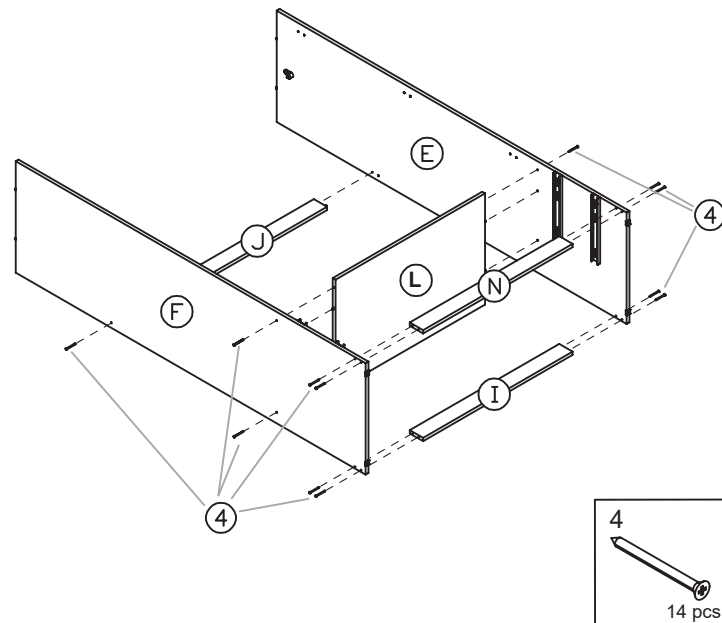


Step 4



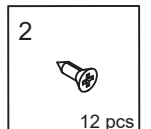
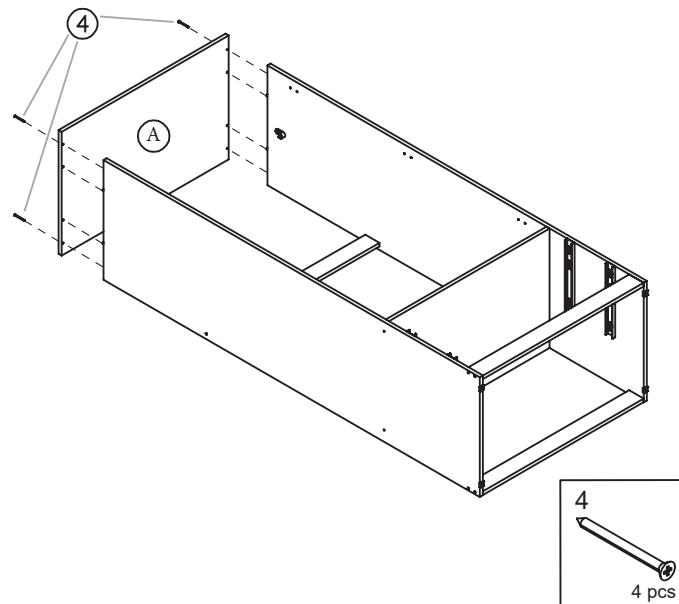


Assembly Instruction


Step 6

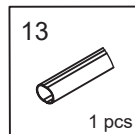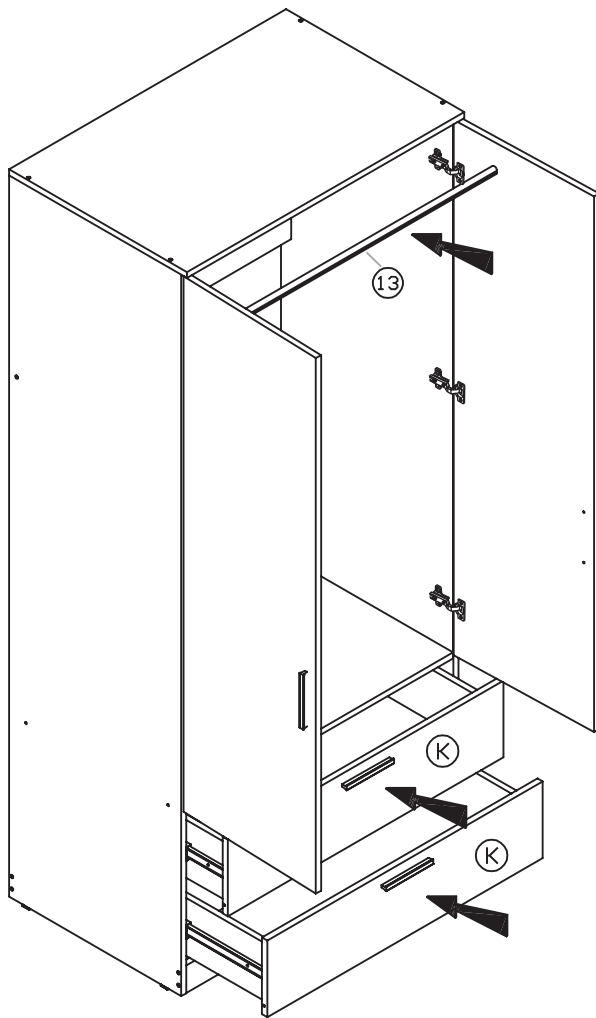

Step 7

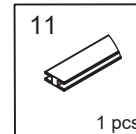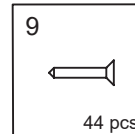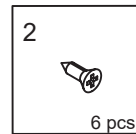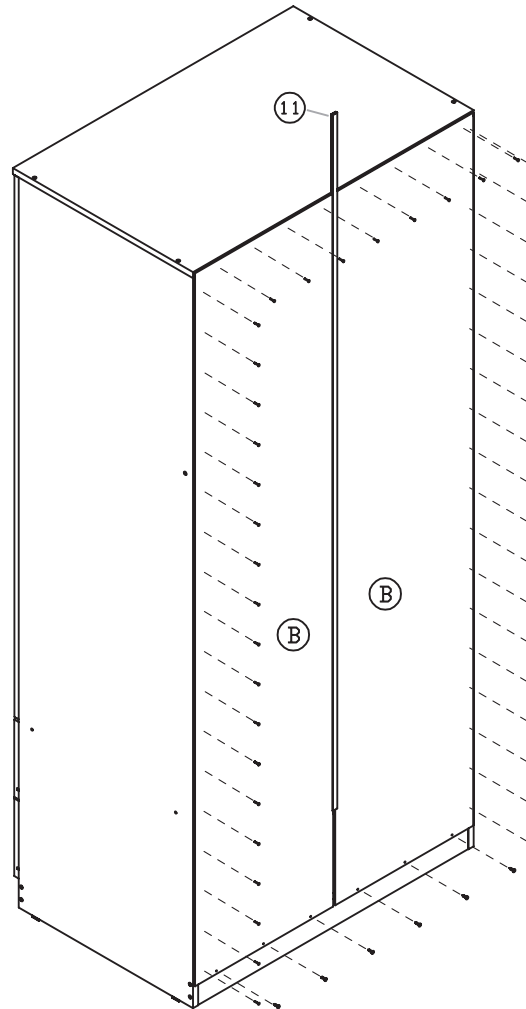

Step 8

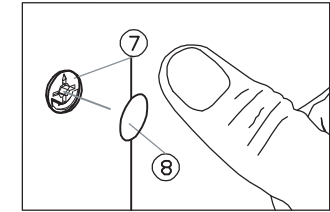

Cover all the mini fix (nuts) ⑦ head with the paper cap provided by pushing the cover's stem onto the hole mini fix (nuts).

Complete

