
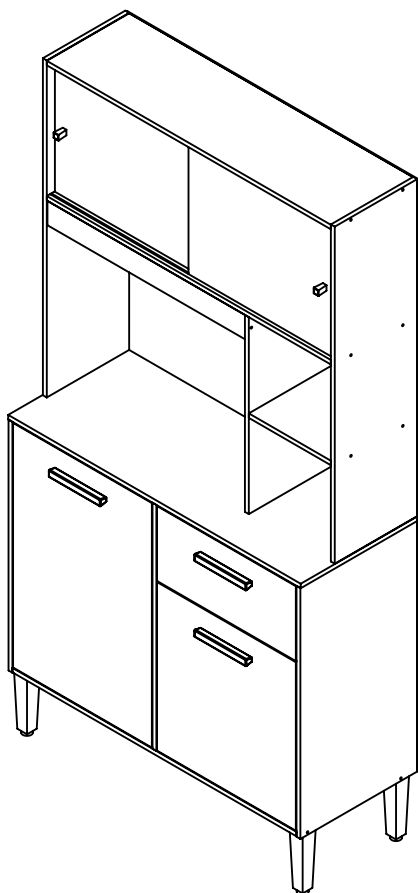







C215-Cozinha POP
C215-Cocina POP
C215-Kitchen POP



Ferragens/Herrajes/Hardware


A		6x30	10
B		3,5x40	26
C		Cantoneira metal 22x22 Pieza L 22x22	09
D		Garra costa Fijador revés	08
E		5,0x45	04
F		10x10	40
G		3,5x12	44
H		3,5x25	06
J		Pé/Pata bronze	04
K		Dobradiça/Bisagra 9mm Calço/Base bisagra 12mm	04
L		Puxador/Tirador 160mm	03
M		Puxador ponto/Tirador punto	02
N		6x50	04
O		13x15	04
P		Correição 300mm Corredora 300mm	01
Q		Batente limitador Tope limitador	02
R		Perfil H 896mm	01
S		6x10	04
T		3,5x14	02
U		Bisnaga de cola Pegamento	01

Relação de peças/ Relación de las piezas/Parts list

Nº	Descrição/Descripción/Description	Qtde Cant Qty	Medidas mm Medidas mm Measures mm
01	Lateral direita/Lateral derecha	01	670x360x12
02	Lateral esquerda/Lateral izquierda	01	670x360x12
03	Base sup/Base sup	01	876x254x12
04	Travessa/Travesaño	01	610x65x12
05	Porta/Puerta	01	653x428x12
06	Porta menor/Puerta más pequeña	01	450x428x15
07	Porta sup/Puerta sup	02	450x360x03
08	Base cent/Base cent	01	876x254x12
09	Base/Base	01	876x360x12
10	Frente gaveta/Frente cajón	01	200x428x12
11	Lateral gaveta/Lateral cajón	02	300x100x12
12	Costa gav/Revés cajón	01	382x90x12
13	Divisão/Divisória	01	526x254x12
14	Lateral dir. superior/Lateral derecha	01	900x254x12
15	Lateral esq. superior/Lateral izquierda	01	900x254x12
16	Tampo/Tapa	01	902x360x12
17	Prateleira/Repisa	01	254x254x12
18	Pilastra dianteira/Pilar delantero	01	657x90x12
19	Pilastra traseira/Pilar trasero	01	657x90x12
20	Costa inf/Revés	02	896x334x03
21	Costa inf/Revés bajo	01	896x365x03
22	Costa sup/Revés sup	01	896x538x03
23	Fundo de gaveta/Fondo cajón	01	305x405x03

VOCÊ VAI PRECISAR DE / USTED NECESITARÁ / YOU WILL NEED

Ferramentas não fornecidas / Herramientas no incluidas / Tools not supplied

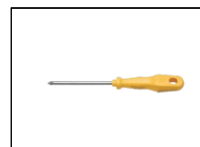

Chave Phillips
Destornillador cruz
Screwdriver Phillips



Trena
Cinta de medición
Measuring tape



Martelo
Martillo
Hammer









Furadeira
Taladro
Drill machine

www.fellicci.com.br


 moveisfellicci

 moveisfellicci



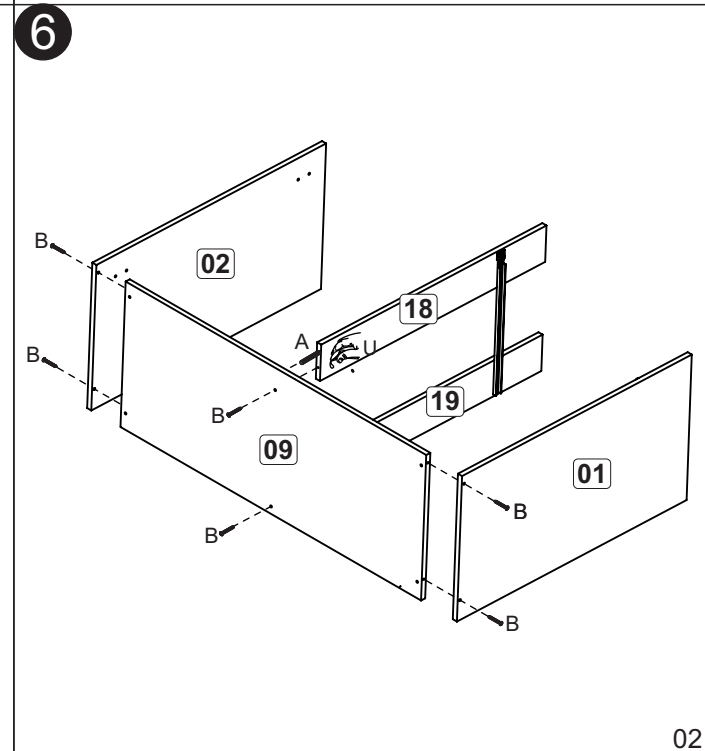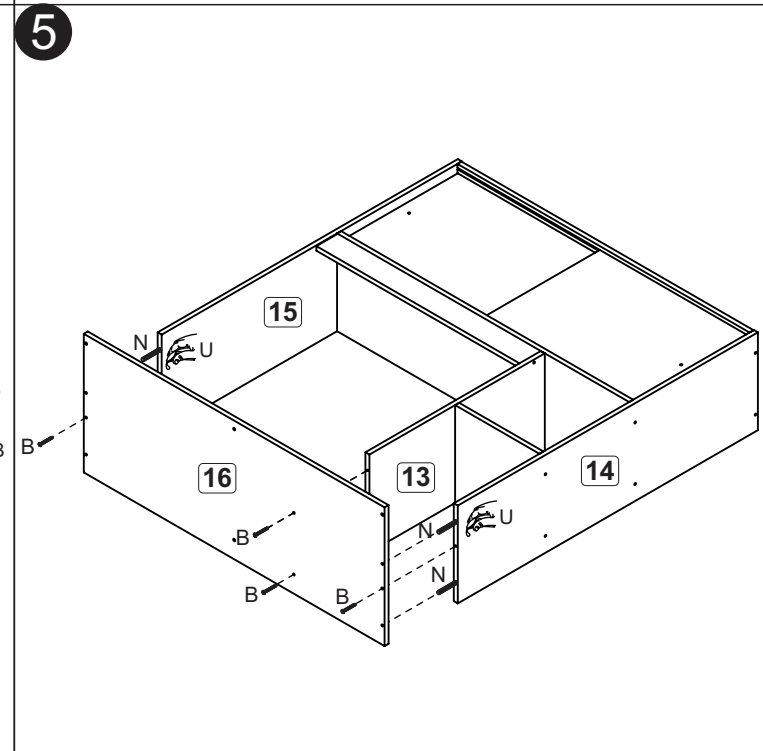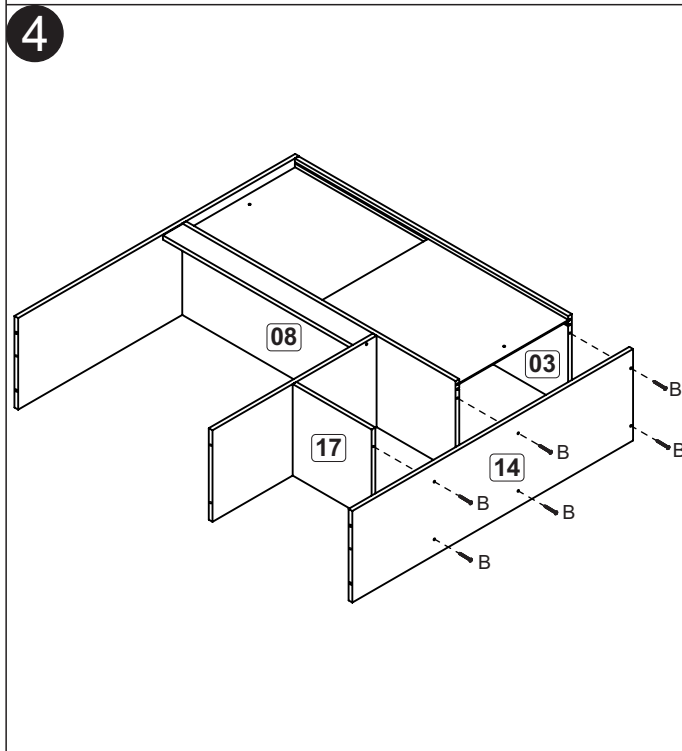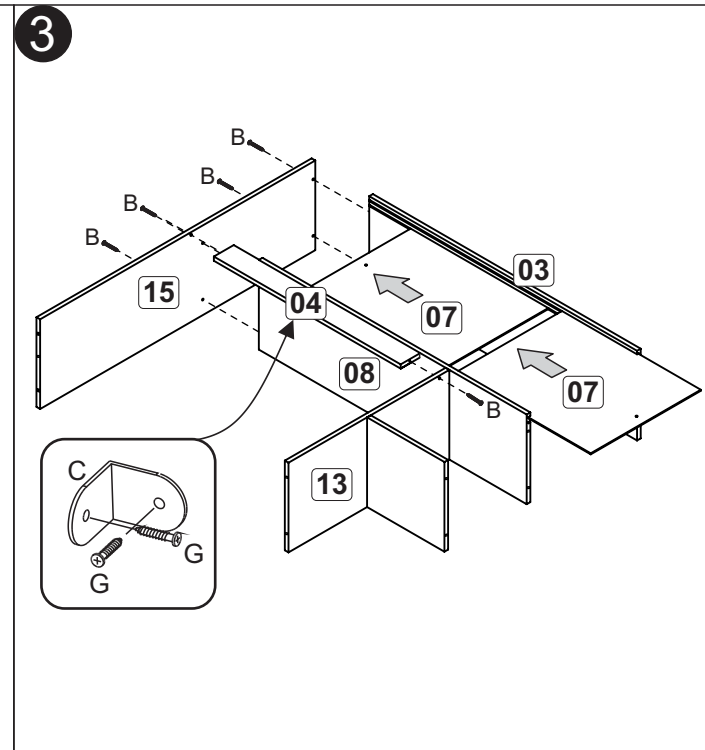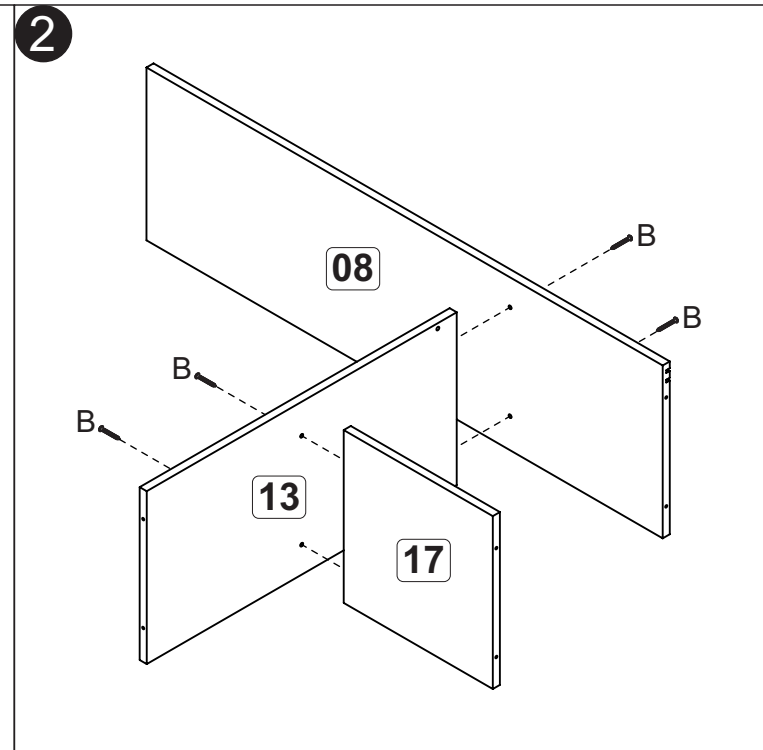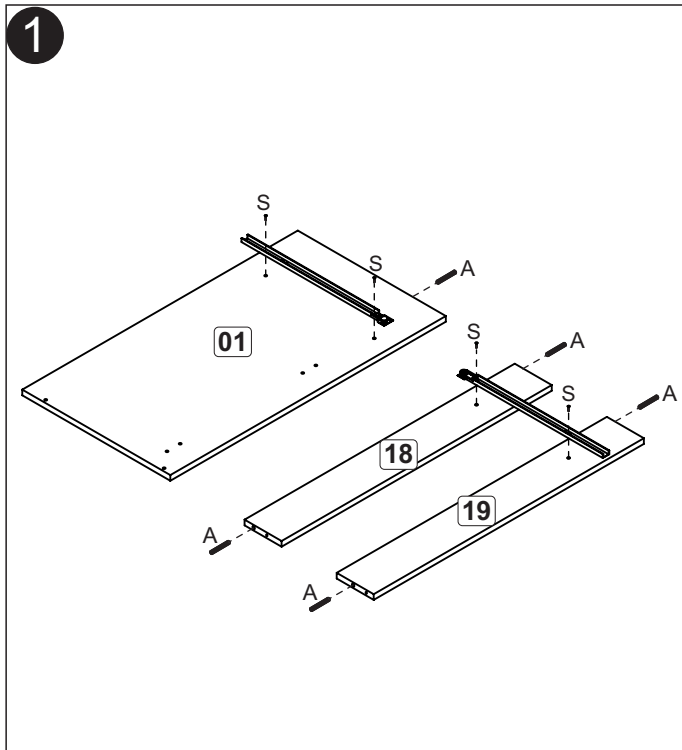


7

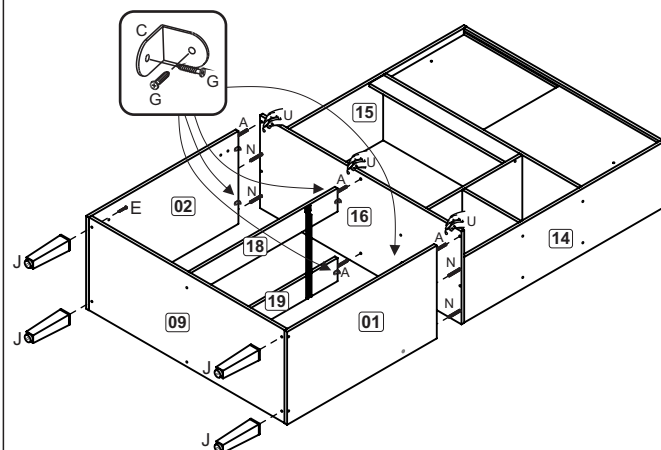


*Prender o pé «J» com parafuso «E»
 *Fijar el pie «J» con el tornillo «E»

8

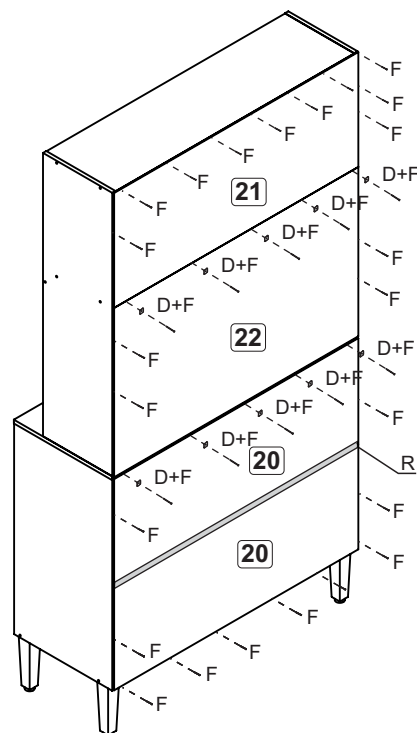


9

*Prender o puxador «M» com parafuso «T»
 *Fijar el tirador «M» con el tornillo «T»

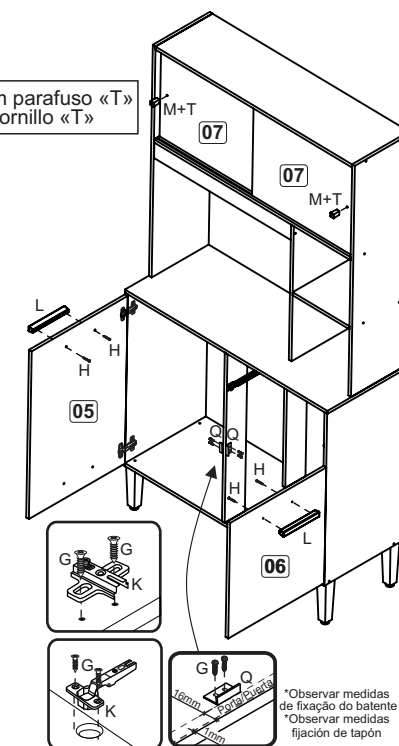

*Observar medidas de fixação do batente
 *Observar medidas fijación de tapón

10

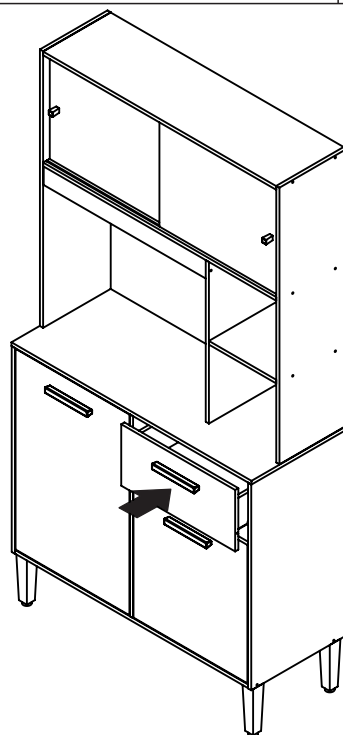

11

Montagem Gaveta Montaje Cajón

