


INSTRUÇÕES DE USO INSTRUCTIONS FOR USE

Lote: xx.xxx


REF.: 3513.1.7802BNE Cômoda 02 Portas e 04 Gavetas
Branco Acetinado C/ Nature Ecolog

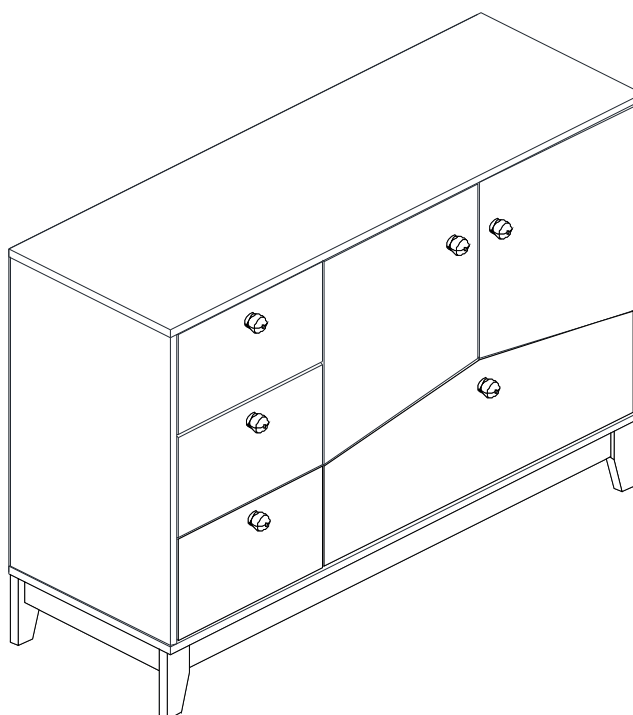

DIVICAR[®]
projetando o futuro

DIVICAR MÓVEIS LTDA












Av. Júlio Vanzin, 720, - Bairro: Área Industrial III, - Cep. 95300-000
Fone/fax: 55 54 3358 1062 - Lagoa Vermelha - Rio Grande do Sul - Brasil
CNPJ: 73.638.470/0001-59 IE: 071/0039654
E-mail: divicar@divicar.com.br - Site: www.divicar.com.br

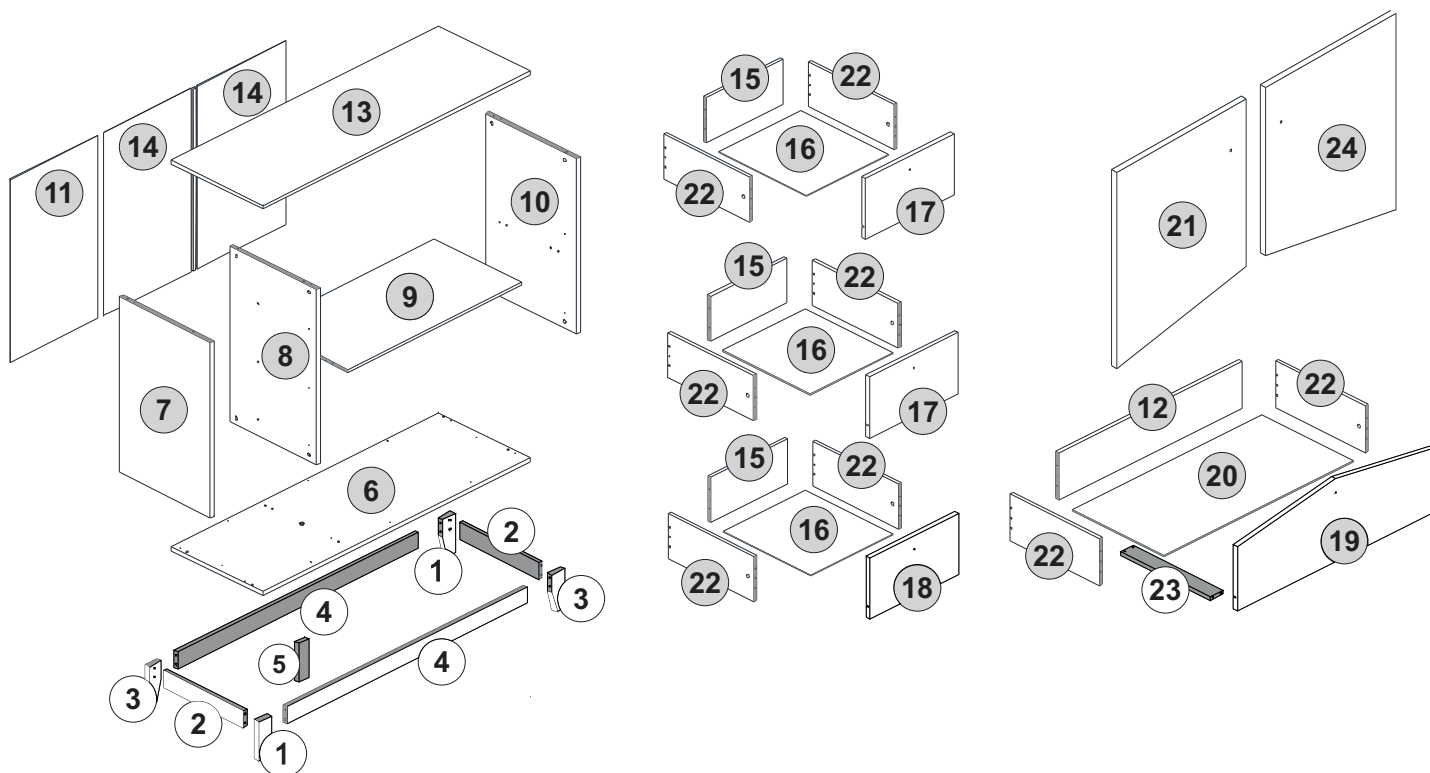

LISTA DE PEÇAS



Número	Descrição	Quantidade	Caixas
1	Pé Esquerdo	2	2/2
2	Rodapé lateral	2	1/2
3	Pé Direito	2	2/2
4	Rodapé Frontal e Traseiro	2	1/2
5	Pé Central	1	2/2
6	Base	1	1/2
7	Lateral esquerda	1	1/2
8	Divisória Vertical	1	1/2
9	Prateleira	1	2/2
10	Lateral Direita	1	1/2
11	Costa Esquerda	1	2/2
12	Traseiro Largo	1	2/2
13	Tampo	1	1/2
14	Costa Direita	2	2/2
15	Traseiro pequeno	3	1/2
16	Fundo Gaveta pequeno	3	2/2
17	Frontal de Gaveta Pequena (Branco)	2	1/2
18	Frontal de Gaveta Pequena (Nature)	1	1/2
19	Frontal de Gaveta Larga (Nature)	1	1/2
20	Fundo de Gaveta Grande	1	2/2
21	Porta Esquerda	1	2/2
22	Laterais de Gaveta	8	2/2
23	Suporte para Base	1	2/2
24	Porta Direita	1	2/2

LISTA DE FERRAGENS


A  Glue (3x)	B  2/+ Dowel Ø6,0 x 30mm (50x)	C  Slide 350mm (4x)	D  1/+ Flat Head Screw Ø4,0 x 40mm (14x)
E  5/+ Nail 10 x 10 (52x)	F  1/+ Cam Nut 12mm (12x)	G  1/+ Cam Bolt (32x)	H  1/+ Screw Ø 6x8 (16x)
I  1/+ Flat Head Screw Ø3,0 x 14mm (16x)	J  2/+ Hole Plugs (10x)	K  Ø3,5x25 01  Washer 02 (2X)  Anti-tip strap 01	
L  1/+ Flan Head Screw Ø4,0 x 30mm (6x)	M  1/+ Pan Head Screw Ø4,0 x 14mm (16x)	N  2/+ Dowel Ø8,0 x 30mm (10x)	O  1/+ Flan Head Screw Ø3,5 x 12mm (4x)
P  1/+ Flat Head Screw Ø3,5 x 25mm (2x)	Q  1/+ Back Panel Bracket (5x)	R  Centre Hinge (2x)	S  End Hinge (2x)
T  Flat Head Screw Ø7 x 40mm (1x)	U  Hinge Plate (4x)	V  Door Stop (2x)	W  1/+ Cam Nut 15mm (20x)
X  Plastic profile 626mm (1x)		Y  Handle(6x)	

TIPS FOR FITTINGS CAM-LOCKS

WHEN FITTING CAM NUT, ENSURE STARTING POSITION IS CORRECT BEFORE YOU INSERT. CONNECTING CAM BOLT TURN CLOCKWISE UNTIL SECURE

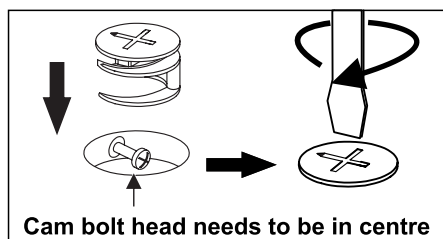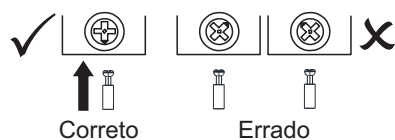


FERRAMENTAS REQUERIDAS

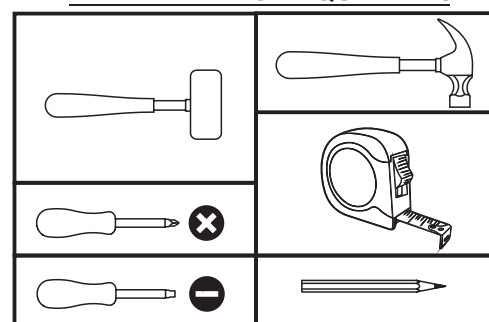

CAMBOLT

Tighten until shoulder in flush with panel. Do not overtighten or undertighten (see example beside)

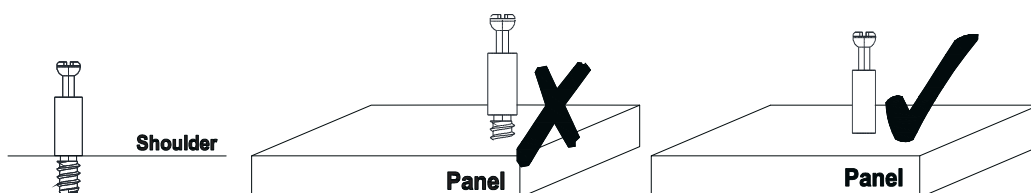

STEP 1

PARTS REQUIRED



1 - LEFT LEG x2

3 - RIGHT LEG x2

HARDWARE REQUIRED

G  08

TOOLS REQUIRED

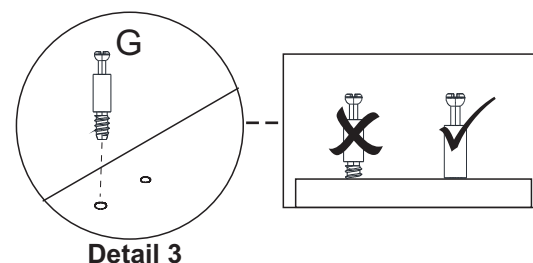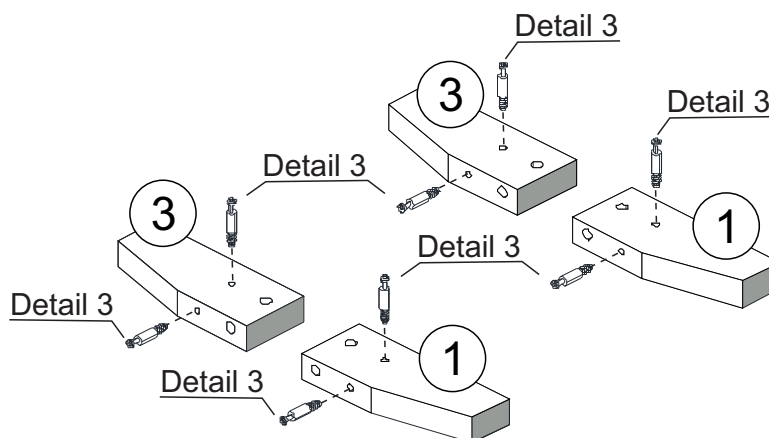

STEP 2

PARTS REQUIRED

2- LEG SUPPORT LEFT & RIGHT x2

4- LEG SUPPORT FRONT & BACK x2




HARDWARE REQUIRED

A  01


B  Ø6 x 30mm 04

N  Ø8 x 30mm 08

TOOLS REQUIRED

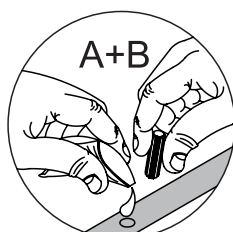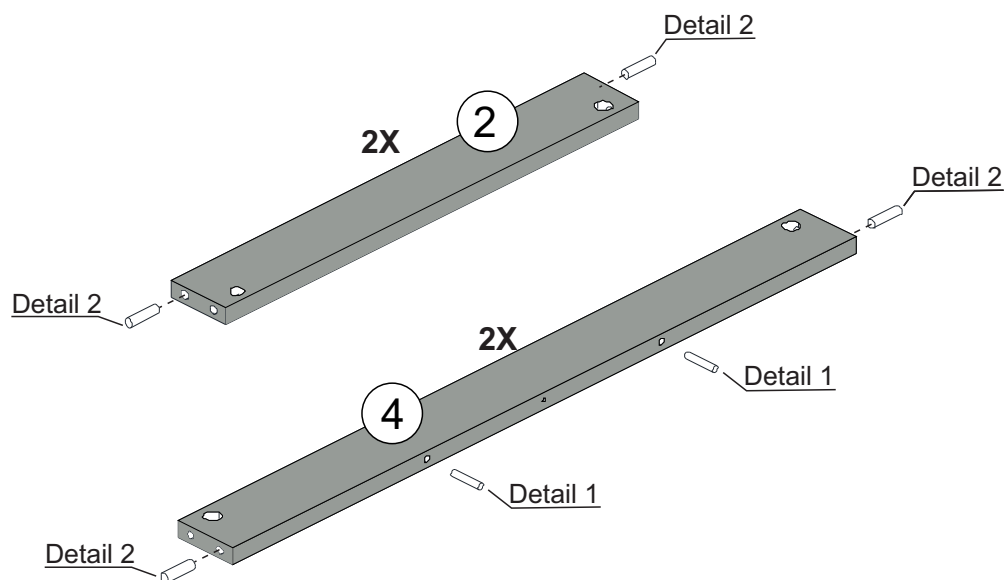

Detail 1

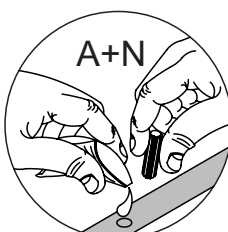

Detail 2

STEP 3

PARTS REQUIRED

9 - SHELF x1

HARDWARE REQUIRED




A  01

B  Ø6 x 30mm 04

O  Ø3,5 x 12mm 02

V  01

TOOLS REQUIRED

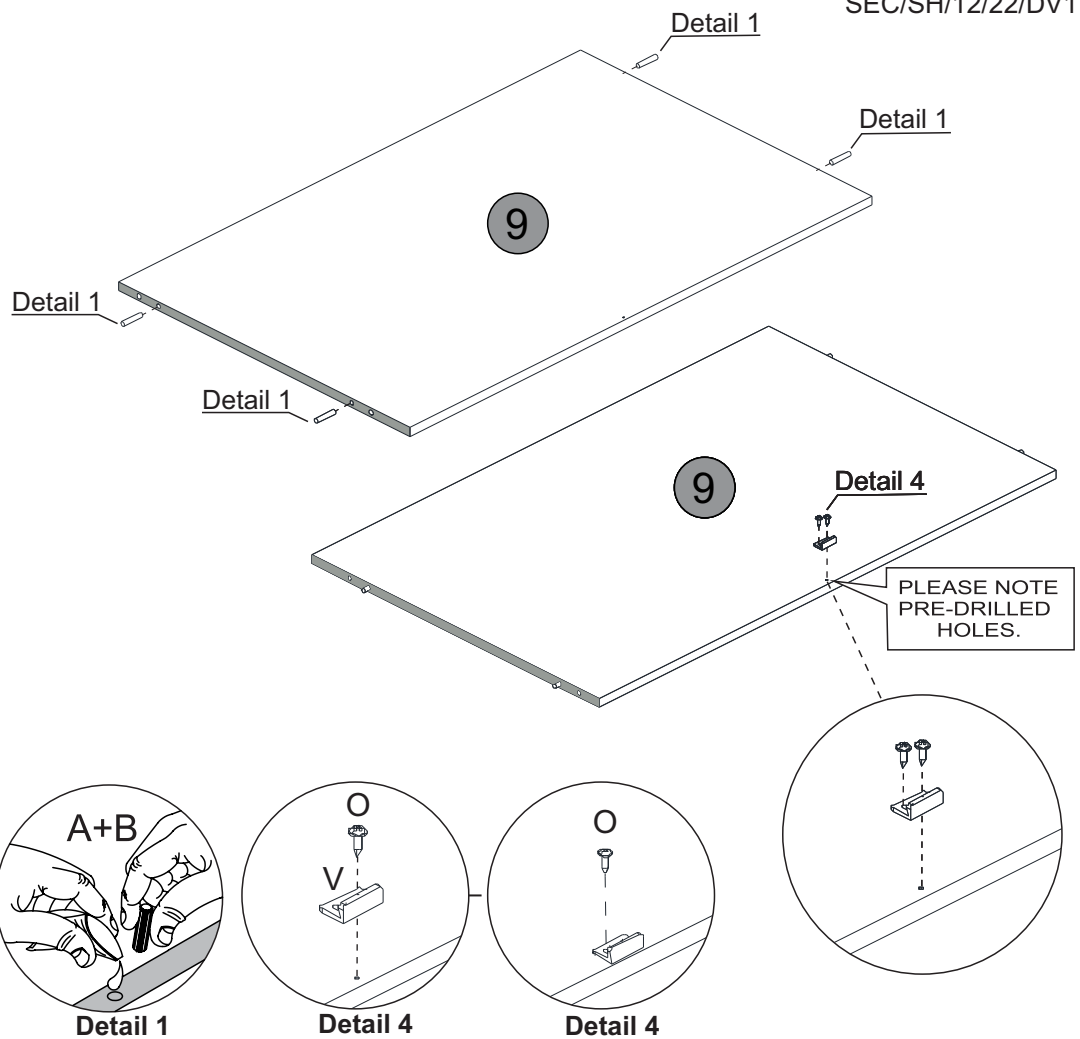

STEP 4

PARTS REQUIRED

13 - TOP PANEL x1


HARDWARE REQUIRED

G  06

O  Ø3,5 x 12mm 02

V  01

TOOLS REQUIRED

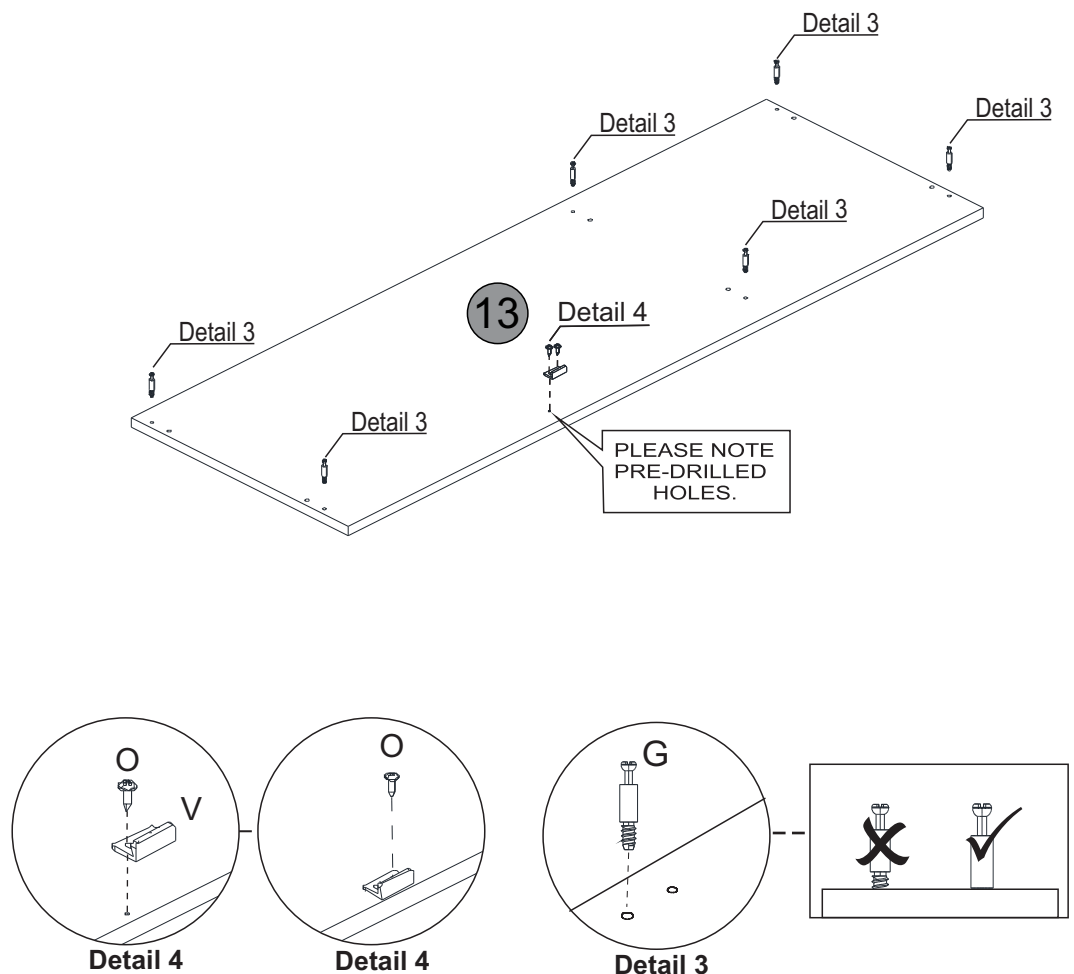

STEP 5

PARTS REQUIRED




7- LEFT SIDE PANEL x1

HARDWARE REQUIRED

A  01

B  Ø6 x 30mm 04

TOOLS REQUIRED

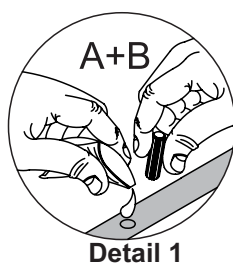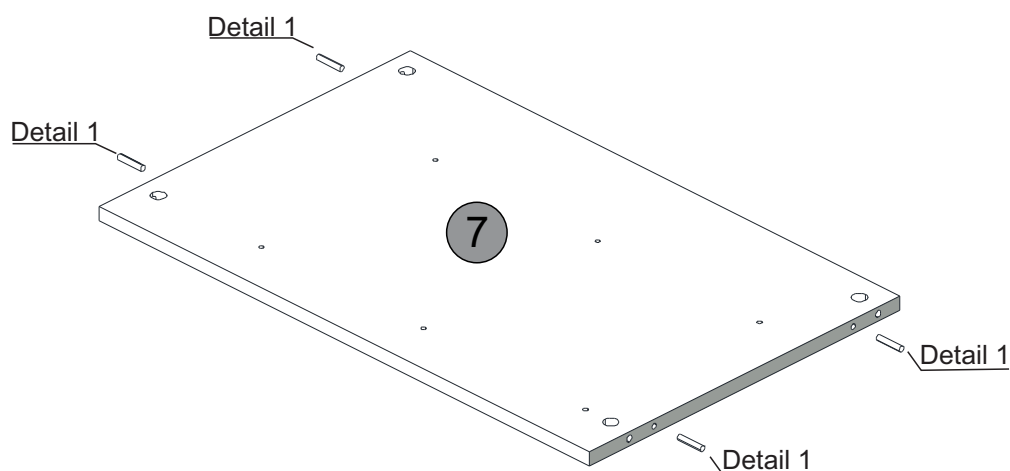

STEP 6

PARTS REQUIRED





7- LEFT SIDE PANEL x1

HARDWARE REQUIRED

C  Left 350mm 03

H  Ø6 x 8mm 06

TOOLS REQUIRED

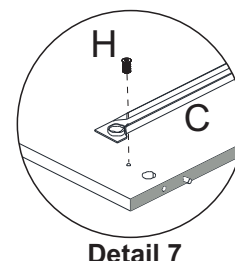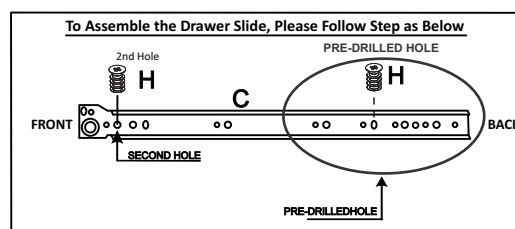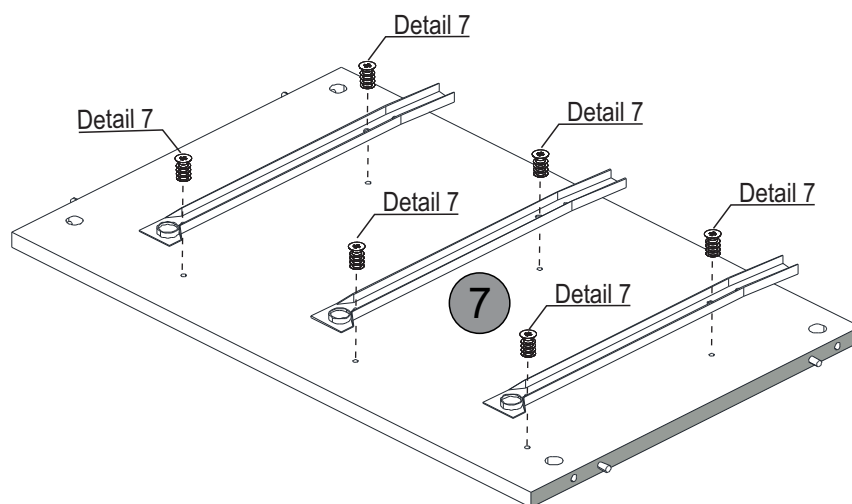

STEP 7

PARTS REQUIRED




8- DIVISION PANEL x1

HARDWARE REQUIRED

A  01

B  Ø6 x 30mm 04

TOOLS REQUIRED

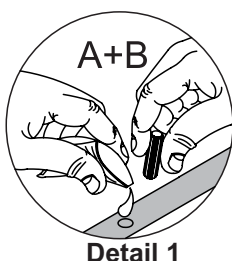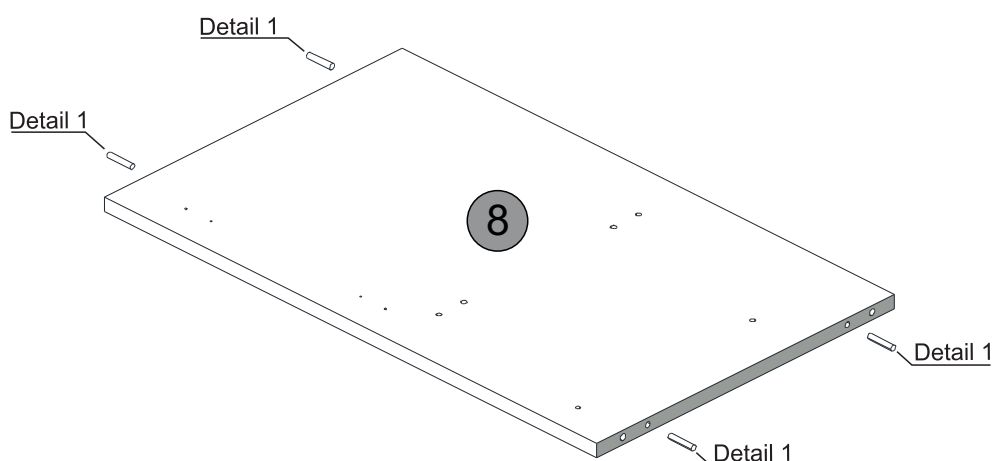

STEP 8

PARTS REQUIRED





8- DIVISION PANEL x1

HARDWARE REQUIRED

C  03

H  Ø6 x 8mm 06

TOOLS REQUIRED

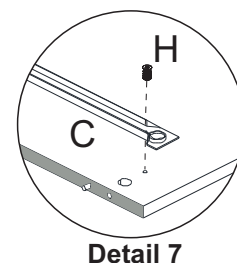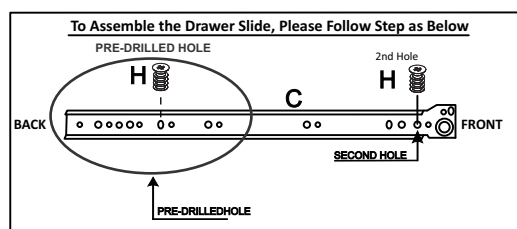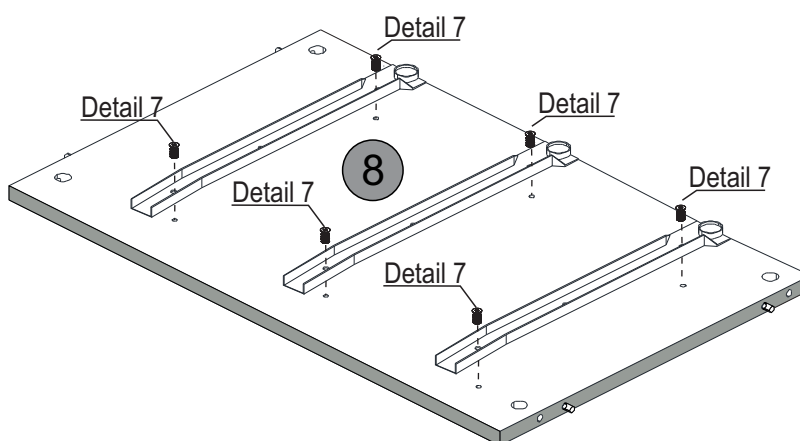

STEP 9

PARTS REQUIRED


8 - DIVISION PANEL x1

HARDWARE REQUIRED

C  01





G  02

H  02



M  04

U  02


TOOLS REQUIRED

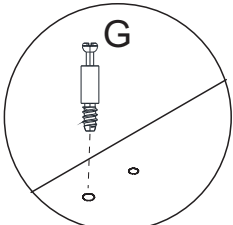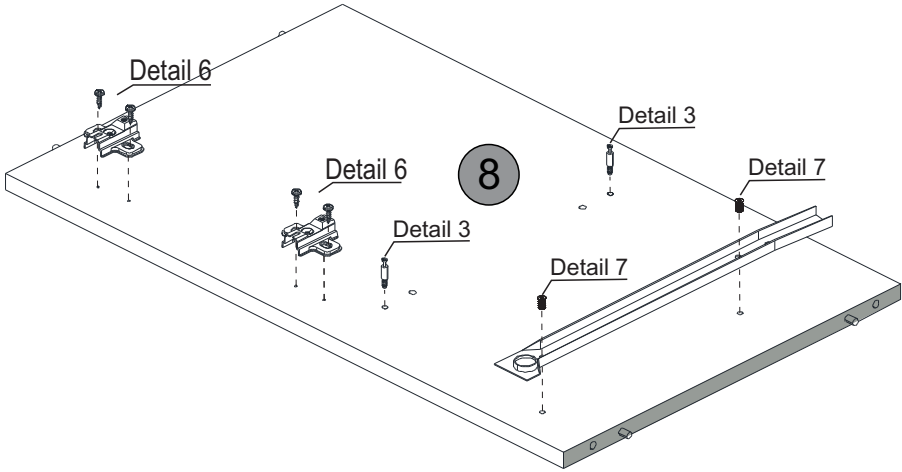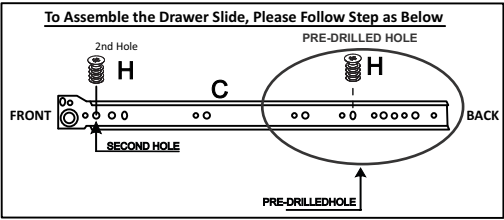

Detail 3

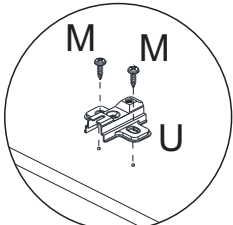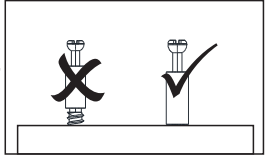

Detail 6

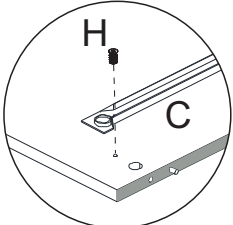

Detail 7

STEP 10

PARTS REQUIRED

10- RIGHT SIDE PANEL x1





HARDWARE REQUIRED

A  01


B  04

G  02


TOOLS REQUIRED

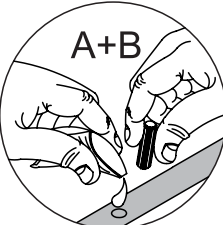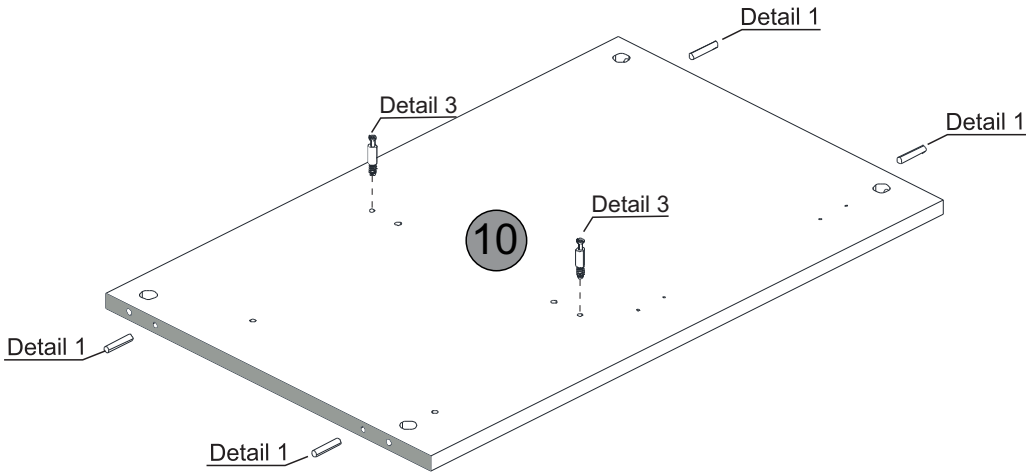

Detail 1

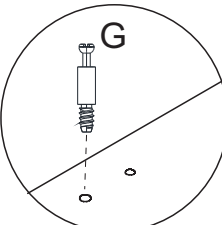

Detail 3

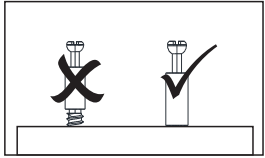






STEP 11

PARTS REQUIRED

10 - RIGHT SIDE PANEL x1

C	Right 350mm	01
H	Ø6 x 8mm	02
M	Ø4,0 x 14mm	04
U		02

TOOLS REQUIRED

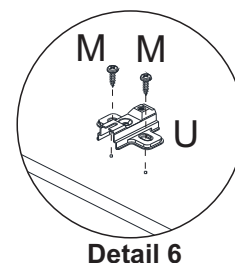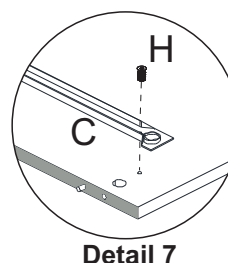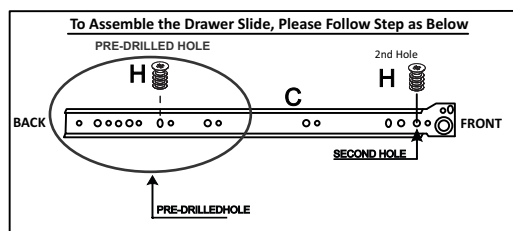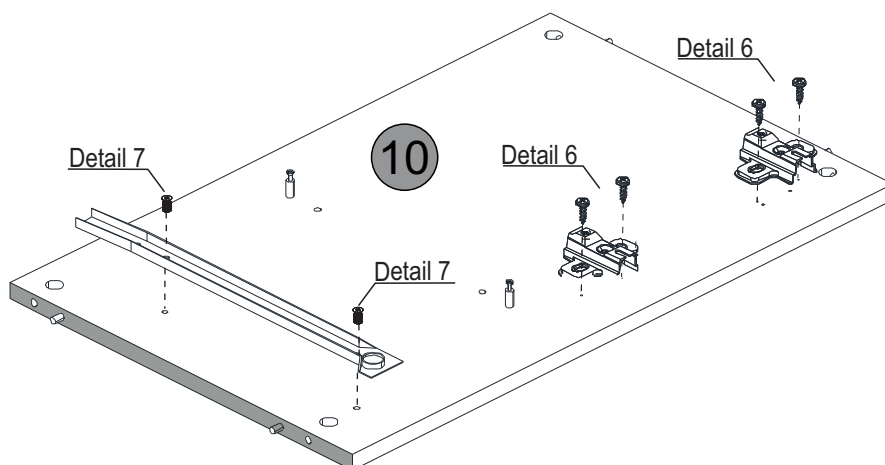

STEP 12

PARTS REQUIRED

1 - LEFT LEG x2





3 - RIGHT LEG x2

4 - LEG SUPPORT FRONT & BACKx2

HARDWARE REQUIRED

A	Glue	01
W		04


TOOLS REQUIRED

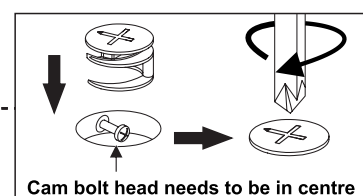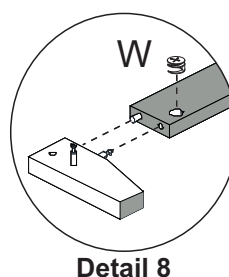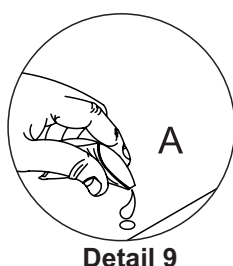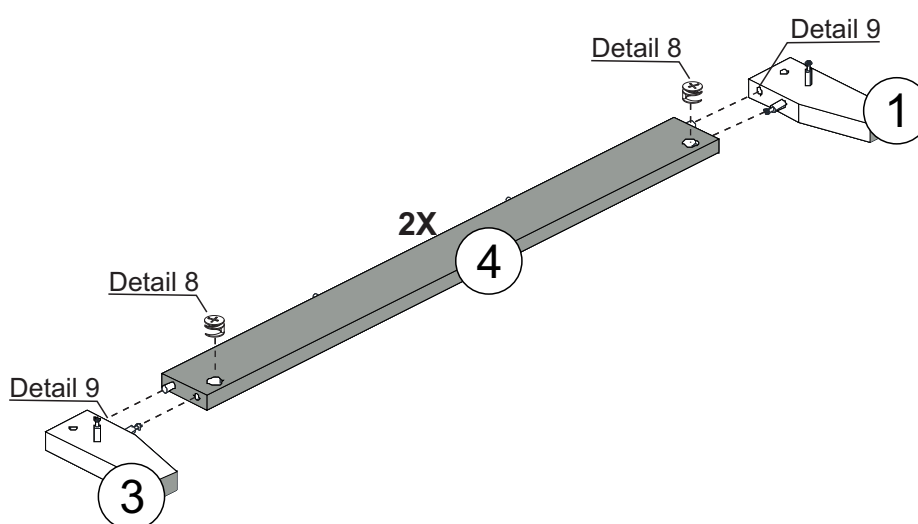

STEP 13

PARTS REQUIRED

2 - LEG SUPPORT LEFT & RIGHTx2



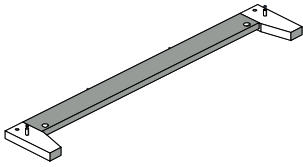


HARDWARE REQUIRED


A  01

W  02


TOOLS REQUIRED

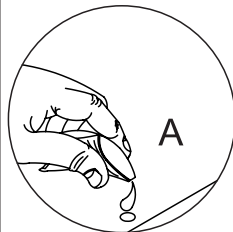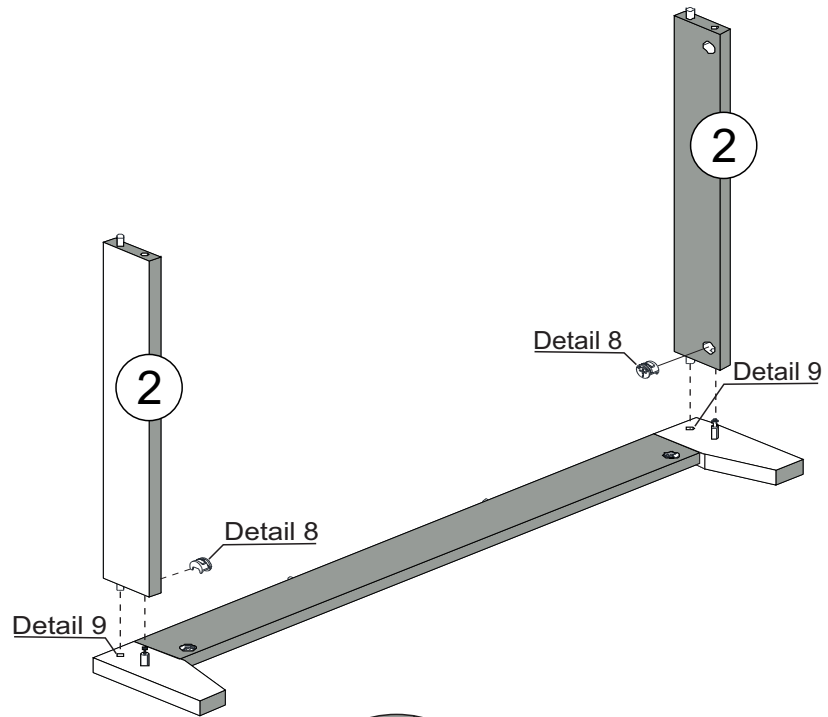

Detail 9

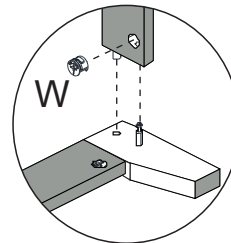


Detail 8

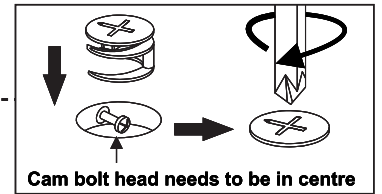

STEP 14

PARTS REQUIRED



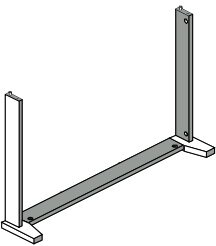


HARDWARE REQUIRED



A  01

W  02

TOOLS REQUIRED

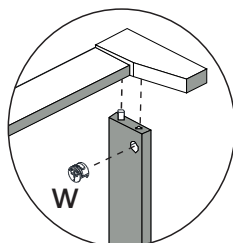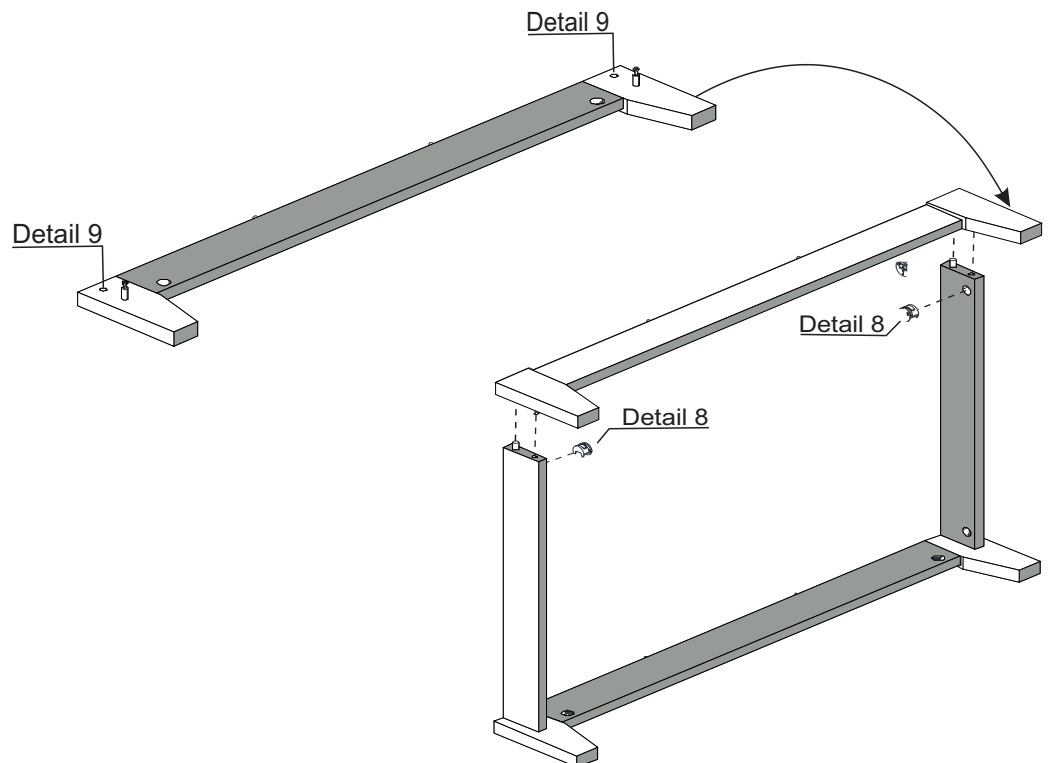

Detail 8

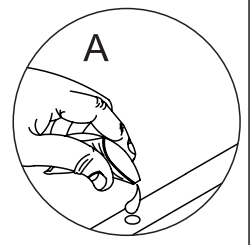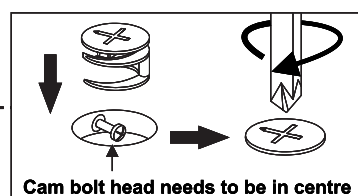


Detail 9

STEP 15


PARTS REQUIRED

6 - BASE PANEL x1



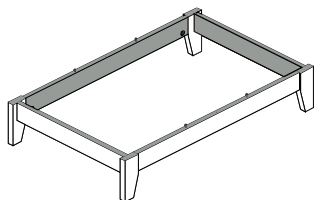


HARDWARE REQUIRED


A  01

D  06
Ø4,0 x 40mm

TOOLS REQUIRED

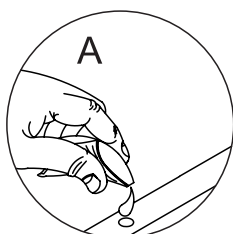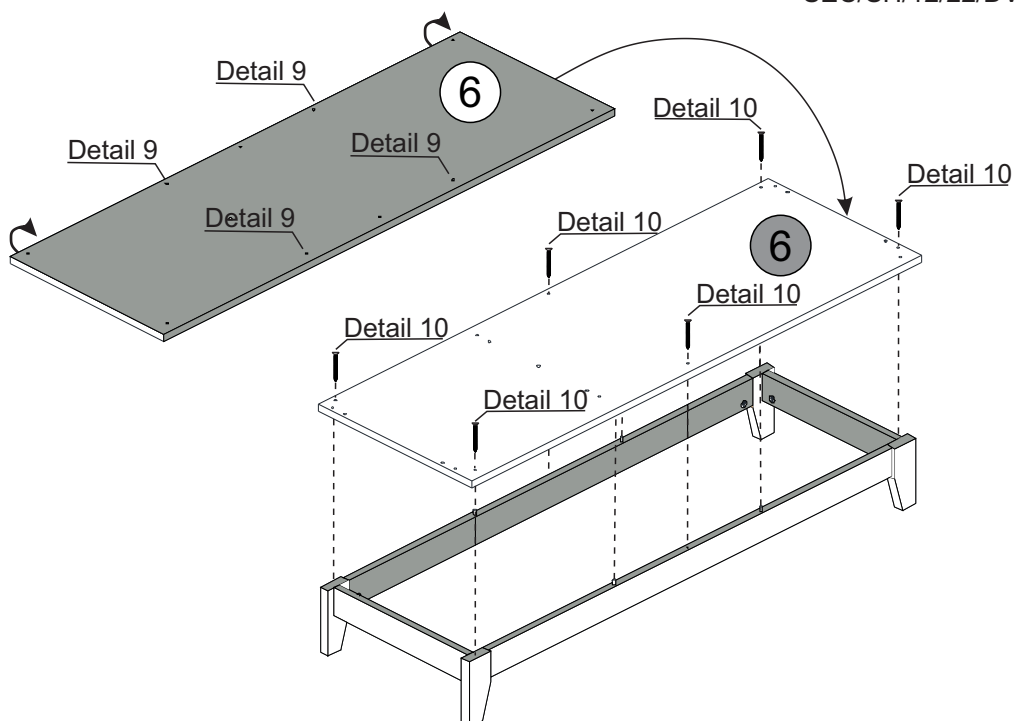


Detail 9

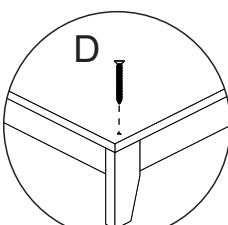

Detail 10

STEP 16




PARTS REQUIRED

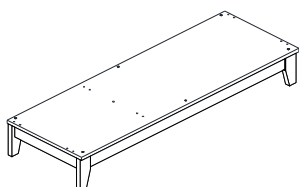


HARDWARE REQUIRED

G  06

TOOLS REQUIRED

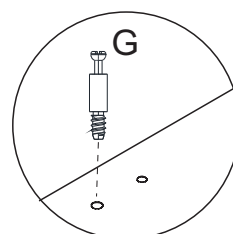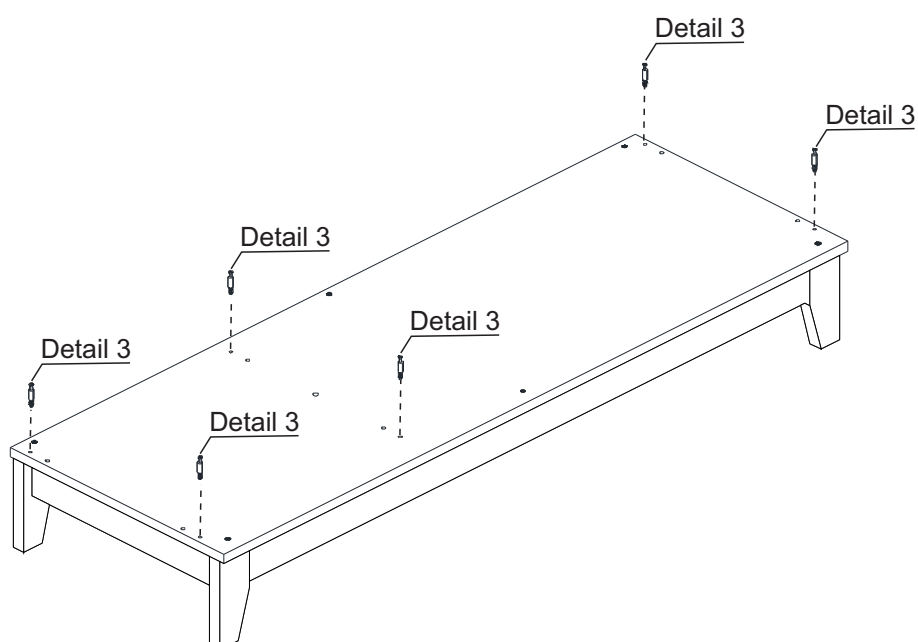


Detail 3

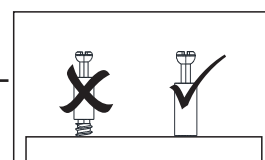

STEP 17

PARTS REQUIRED




5 - CENTRE FOOT x1

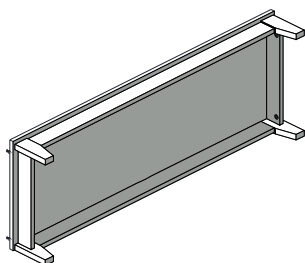

HARDWARE REQUIRED

T  01
Ø7 x 40mm

TOOLS REQUIRED

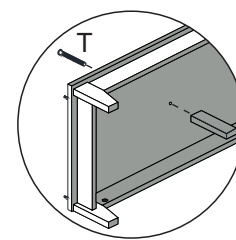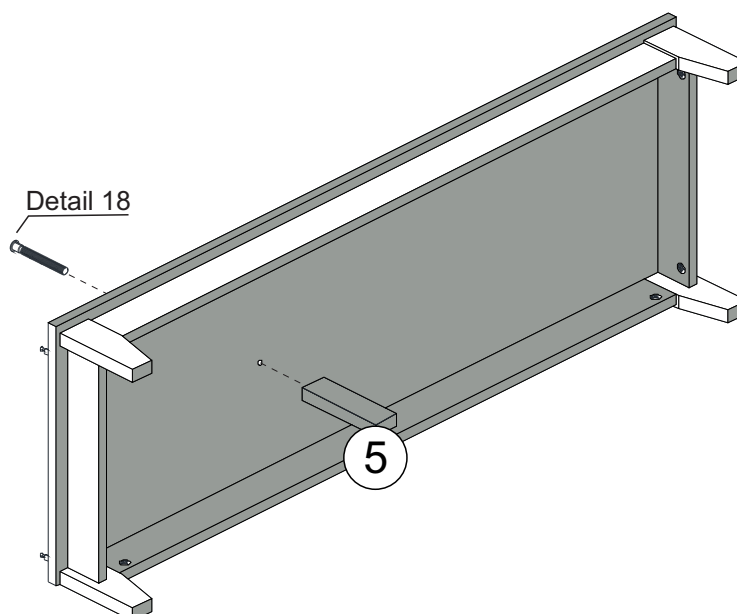

Detail 18

STEP 18

PARTS REQUIRED

8 - DIVISION PANEL x1

9 - SHELF x1




10 - RIGHT SIDE PANEL x1

HARDWARE REQUIRED


A  01

F  Ø12mm 04


TOOLS REQUIRED

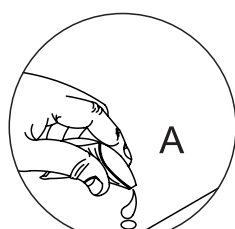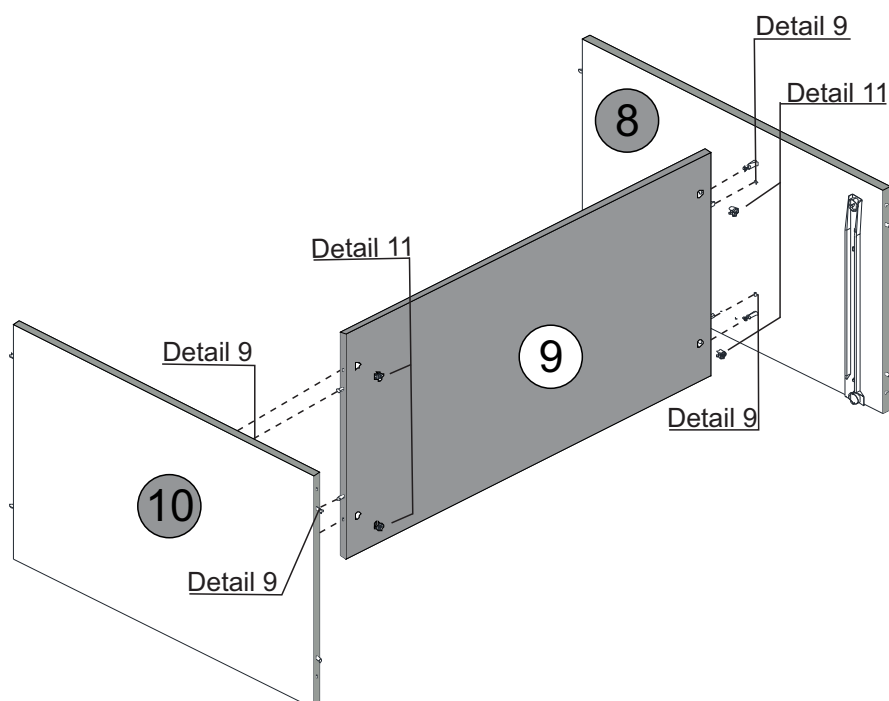

Detail 9

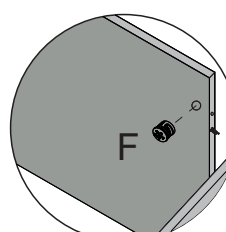


Detail 11

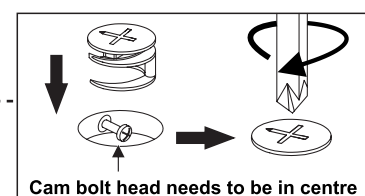

Cam bolt head needs to be in centre

STEP 19




PARTS REQUIRED

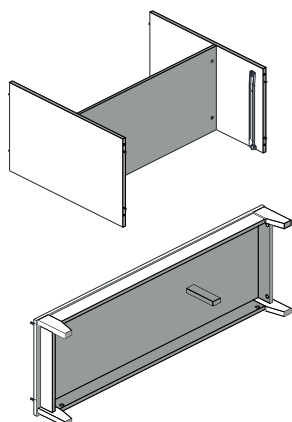


HARDWARE REQUIRED

A		01
W		04


TOOLS REQUIRED

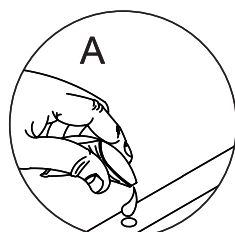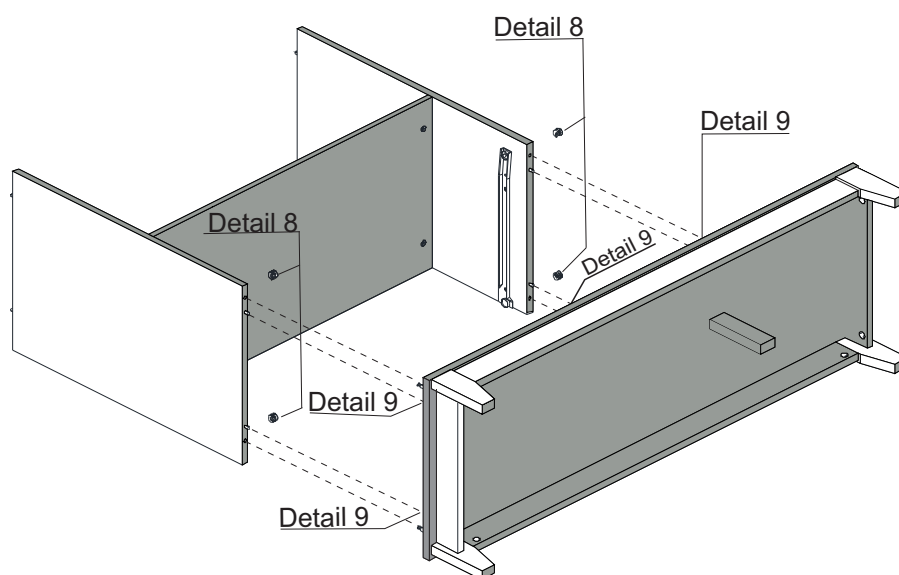

Detail 9

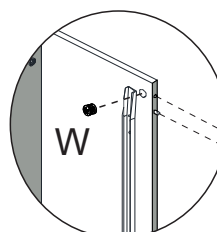


Detail 8

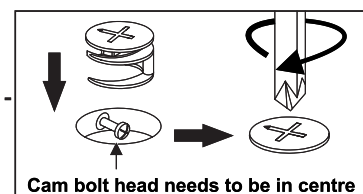

STEP 20

PARTS REQUIRED



7- LEFT SIDE PANEL	x1
--------------------	----

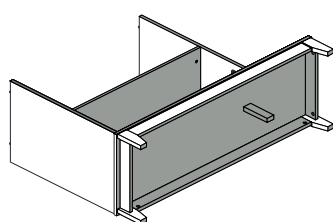


HARDWARE REQUIRED

A		01
W		02


TOOLS REQUIRED

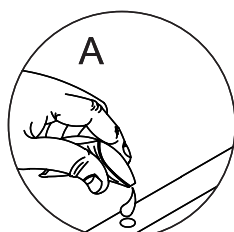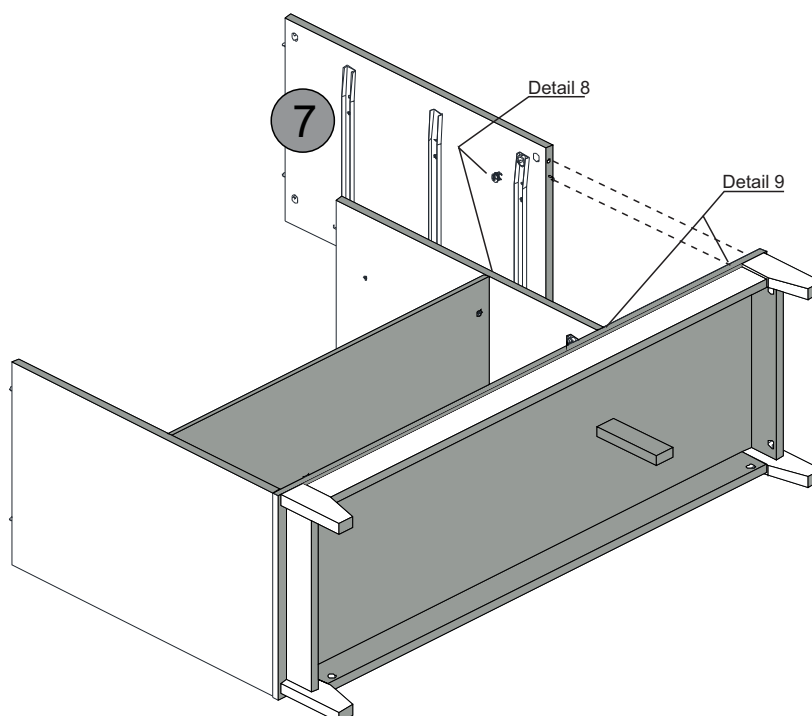

Detail 9

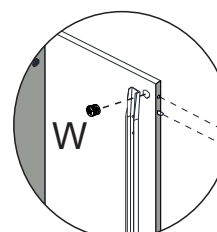


Detail 8

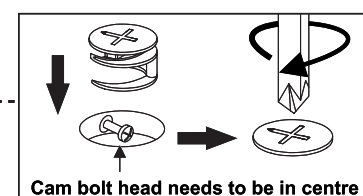

STEP 21

PARTS REQUIRED

13 - TOP PANEL x1

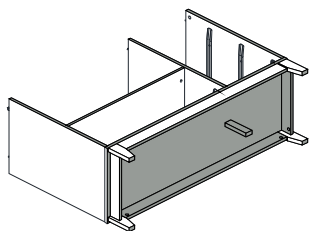




HARDWARE REQUIRED

A  01


W  06

J  02


TOOLS REQUIRED

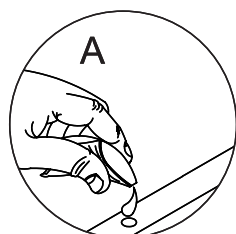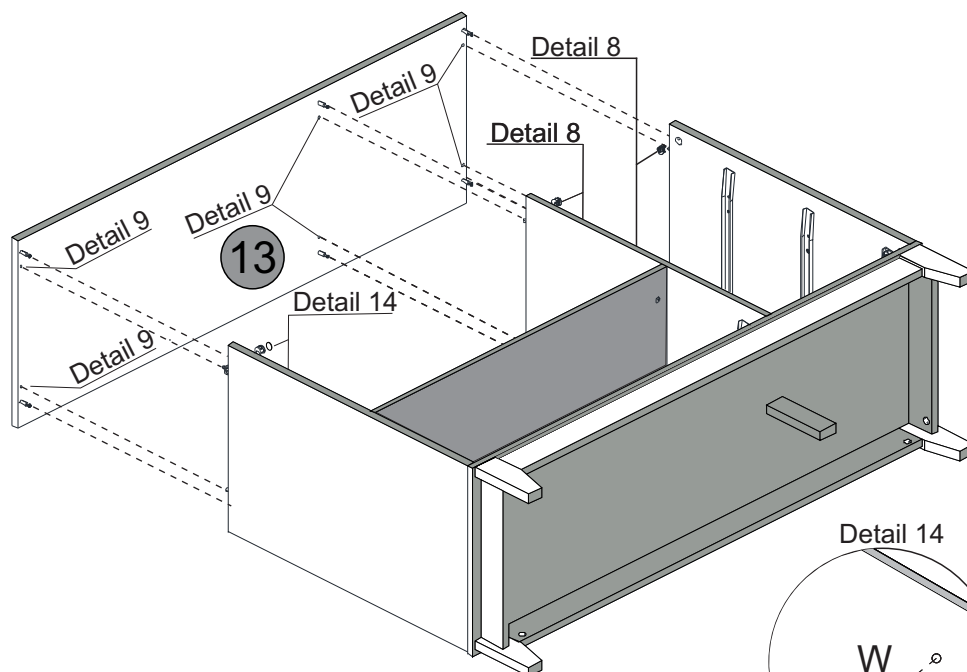

Detail 9

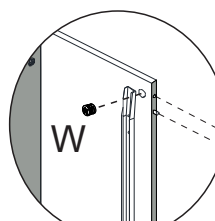

Detail 8

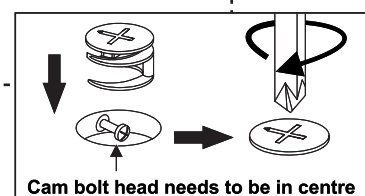


Cam bolt head needs to be in centre

STEP 22

PARTS REQUIRED

11- BACK PANEL x1


14- BACK PANEL x2

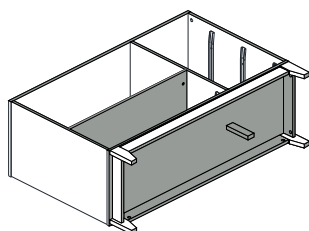




HARDWARE REQUIRED

E  10 x 10 29


Q  05

X  01

TOOLS REQUIRED

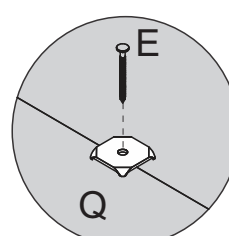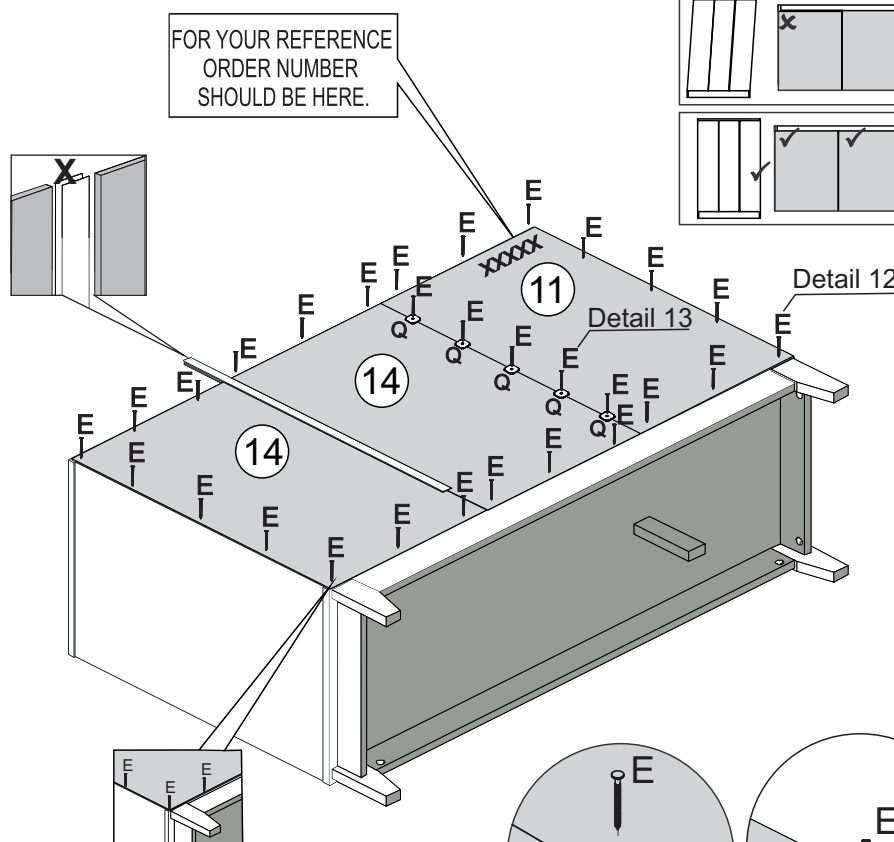

Detail 13

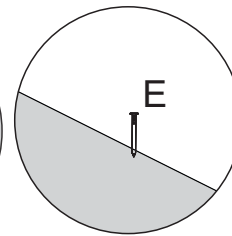

Detail 12

STEP 23

PARTS REQUIRED

12- DRAWER BACK (LARGE) x1

15- DRAWER BACK (SMALL) x3




22- DRAWER SIDES x8

23- DRAWER BASE SUPPORT x1

HARDWARE REQUIRED

A  01B  34
Ø6 x 30mm

TOOLS REQUIRED

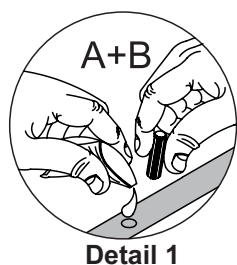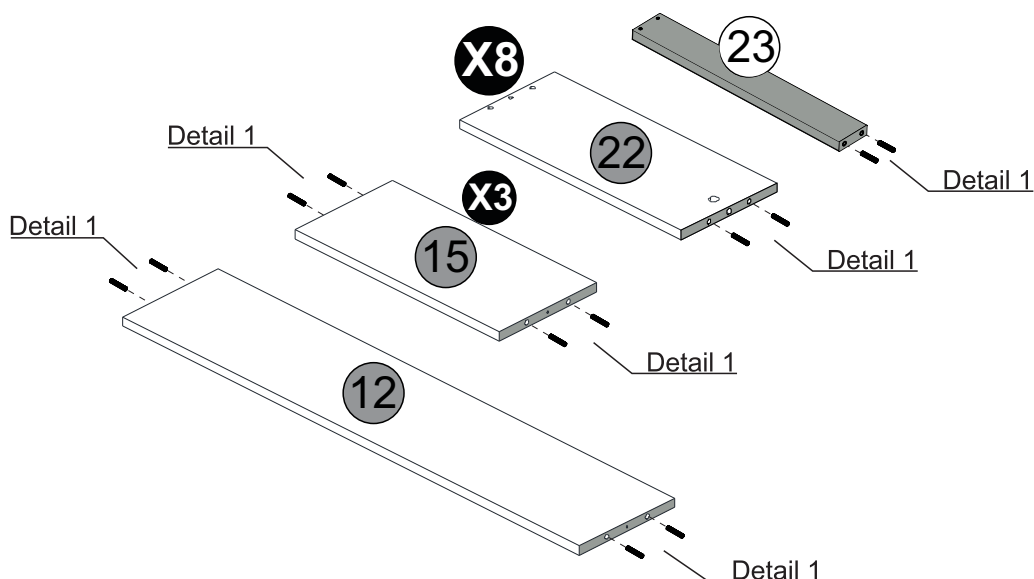

STEP 24

PARTS REQUIRED

17- DRAWER FRONT WHITE (SMALL) x2




18- DRAWER FRONT PINE (SMALL) x1

19- DRAWER FRONT PINE (LARGE) x1

HARDWARE REQUIRED

G  08

TOOLS REQUIRED

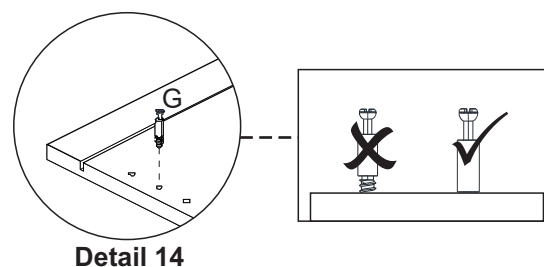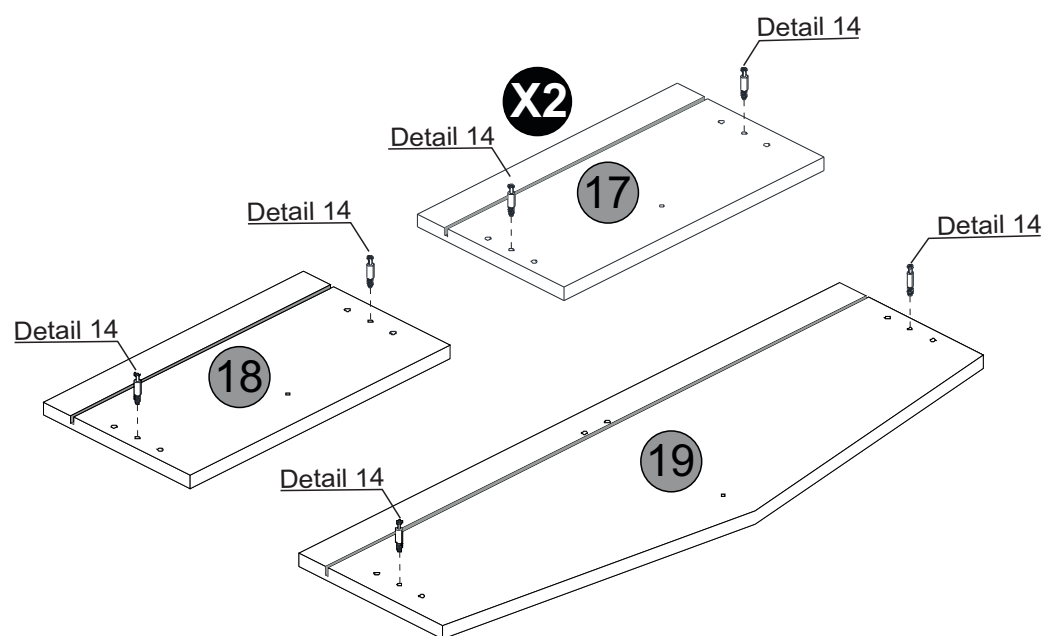


STEP 25

PARTS REQUIRED




22- DRAWER SIDES x6

15- DRAWER BACK (SMALL) x3

HARDWARE REQUIRED

D  06
Ø4,0 x 40mm


TOOLS REQUIRED

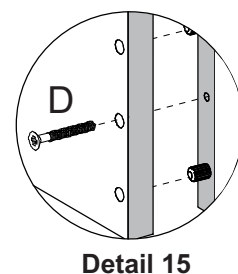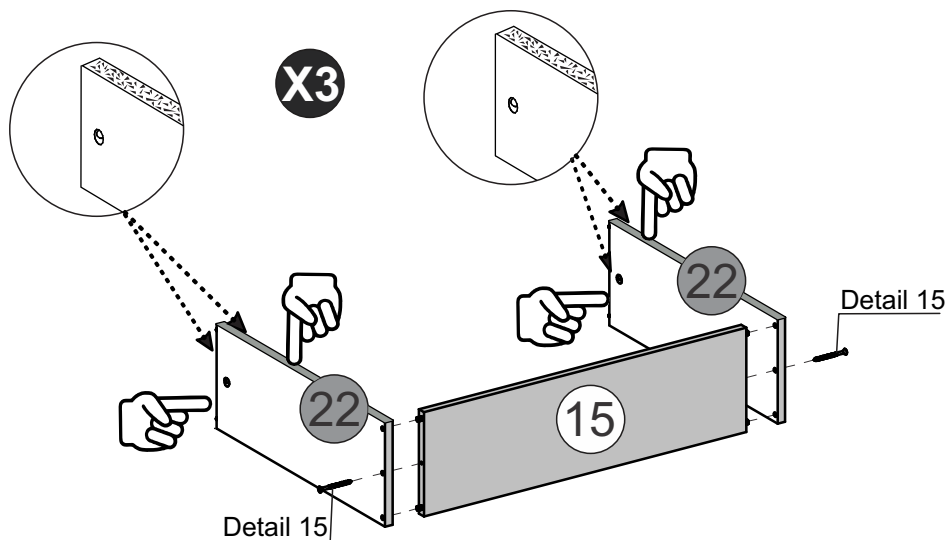

STEP 26

PARTS REQUIRED






17- DRAWER FRONT WHITE (SMALL) x2

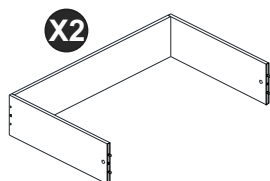

HARDWARE REQUIRED

A  01F  Ø12mm 04J  04


TOOLS REQUIRED

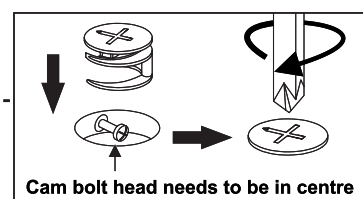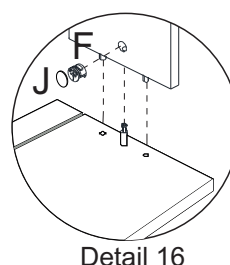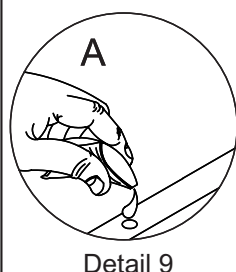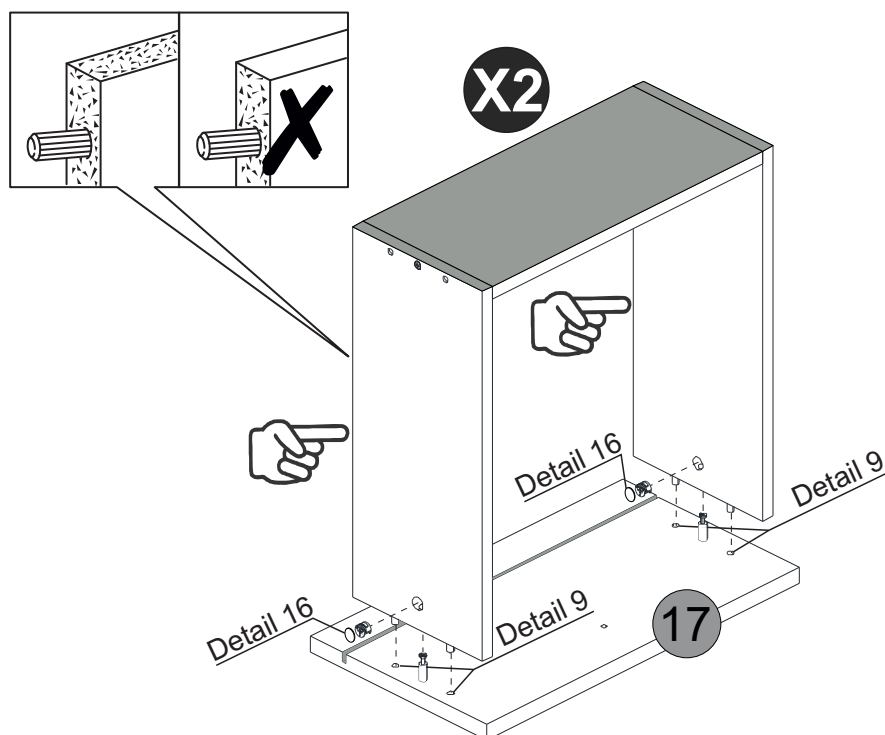

STEP 27

PARTS REQUIRED

18- DRAWER FRONT PINE (SMALL) x1

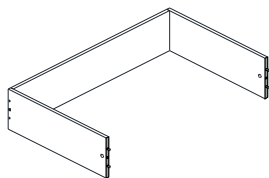





HARDWARE REQUIRED

A  01


F  Ø12mm 02

J  02


TOOLS REQUIRED

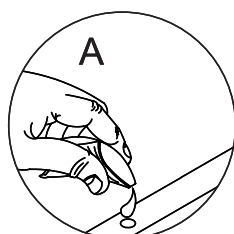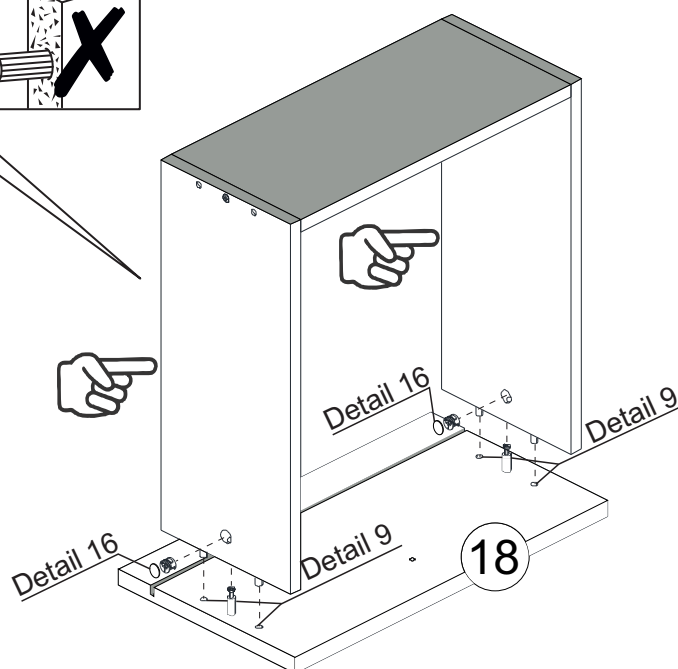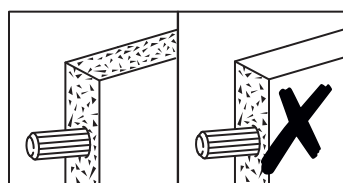

Detail 9

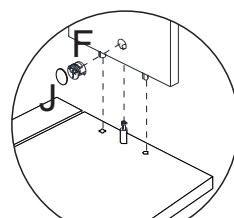


Detail 16

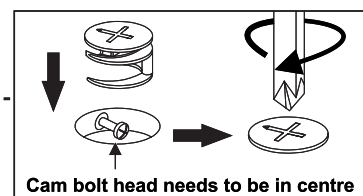

STEP 28

PARTS REQUIRED





16 - DRAWER BASE x2

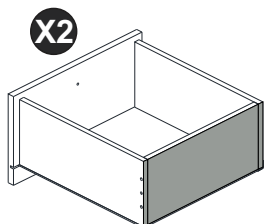


HARDWARE REQUIRED

E  10

TOOLS REQUIRED

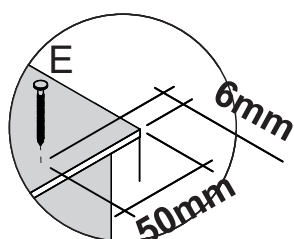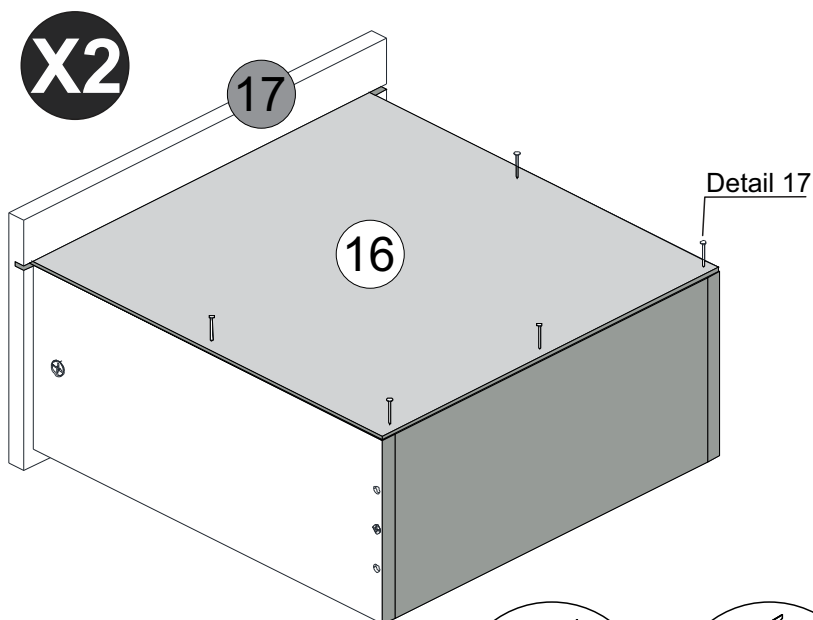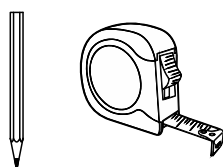


Detail 17

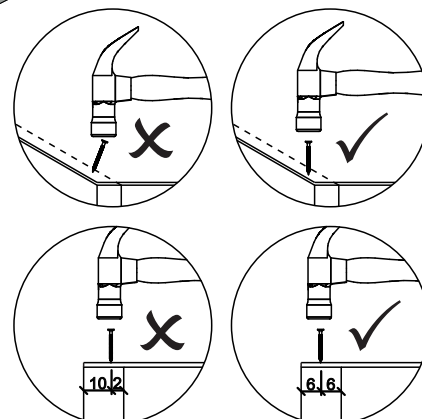

STEP 29

PARTS REQUIRED






16 - DRAWER BASE x1

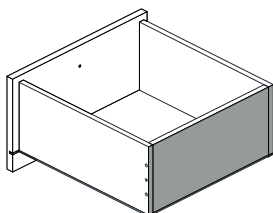

HARDWARE REQUIRED


E  05

TOOLS REQUIRED

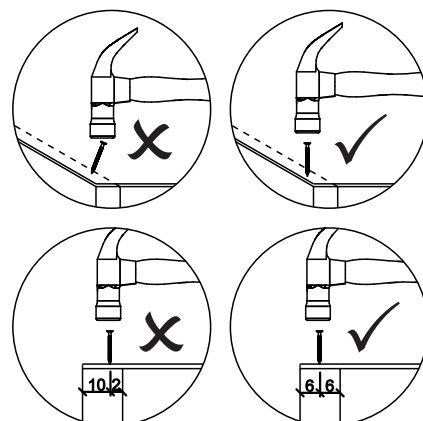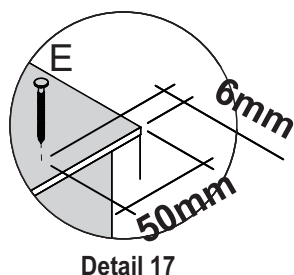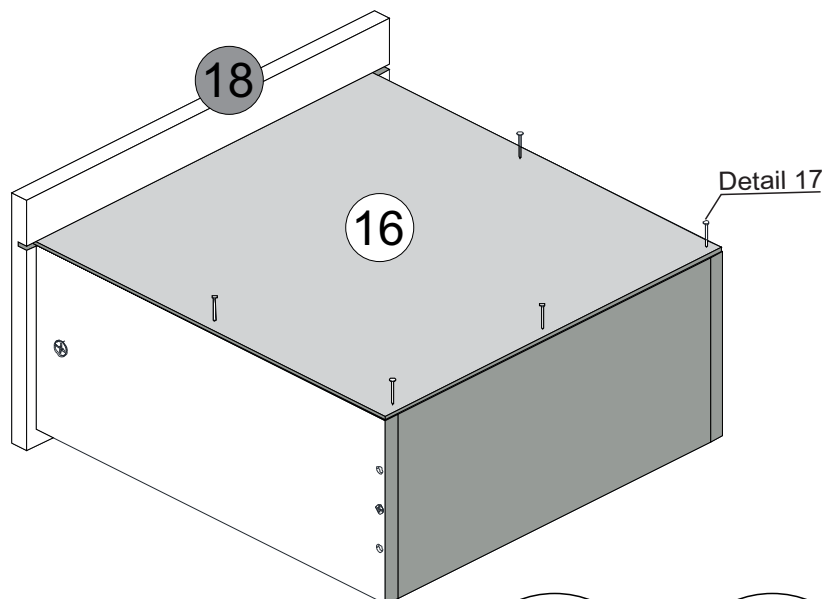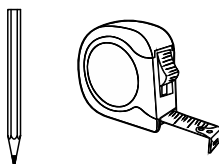



STEP 30

PARTS REQUIRED

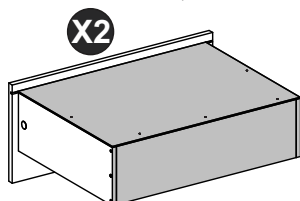





HARDWARE REQUIRED

C  LEFT 02

C  RIGHT 02

I  08
Ø3.0 x 14mm


TOOLS REQUIRED

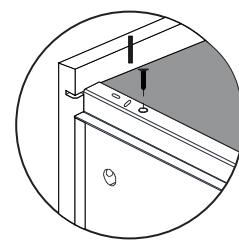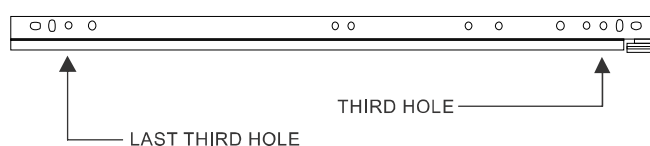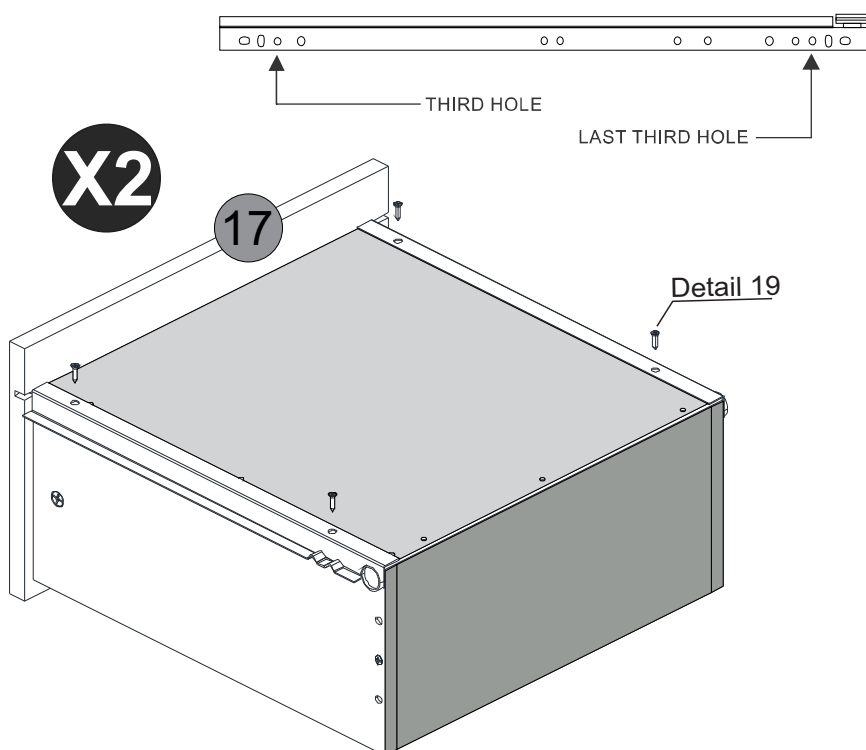


Detail 19

STEP 31





PARTS REQUIRED

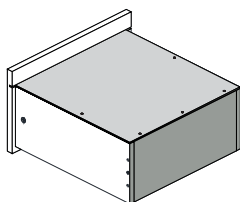

HARDWARE REQUIRED




TOOLS REQUIRED

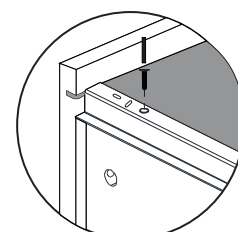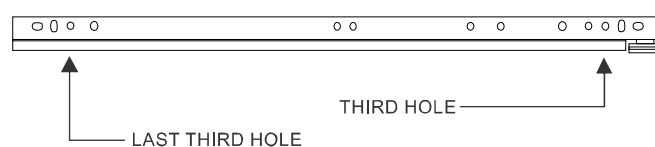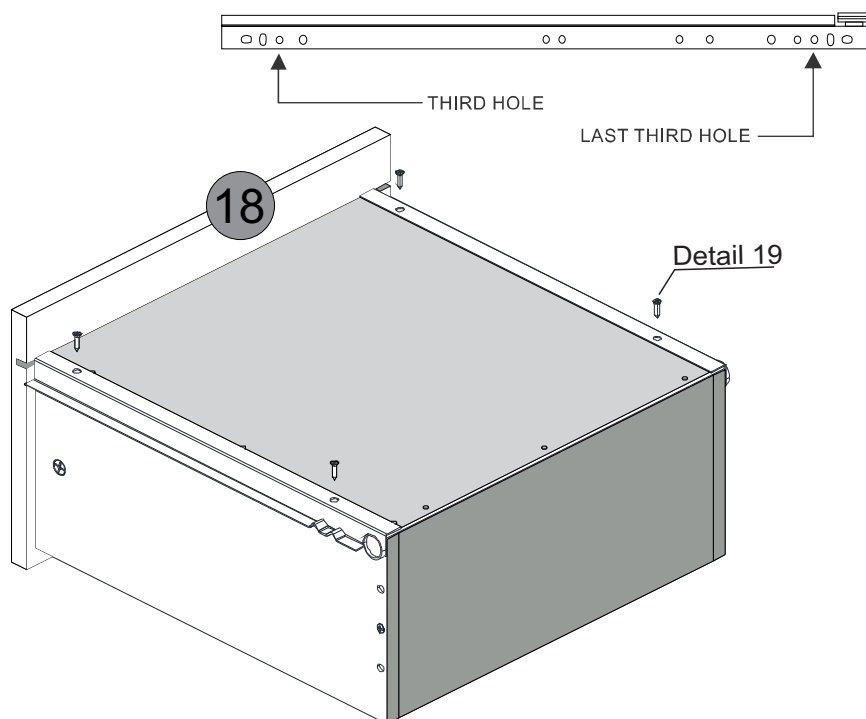



Detail 19

STEP 32




PARTS REQUIRED

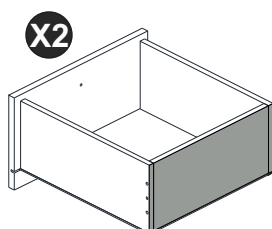

HARDWARE REQUIRED




TOOLS REQUIRED

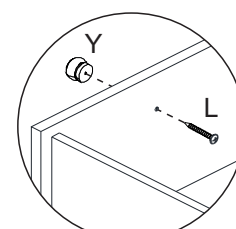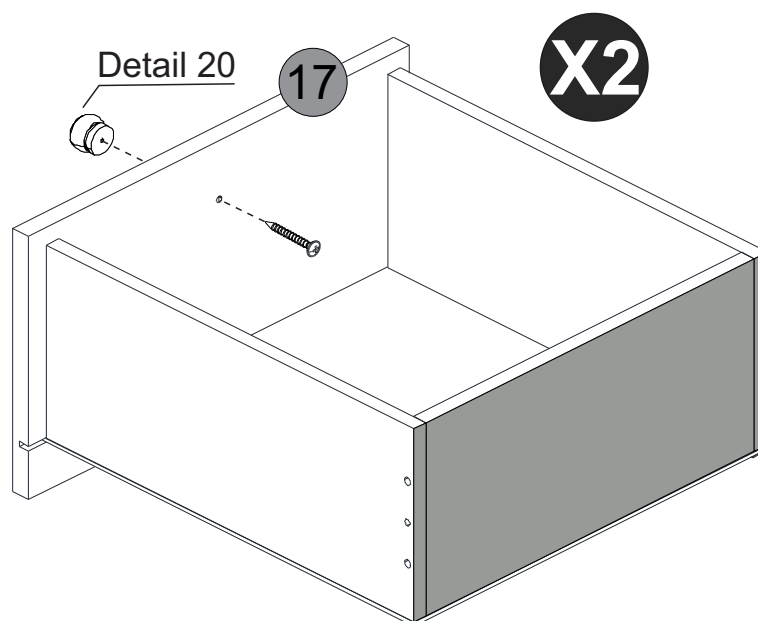



Detail 20

STEP 33




PARTS REQUIRED

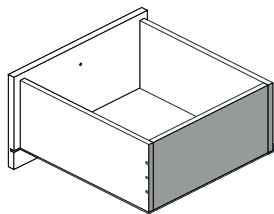

HARDWARE REQUIRED



TOOLS REQUIRED

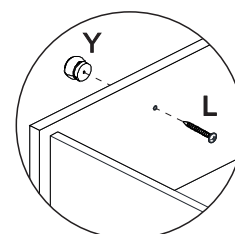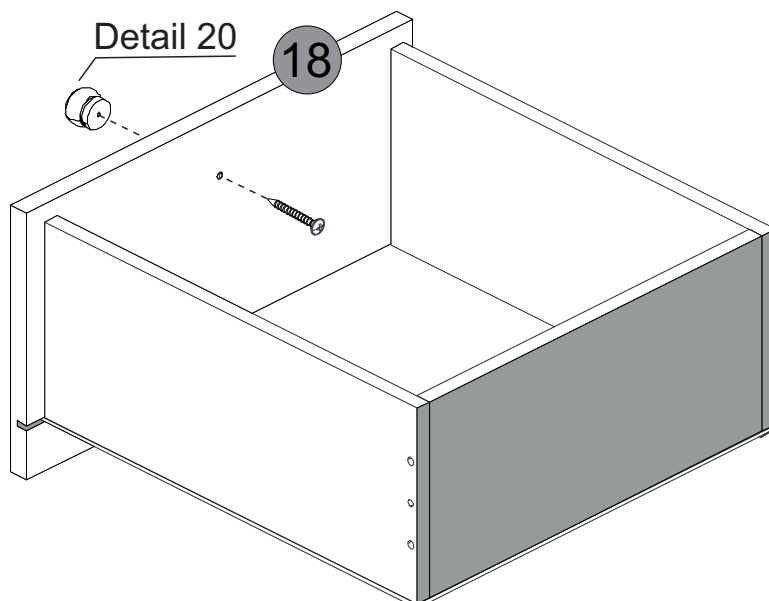

Detail 20


STEP 34

PARTS REQUIRED




22- DRAWER SIDES	x2
------------------	----

12- DRAWER BACK (LARGE)	x1
-------------------------	----

HARDWARE REQUIRED



TOOLS REQUIRED

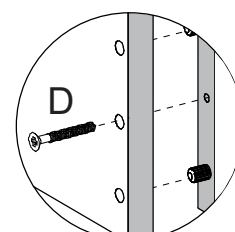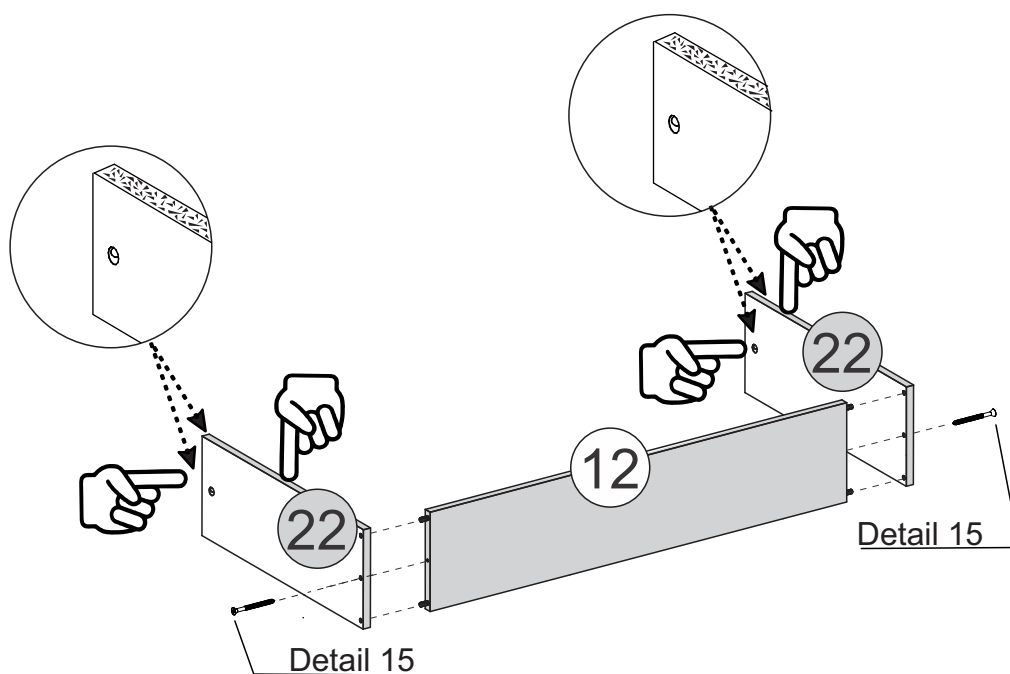


Detail 15

STEP 35

PARTS REQUIRED

19- DRAWER FRONT PINE (LARGE) x1

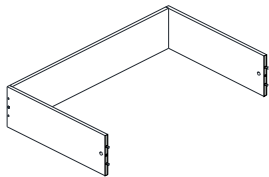





HARDWARE REQUIRED

A 01


F Ø12mm 02

J 02


TOOLS REQUIRED

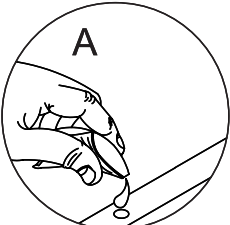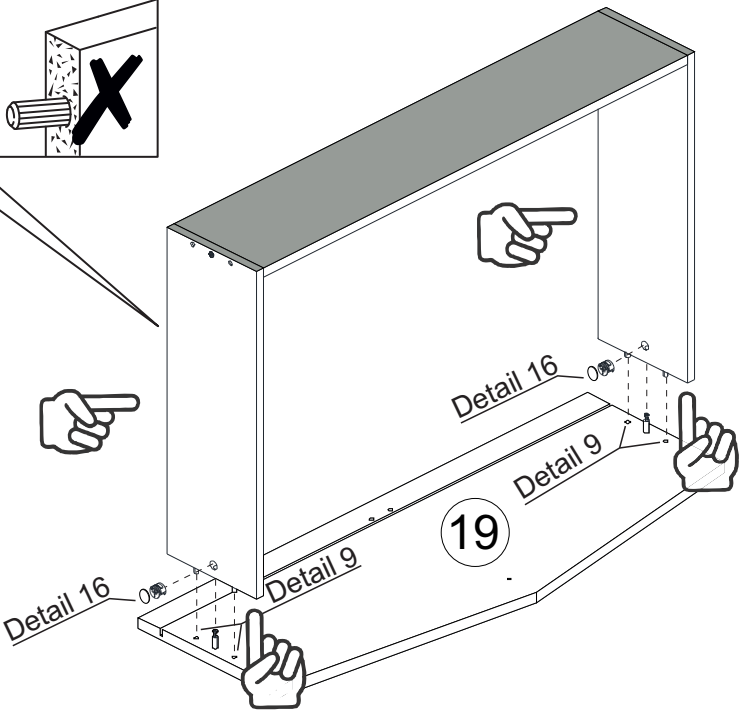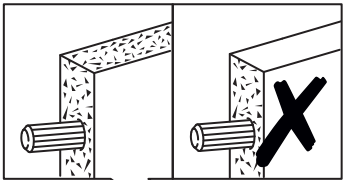

Detail 9

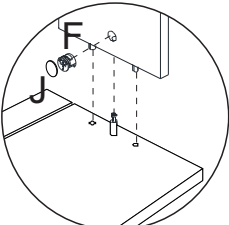

Detail 16

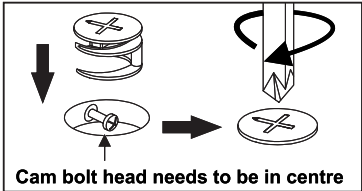


Cam bolt head needs to be in centre

STEP 36

PARTS REQUIRED

20- DRAWER BASE x1

23- DRAWER BASE SUPPORT x1



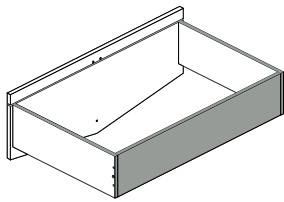


HARDWARE REQUIRED


A 01

E 08





TOOLS REQUIRED

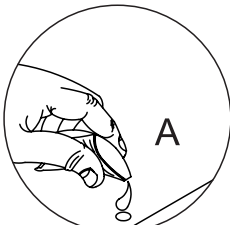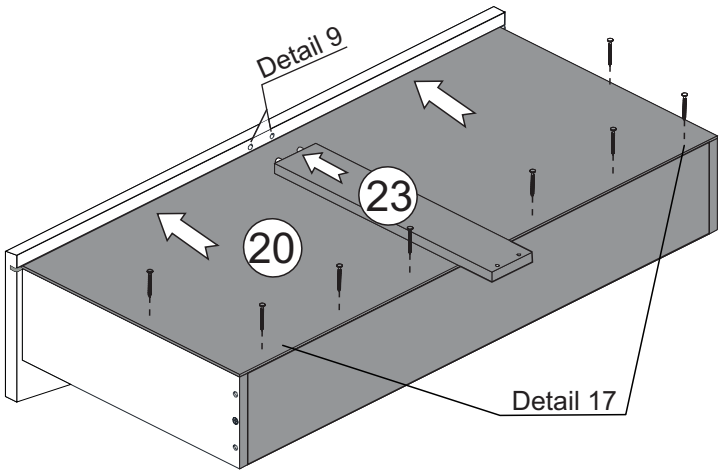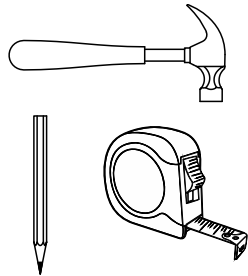

Detail 9

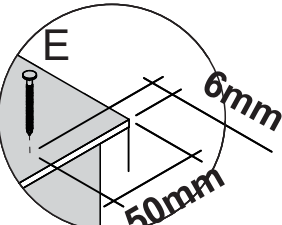


Detail 17

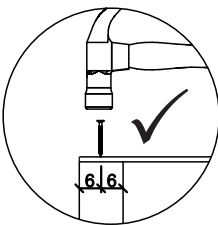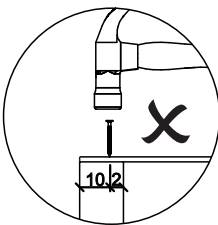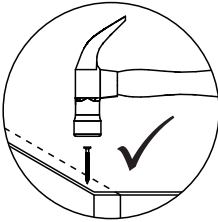
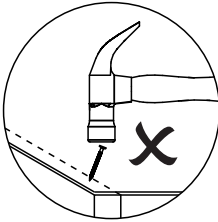


STEP 37



PARTS REQUIRED

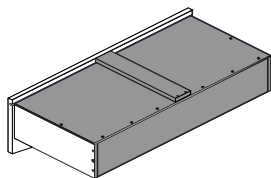

HARDWARE REQUIRED



TOOLS REQUIRED

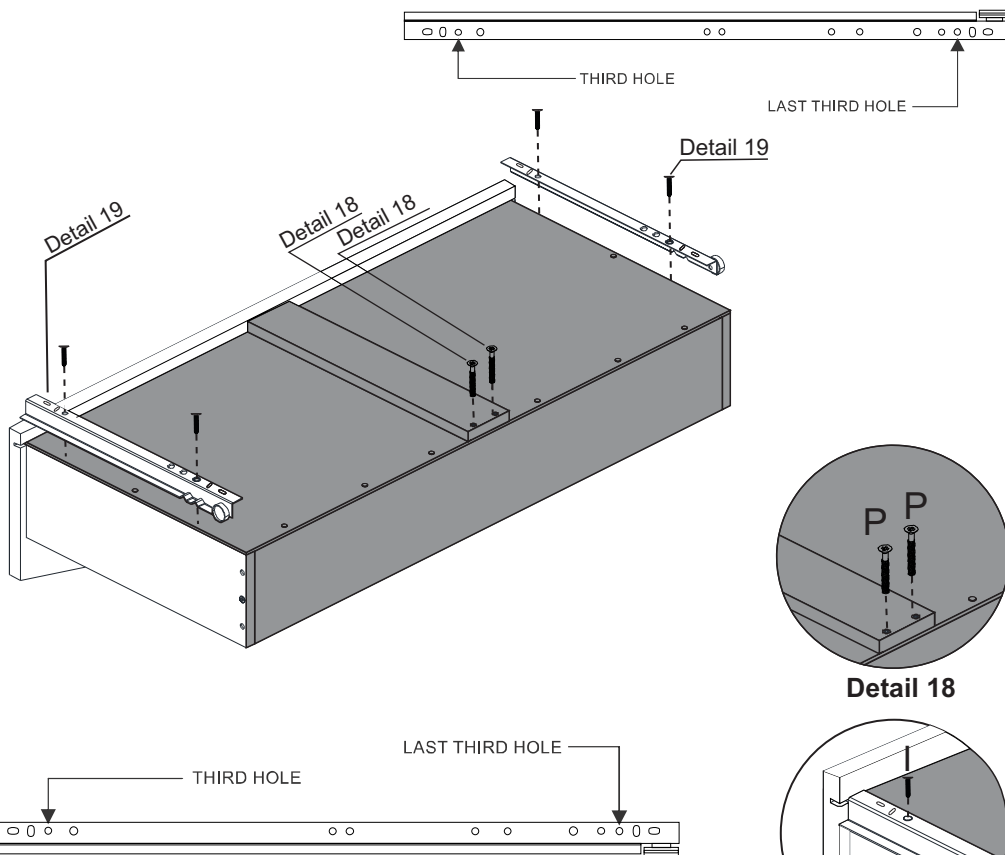


Detail 18



Detail 19

STEP 38



PARTS REQUIRED

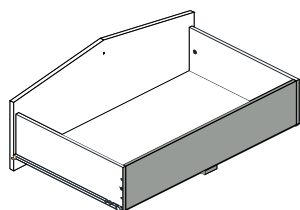

HARDWARE REQUIRED




TOOLS REQUIRED

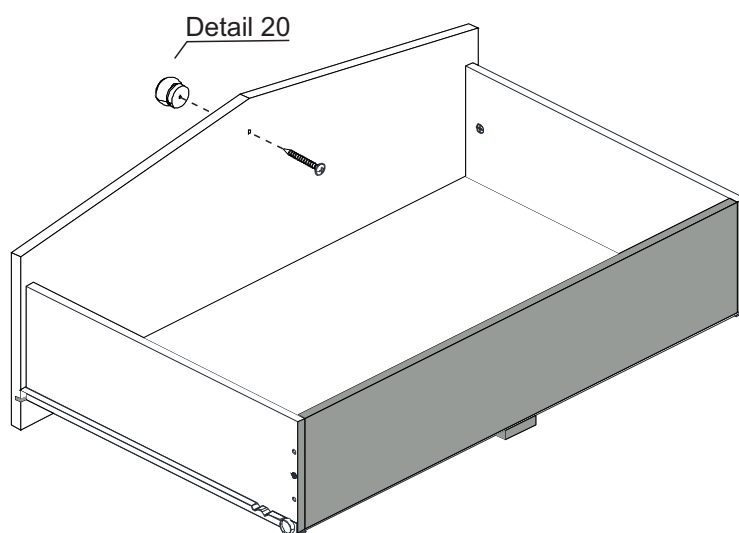

Detail 20


STEP 39

PARTS REQUIRED

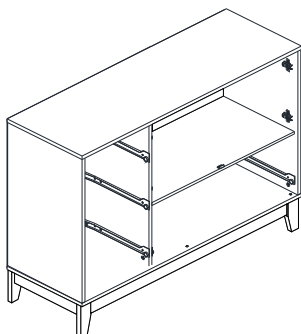

HARDWARE REQUIRED

TOOLS REQUIRED

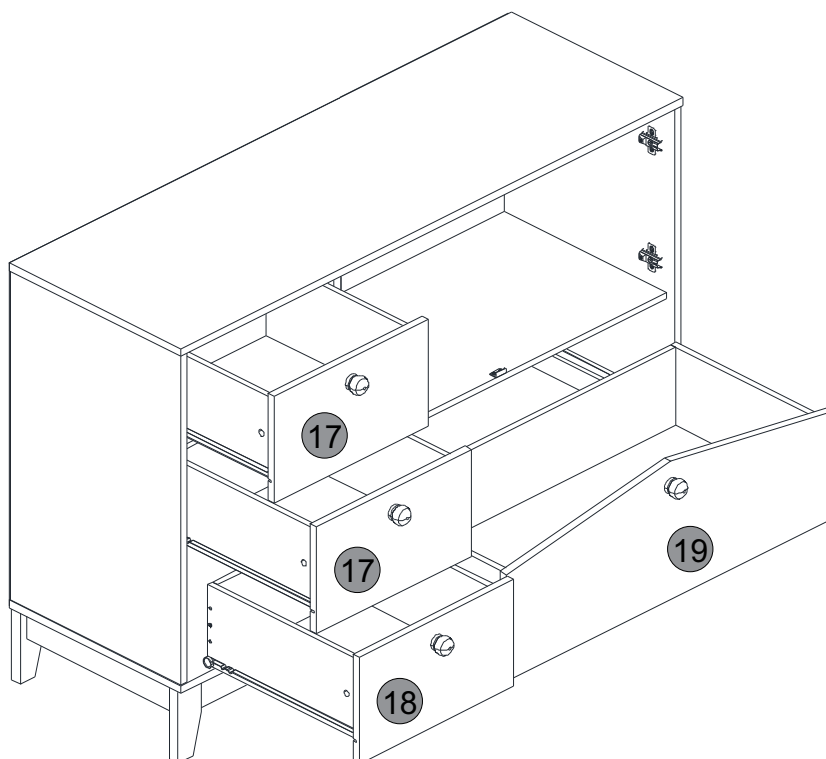

STEP 40

PARTS REQUIRED



21 - LEFT DOOR x1

HARDWARE REQUIRED

M  04
Ø4,0 x 14mm

S  02

TOOLS REQUIRED

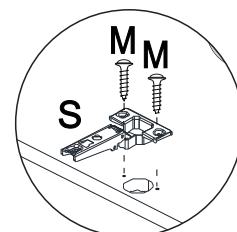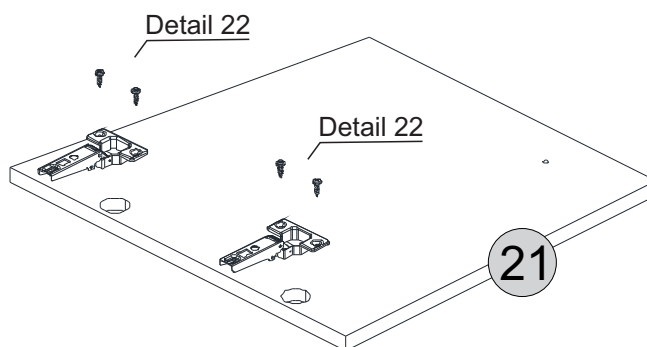


Detail 22

STEP 41

PARTS REQUIRED




24 - RIGHT DOOR x1

HARDWARE REQUIRED

M  04
Ø4,0 x 14mm

R  02


TOOLS REQUIRED

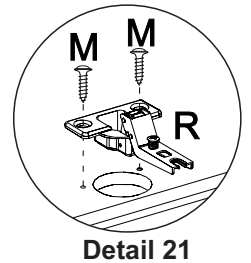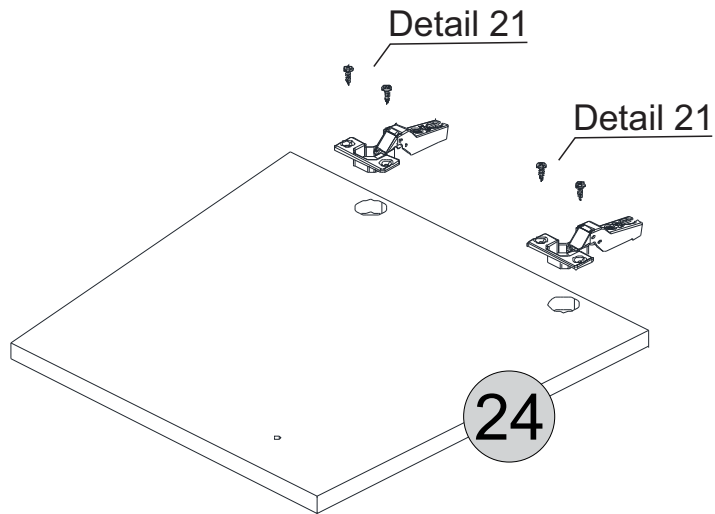


STEP 42

PARTS REQUIRED

24- RIGHT DOOR x1





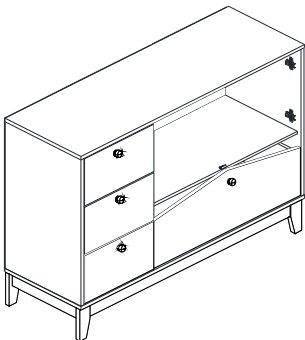


HARDWARE REQUIRED

L  01
Ø4,0 x 30mm

Y  01


TOOLS REQUIRED

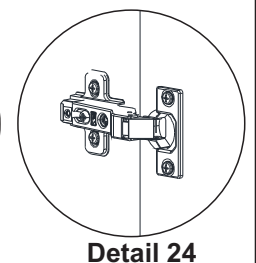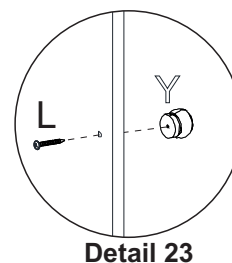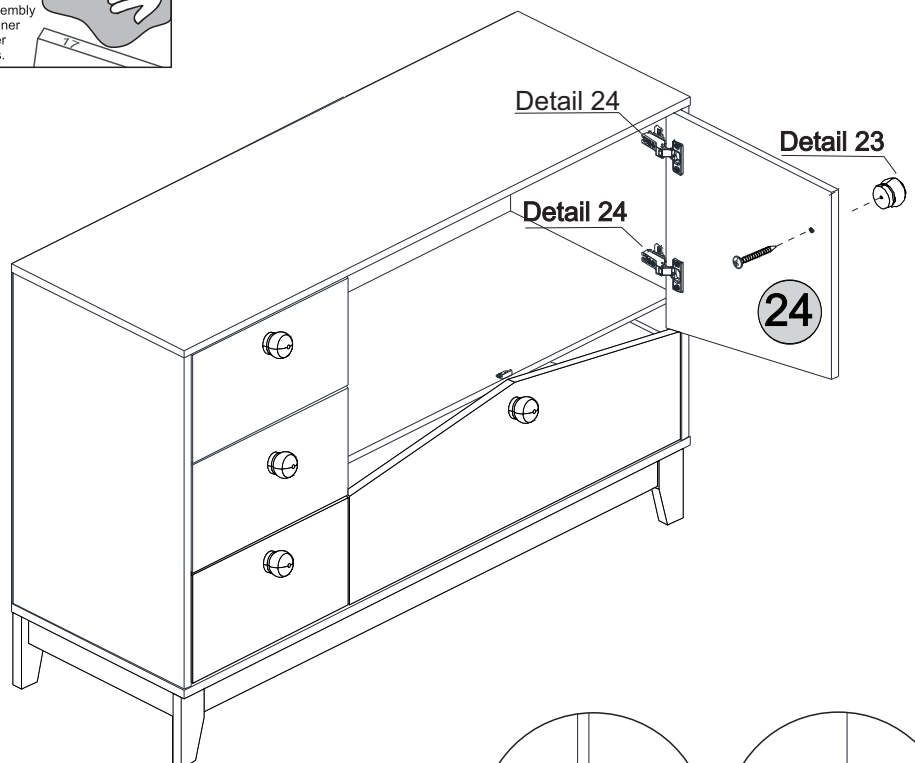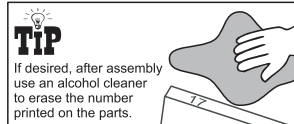


STEP 43

PARTS REQUIRED

21- LEFT DOOR x1




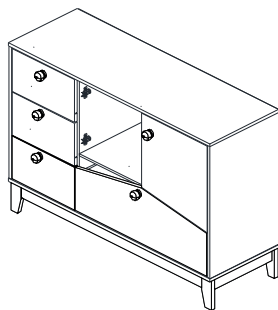


HARDWARE REQUIRED


L  01
Ø4,0 x 30mm

Y  01

TOOLS REQUIRED

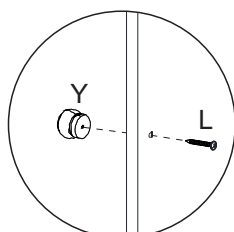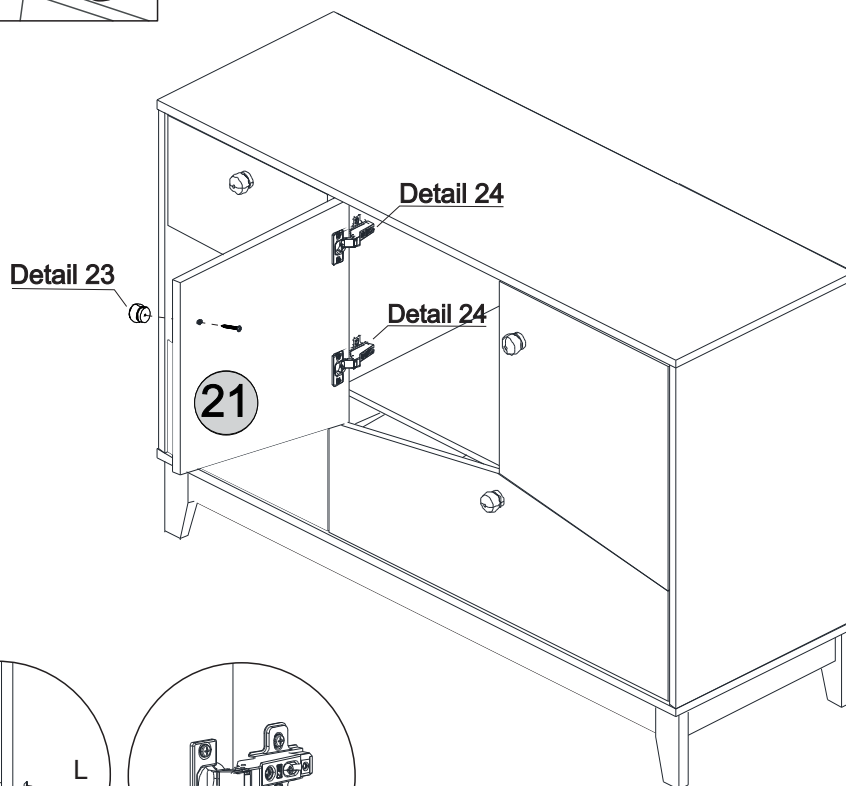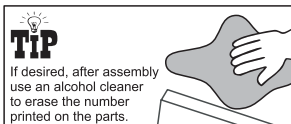


Detail 23

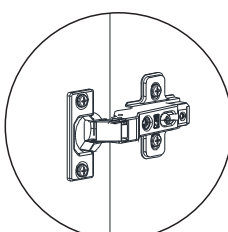

Detail 24

STEP 44






PARTS REQUIRED

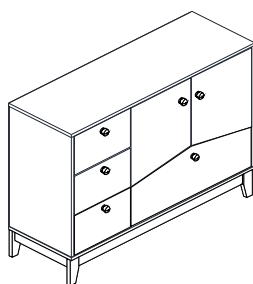

HARDWARE REQUIRED

K  02

TOOLS REQUIRED

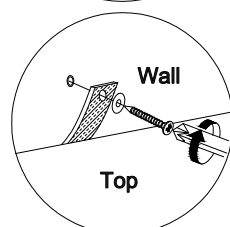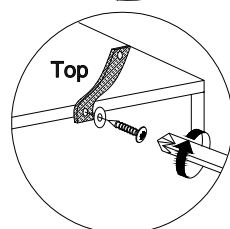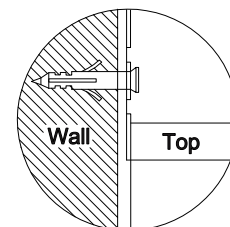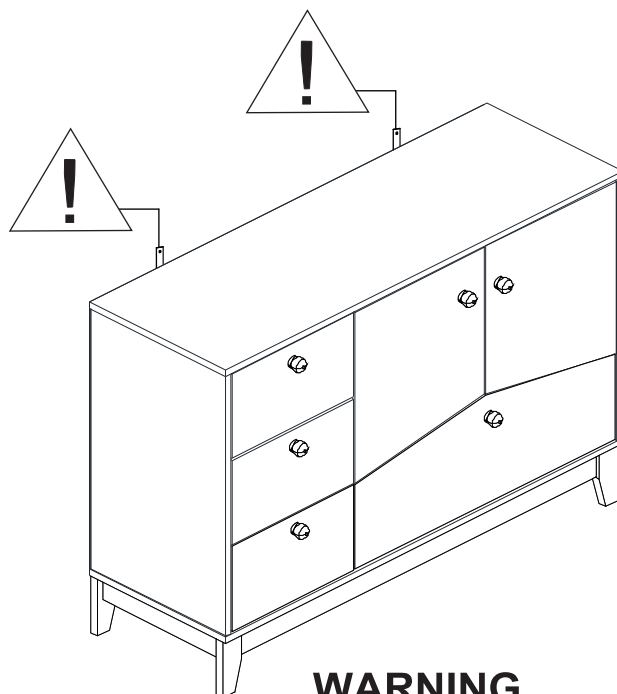

WARNING

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall.

Wall fixings are not supplied with this product as different wall materials require different types of fixing devices. Please make sure you use fixings suitable for the walls in your home.