

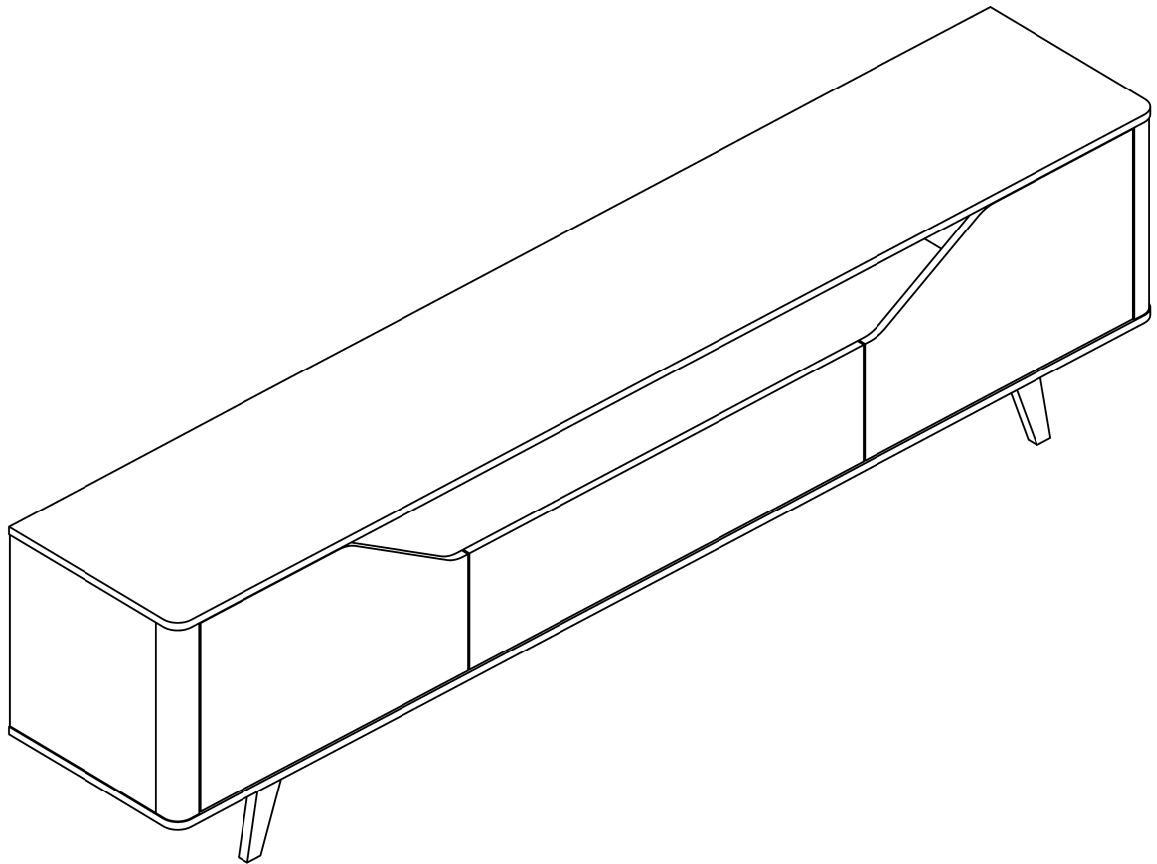
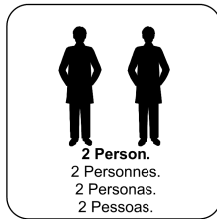
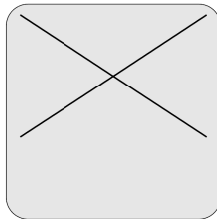
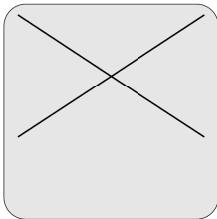
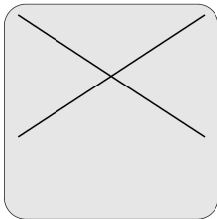
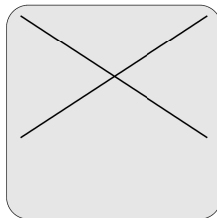
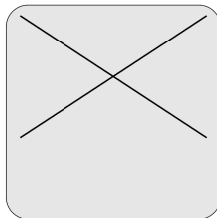
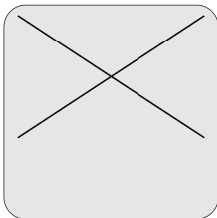
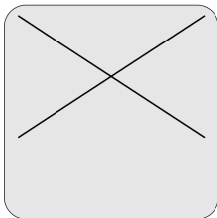
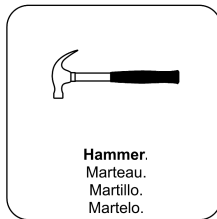
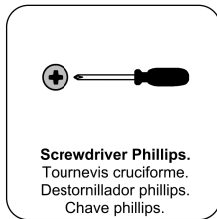


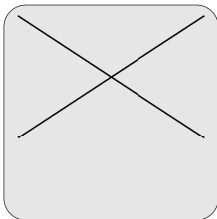



YOU WILL NEED

TU AURAS BESOIN DE | NECESITARÁ | VOCÊ VAI PRECISAR

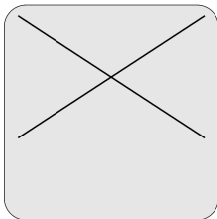

Tools not included


Outils non inclus | Herramientas no incluidas | Ferramentas não inclusas

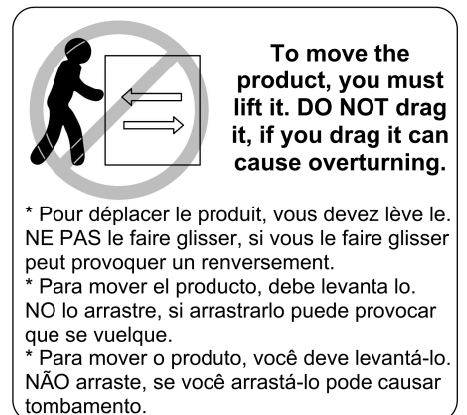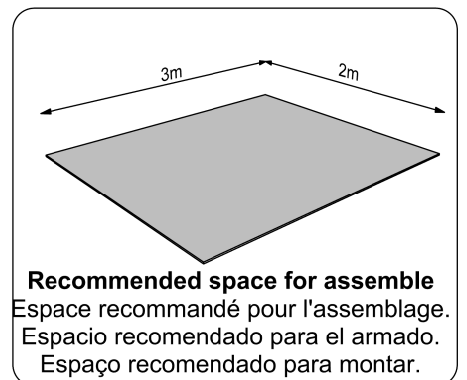

ACCESSORIES IDENTIFICATION

IDENTIFICATION DES ACCESSOIRES | IDENTIFICACIÓN DE ACCESORIOS
IDENTIFICAÇÃO DOS ACESSÓRIOS

A



30mm

Qty./Qtd.
24

Wooden dowel / Chevilles en bois / Taquete / Cavilha

AL



45mm

Qty./Qtd.
9

Flanged head screw / Vis à tête bride / Tornillo de cabeza flangeada / Parafuso Flangeado

AY



Qty./Qtd.
1

Wire finishing / Passer le fil / Cubierta de cableado / Passa Fios

BP



30mm

Qty./Qtd.
1

Pan head screw / Vis à tête bombée / Tornillo de pan / Parafuso Panela

C



45mm

Qty./Qtd.
27

Structural screw / Vis à tête structurale / Tornillo estructural / Parafuso Estrutural


E



Qty./Qtd.
10

Metallic bracket / Support métallique / Suporte de metal

G



Qty./Qtd.
31

Simple minifix screw / Vis minifix simple / Tornillo minifix simple / Haste Minifix Simples

H



Qty./Qtd.
31

Drum lock / Verrouillage du tambour / Tambor minifix / Tambor de Minifix

J



10 x 10

Qty./Qtd.
32

Nail / Ongle / Clavo / Prego

N




14mm

Qty./Qtd.
44

Pan head screw / Vis à tête bombée / Tornillo de pan / Parafuso Panela


Q



35mm



Qty./Qtd.
4

Metal hinge straight / Charnière métallique droite / Bisagra recta / Dobradiça Reta


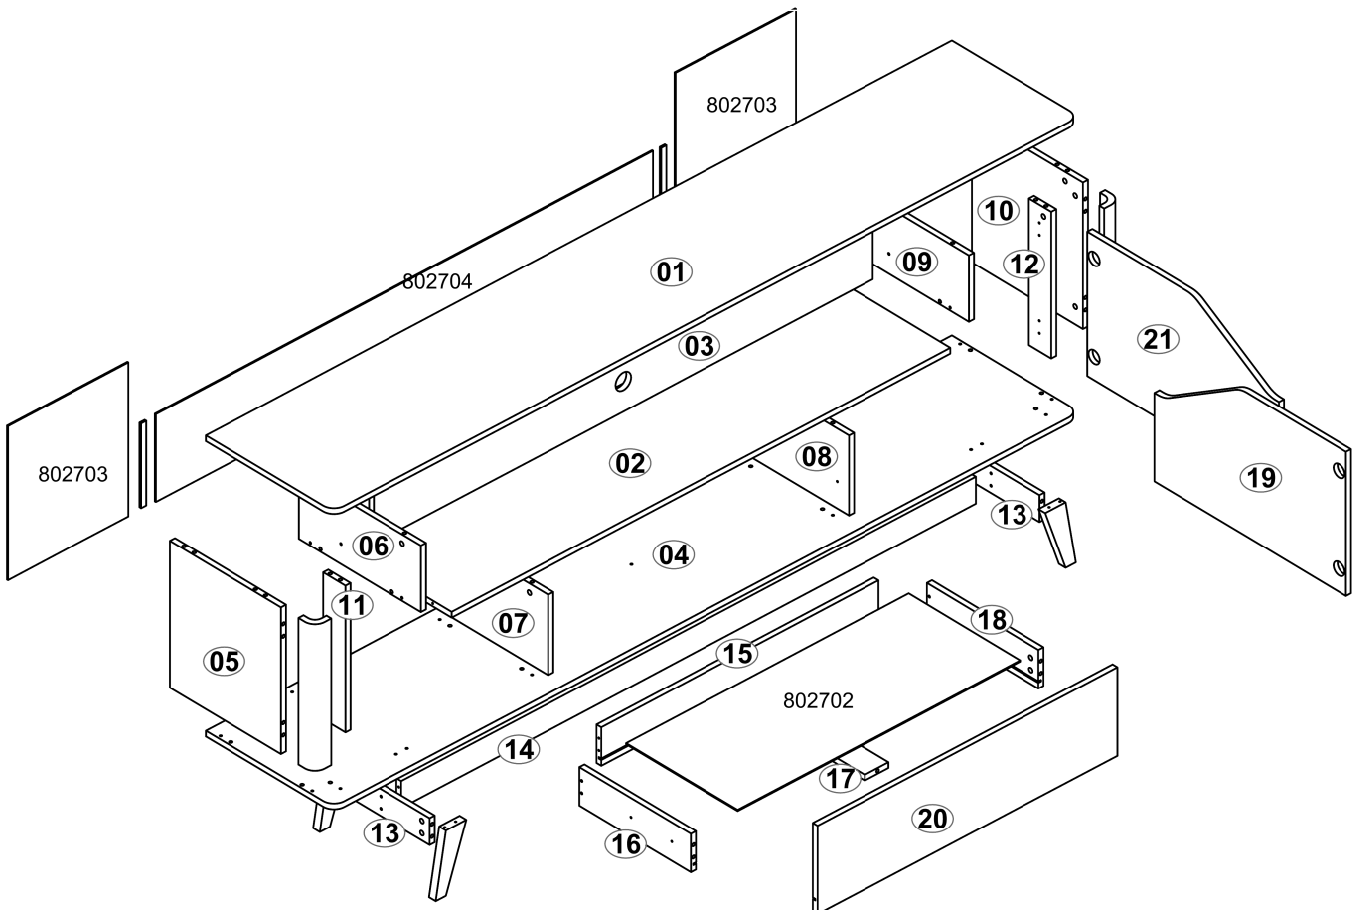


PRE-ASSEMBLY - PRÉ-ASSEMBLAGE - PRE-ARMADO PRÉ-MONTAGEM



01 -

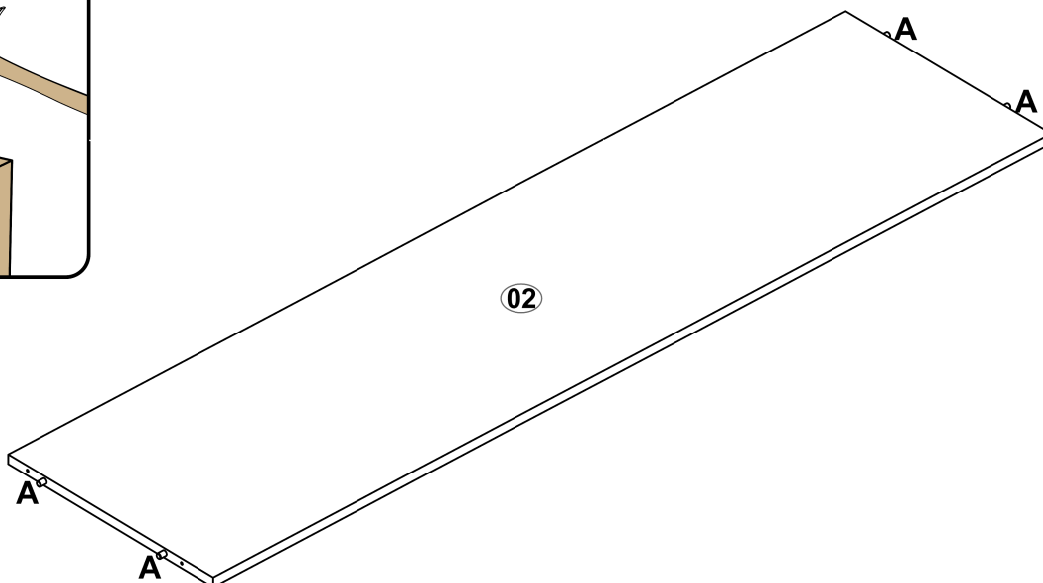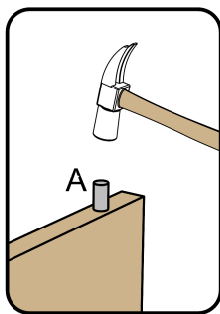



02 -

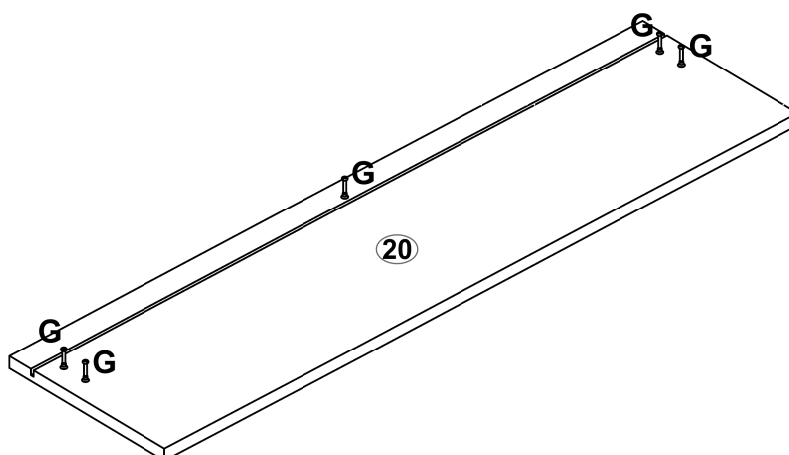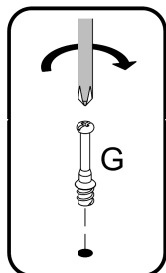


03 -

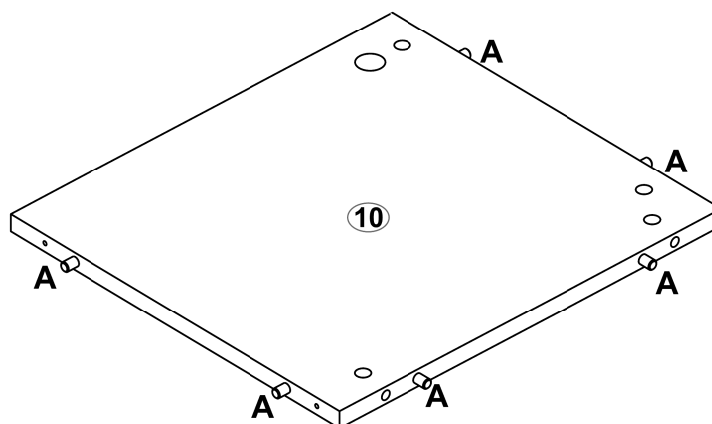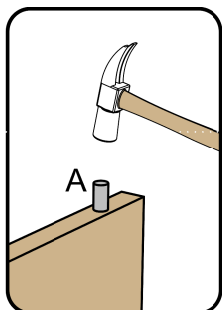


04 -

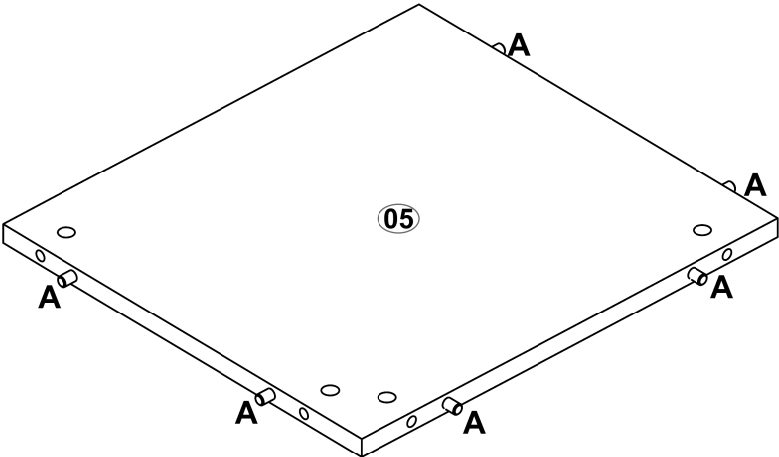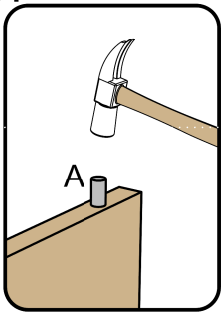



05 -

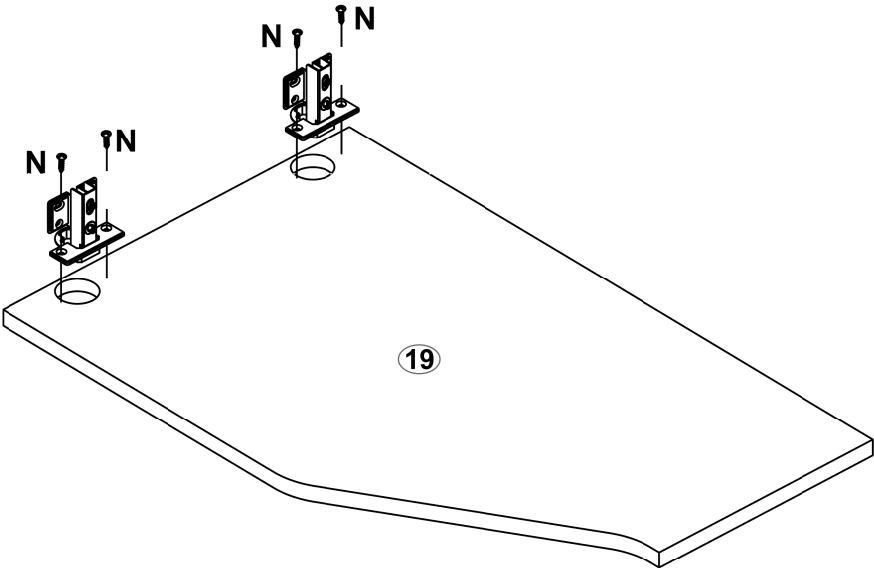




06 -

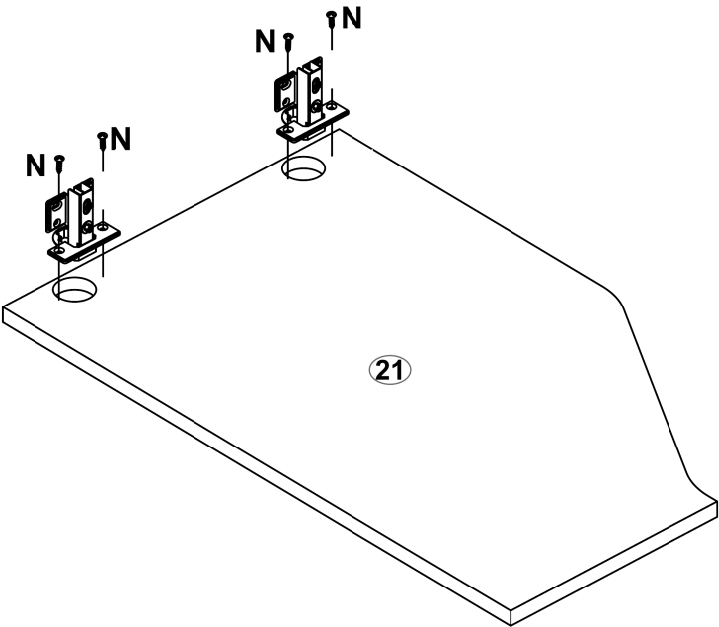



07 -

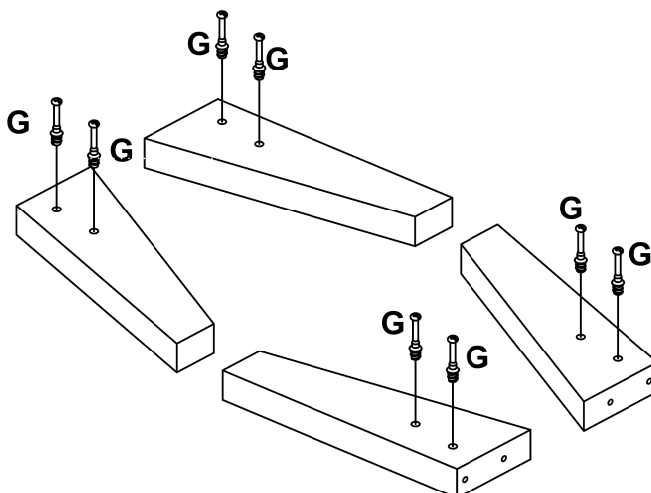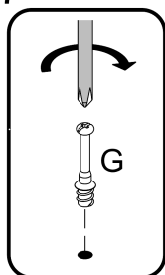


08 -

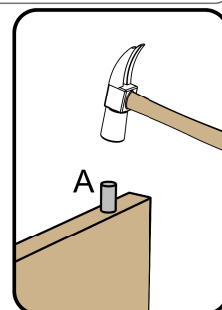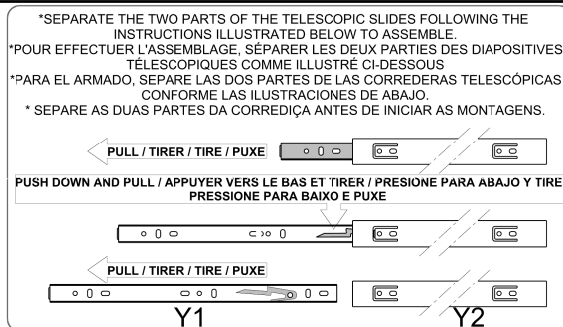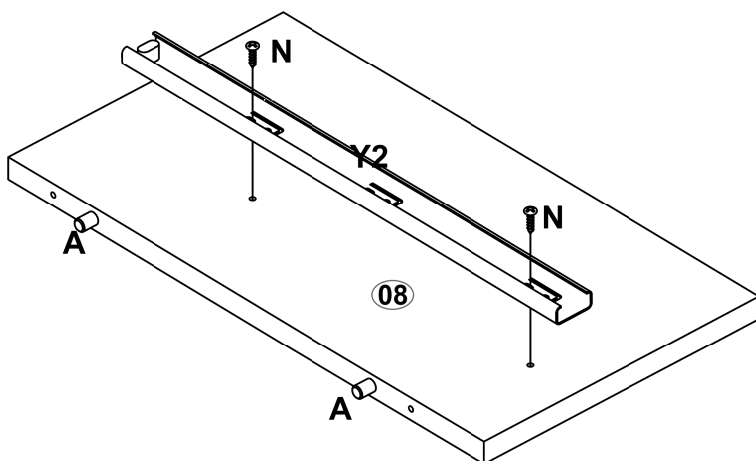


09 -

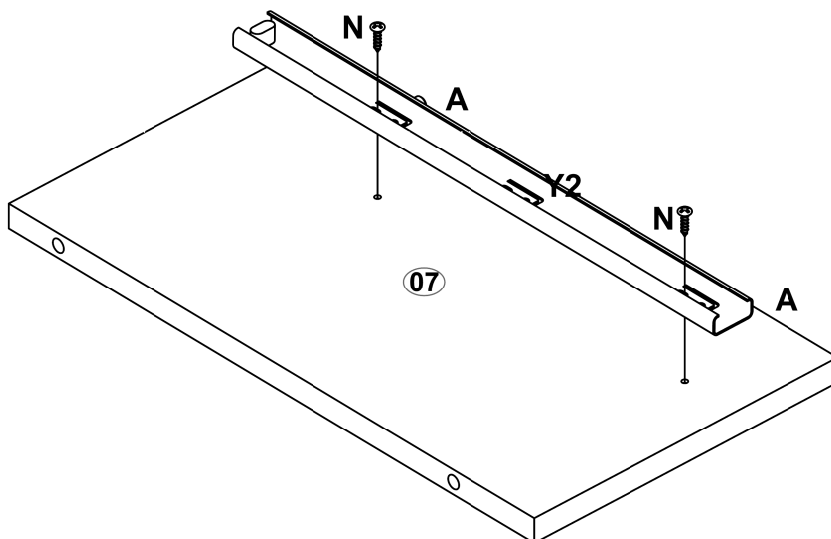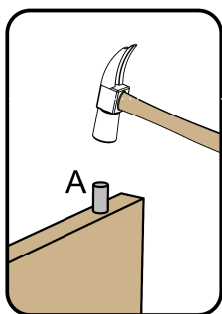


10 -

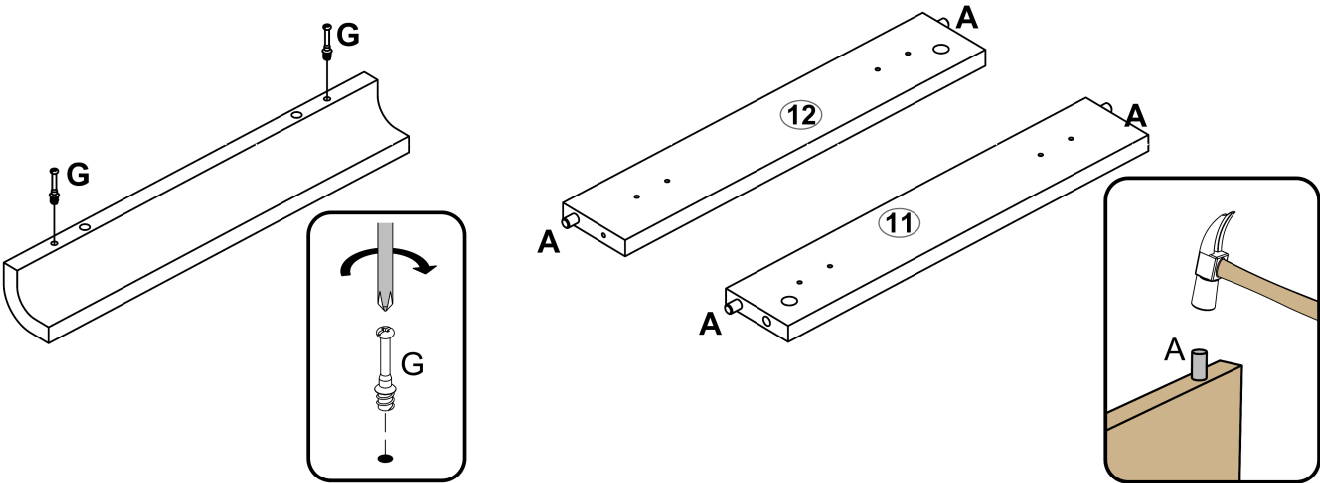

11 -

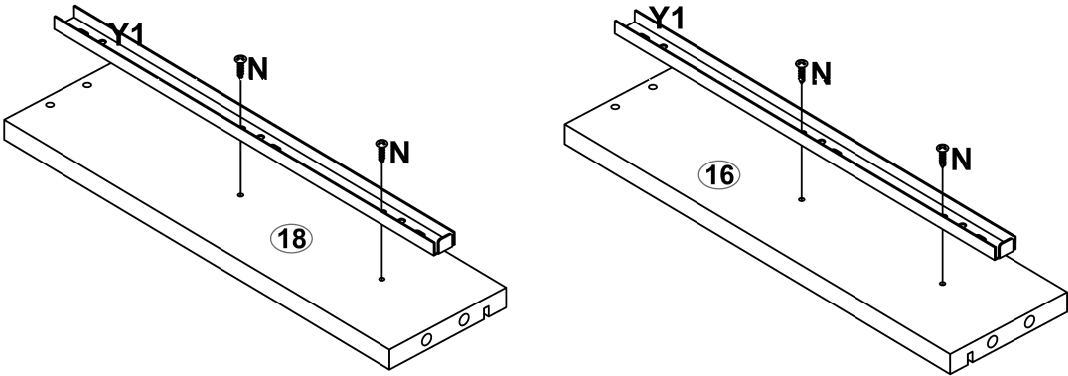


12 -

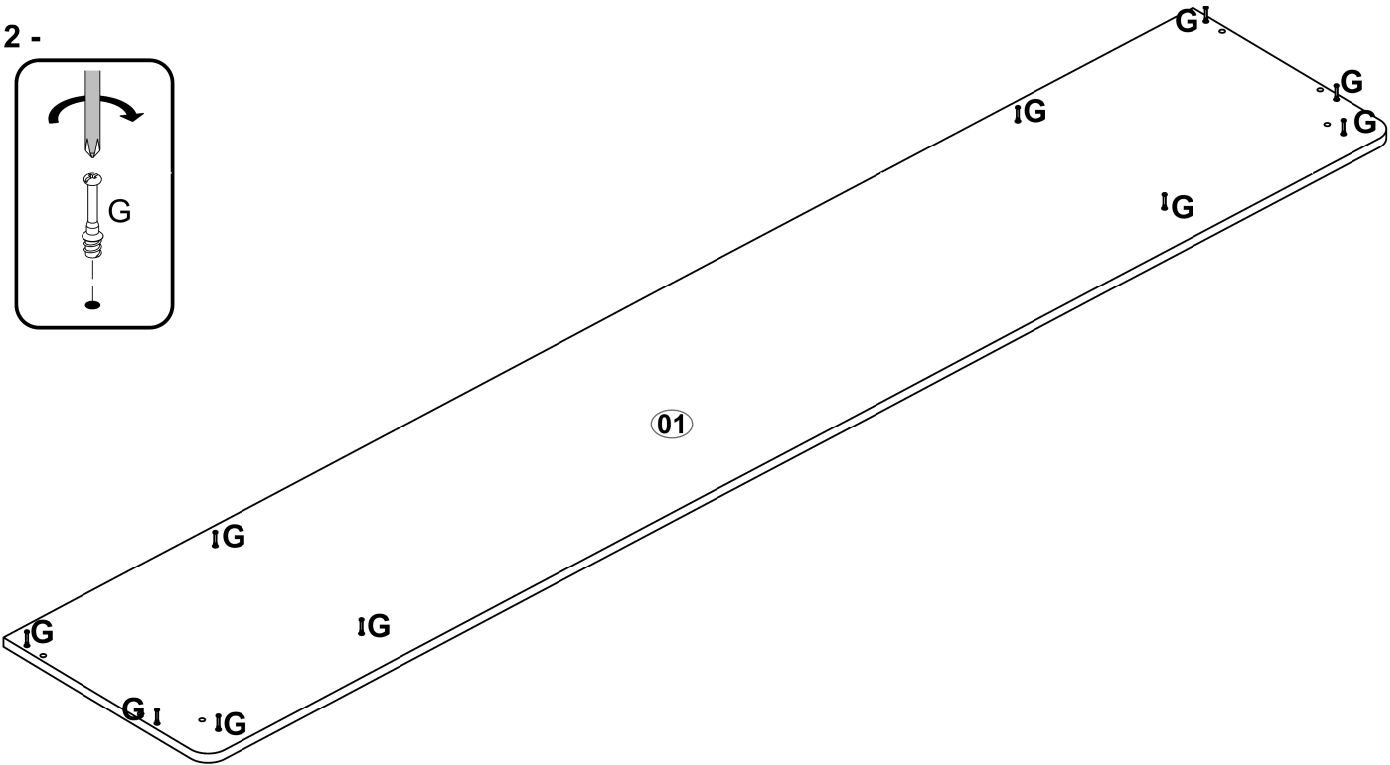


ASSEMBLY - MONTAGE - ARMADO - MONTAGEM



M01 -

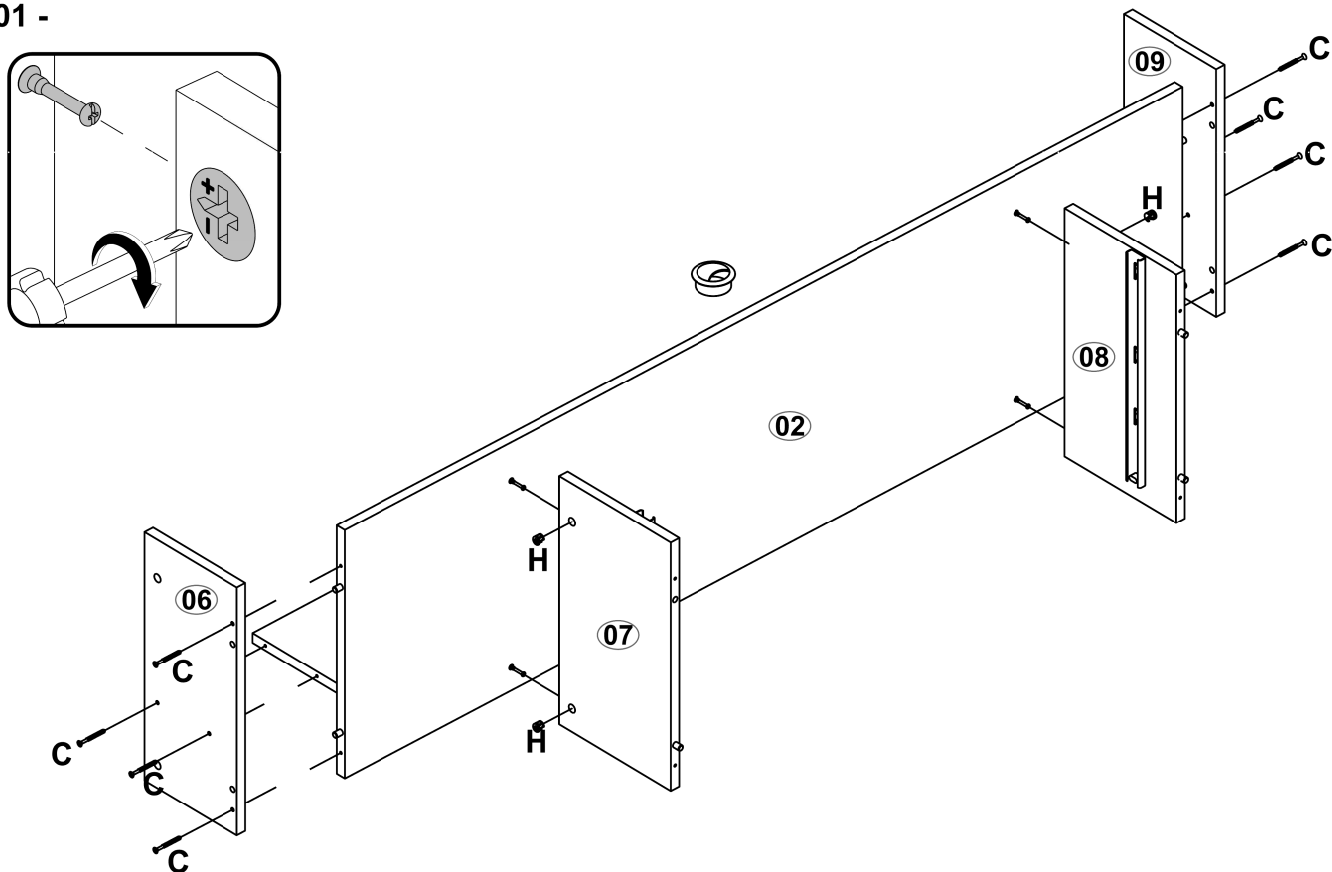



M02 -

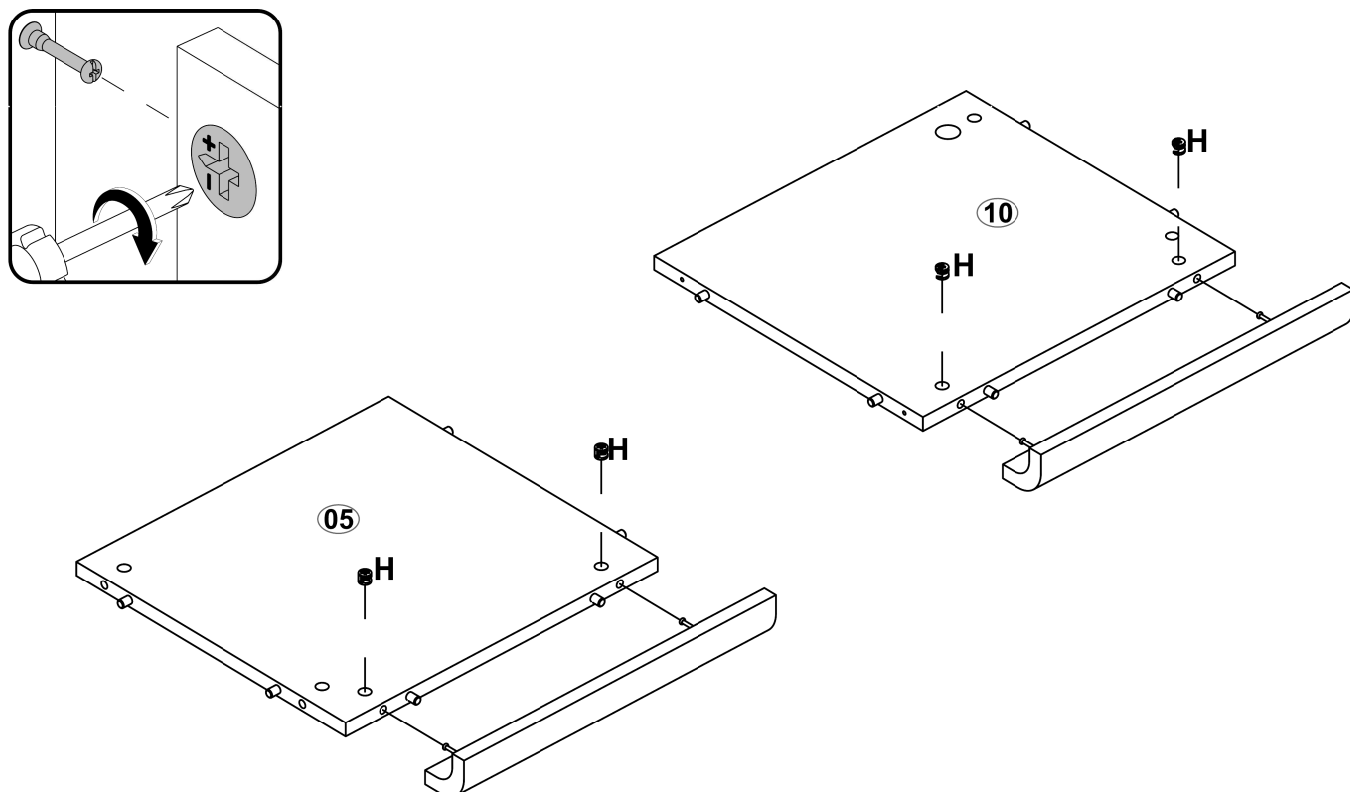


M03 -

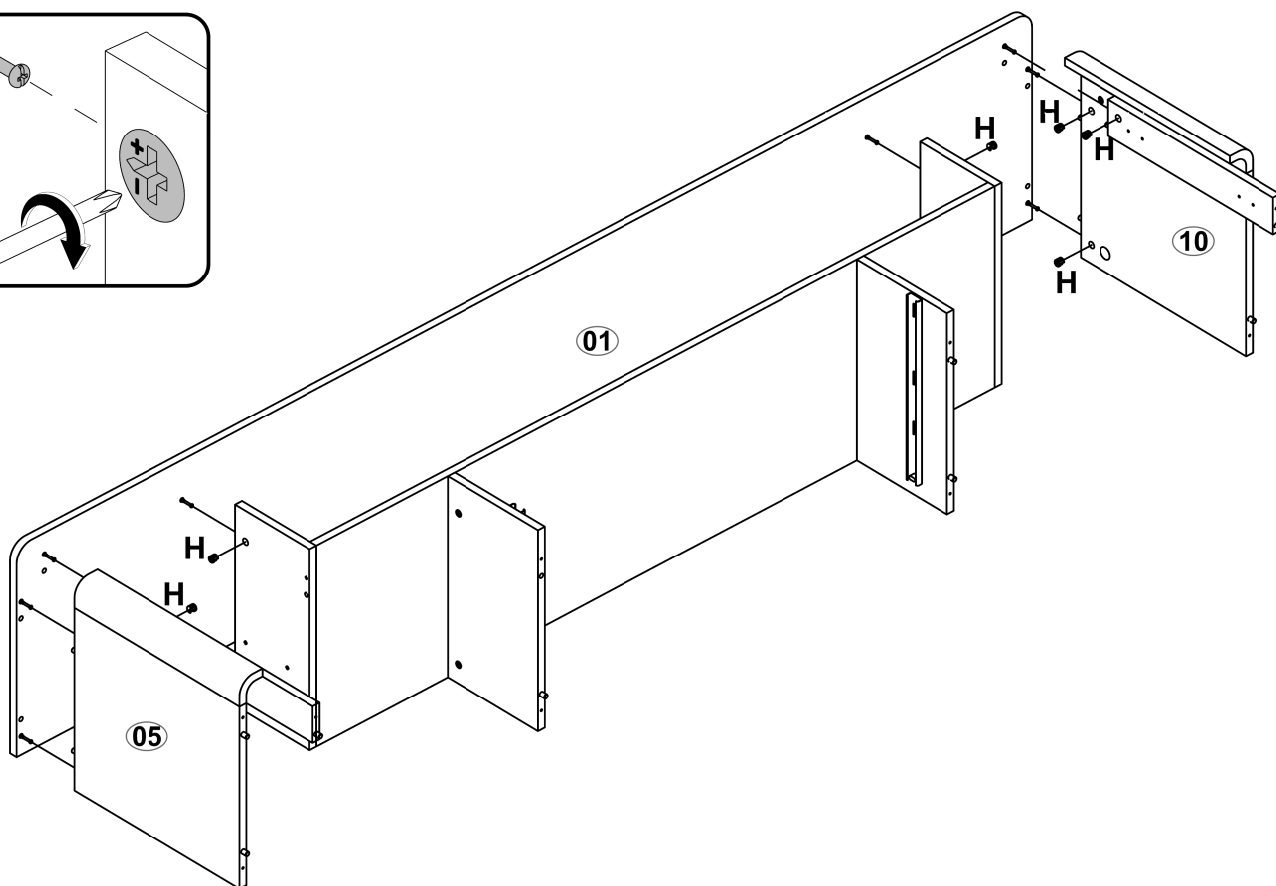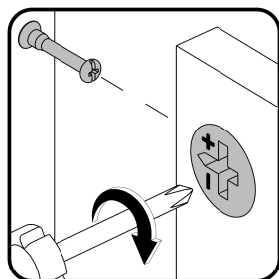


M04 -

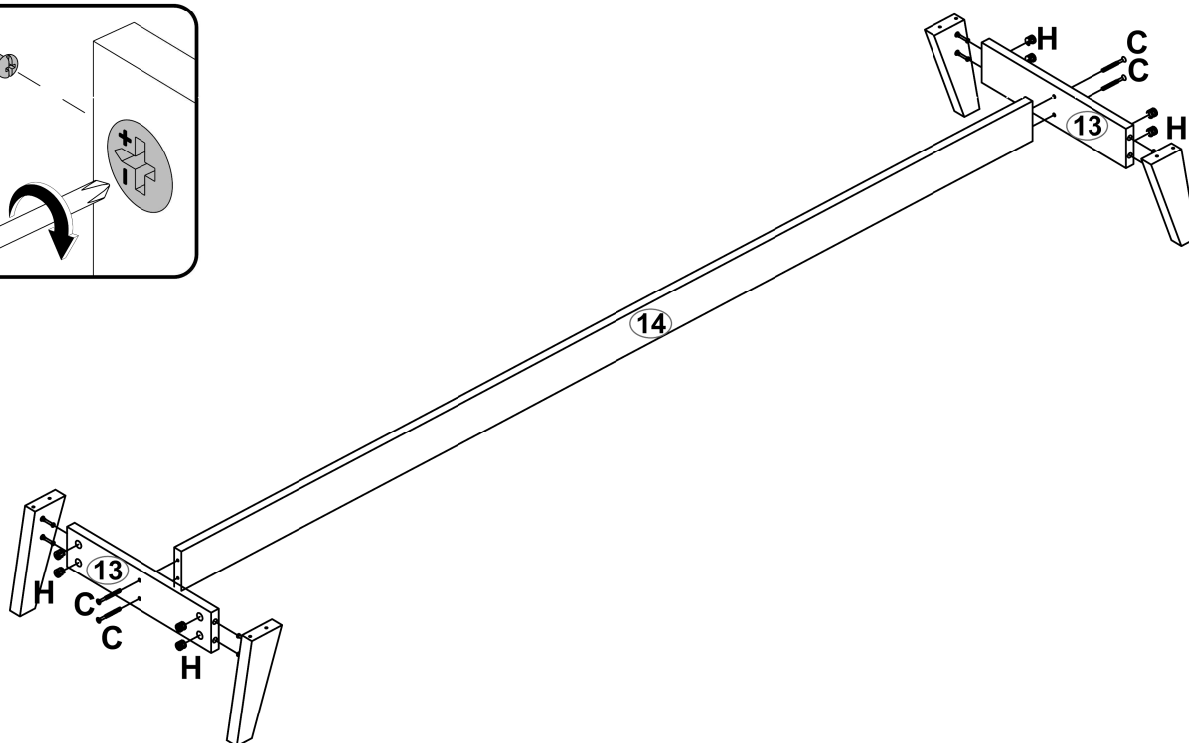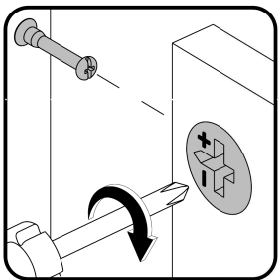


M05 -

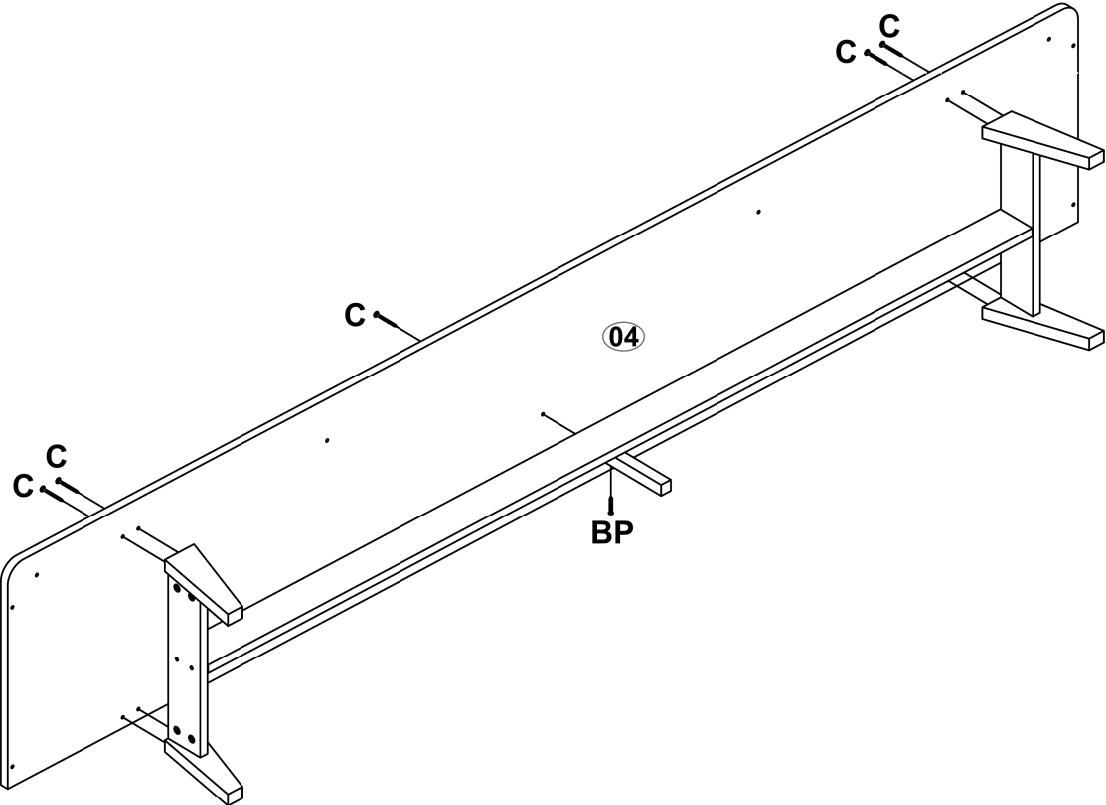


M06 -

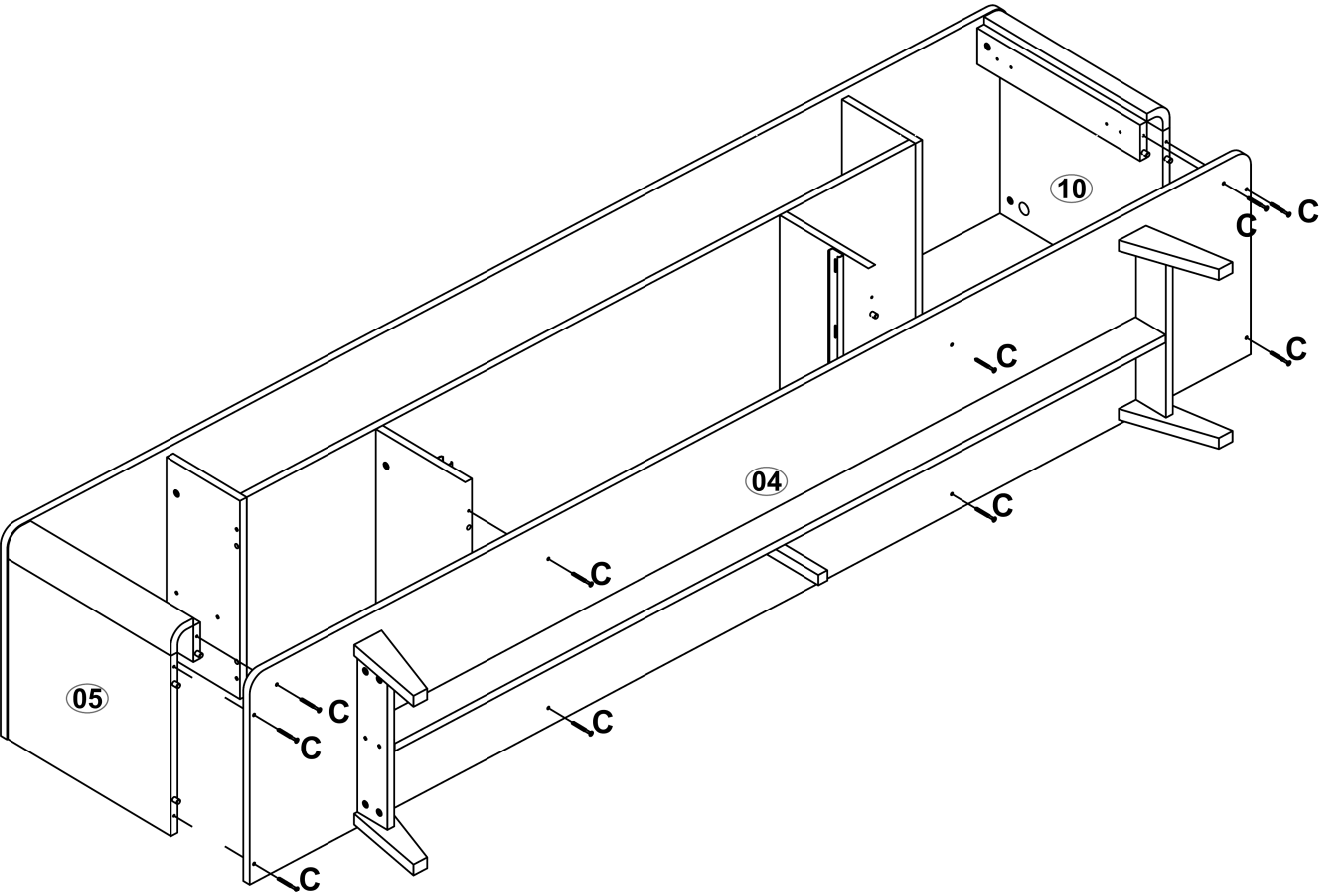



M07 -

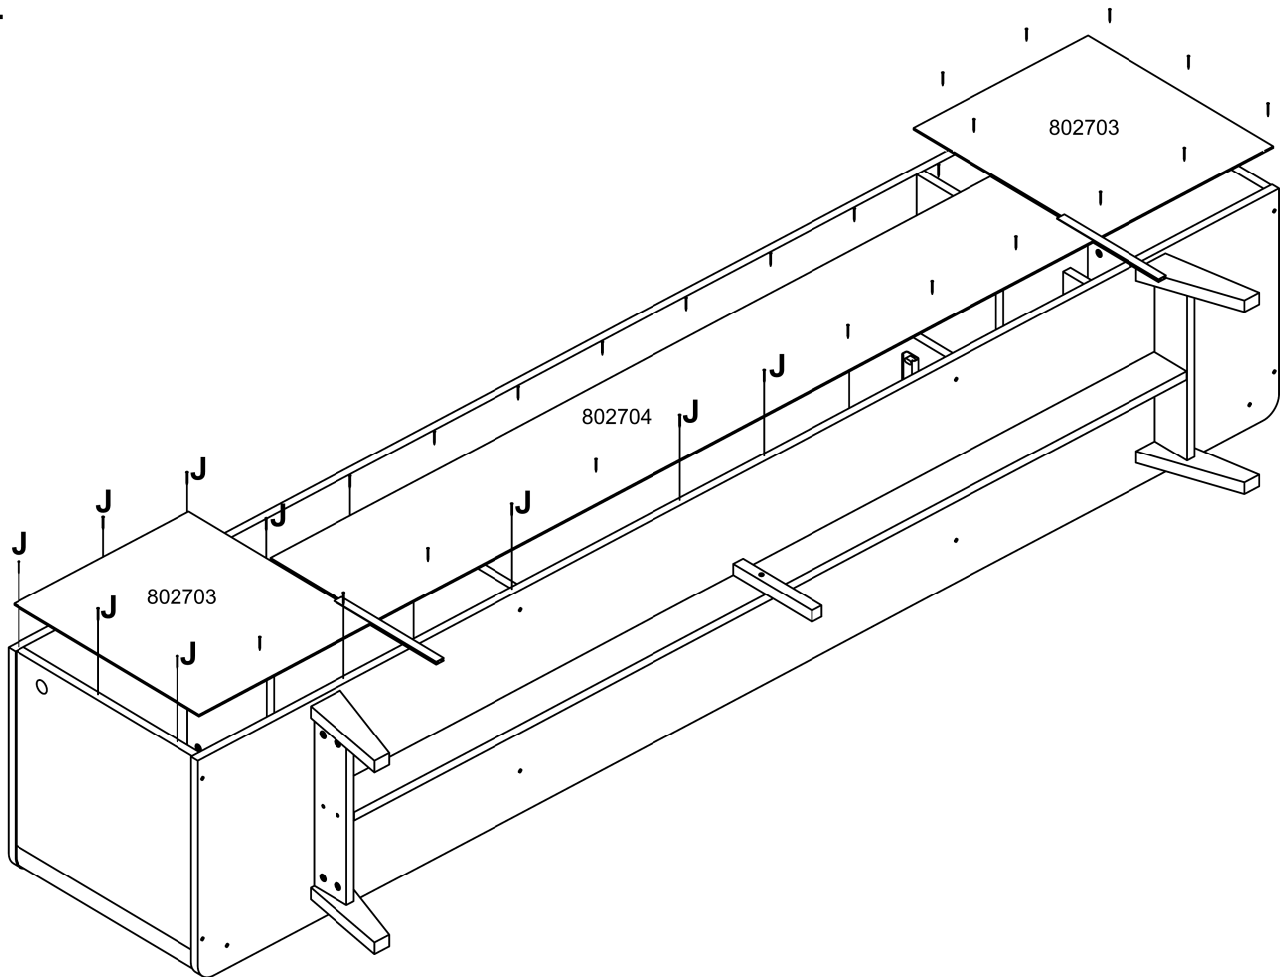


M08 -

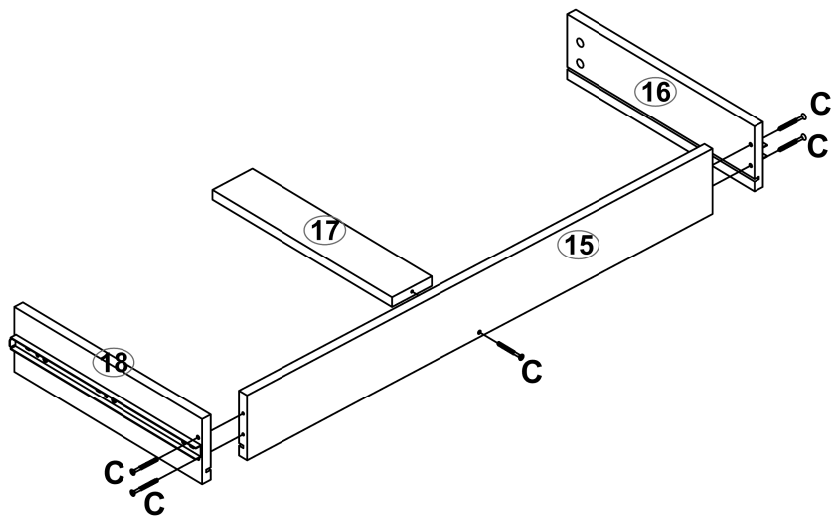

M09 -

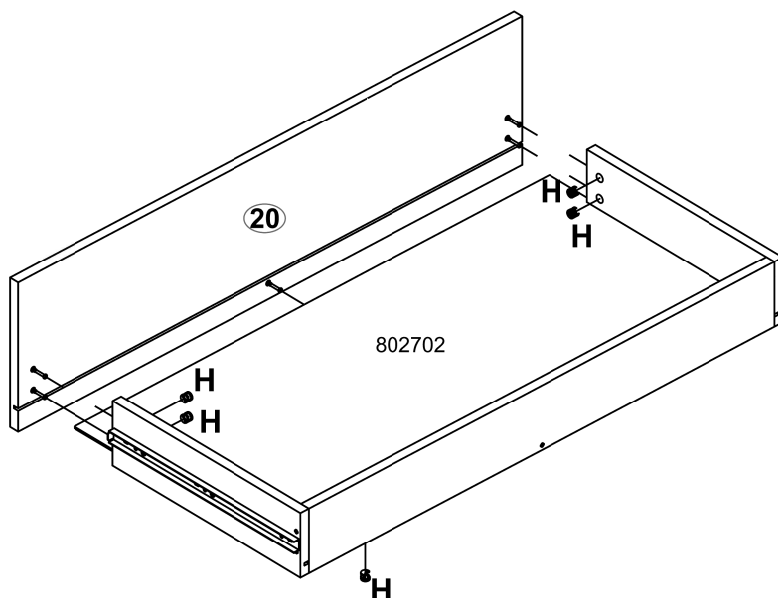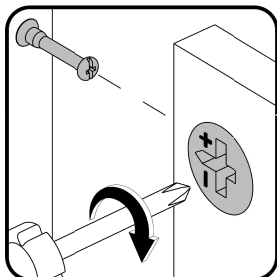

M10 -





***Note:** Use the stickers and caps to finish.


***Remarque:** Utiliser les autocollants et les capuchons pour terminer la finition.

***Nota:** Utilice los adhesivos y tapas para finalizar el acabado.

***Nota:** Utilize os adesivos e tampas para finalizar o acabamento.

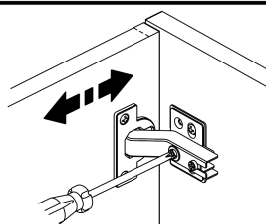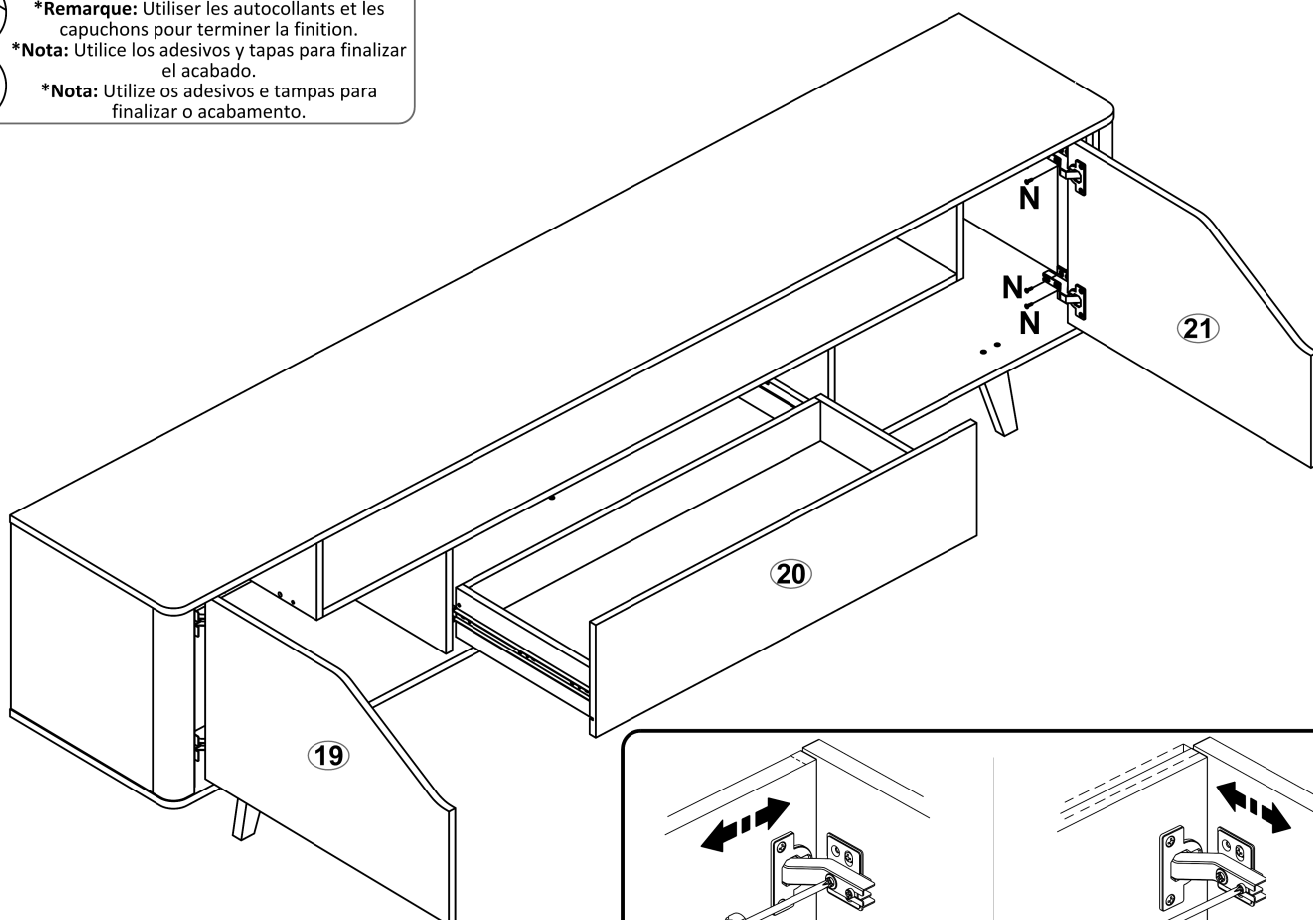

Horizontal Adjustment
Réglage horizontal
Ajuste Horizontal
Ajuste Horizontal

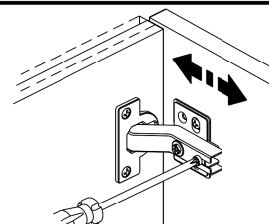

Depth Adjustment
Réglage de la profondeur
Ajuste Profundidad
Ajuste de Profundidade