

Manual de Montagem / Assembly instructions

Cama Hanna Casal

Hanna double bed

CERTIFICADO
90
dias
GARANTIA







Para limpeza usar um pano umedecido em água;
Não usar produtos químicos para limpeza;
Guardar a chave allen para possíveis apertos futuros dos parafusos ;

Desenvolvido por Wesley Silva
Dúvidas e sugestões (31) 99230-0176 ou (31) 3184-0050

CONQUISTA
MÓVEIS

	Produto	Volumes Cabeceira	Volumes Barra	Kit de Montagem
Cód.	11599	11597	11598	11565
Ref.	503028	401110	403071	141227


Códigos		CORES				Características				Quantidade
Manual	Sistema	CHB/AMD	BR	PTF	Descrição	Mat. Prima	Dimensões (mm)			
01	11584	103	40	39	Painel Cabeceira Cama Hanna Casal / Hanna Casal Bed Headboard Panel	MDP/MDF	1481 x 430 x 15		01	
02	11586	103	40	39	Suporte Estrutural Cama Hanna Casal / Hanna Casal Bed Structural Support	MDP/MDF	1100 x 308 x 15		02	
03	11589	103	40	39	Divisória 2 Prateleira Cama Hanna Casal / Room divider 2 Hanna Casal bed shelf	MDP/MDF	448 x 308 x 15		02	
04	11587	103	40	39	Divisória 1 Gaveta Cama Hanna Casal / Room divider 1 drawer bed Hanna Casal	MDP/MDF	448 x 308 x 15		02	
05	11592	103	40	39	Acabamento Lateral Cama Hanna Casal / Hanna Couple Bed Side Finish	MDP/MDF	308 x 270 x 15		02	
06	11591	103	40	39	Rodapé Cama Hanna Casal / Hanna Casal Bed Footer	MDP/MDF	800 x 70 x 15		04	
07	11590	103	40	39	Prateleira Cama Hanna Casal / Hanna Casal bed shelf	MDP/MDF	800 x 448 x 15		02	
08	11585	103	40	39	Painel Peseira Cama Hanna Casal / Hanna Casal Bed Footboard Panel	MDP/MDF	1481 x 430 x 15		01	
09	11433	103	40	39	Barra 25mm - 5 Travessas / Bar 25mm - 5 Sleepers	MDF	1900 x 112 x 25		02	
10	4175	12	12	12	Travessa Madeira Casal / Double Wood Tray	MDP/MDF	1400 x 50 x 25		05	
11	11434	12	12	12	Ripa Madeira / lath wood	MDP/MDF	1850 x 147 x 9		06	
12	11593	78	40	39	Frente Gaveta Cama Hanna Casal / Hanna Casal Bed Drawer Front	MDP/MDF	790 x 230 x 15		02	
13	11594	103	40	39	Lateral Direita Gaveta Cama Hanna Casal / Right Side Drawer Bed Hanna Casal	MDP/MDF	386 x 174 x 15		02	
14	11594	103	40	39	Lateral Esquerda Gaveta Cama Hanna Casal / Left Side Drawer Bed Hanna Casal	MDP/MDF	386 x 174 x 15		02	
15	11595	103	40	39	Traseiro de Gaveta Cama Hanna Casal / Hanna Casal Bed Drawer Rear	MDP/MDF	745 x 145 x 15		02	
16	11596	103	40	39	Fundo Gaveta Cama Hanna Casal / Hanna Couple Bed Drawer Bottom	HDF	757 x 393 x 2,5		02	

A Sapata Retangular Rectangular Shoe  134013 14	B Paraf. Chipboard 3,5 x 14mm Chipboard Screw 3.5 x 14mm  134131 80	C Paraf. Escareado 5,0 x 40mm Phillips/ Countersunk Screw 5.0 x 40mm Phillips  134550 36	D Cavilha 6 x 50mm / Dowel 6 x 50mm  134028 04
E Trapézio Nominal Nominal Trapezoid  134227 04	F Paraf. Flangeado 3,5 x 25mm Flange Screw 3.5 x 25mm  134202 04	G Par Corrediça Telescópica Telescopic Slide Pair  134453 02	H Paraf. Corrediça 6 x 10mm Slide Screw 6 x 10mm  134023 08
I Bucha Anti Ruído Quadrada 25mm/Anti Noise Bushing square 25mm  134234 10	J Paraf. Flangeado 3,5x16mm Flanged Screw 3.5x16mm  134042 10	K Parafuso Allen 1/4" x 60mm - Tampinha Allen screw 1/4" x 60mm - Cap  134554 08	L Anel Fixador c/ Porca Ø26mm Fixing Ring with Nut Ø26mm  134046 08
M Cantoneira 2 Furos Angle Bracket 2 Holes  134010 02	N Parafuso Allen 7 x 50mm - Tampinha Allen Screw 7 x 50mm - Cap  134021 10	O Parafuso Phillips 3,5 x 25mm Phillips screw 3.5 x 25mm  134027 31	P Cavilha 6 x 30mm Dowel 6 x 30mm  134028 08
Q Cantoneira 4 Furos 4 Holes Corner  134068 04	R Paraf. Chipboard 3,5 x 35mm Chipboard Screw 3.5 x 35mm  134009 08	S Tampa Paraf. Ø13mm Cover Screw Ø13mm  134007 18	T Bisnaga Cola 5g Tube Cola 5g  134014 01
			U Chave "Z" Key "Z"  134047 01



PASSO A PASSO DA MONTAGEM - Forrar o chão com o papelão da embalagem para montagem da cama.


- 1º a)** Fixar as sapatas **A** nas peças **1; 2; 3; 4; 6; e 8** com parafuso **B**.
a) Fix the shoes **A** on parts **1; 2; 3; 4; 6; and 8** with screw **B**.

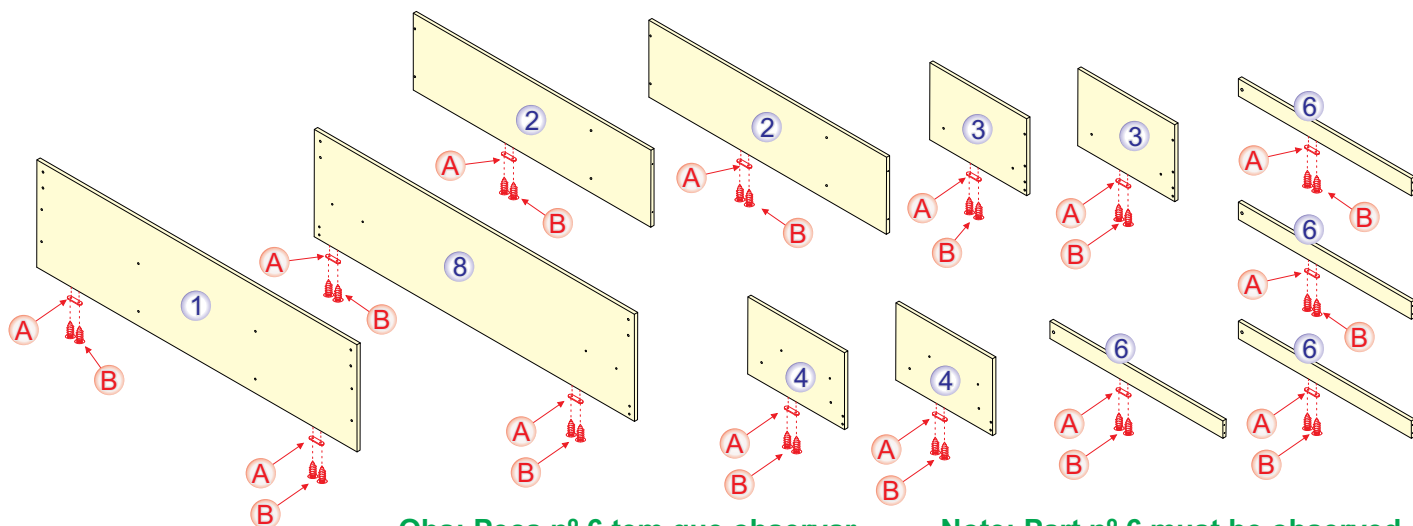


Obs: Peça nº 6 tem que observar o lado de montagem para a fixação da sapata...

Note: Part nº 6 must be observed the mounting side for fixing from the shoe...


- 2º a)** Posicionar e parafusar as correias **G** no painel peseira **2** e no divisória gaveta **4** com parafuso **H**.
a) Position and screw the sliders **G** on the footboard **2** and on the **4** drawer divider with **H** screw.

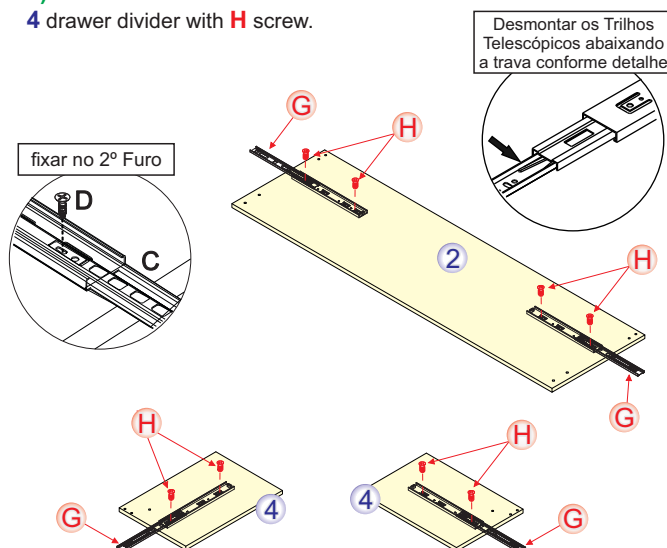


- 3º a)** Fixar as cavilhas **D** nas divisórias gaveta **4** com auxílio de um de uma martelo, deixando uma ponta (dividir) para cada lado.
b) Bater os trapézios **E** nos rodapés **6** com auxílio de um de uma martelo.
a) Fix the pegs **D** on the dividers drawer **4** with the help of a hammer, leaving a point (split) to each side.
b) Hit the trapezoids **E** on the baseboards **6** with the help of a hammer.

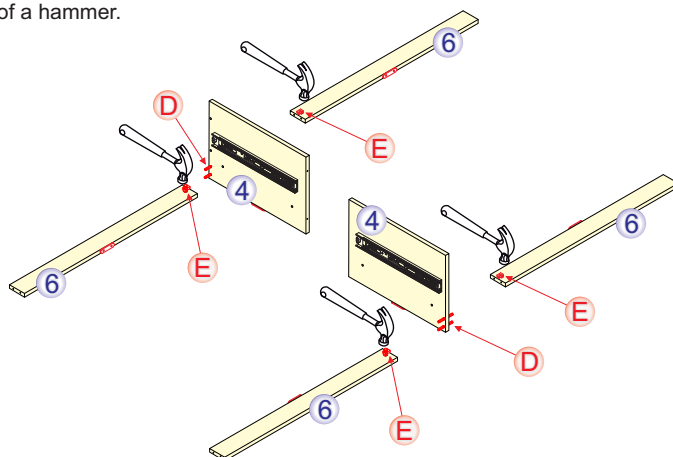

- 4º a)** Encaixar os rodapés **6** nas divisórias gaveta **4** e parafusar no trapézio **D** com o parafuso **F**.
a) Fit the plinths **6** into the drawer dividers **4** and screw on trapeze **D** with screw **F**.

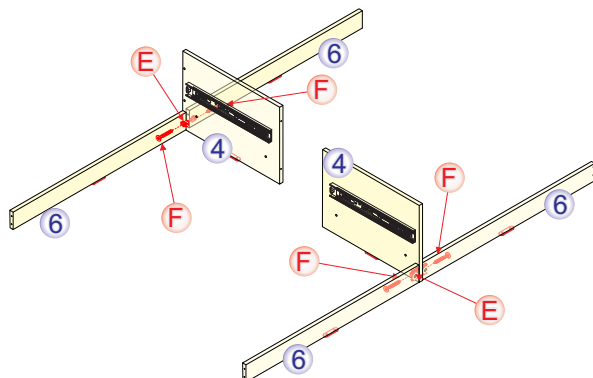


- 5º a)** Posicionar e parafusar as divisórias prateleiras **3** nos rodapés **6** com o parafuso **C**.
a) Position and screw the shelf dividers **3** into the baseboards **6** with screw **C**.

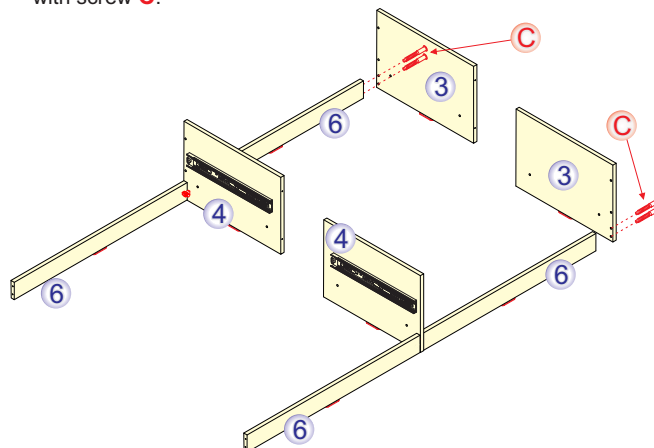


6º a) Posicionar e parafusar as divisórias **3 e 4** no suporte estrutural **2** com o parafuso **C**.

a) Position and screw dividers **3** and **4** on structural support **2** with screw **C**.

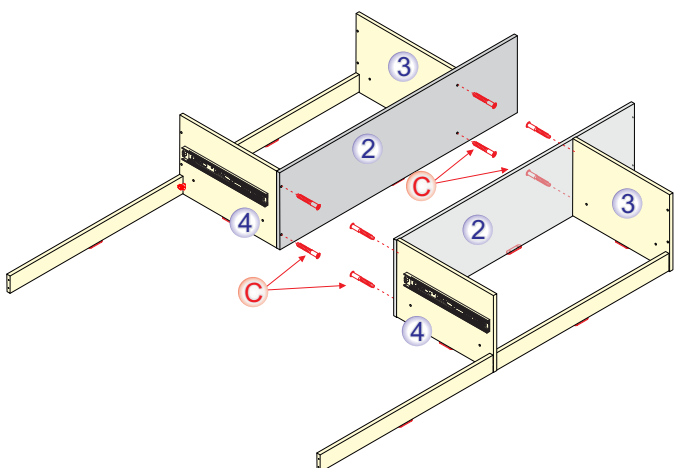


7º a) Posicionar e parafusar as prateleiras **7** nas divisórias **3 e 4** com o parafuso **C**.

a) Position and screw the shelves **7** in the partitions **3** and **4** with screw **C**.

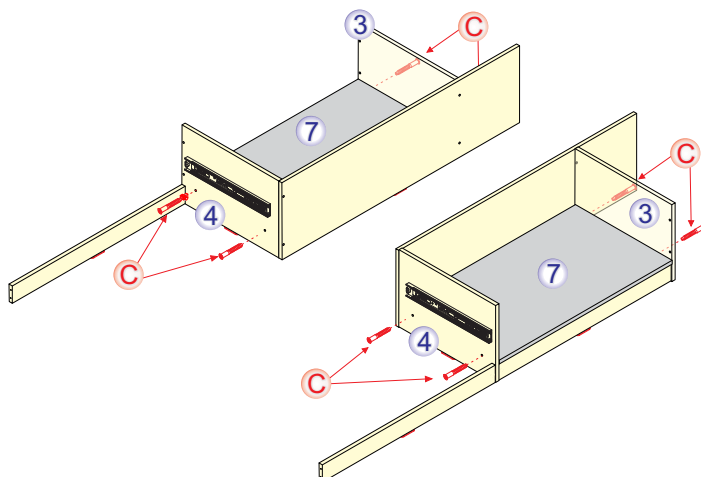


8º a) Posicionar e parafusar os acabamentos lateral **5** na divisória **3** com o parafuso **C**.

a) Position and screw the side trims **5** on the partition **3** with screw **C**.

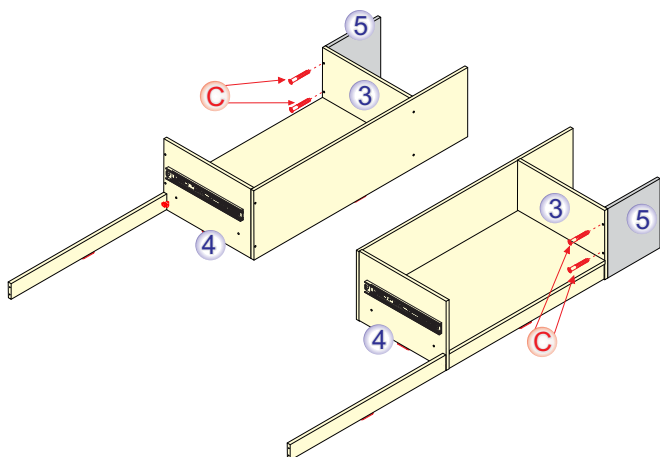


9º a) Posicionar e parafusar o painel cabeceira **1** no acabamento **5** e suporte estrutural **2** com o parafuso **C**.

a) Position and screw the headboard panel **1** on the finish **5** and structural support **2** with screw **C**.

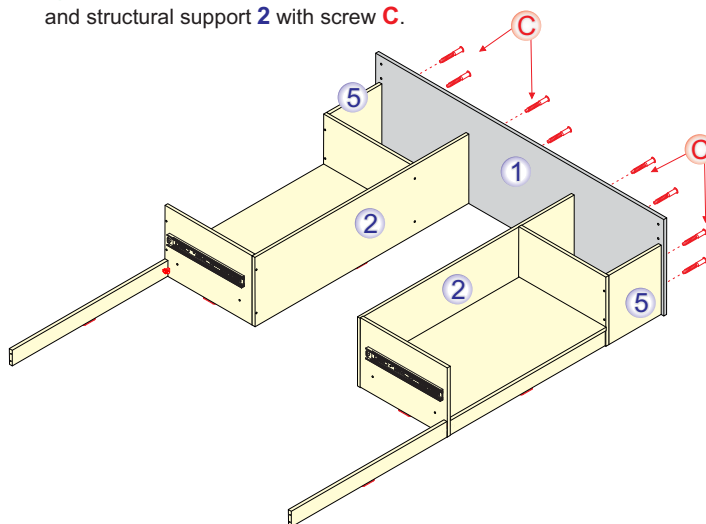


10º a) Posicionar e parafusar as Buchas **I** nas barras **9** alinhando os furos com o parafuso **J**.

a) Position and screw the bushings **I** on the bars **9**, aligning the holes with the **J** screw.

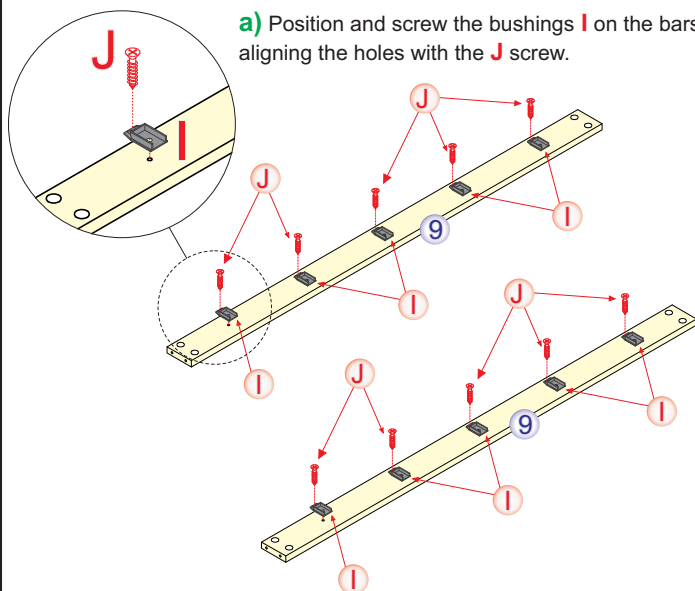


11º a) Posicionar e parafusar as barras **9** no painel cabeceira **1** com o parafuso **K** e porca anel fixador **L**.

a) Position and screw the bars **9** on the headboard panel **1** with screw **K** and ring nut **L**.

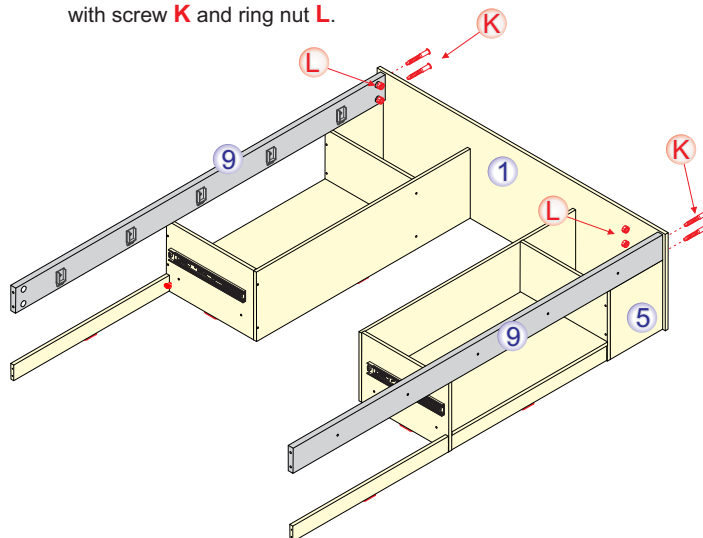


- 12º a)** Posicionar e parafusar o painel peseira **8** nas barras **9** com parafuso **K** e porca anel fixador **L**. Parafusar o painel peseira **8** no rodapé **6** com parafuso **C**.
- b)** Fixar a barra **9** nas divisórias gaveta **4** com as cantoneiras **M** e parafuso **B**. Alinhar a barra **9** com ponta da divisória **4**.
- a)** Position and screw the footboard **8** onto the bars **9** with screw **K** and ring nut **L**. Screw the footboard **8** to the plinth **6** with screw **C**.
- b)** Fix the bar **9** on the drawer dividers **4** with the corner brackets **M** and screw **B**. Align the bar **9** with the end of the divider **4**.

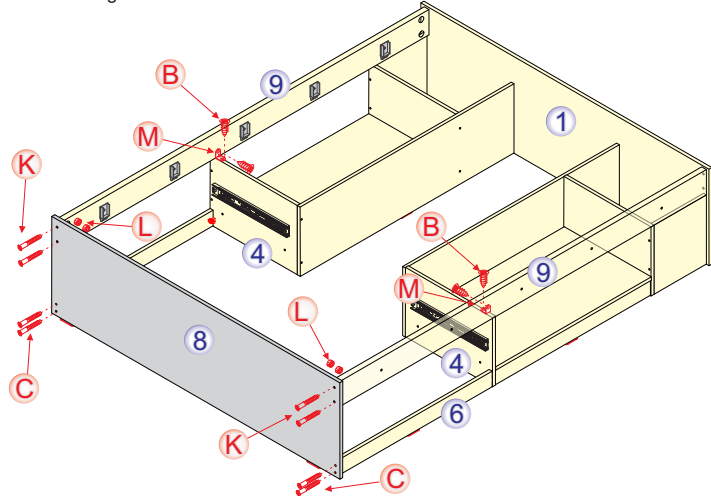

- 13º a)** Posicionar e parafusar as travessas madeira **10** nas buchas das barras **9** com o parafuso **N**.

- a)** Position and screw the wooden crosspieces **10** into the bushings of the bars **9** with screw **N**.

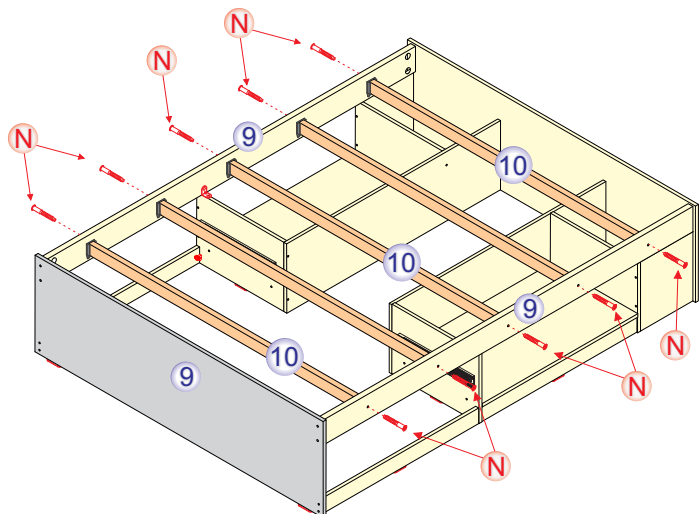


- 14º a)** Posicionar e parafusar as ripas madeira **11** nas travessas madeira **10** com o parafuso **O**.

- b)** Colocar um espaço de 74mm entre as ripas.

- a)** Position and screw the wooden slats **11** onto the crossbeams wood **10** with screw **O**.

- b)** Place a space of 74mm between the slats.

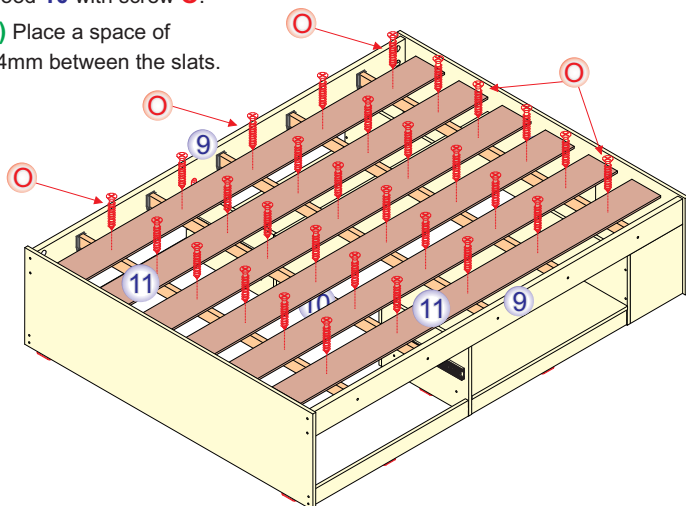

- 15º a)** Encaixar as cavilhas **P** nas laterais gavetas **13** e **14** formando pares.


- b)** Encaixar as Laterais **13** e **14** com cavilhas na frente gaveta **12** e travar com a cantoneira **Q** e parafuso **B**.

- c)** Posicionar e parafusar o traseiro gaveta **15** nas laterais **13** e **14** com parafuso **R**.

- a)** Fit the pegs **P** on the sides of the drawers **13** and **14** forming pairs.

- b)** Fit Sides **13** and **14** with dowels in front of drawer **12** and lock with angle bracket **Q** and screw **B**.

- c)** Position and screw the rear drawer **15** on sides **13** and **14** with screw **R**.

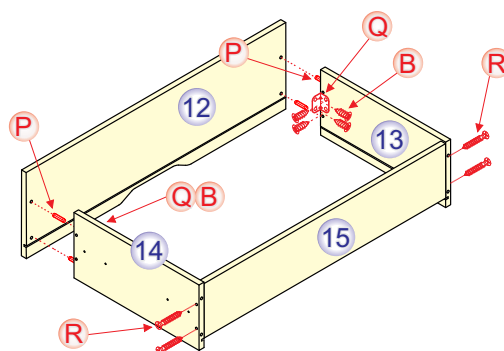


- 16º a)** Encaixar o fundo gaveta **16** nos rasgos das laterais **13**; **14** e Frente gaveta **12**, parafusar no traseiro **15** com parafuso **B**.

- b)** Posicionar e parafusar as corredeiras **G** desengatadas nas laterais **13** e **14** nas marcações com parafuso **B**.

- a)** Fit the bottom drawer **16** into the slots on the sides **13**; **14** and Drawer front **12**, screw on rear **15** with screw **B**.

- b)** Position and screw the disengaged slides **G** in the sides **13** and **14** at the screw marks **B**.

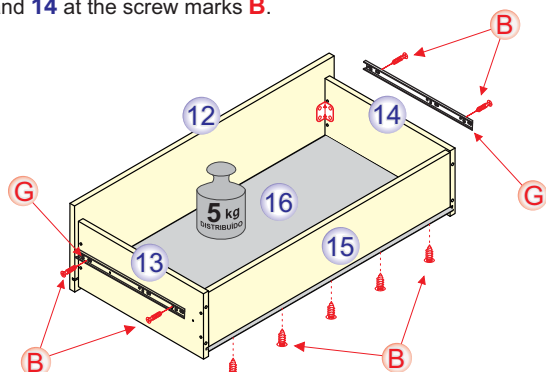

- 17º a)** Encaixar as gavetas montadas na cama.

- b)** Colocar as tampas do parafuso **S**.

- a)** Fit the bed-mounted drawers.

- b)** Fit the screw caps **S**.

Encaixar as Gavetas
Fitting the Drawers

