
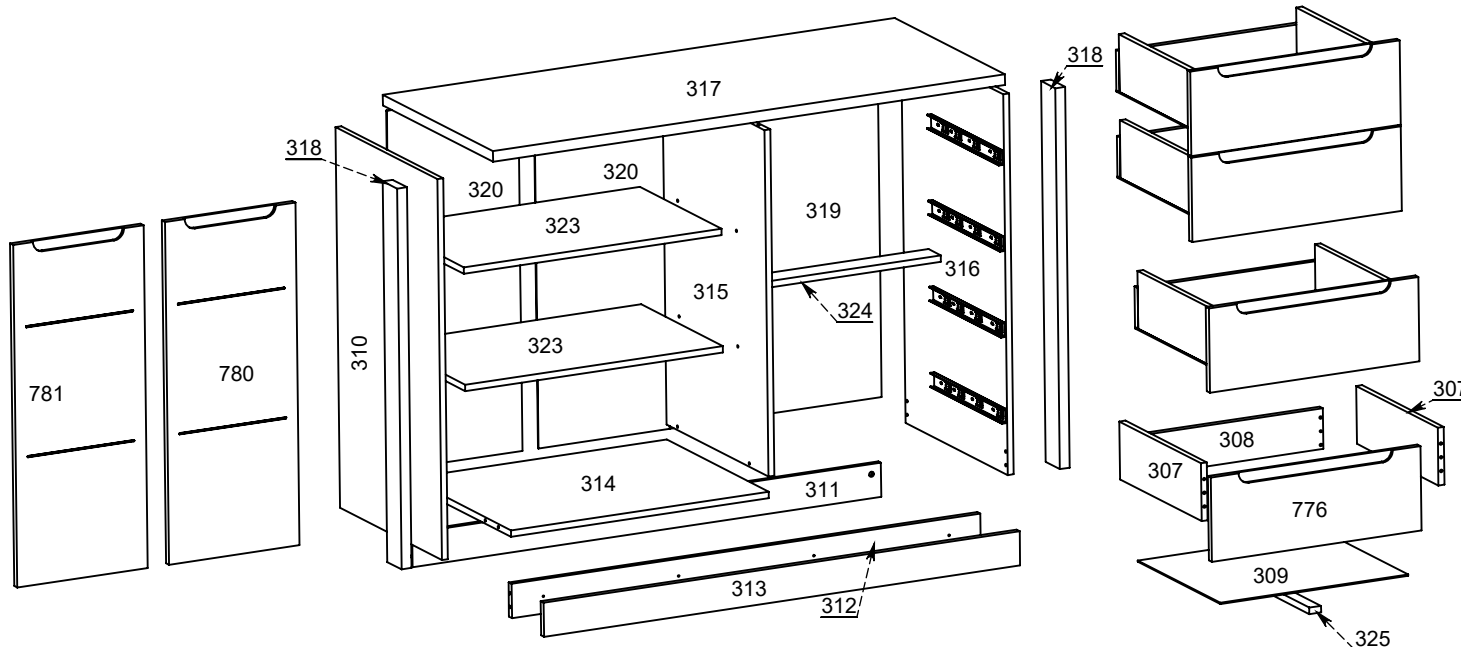








CÔMODA PEROLA BRANCA




LISTA DE PEÇAS


Ref	Descrição	Compr	Larg	Qtde.
307	LATERAL GAVETA	400	135	8
308	CONTRA FUNDO GAV	464	95	4
309	FUNDO GAVETA	475	405	4
310	LATERAL ESQUERDA	889	500	1
311	RODAPÉ TRASEIRO	1186	80	1
312	RODAPE FRONTAL	1186	80	1
313	VISTA FRONTAL	1204	80	1
314	BASE	652	500	1
315	DIVISÓRIA	809	500	1
316	LATERAL DIREITA	889	500	1
317	TAMPO	1295	540	1
318	ENCABEÇAMENTO LAT.	889	70	2
319	FUNDO MAIOR TRASEIRO	536	840	1
320	FUNDO MENOR TRASEIRO	840	332	2
323	PRATELEIRA	652	400	2
324	TRAVA GAVETEIRO	520	60	1
325	TRAVA GAVETA	400	30	4
776	FRENTE GAVETA	530	197	4
780	PORTA DIREITA	800	330	1
781	PORTA ESQUERDA	800	330	1

Acessórios															
A	Qt.4	B	Qt.6	C	Qt.24	D	Qt.32	E	Qt.1	F	Qt.4	G	Qt.4	H	Qt.1
	Corrediza Telescópica 400mm		Sapata L		Conjunto Minifix		Cavilha 6x30 mm		Perfil		Dobradiça 26mm		Calço		Bastão Obilongo
I	Qt.1	J	Qt. 82	L			Qt.24	N	Qt.8	O			Qt.76		
	Cola SACHE		Prego 8x8				Parafuso 3,5 x 35		Parafuso 3,5 x 25				Parafuso 3,5x14		
P	Qt.4	Q	Qt.10	R	Qt.8	S	Qt.2	T	Qt.12	V	Qt.8	W			Qt. 6
	Cantoneira		Batente Silicone		Suporte Pratel.		Suporte Bastão		Tapa Furo Ades.		Fixador Metálico				Prego 10x10


ASPECTO FINAL

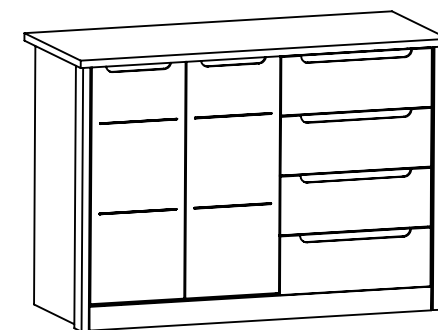


1º Passo

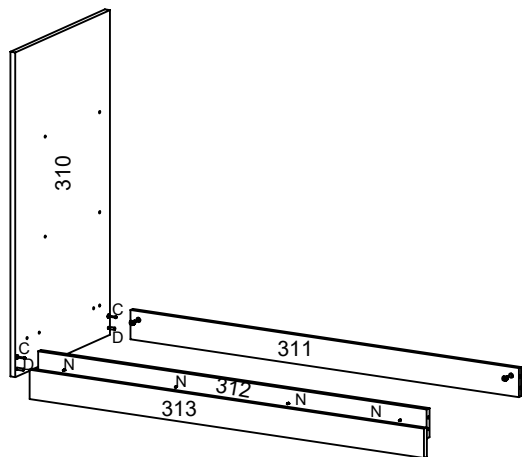

2º Passo

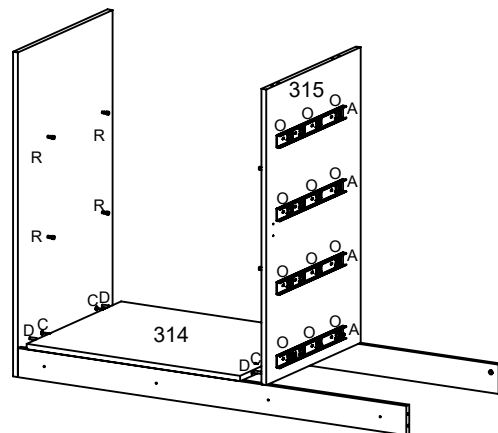


Desacoplamento Fácil




Obs. Empurre a trava para cima e em seguida, puxe a parte menor da correia, conforme as setas.


3º Passo

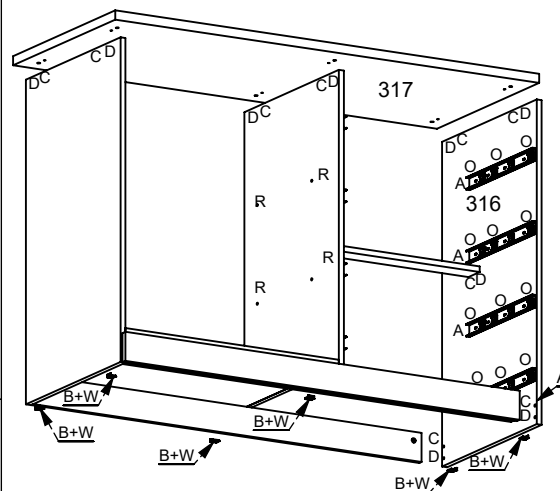


4º Passo

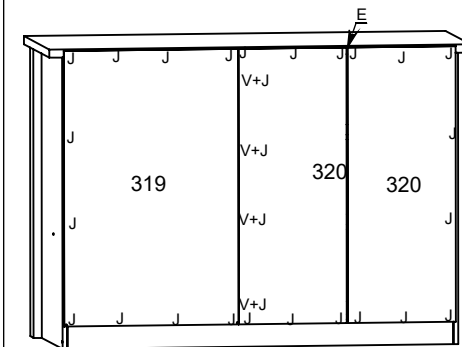


5º Passo

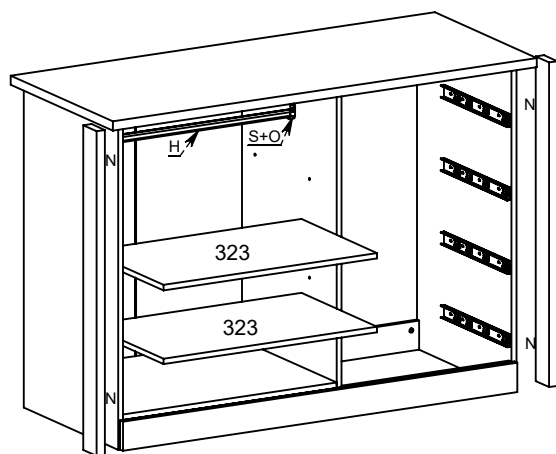


6º Passo

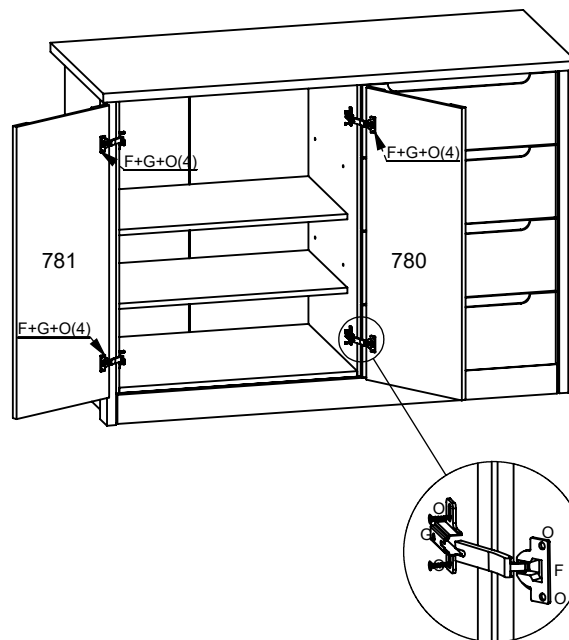


7º Passo

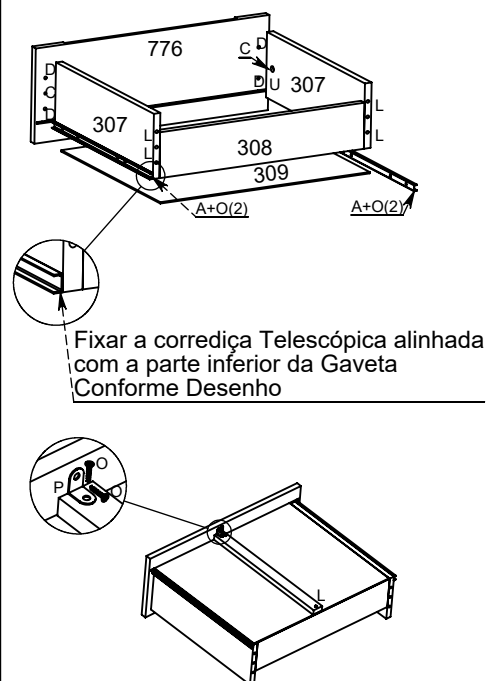

8º Passo

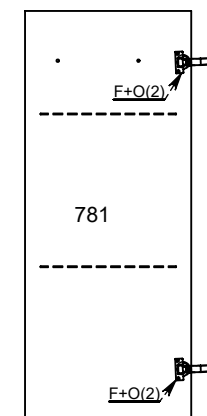


ROUPEIRO PEROLA 3 PORTA

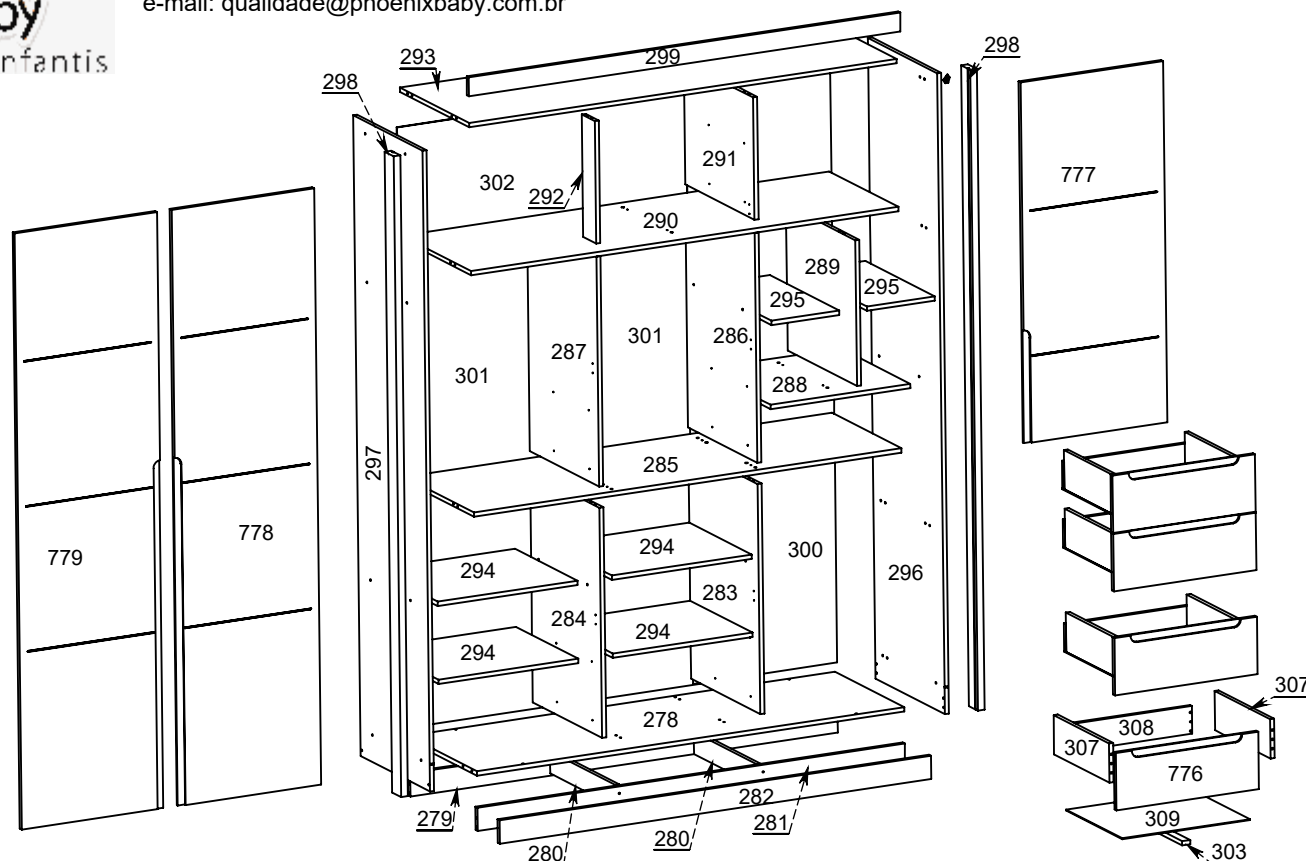

LISTA DE PEÇAS

Ref	Descrição	Compr	Larg	Esp	Qtde.
278	BASE	1590	500	15	1
279	RODAPÉ TRASEIRO	1590	80	15	1
280	TRAVA DO RODAPÉ	470	75	15	2
281	RODAPÉ FRONTAL	1590	80	15	1
282	VISTA FRONTAL INF.	1605	80	15	1
283	DIVISÃO INF. DIR.	790	500	15	1
284	DIVISÃO INF. ESQ.	790	500	15	1
285	TAMPO DO GAVETEIRO	1590	500	15	1
286	DIVISÃO SUP. DIR.	790	500	15	1
287	DIVISÃO SUP. ESQ.	790	500	15	1
288	BASE NICHOS	520	500	15	1
289	DIVISÃO DO NICHOS	500	500	15	1
290	TAMPO DO MALEIRO	1590	500	15	1
291	DIVISÃO DO MALEIRO	420	500	15	1
292	BATENTE	420	95	15	1
293	CHAPÉU	1590	500	15	1
294	PRATELEIRA MÓVEL	520	450	15	4
295	PRATELEIRA MÓV. NICHOS	252	500	15	2
296	LATERAL DIREITA	2200	500	15	1
297	LATERAL ESQUERDA	2200	500	15	1
298	ENCABEÇAMENTO LAT.	2200	65	25	2
299	VISTA FRONTAL	1605	65	15	1
300	FUNDO TRAS. MAIOR	2060	536	3	1
301	FUNDO TRAS. MENOR	1625	536	3	2
302	FUNDO TRAS. MALEIRO	438	1075	3	1
303	TRAVA GAVETA	400	30	15	4
307	LATERAL DE GAVETA	400	135	15	8
308	CONTRA FUNDO	464	95	15	4
309	FUNDO DA GAVETA	475	405	3	4
776	FRENTE DE GAVETA	530	197	15	4
777	PORTA MÉDIA	1240	530	15	1
778	PORTA GRANDE DIR	2047	530	15	1
779	PORTA GRANDE ESQ	2047	530	15	1

ASPECTO FINAL

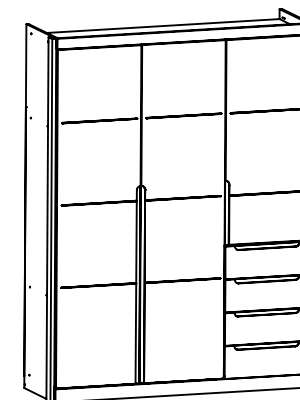

Acessórios		B	C	D	E	F	G	H	I
A	Qt.4	Qt.8	Qt.47	Qt.60	Qt.7	Qt.11	Qt.11	Qt.2	Qt.1
Corrediça Telescópica 400mm		Sapata L.	Conjunto Minifix	Cavilha 6x30 mm	Cavilha 6x50 mm	Dobradiça 26mm	Calço	Bastão Obilongo	Cola Sache
J	Qt.11	K	Qt.4	L	Qt.20	M	Qt.4	N	Qt.12
Parafuso 5,0 x 50		Trapézio		Parafuso 3,5 x 35		Parafuso 4,0 X 30		Parafuso 3,5 x 25	
O	Qt.116	P	Qt.8	Q	Qt.16	R	Qt.24	S	Qt.4
Parafuso 3,5x14		Cantoneira		Batente Silicone		Suporte Pratel.		Suporte Bastão	
T	Qt.28	U	Qt.8	V	Qt.48	Y	Qt.167		
Tapa Furo Ades.		Prego 10x10		Fixador Metálico		Prego 8x8			

1º Passo

4º Passo

Desacoplamiento

Obs. Empurre a trava para cima e em seguida, puxe a parte menor da correia, conforme as setas.

2º Passo

776

307

308

309

A+O(3)

A+O(3)

Fixar a corredeira Telescópica alinhada com a parte inferior da Gaveta Conforme Desenho

6° Passo

Diagram illustrating the 6th step of the algorithm. The diagram shows a vertical rectangle divided into four horizontal sections by dashed lines. The number 779 is in the second section from the top. On the right side, there are four arrows pointing right, each labeled $F+Q(2)$. The arrows are located at the top, between the first and second dashed lines, between the third and fourth dashed lines, and at the bottom.

7º Passo

The diagram shows a 3D box with dimensions and labels. The top face is labeled '302' and the bottom face is labeled '301'. The left face is labeled '300'. The box is divided into three vertical sections by two vertical lines. The top and bottom edges of the box are labeled with 'Y' characters. The vertical edges are labeled with 'V+Y' characters. The box is shown in a perspective view, with the top face slightly offset from the bottom face.

9° Passo

The diagram illustrates the 9th step of the assembly process, which involves installing the hinges for the wardrobe doors. The main image shows the wardrobe frame with the doors open. Arrows point to the locations where the hinges should be attached to the door frames and the main cabinet body. The labels G+O(2) indicate the specific hinge components to be used. A circular inset provides a detailed view of the hinge mechanism, showing the G+O(2) label and the F label.