


ACESSÓRIOS | ACCESSORIES | ACCESORIOS | LISTE D'ACCESSOIRES

A PARAFUSO 4,5X60 CABEÇA CHATA VIS 4,5X60 40X	B PARAFUSO 3,5X35 CABEÇA CHATA VIS 3,5X35 23X	C PF 3,5X12 CC VIS 3,5X12 36X	D CANTONEIRA METÁLICA ÉQUERRE MÉTALLIQUE 8X	E PARAFUSO MINIFIX VIS MINIFIX 4X	F TAMBOR MINIFIX BOÎTIER MINIFIX 4X	G SUPORTE CABIDEIRO SUPPORT 2X	H 40X TAPA FURO CACHE TROU 8X TAPA FURO CACHE TROU
J CABIDEIRO 670 BARRE DE SUSPENSION 670MM 1X	L SAPATA 43X24X7 PATIN 43X24X7 4X	M PREGO 8X8 CLOU 8X8 42X	N CAVILHA 6X30 GOIJON 6X30 24X	O CORREDIÇA TElescópica 300MM GLISSIÈRE TELESÇOPIQUE 300MM 2X	P PUXADOR TROIA POIGNÉE TROIA 2X	Q PARAFUSO 3,5X25 CF VIS 3,5X25 4X	

Início da Montagem | Assembly Start | Inicio del Ensamble | Début du Montage


1º Passo - Preparação das Peças

Pass / Paso / Étape

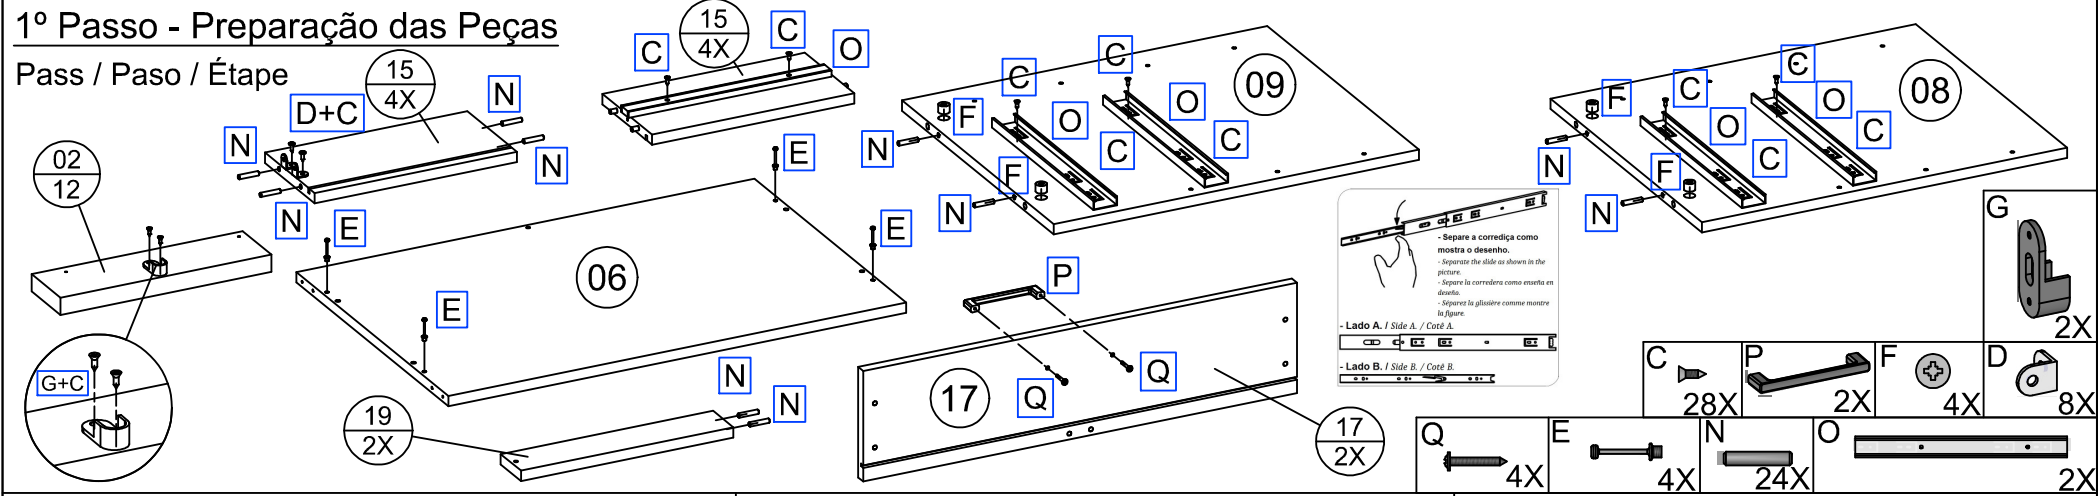


2º Passo

Pass / Paso / Étape

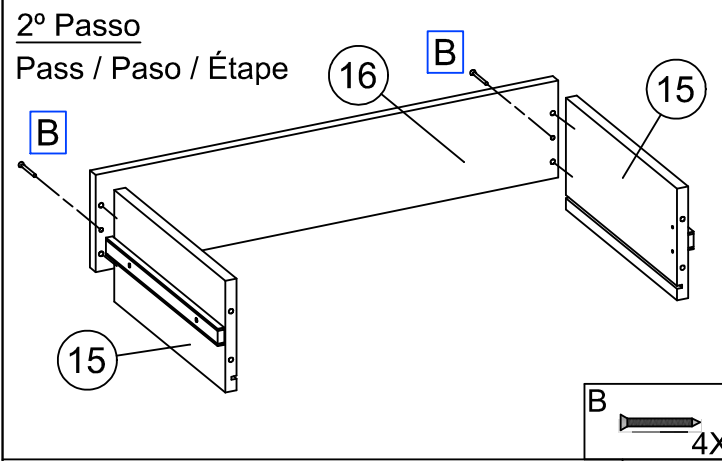


3º Passo

Pass / Paso / Étape

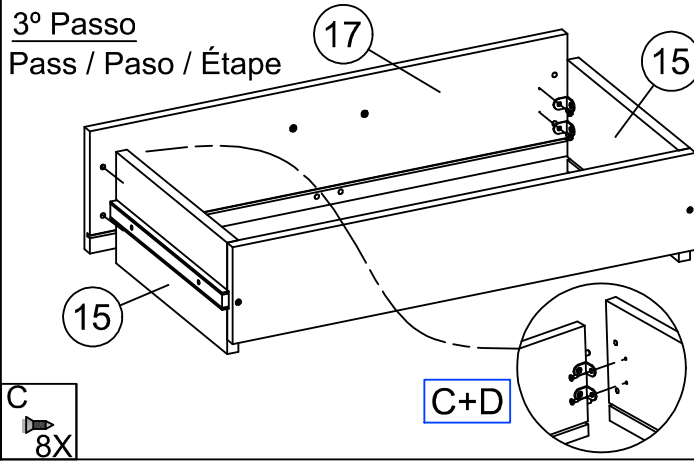


4º Passo

Pass / Paso / Étape

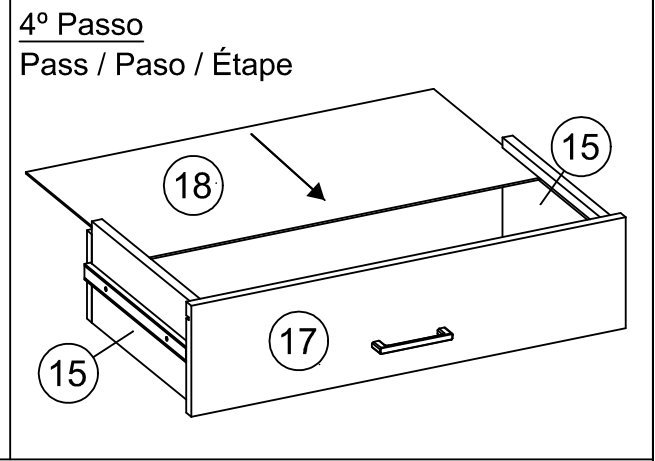


5º Passo

Pass / Paso / Étape

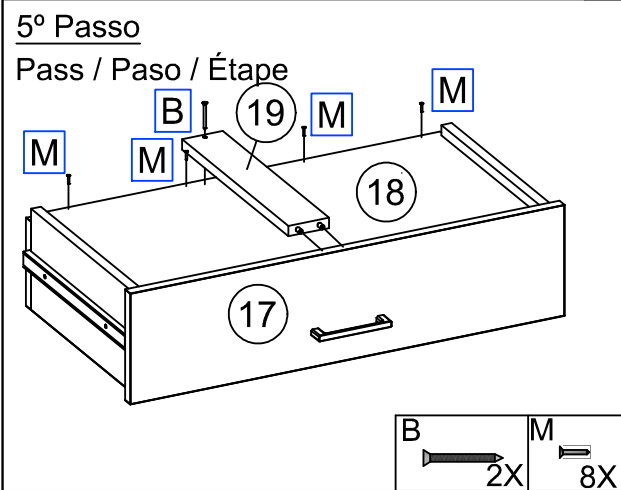


6º Passo

Pass / Paso / Étape

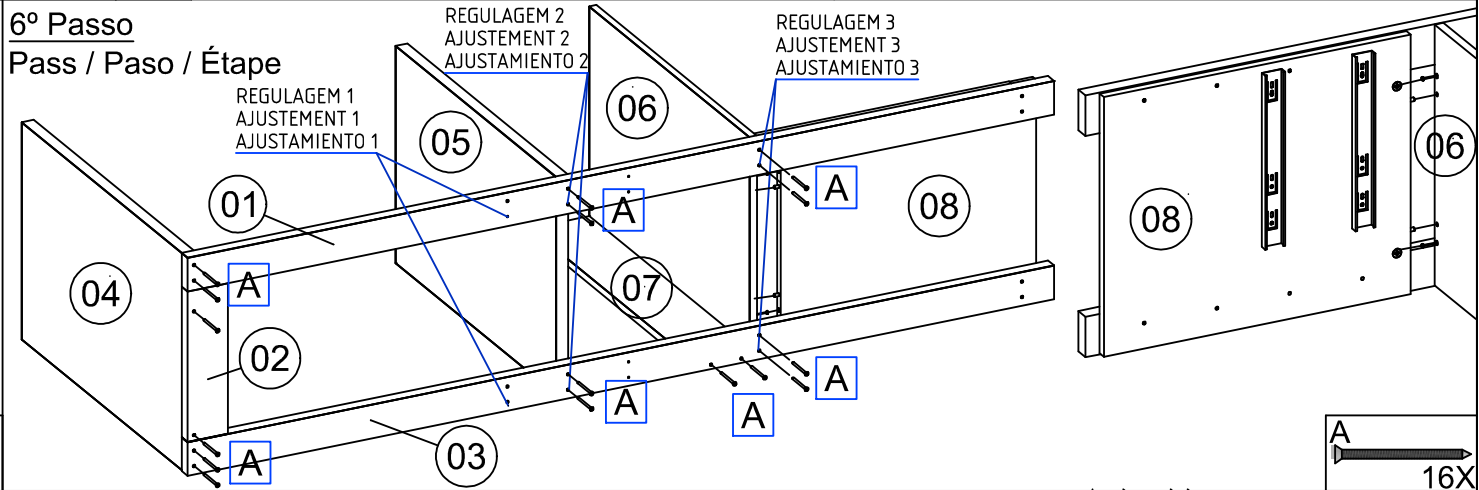



7º Passo

Pass / Paso / Étape

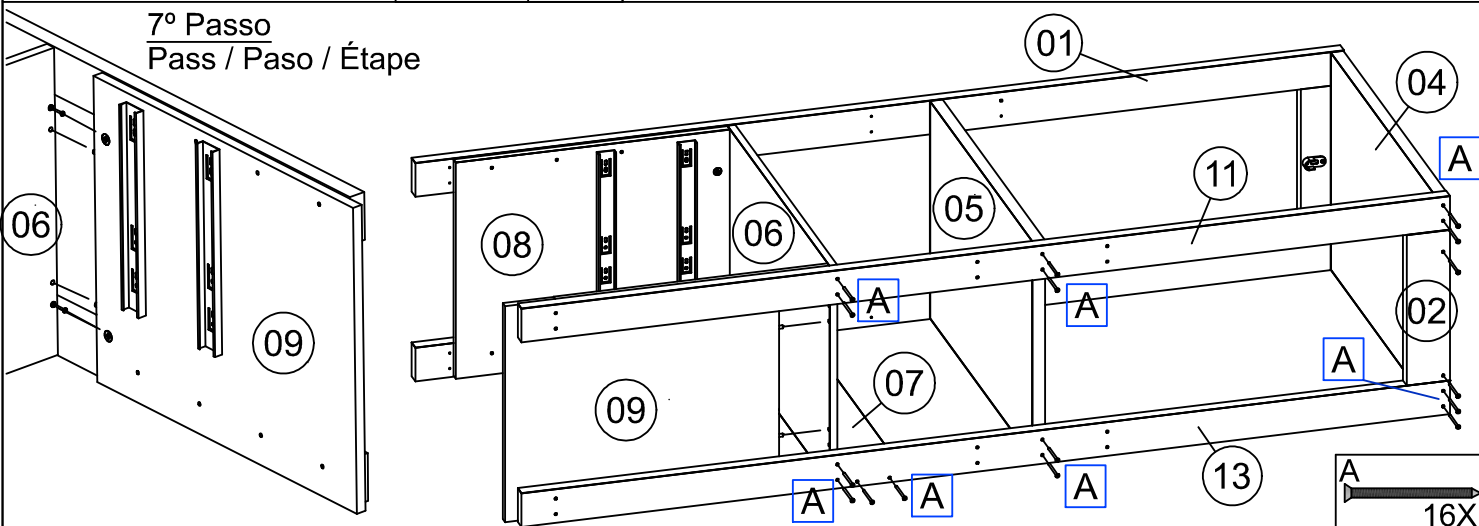



8º Passo

Pass / Paso / Étape

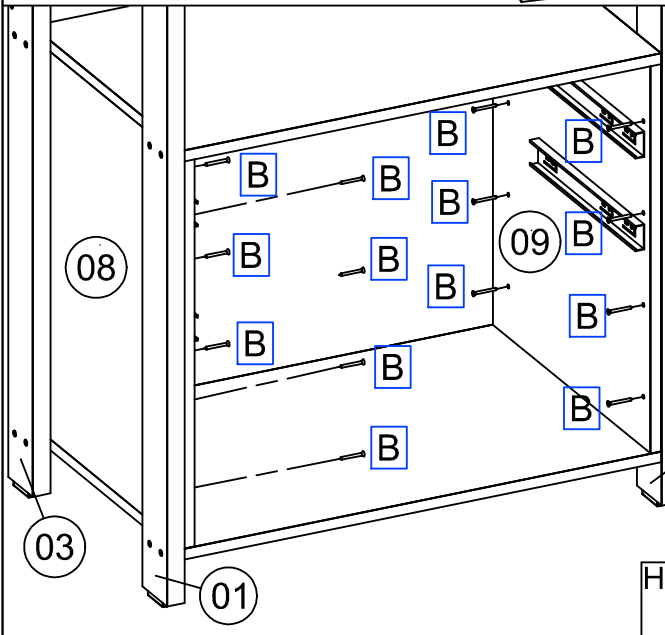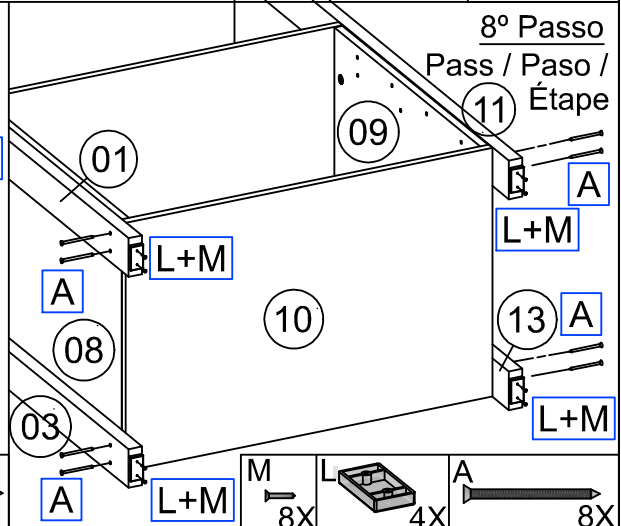

9º Passo

Pass / Paso / Étape

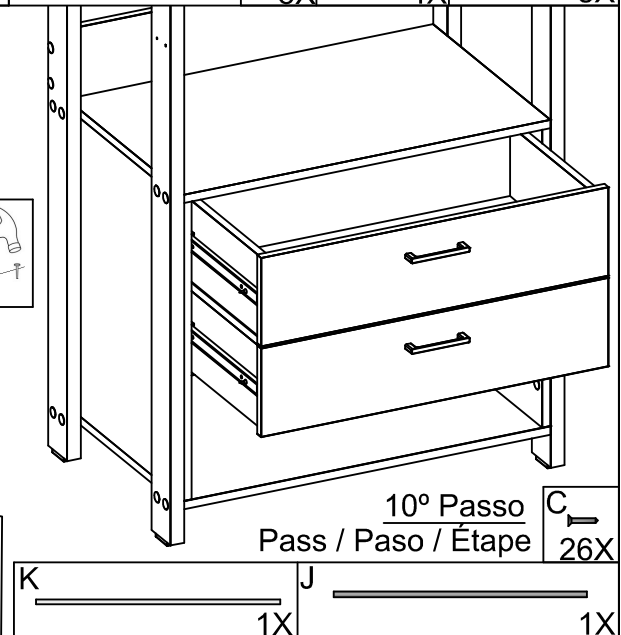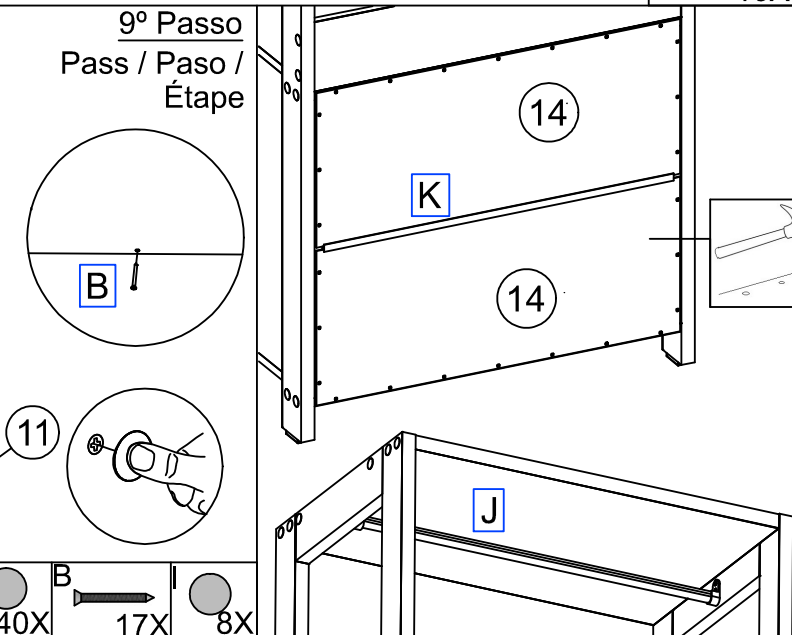

10º Passo

Pass / Paso / Étape

