

CM-8036



Instruções de Montagem Assembly Instructions Instrucciones de Armado

Acesse Vídeos de Montagens
Access Mounting Videos
Acceder a los Vídeos de Montaje
www.tecnomobili.ind.br

tecnomobili

Estrada RSC 453, Km s/nº | Garibaldi | RS
CEP: 95720-000 | Fone / Fax: 54.3464.2050

sac@moveisvideira.com.br

Notas Especiais:

01 -Examine completamente todas as peças do móvel antes de começar o trabalho.

02 -Recomenda-se montar o móvel conforme este Manual de Montagem.

03 -É de responsabilidade do montador seguir as instruções do Manual de Montagem, que são fundamentais para garantir a estrutura do móvel.

04 -Para limpeza, utilizar somente pano úmido e sabão neutro.

Special notes:

01 -Check all parts of the unit thoroughly before starting work.

02 -It is recommended to assemble the furniture according to this Installation Manual.

03 -It is the responsibility of the assembler to follow the instructions in the Assembly Manual, which are essential to ensure the structure of the furniture.

04 -For cleaning use only damp cloth and neutral soap.

Notas especiales:

01 -Examine completamente todas las piezas del mueble antes de iniciar el trabajo.

02 -Se recomienda montar el mueble conforme el Manual de Ensamblaje.

03 -Es de responsabilidad del montador seguir las instrucciones del Manual de Ensamblaje, que son fundamentales para garantizar la estructura del mueble.

04 -Para limpieza solamente usar trapo húmedo y jabón neutro.


Guarante certificate:

The guarantee of products manufactured by Móveis Videira LTDA covers any defects / manufacturing defects, within the period established by the Consumer Protection Code, in its Article 26, II, which provides for a legal guarantee of ninety (90) days.



Lista de Peças / List of pieces / Lista de piezas

Cód	DESCRIÇÃO	DESCRIPTION	DESCRIPCION	QTD	RAW MATERIAL	DIMENSION	CÓD
01	Tampo	Top	Tapa	1	MDP 12mm	360x255x12mm	708036
02	Lateral Direita	Right Side	Lateral Derecha	1	MDP 12mm	336x255x12mm	308036
03	Lateral Esquerda	Left Side	Lateral Izquierda	1	MDP 12mm	336x255x12mm	318036
04	Prateleira	Shelf	Estante	1	MDP 12mm	334x255x12mm	208036
05	Porta	Door	Shelf	1	MDP 12mm	328x156x12mm	88036
06	Base	Base	Base	1	MDP 12mm	360x255x12mm	108036
07	Costa	Back	Costa	1	MDP 03mm	354x180x03mm	408036

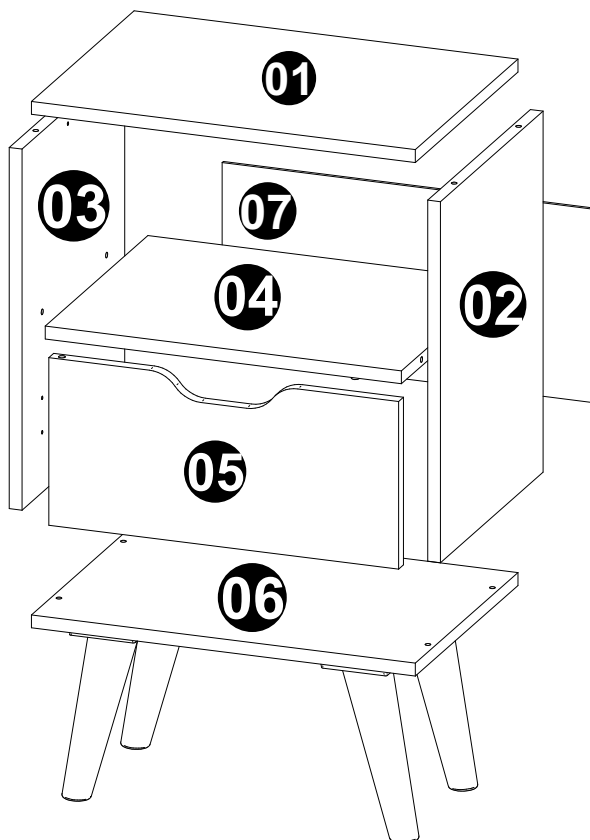



TAMANHO REAL - TAMAÑO VERDADERO - REAL SIZE

REF	DESCRIÇÃO	QTD	CÓD
A	Cavilha 5 x 30mm	08	3880
B	Parafuso 4 x 12mm CC	08	9662
C	4x40mm CC	04	9736

LUSTRACÃO - ILUSTRACION - ILLUSTRATION


REF	DESCRIÇÃO	QTD	CÓD
D	Parafuso 3,5 x 16 CF	16	3841
E	22 x 3mm Prego 10x10	08	3051
F	Cantoneira Plástica 20x20mm	02	9735
G	Pé PVC 180mm	04	
H	14x8x5mm Suporte Prateleira 5x8 c/ estria	01	3748
I	29,4 x 11mm Pino Anelado	01	6519
J	Dobradiça Alta 26mm (BIGFER) Calço Nº 12	01	

Ferramentas | Tools | Herramientas

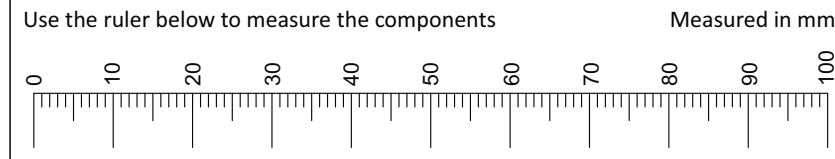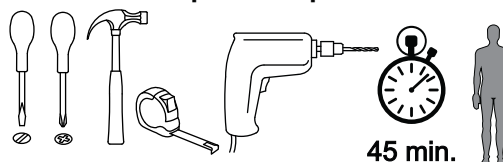


Revisão: 01
Data: 05/10/2023


1

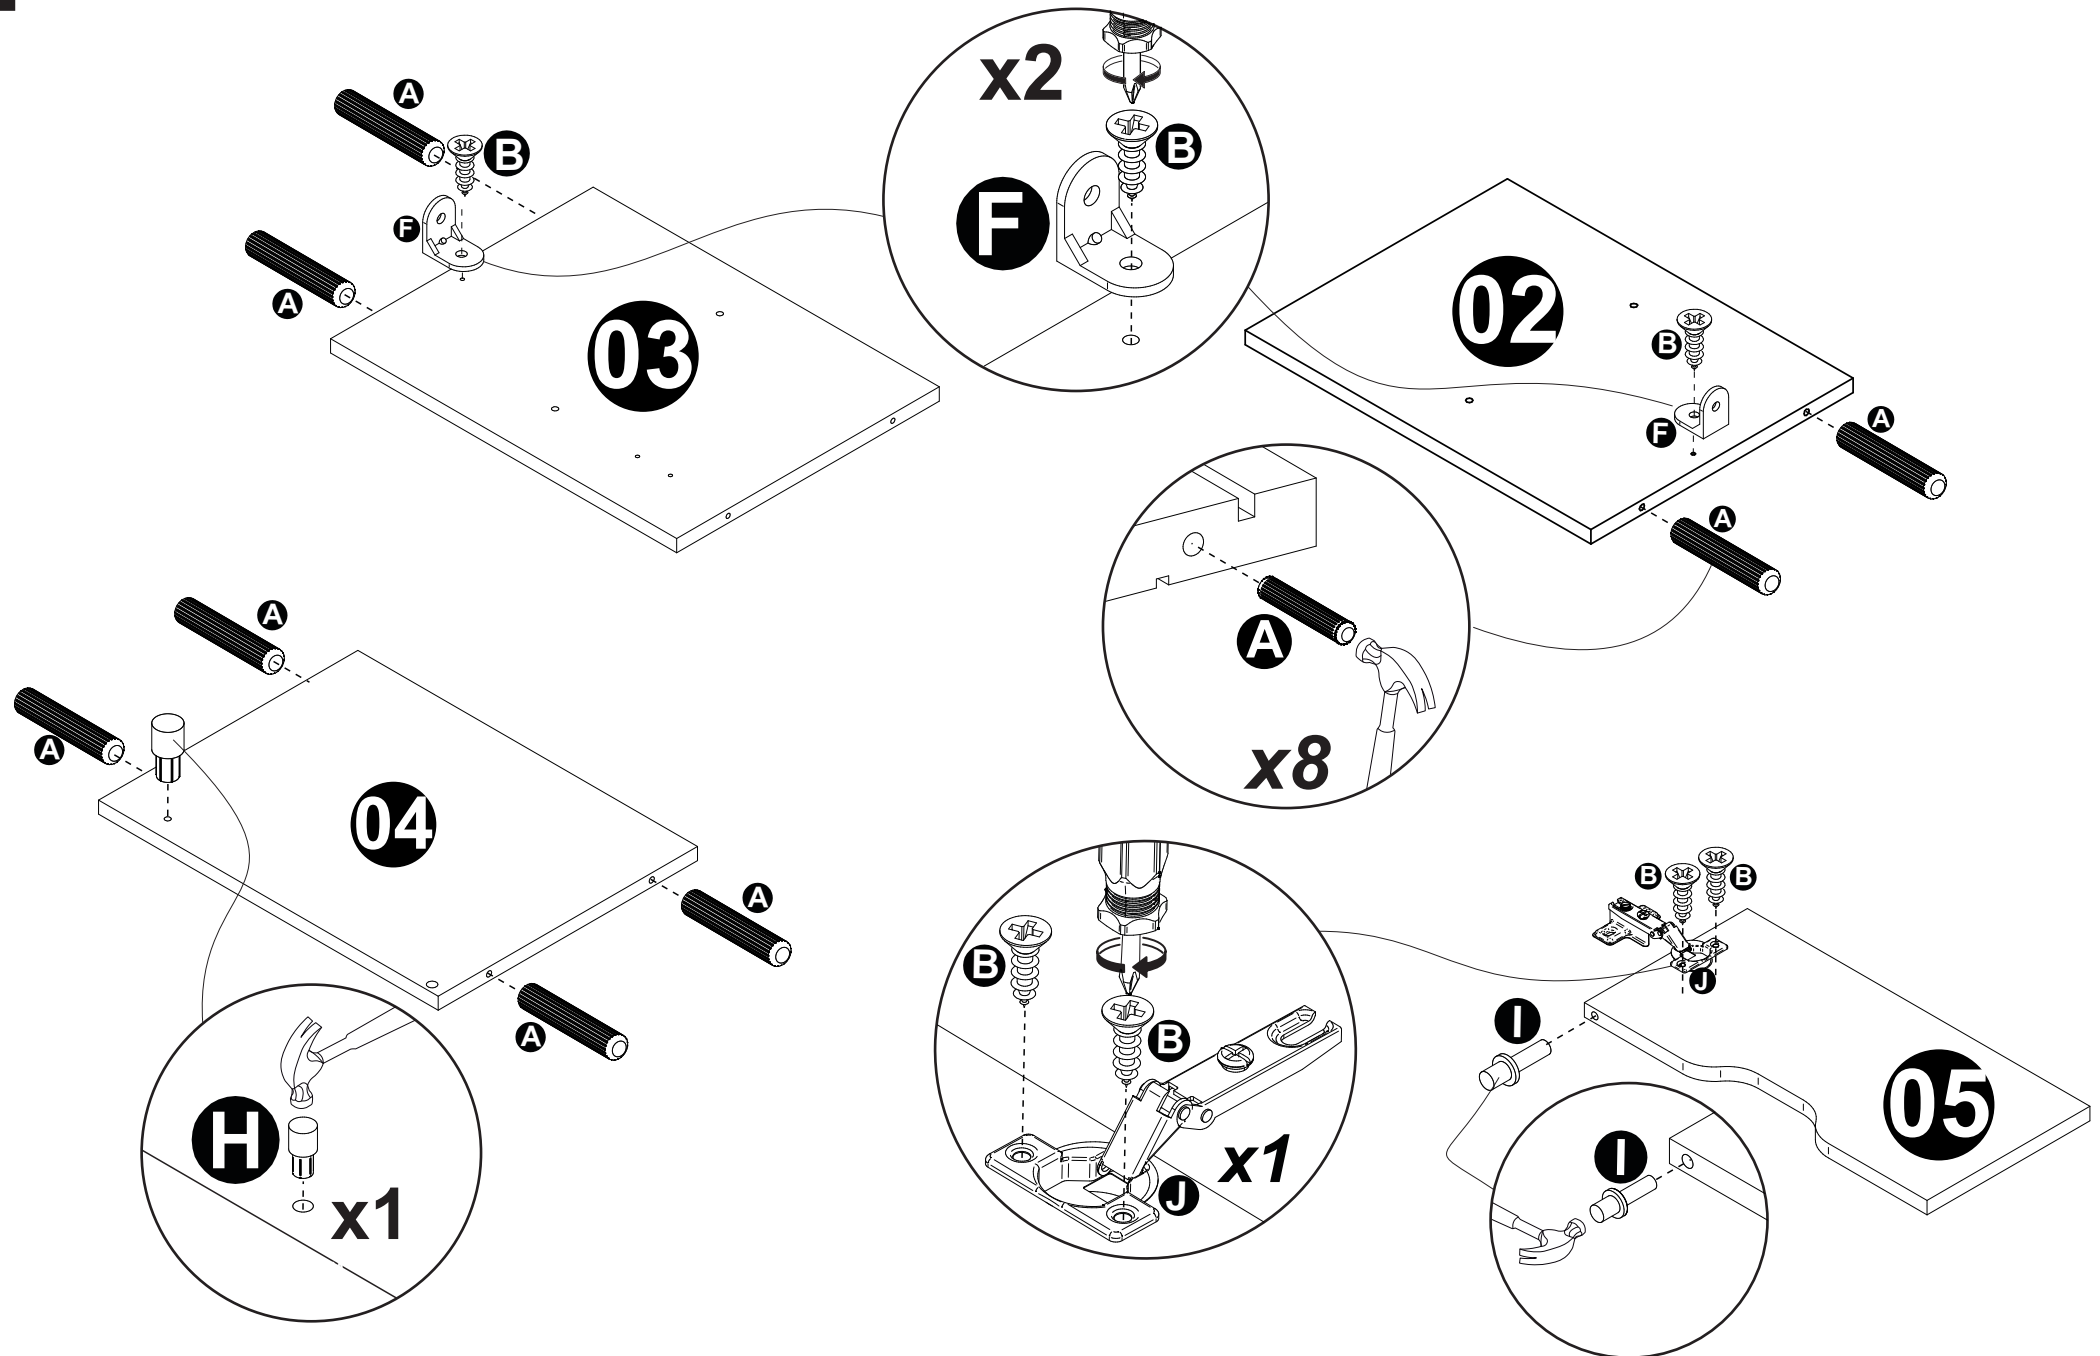



2

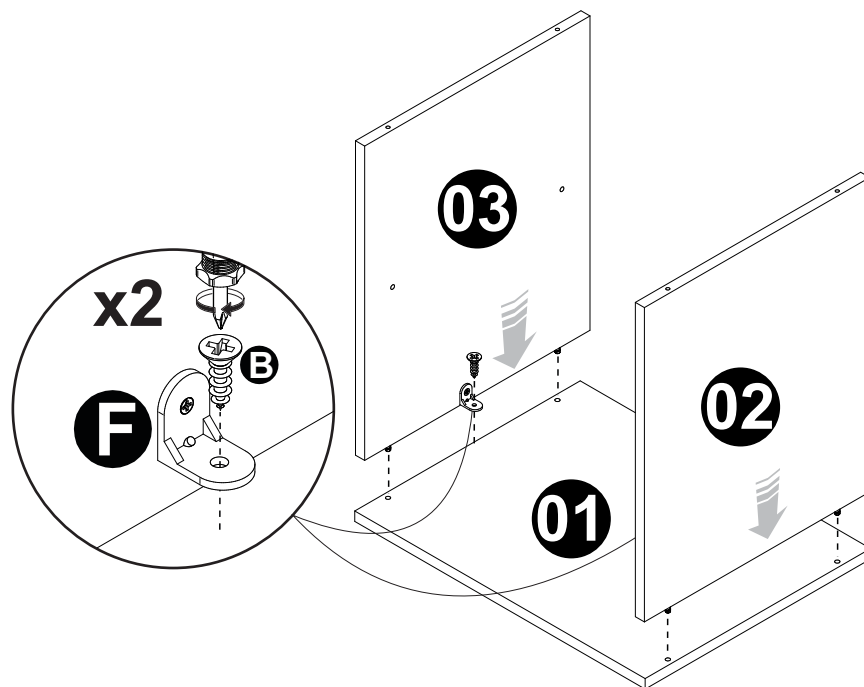

3

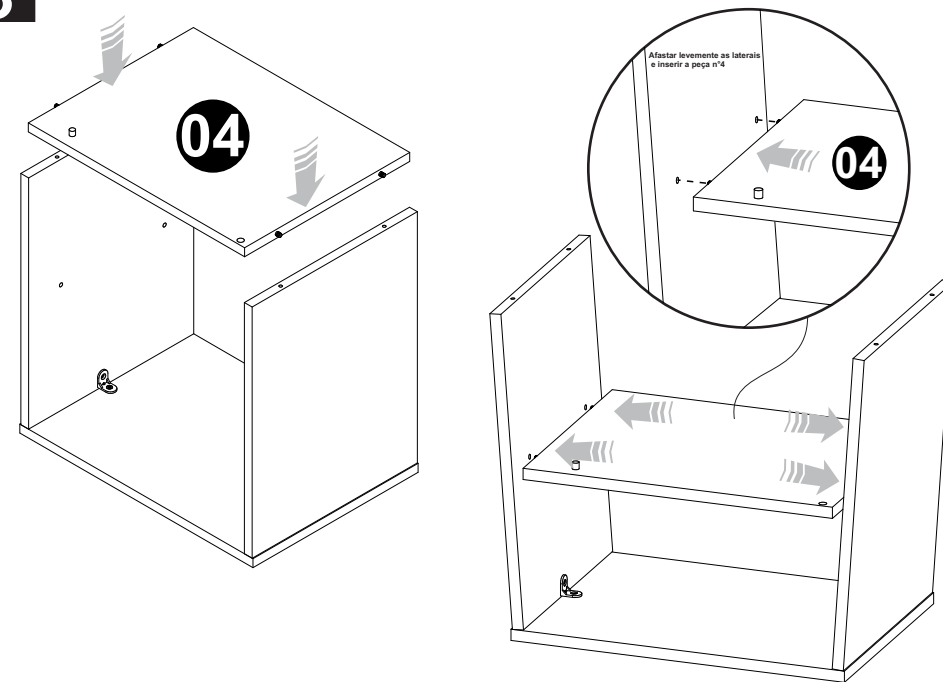


4

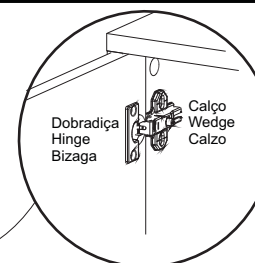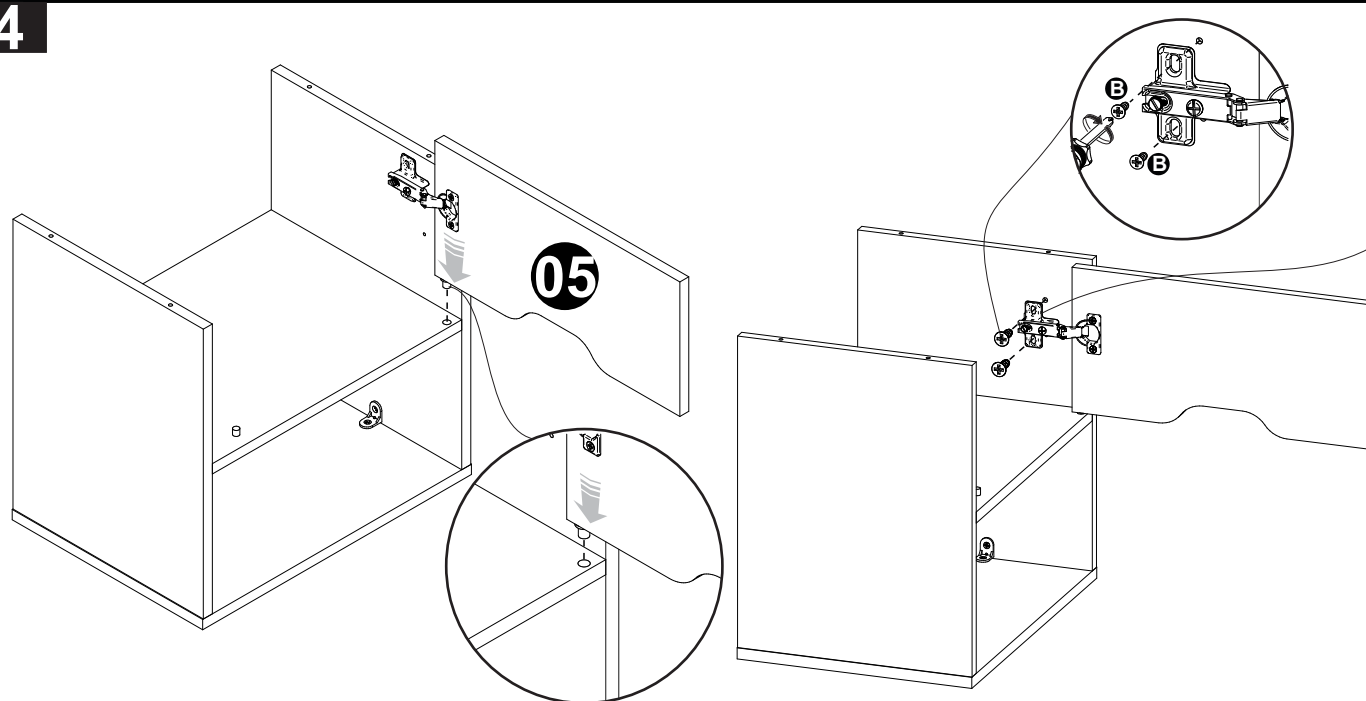


Colocar a dobradiça sobre o calço. / Place the hinge on the wedge. / Colocar la bisagra sobre el calzo.


Ajuste das Portas- Ajustes de las Puertas- Doors Adjustment

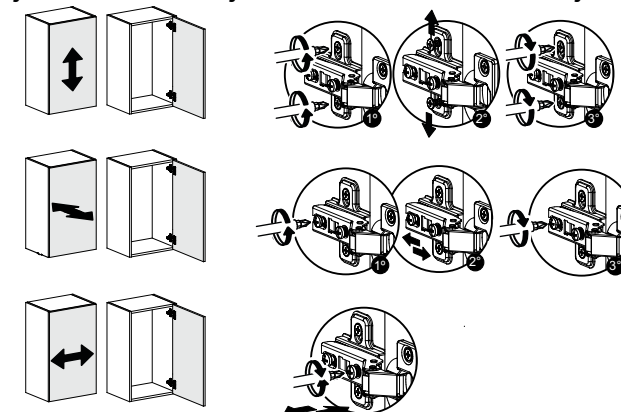


4

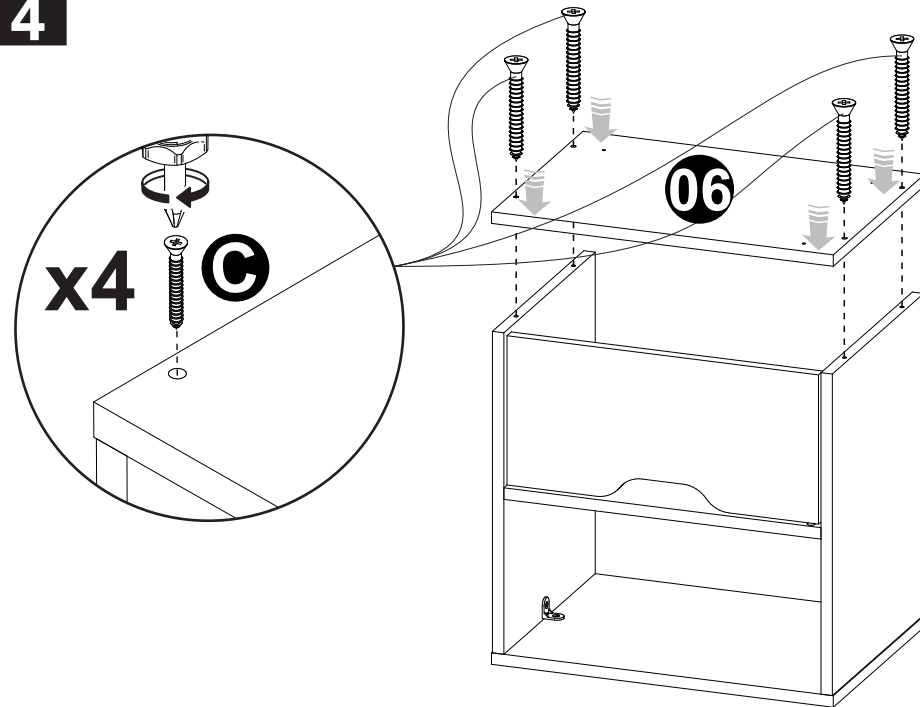

5

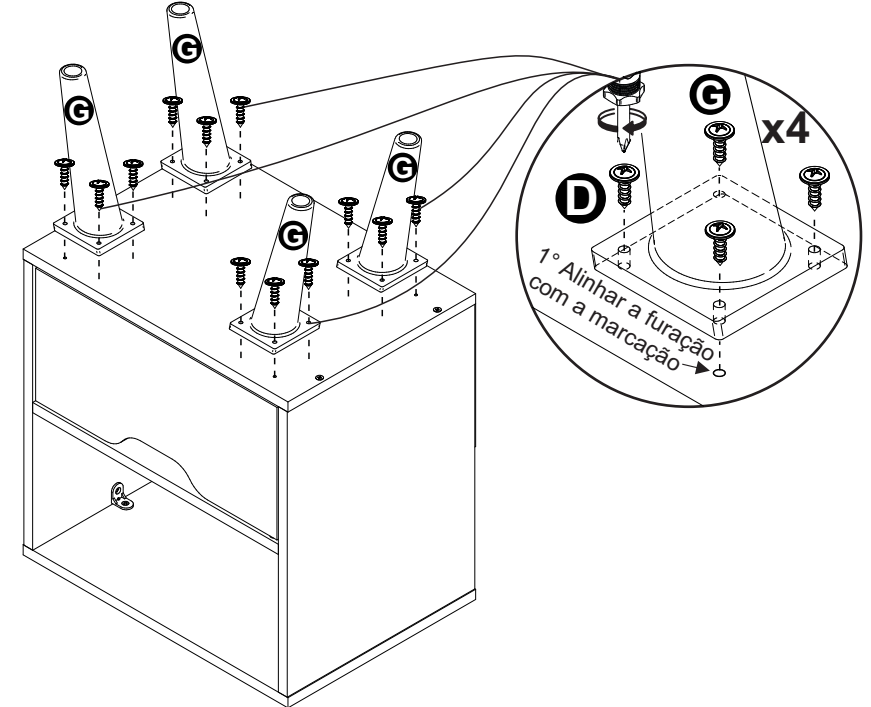

6

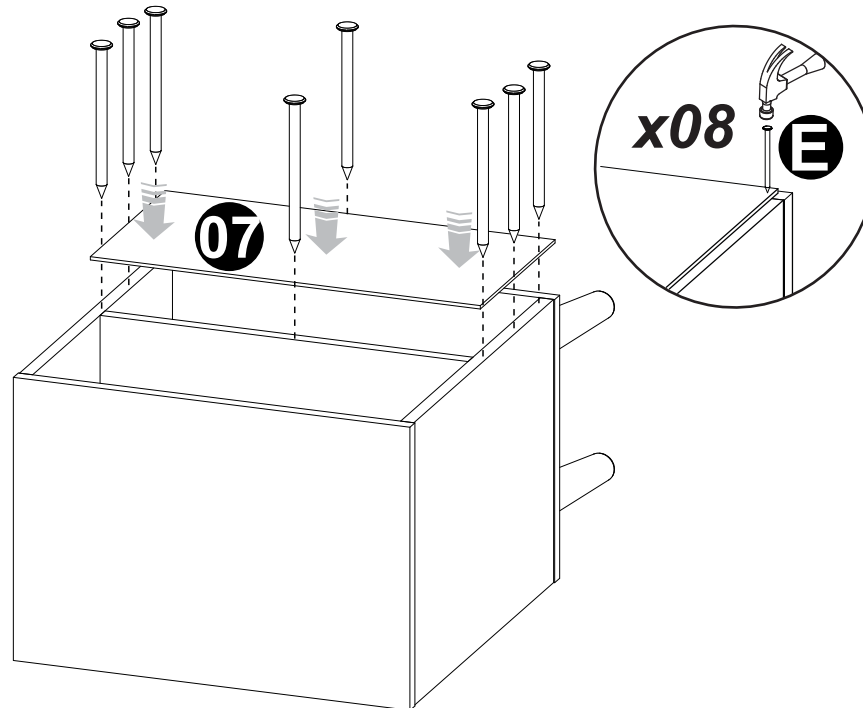

7

