




7

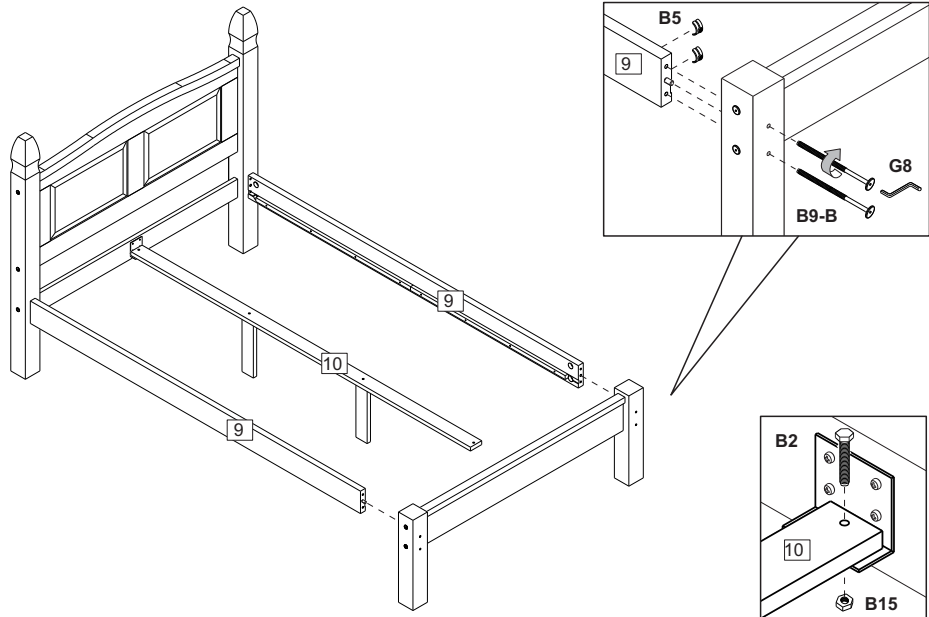


8

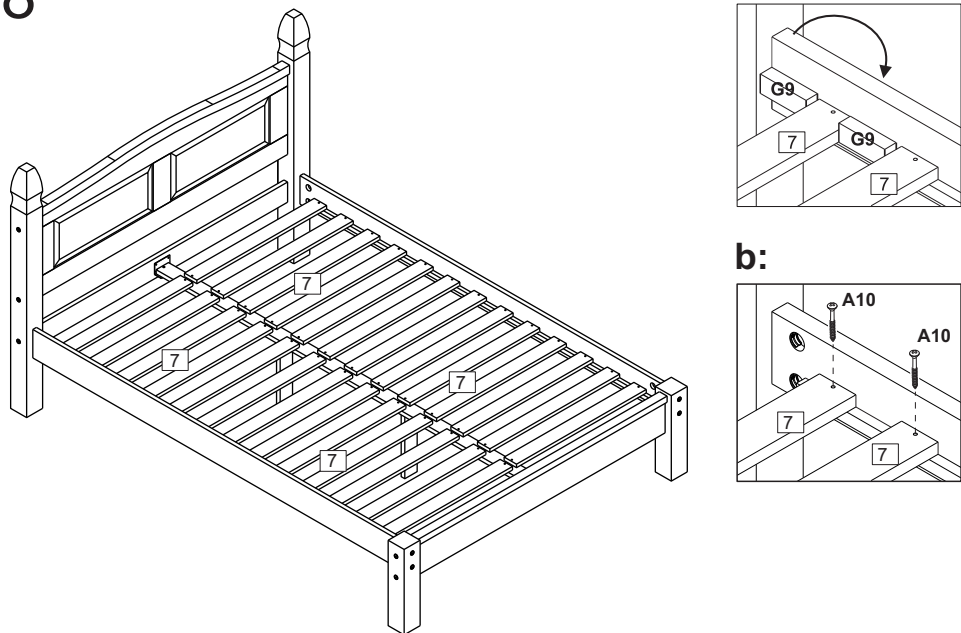

# Cama Corona Casal

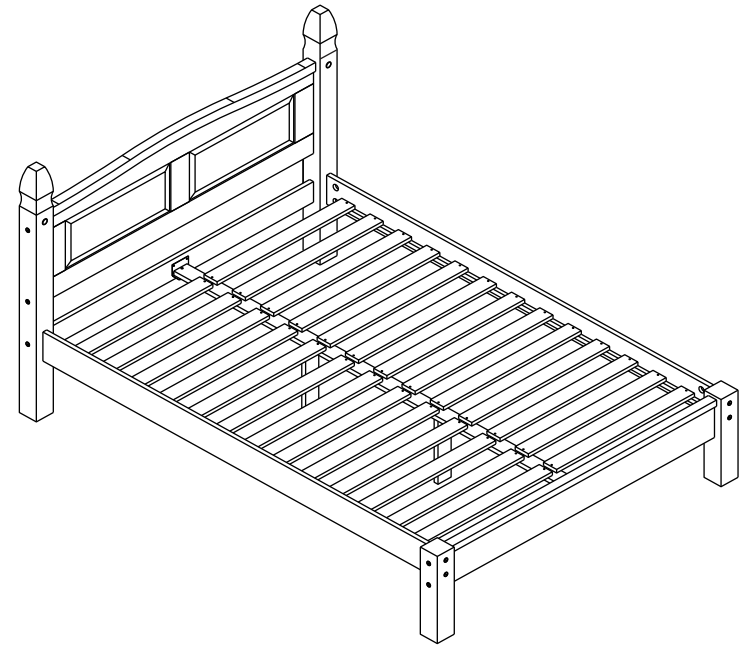


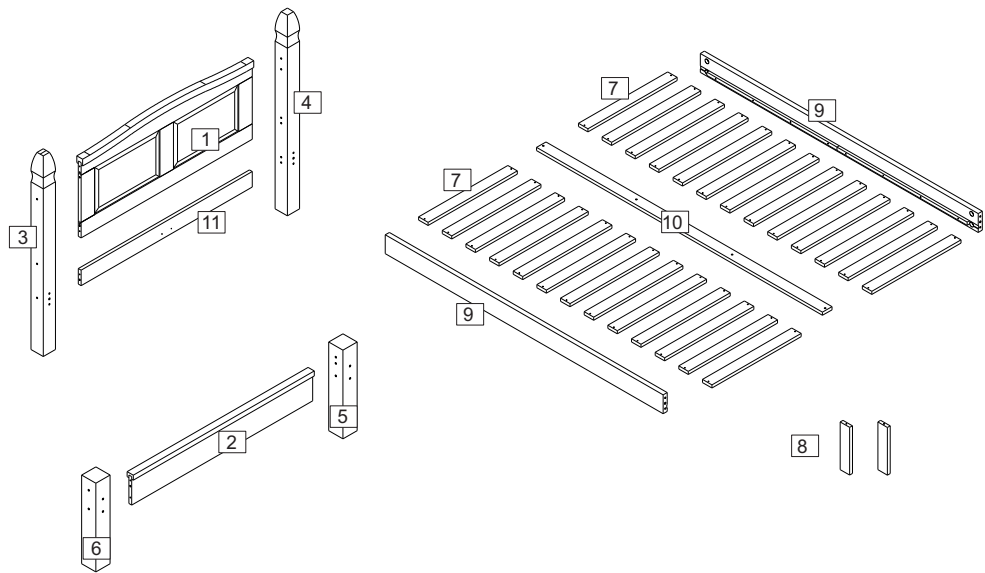


### Lista de Ferragens

Part	Item	Qty	Part	Item	Qty
<b>A10</b>	Ø3,5x30	<b>52</b>	<b>B23</b>	Ø7,0x50	<b>2</b>
<b>A15</b>	Ø4,0x16	<b>8</b>	<b>C1</b>	Ø8,0x30	<b>8</b>
<b>B2</b>	1,4"x32	<b>2</b>	<b>C3</b>	Ø10x40	<b>4</b>
<b>B5</b>	1,4"	<b>8</b>	<b>D9</b>		<b>2</b>
<b>B9-B</b>	Ø1,4"x130	<b>8</b>	<b>G8</b>		<b>1</b>
<b>B15</b>	1,4"	<b>2</b>	<b>G9</b>	72x20x20	<b>2</b>
<b>B22</b>	Ø7,0x120	<b>10</b>	<b>J1</b>	Ø25	<b>2</b>


### Informações Adicionais

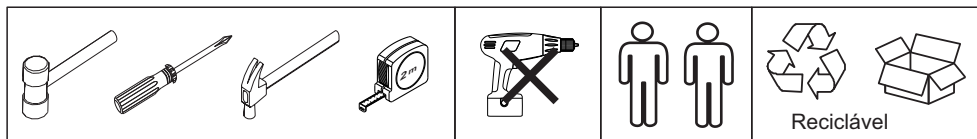


5

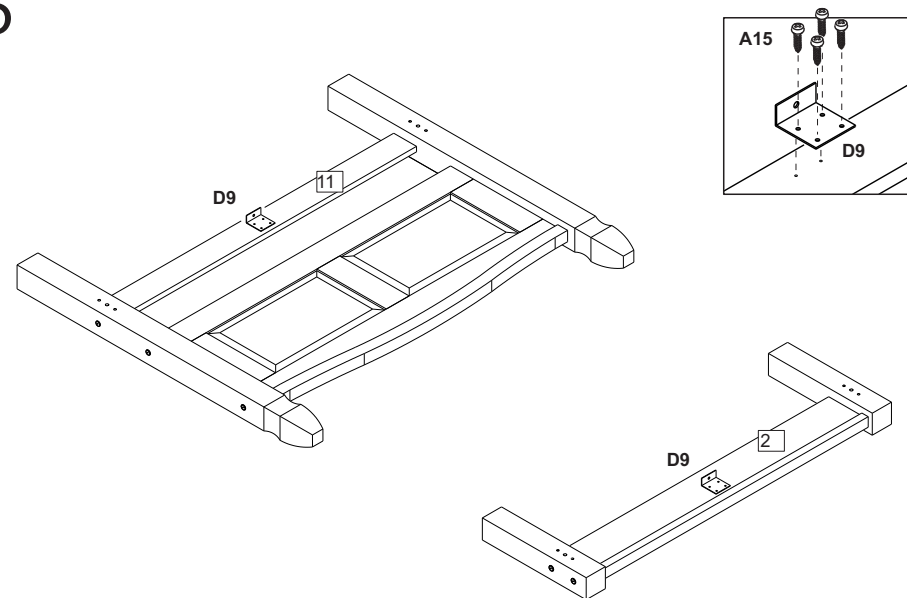


6

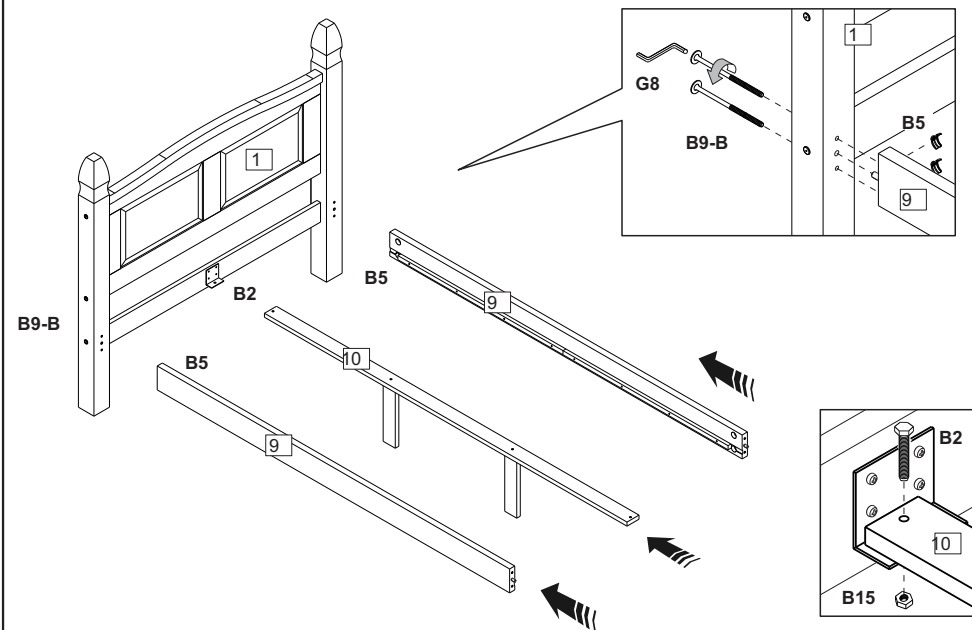


1

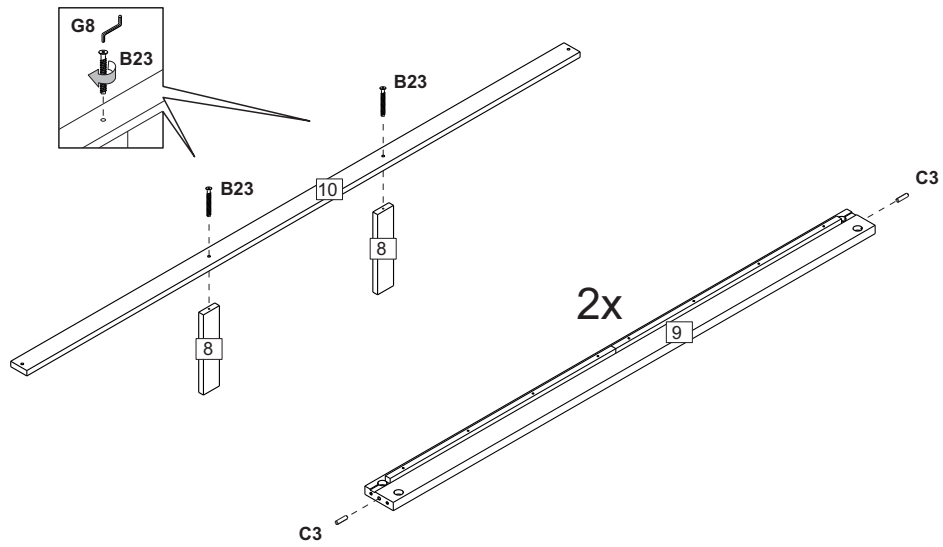


2

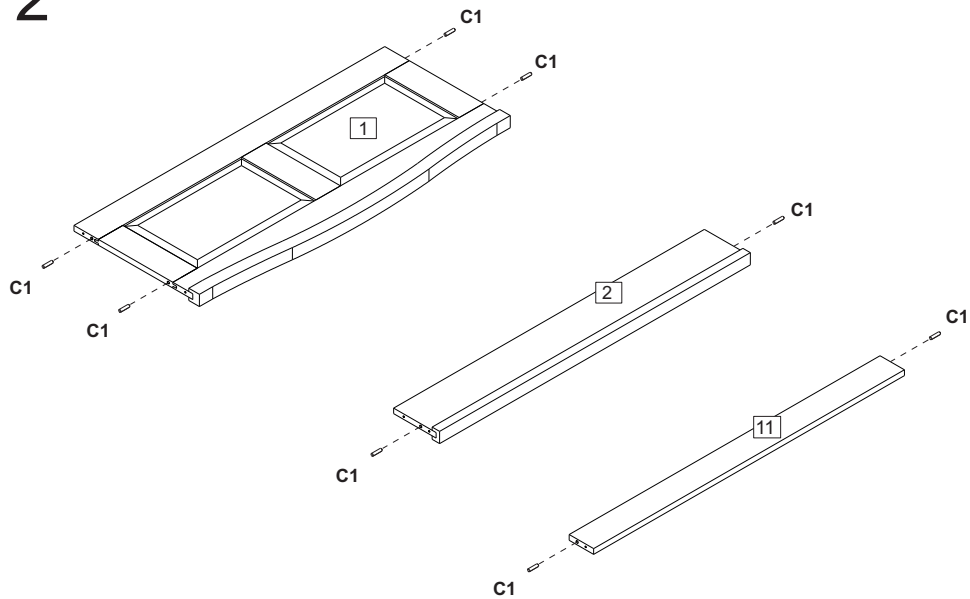


3

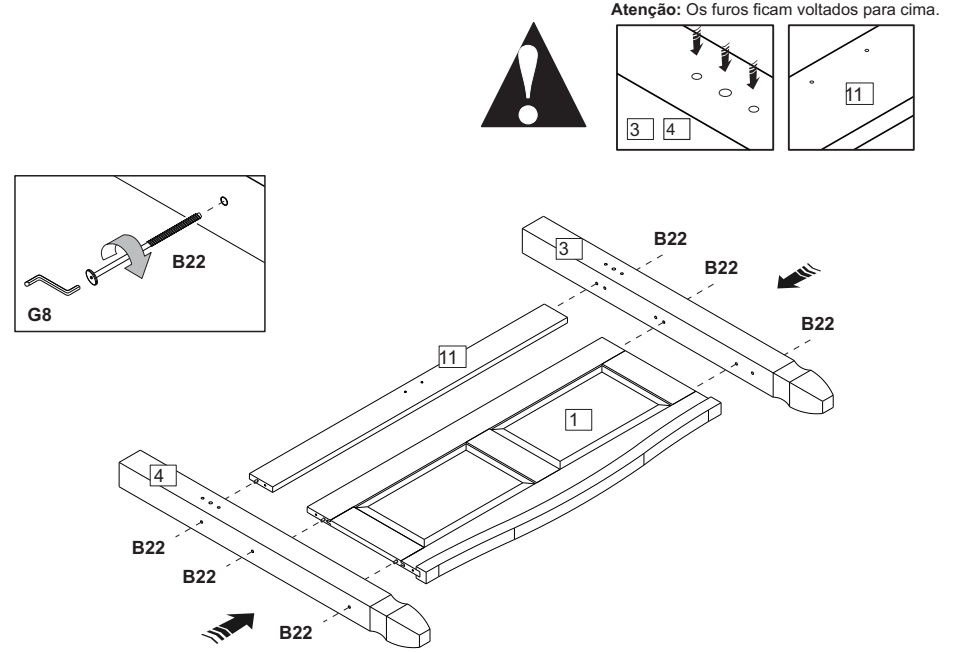


4

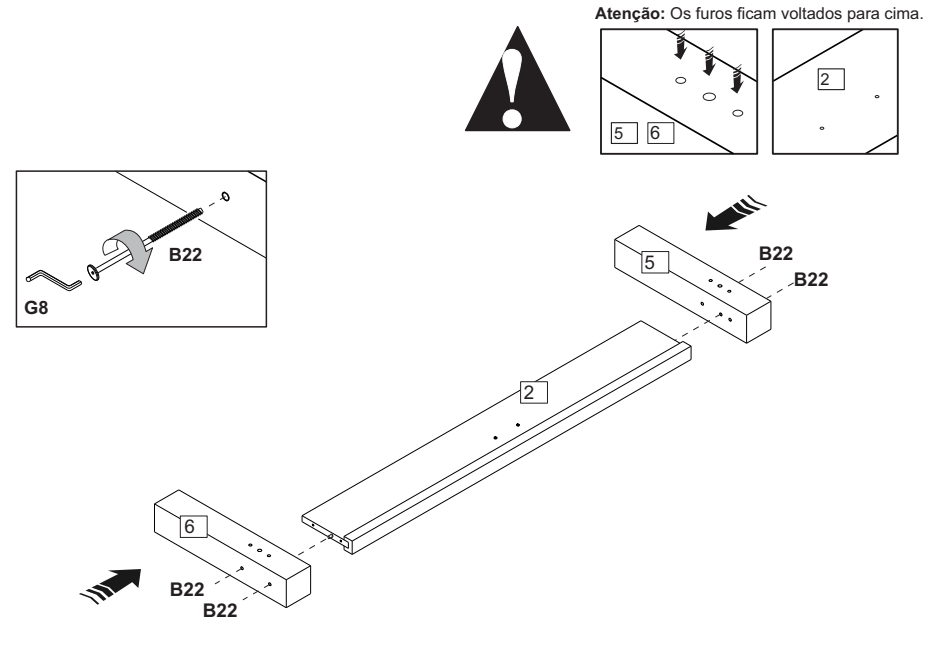


1

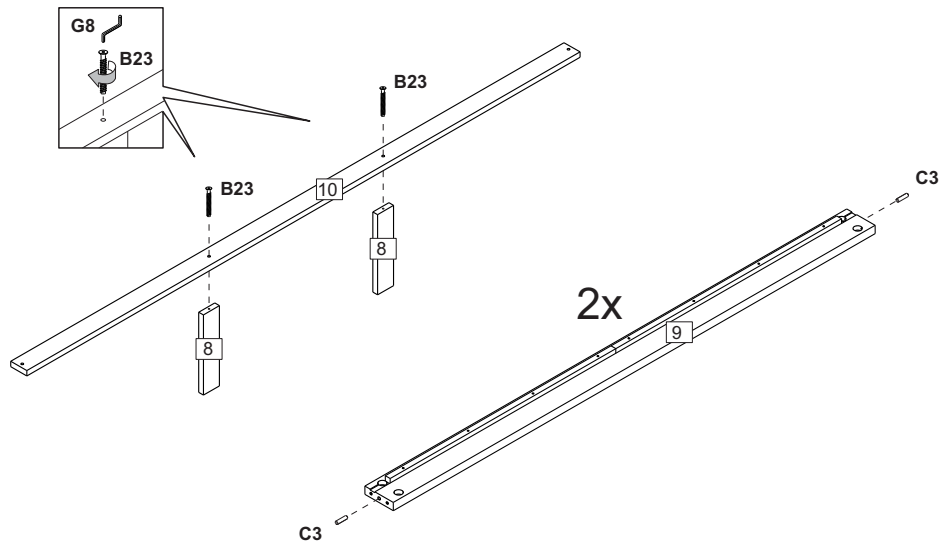

2

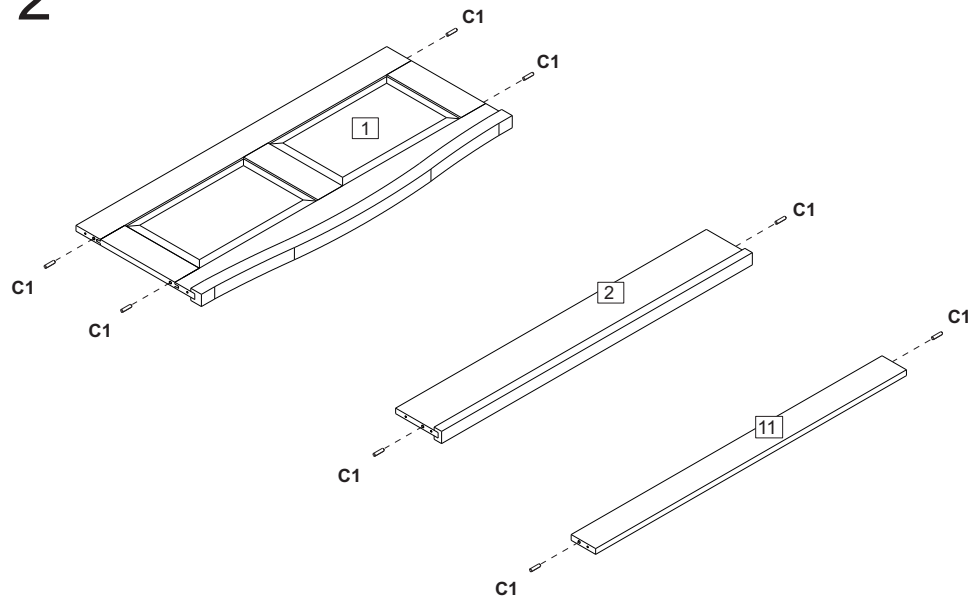

3

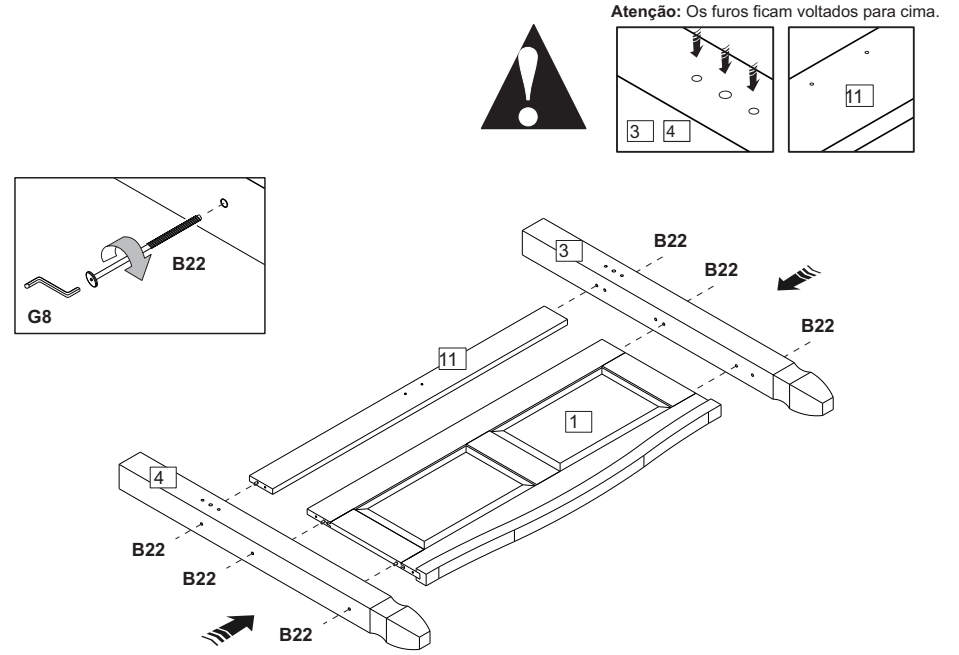

4

