
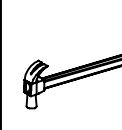
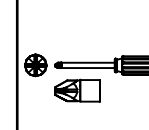


INSTRUÇÃO DE MONTAGEM Assembly Instruction / Instrucciones de montaje

Cama Casal 1,40 Ouro Full Bed / Cama matrimonio

Ref.: 2257



Lista de peças

QT.

01-CABECEIRA

01

Headbord / Cabecera

02-BARRA LATERAL

02

Side rail / Larguero

03-PESEIRA

01

footboard / Piecera

04-SUORTE DE ESTRADO

01

Center rail / Rail central

05-PÉ CENTRAL

03

Center feet / Pie central

06-ESTRADOS

14

Slats / Listones

07-PÉ MENOR


02

Smaller feet / Pies más pequeños

08-PÉ MAIOR


02

Bigger feet / Pies más grande

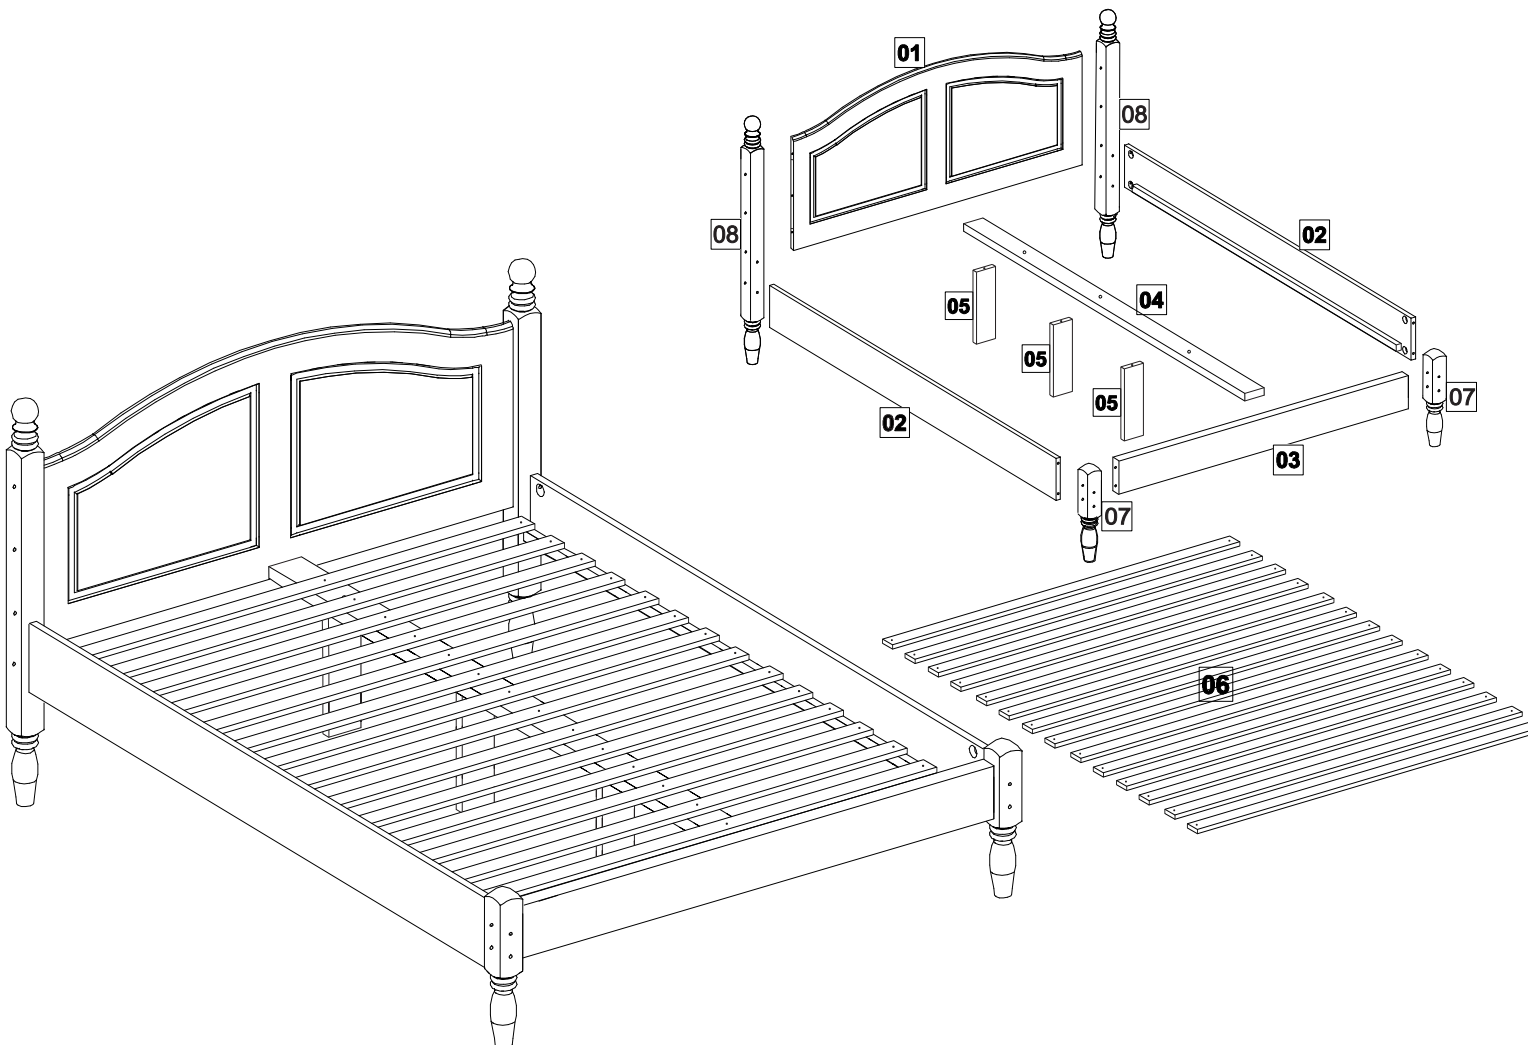


V.:01

A



1/4 x 130 x 08

B




x08

C



x01

D




7 x 50 x03

F



x01

G




7 x 120 x12

H



x20

I



3,5 x 20 x03

J




4,0 x 30 x42

L




x01

M




1/4 x 35 x01


01

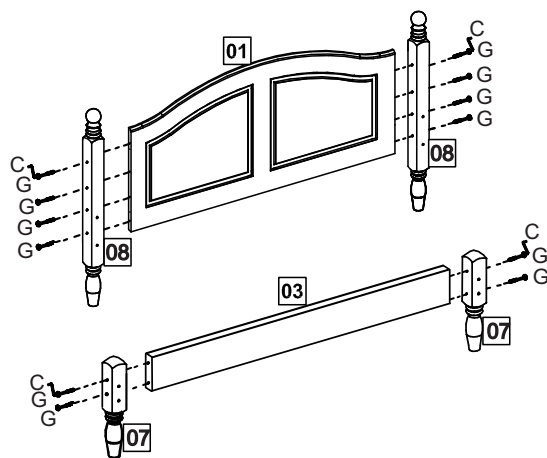


02

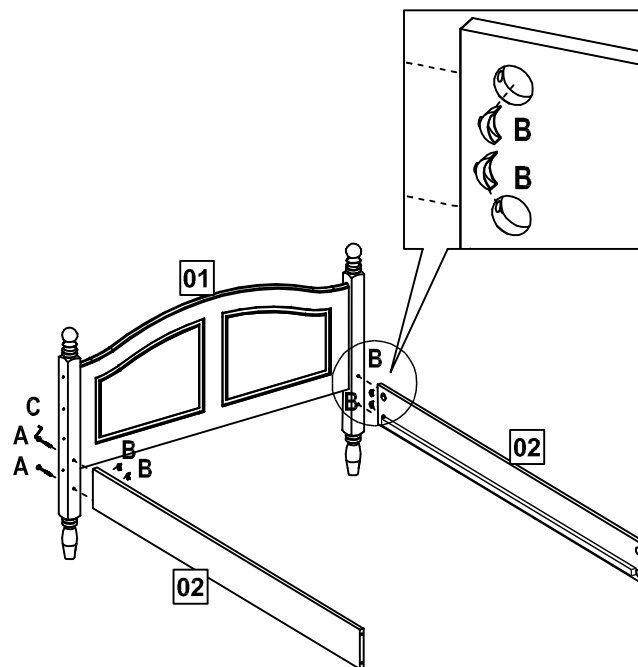


03

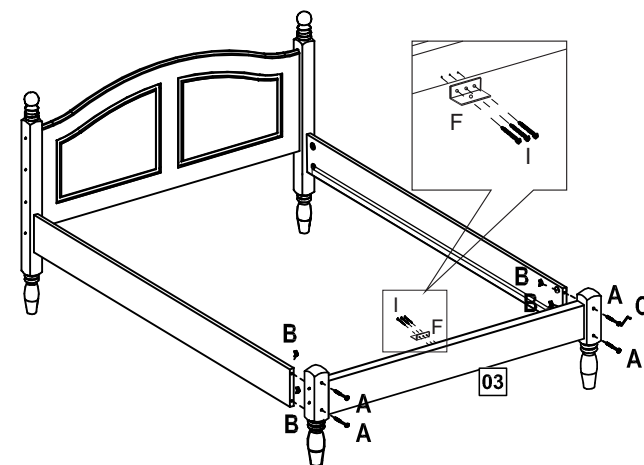

04

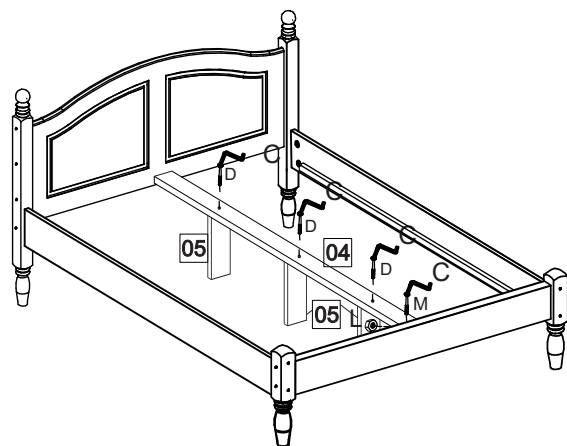

05

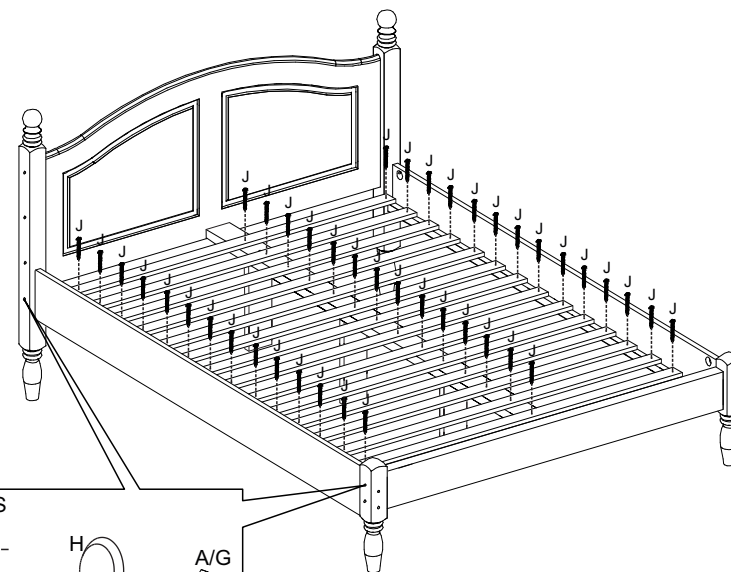

FIXAR TAMPA (H) NOS
PARAFUSOS (A e G)

ATTACH COVER (H)
TO USSCREWS (A and G) x20

ADJUNTAR LA CUBIERTA
(H) A NOSOTROS
TORNILLOS (A y G)

