

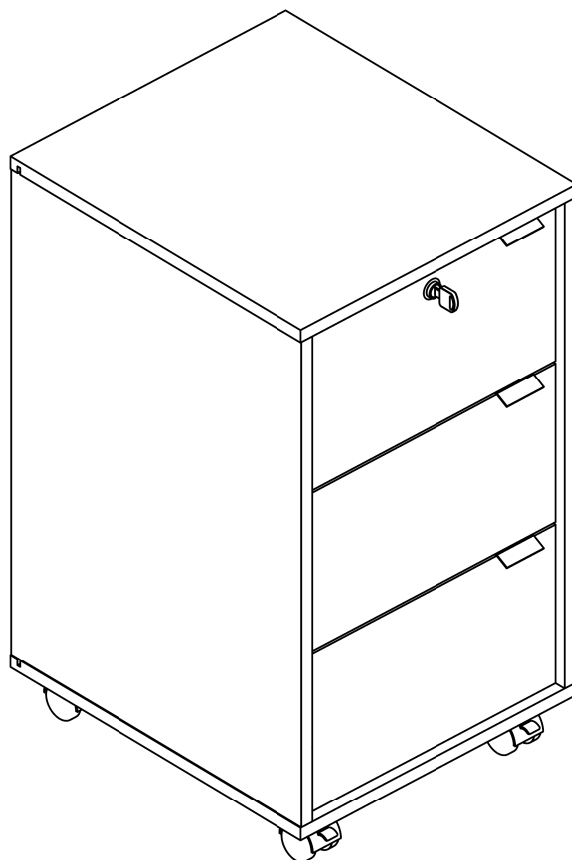
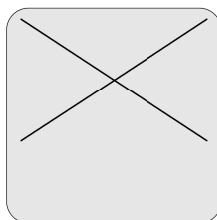
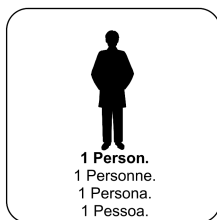
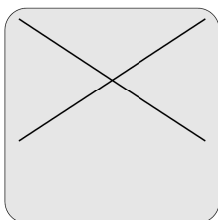
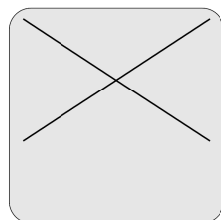
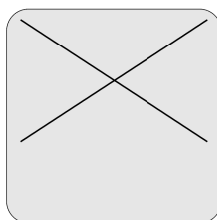
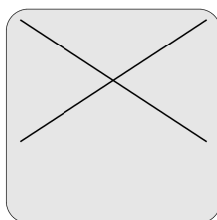
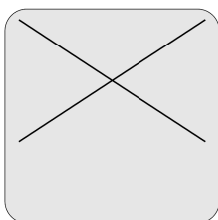
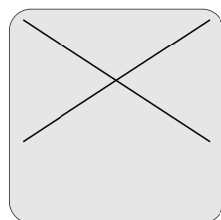
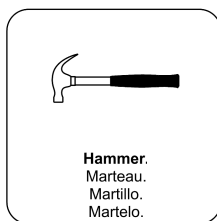
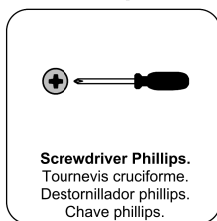


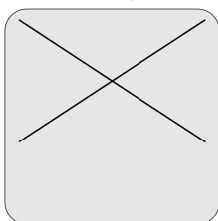


YOU WILL NEED

TU AURAS BESOIN DE | NECESITARÁ | VOCÊ VAI PRECISAR

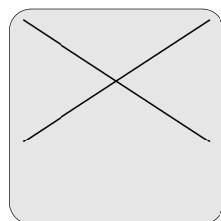

Tools not included

Outils non inclus | Herramientas no incluidas | Ferramentas não inclusas

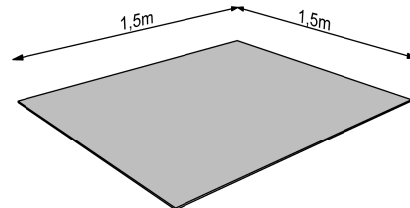

Recommended space for assemble
Espace recommandé pour l'assemblage.
Espacio recomendado para el armado.
Espaço recomendado para montar.



To move the product, you must lift it. DO NOT drag it, if you drag it can cause overturning.

* Pour déplacer le produit, vous devez le lever. NE PAS le faire glisser, si vous le faire glisser peut provoquer un renversement.


* Para mover el producto, debe levantarlo. NO lo arrastre, si arrastrarlo puede provocar que se vuelque.

* Para mover o produto, você deve levantá-lo. NÃO arraste, se você arrastá-lo pode causar tombamento.

ACCESSORIES IDENTIFICATION

IDENTIFICATION DES ACCESSOIRES | IDENTIFICACIÓN DE ACCESORIOS
IDENTIFICAÇÃO DOS ACESSÓRIOS

A



30mm

Qty./Qtd.
20

Wooden dowel / Chevilles en bois / Taquete / Cavilha


BH



Qty./Qtd.
01

Lock / Serrure / Cerrar / Fechadura


BK



Qty./Qtd.
01

Door stop / Heurtoir / Tope de puerta / Batente

BT



20mm

Qty./Qtd.
06

Pan head screw / Vis à tête bombée / Tornillo de pan / Parafuso Panela

C



45mm

Qty./Qtd.
10

Structural screw / Vis à tête structurelle / Tornillo estructural / Parafuso Estrutural

DN



Qty./Qtd.
06

support / Support / Soporte / Suporte

G



Qty./Qtd.
10

Simple minifix screw / Vis minifix simple / Tornillo minifix simple / Haste Minifix Simples

H



Qty./Qtd.
10

Drum lock / Verrouillage du tambour / Tambor minifix / Tambor de Minifix


N



14mm




Qty./Qtd.
50

Pan head screw / Vis à tête bombée / Tornillo de pan / Parafuso Panela


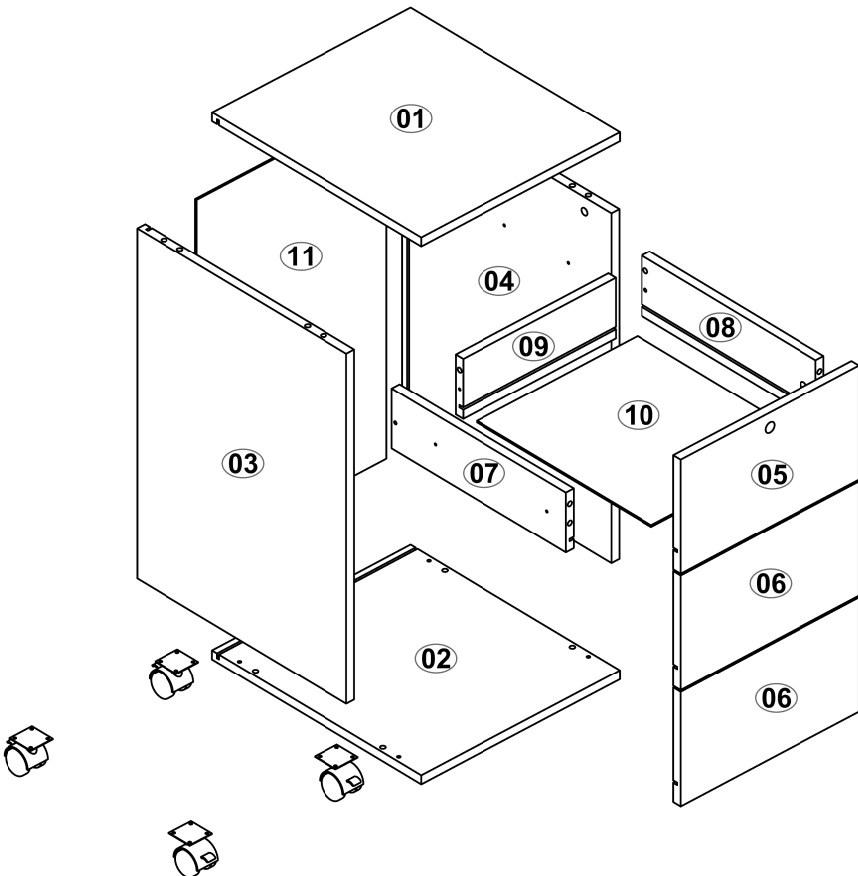


PRE-ASSEMBLY - PRÉ-ASSEMBLAGE - PRE-ARMADO PRÉ-MONTAGEM



01 -

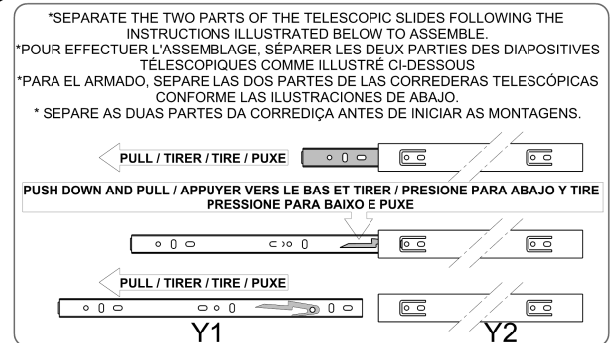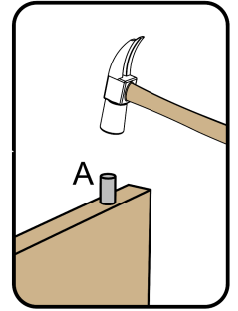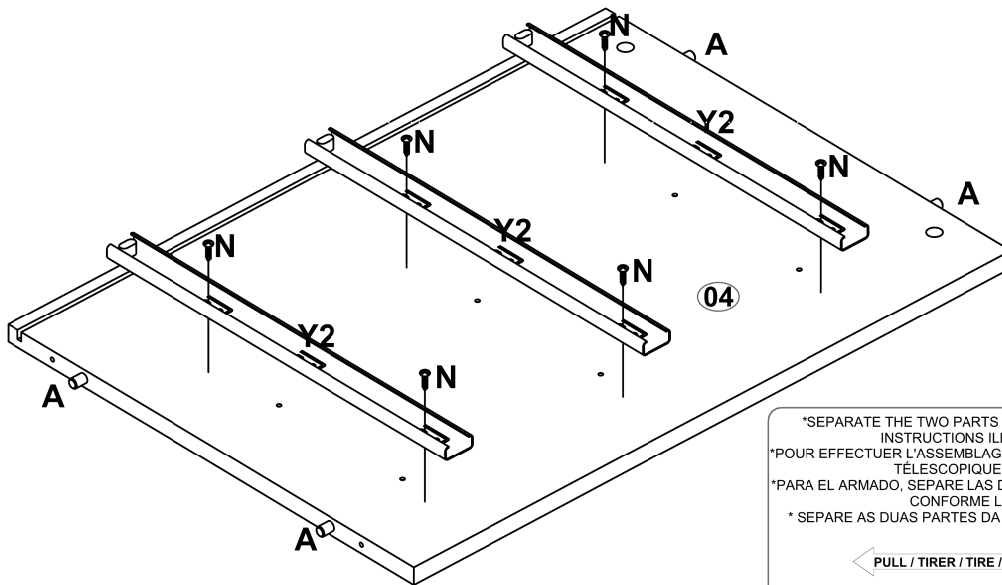



02 -

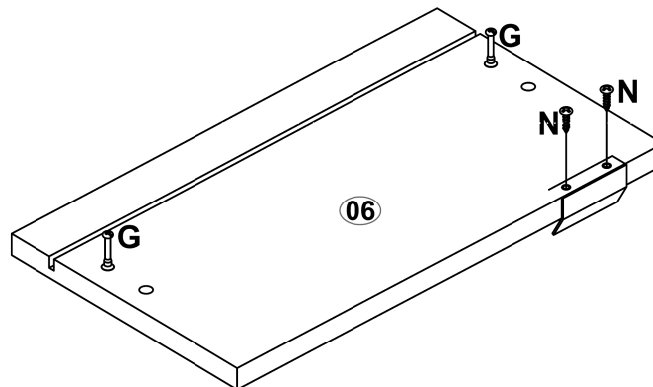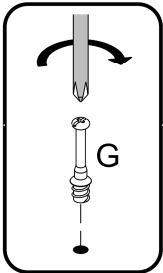



03 -

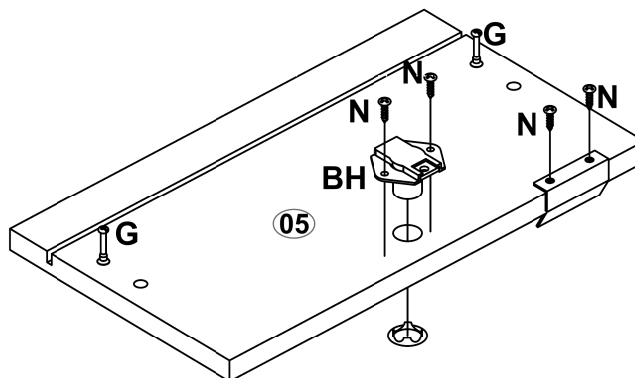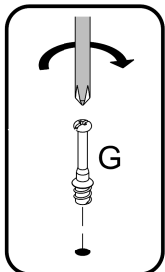


04 -

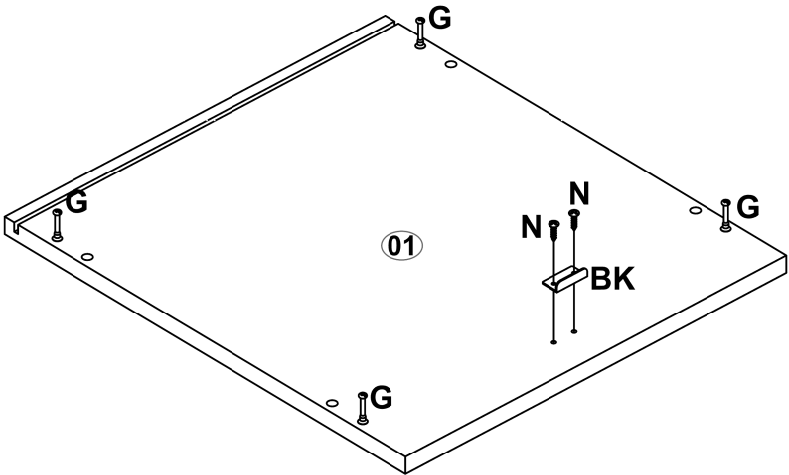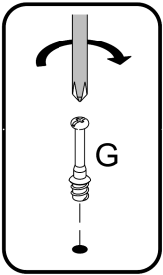


05 -

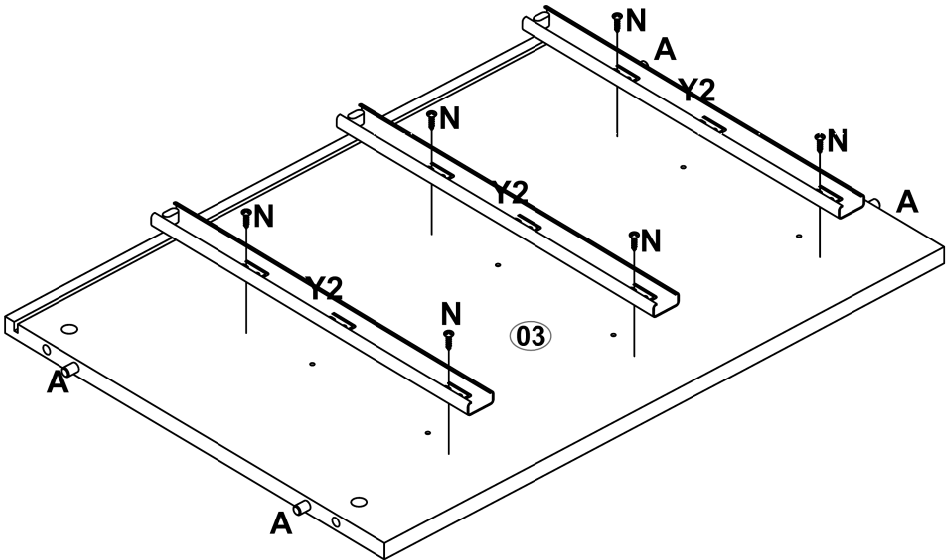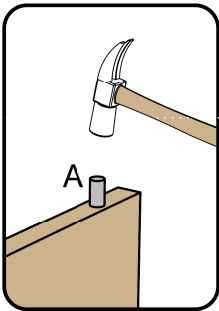


06 -

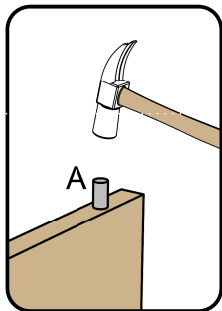


3x

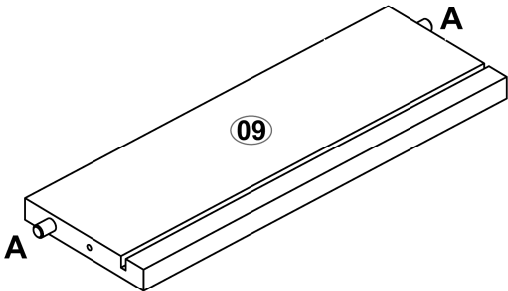


07 -

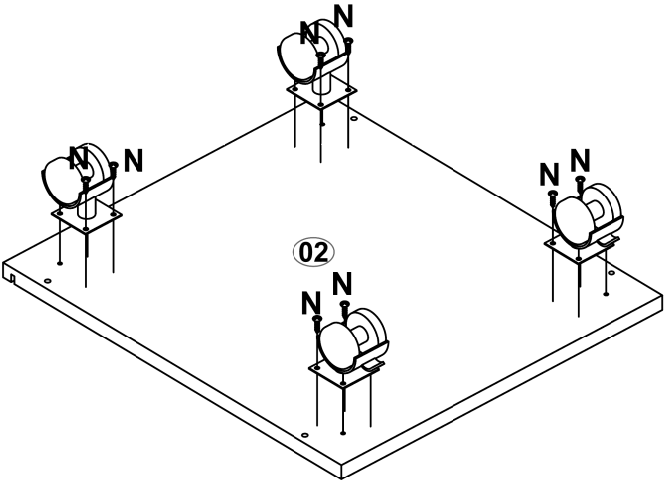


08 -

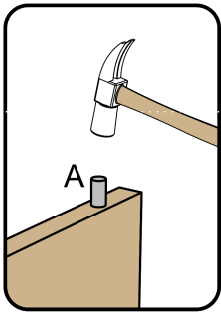


3x

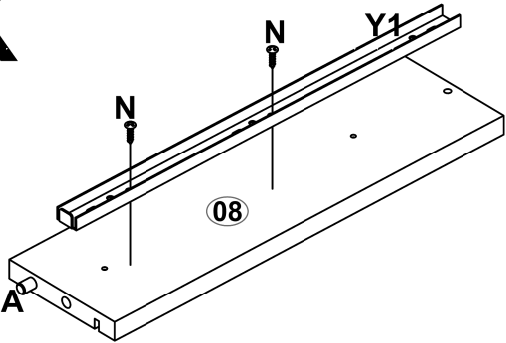

09 -

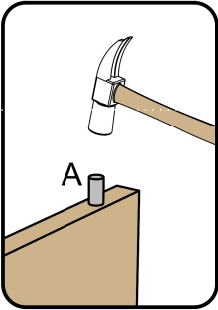


3x

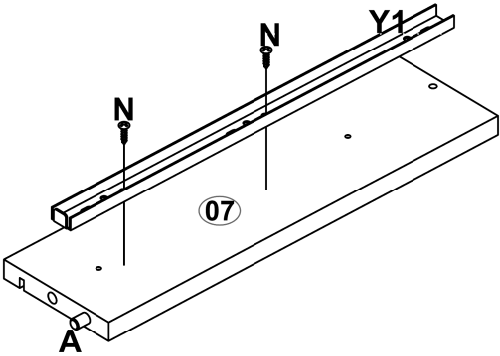


ASSEMBLY - MONTAGE - ARMADO - MONTAGEM


M01 -

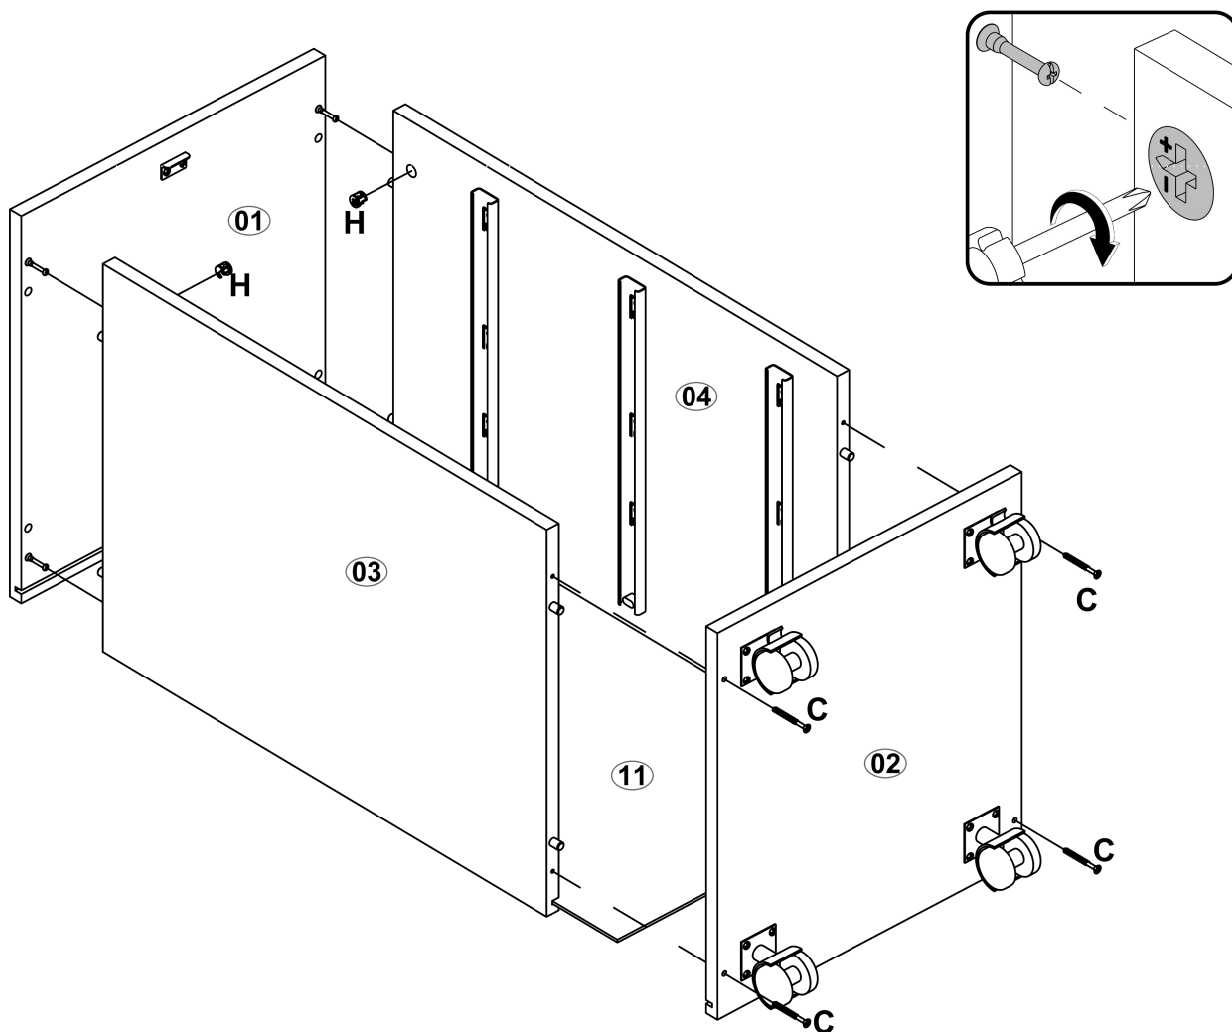



M02 -

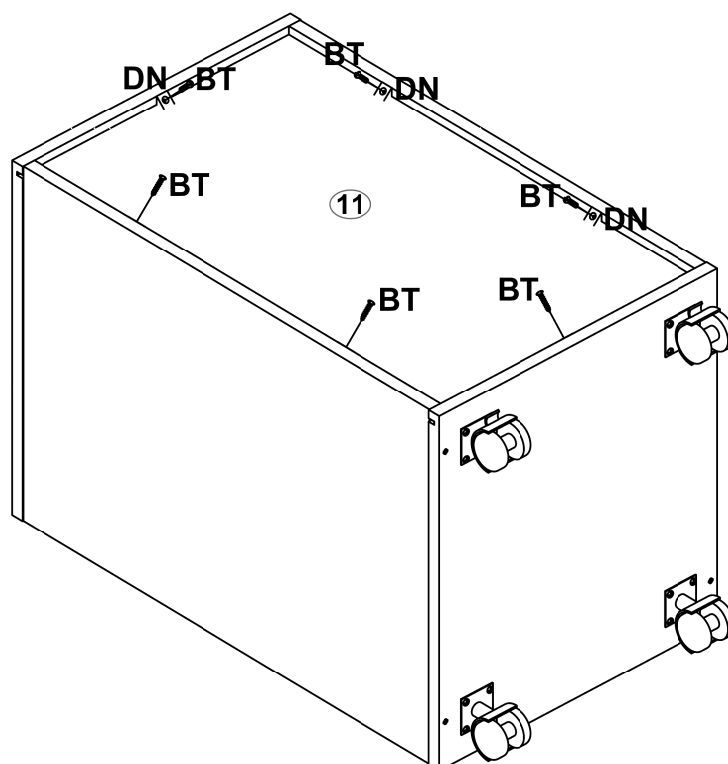

M03 -

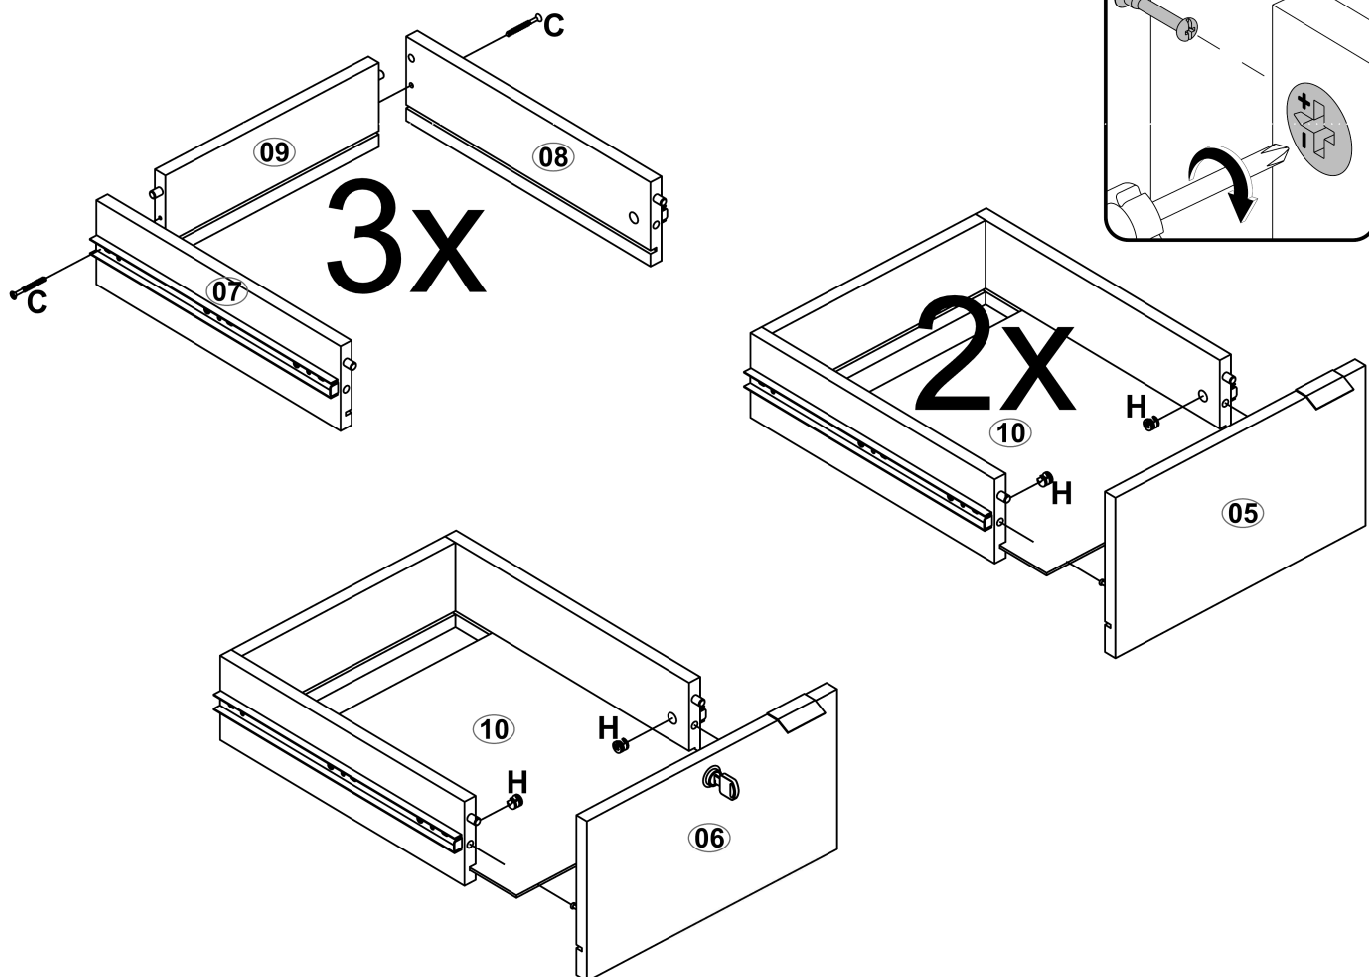

M04 -

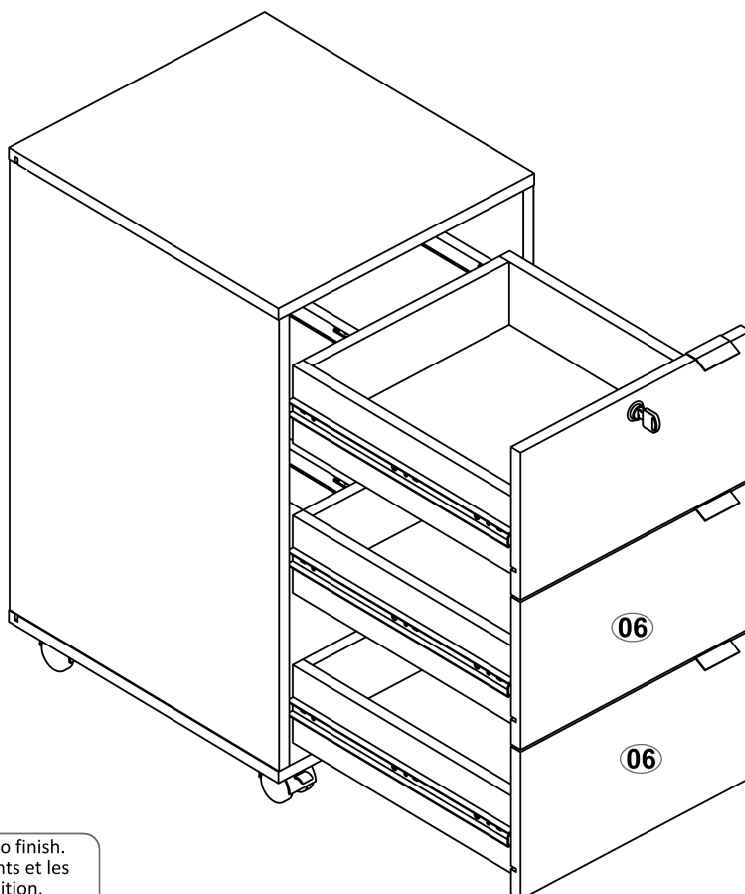

***Note:** Use the stickers and caps to finish.

***Remarque:** Utiliser les autocollants et les capuchons pour terminer la finition.

***Nota:** Utilice los adhesivos y tapas para finalizar el acabado.

***Nota:** Utilize os adesivos e tampas para finalizar o acabamento.